


JAGUAR S-TYPE

2001 Model Year
Electrical Guide

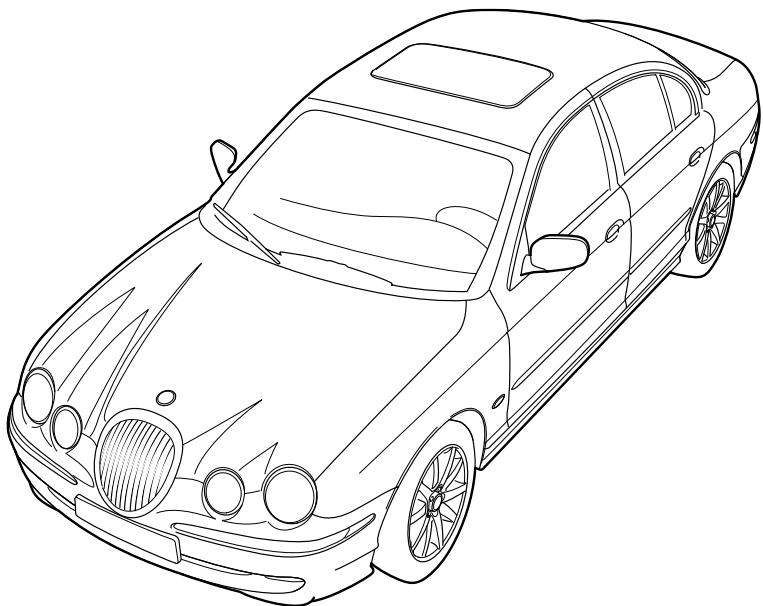

Publication number S,2001,S
Date of Issue: November 2000

© 2000 Jaguar Cars
PRINTED IN USA

All rights reserved. All material contained herein is based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.



Table of Contents: Figures	2 – 3
Abbreviations and Acronyms	4
Introduction.....	5
Component Index	6 – 11
User Instructions	12 – 13
Symbols and Codes	14 – 15
Main Power Distribution	16
Harness Layout	17
Relay Identification and Location	18 – 19
Fuse Identification and Location	20
Ground Point Locations	21
Control Module Locations	22 – 23
Control Module Pin Identification	24 – 31
Electrical Guide Figures and Data	follows after page 31
(pages are numbered by Figure number)	
Appendix (SCP messages)	follows Figures and Data



FIGURES

Fig.	Description	Variant
01	Power Distribution	
Fig. 01.1	Main Power Distribution	All Vehicles
Fig. 01.2	Battery Power Distribution: Part 1 – Front Power Distribution Box	All Vehicles
Fig. 01.3	Battery Power Distribution: Part 2 – Rear Power Distribution Box, Primary Junction Box	All Vehicles
Fig. 01.4	Ignition Switched Power Distribution	All Vehicles
Fig. 01.5	Switched System Power Distribution	All Vehicles
Fig. 01.6	Powertrain Control System Switched Power Distribution	All Vehicles
02	Battery; Starter; Generator	
Fig. 02.1	Battery; Starter; Generator	All Vehicles
03	Engine Management	
Fig. 03.1	V8 Engine Management: Part 1	V8 Vehicles
Fig. 03.2	V8 Engine Management: Part 2	V8 Vehicles
Fig. 03.3	V6 Engine Management: Part 1	V6 Vehicles
Fig. 03.4	V6 Engine Management: Part 2	V6 Vehicles
04	Transmission	
Fig. 04.1	Automatic Transmission	Automatic Transmission Vehicles
Fig. 04.2	Manual Transmission	Manual Transmission Vehicles
05	Braking; Suspension	
Fig. 05.1	Dynamic Stability Control	DSC Vehicles
Fig. 05.2	Anti-Lock Braking; Traction Control	ABS / TC Vehicles
Fig. 05.3	Suspension Adaptive Damping	Adaptive Damping Vehicles
06	Climate Control	
Fig. 06.1	Climate Control System	All Vehicles
07	Instrumentation	
Fig. 07.1	Instrument Pack; Audible Warnings	All Vehicles
08	Exterior Lighting	
Fig. 08.1	Exterior Lighting: Front	All Vehicles
Fig. 08.2	Exterior Lighting: Rear	All Vehicles
Fig. 08.3	Exterior Lighting: Rear – Trailer Towing	Trailer Towing Vehicles
Fig. 08.4	Headlamp Leveling	Headlamp Leveling Vehicles
09	Interior Lighting	
Fig. 09.1	Interior Lighting	All Vehicles
Fig. 09.2	Dimmer-Controlled Lighting	All Vehicles
10	Steering; Mirrors; Heaters	
Fig. 10.1	Variable Assist Steering; Steering Column Movement	All Vehicles
Fig. 10.2	Door Mirrors Movement and Heaters; Heated Backlight	All Vehicles
Fig. 10.3	Fold-Back Mirrors; Electrochromic Rear View Mirror	Fold-Back Mirror Vehicles; All Vehicles
11	Seat Systems	
Fig. 11.1	Driver Seat: Memory	Memory Seat Vehicles
Fig. 11.2	Driver Seat: Non Memory	Non Memory Seat Vehicles
Fig. 11.3	Passenger Seat	All Vehicles

**FIGURES**

Fig.	Description	Variant
12	Door Locking; Security	
Fig. 12.1	Central Door Locking: ROW	ROW Vehicles
Fig. 12.2	Central Door Locking: NAS	NAS Vehicles
Fig. 12.3	Security System: ROW	ROW Vehicles
Fig. 12.4	Security System: NAS	NAS Vehicles
13	Wash/Wipe System	
Fig. 13.1	Wash/Wipe System	All Vehicles
14	Window Lifts; Sliding Roof	
Fig. 14.1	Window Lifts; Sliding Roof	All Vehicles; Sliding Roof Vehicles
15	In-Car Entertainment	
Fig. 15.1	In-Car Entertainment: Standard	Standard ICE Vehicles
Fig. 15.2	In-Car Entertainment: Premium	Premium ICE Vehicles
16	Communication; Voice Control; Navigation	
Fig. 16.1	Telephone System	TEL only Vehicles with or without NAV
Fig. 16.2	Telephone with Voice Control System	TEL / NAV Vehicles with VOICE only
Fig. 16.3	Telephone with Voice Control System and VEMS	TEL / NAV Vehicles with VOICE and VEMS
Fig. 16.4	Voice Control System	VOICE only Vehicles
Fig. 16.5	Navigation System	NAV Vehicles
17	Occupant Protection	
Fig. 17.1	Supplementary Restraint System / Airbag System	All Vehicles
18	Driver Assist	
Fig. 18.1	Reverse Parking Aid System	Reverse Parking Aid Vehicles
19	Ancillaries	
Fig. 19.1	Ancillaries: Horn; Cigar Lighter; Accessory Connector;	All Vehicles
	Trailer Connector; Sun Shades; Electronic Road Pricing	
20	Vehicle Multiplex Systems	
Fig. 20.1	Standard Corporate Protocol Network	All Vehicles
Fig. 20.2	Audio Control Protocol Network; Serial Data Links	All Vehicles



The following abbreviations and acronyms are used throughout this Electrical Guide:

-ve	Negative
+ve	Positive
A/C	Air Conditioning
A/CCM	Air Conditioning Control Module
AAI VALVE	Air Assist Injection Valve
ABS	Anti-Lock Braking
ABS/TC	Anti-Lock Braking / Traction Control
ACP	Audio Control Protocol Network
APP SENSOR	Accelerator Pedal Position Sensor
AUTO	Automatic Transmission
B+	Battery Voltage
CHT SENSOR	Cylinder Head Temperature Sensor
CKP SENSOR	Crankshaft Position Sensor
CM	Control Module
CMP SENSOR 1	Camshaft Position Sensor – RH Bank
CMP SENSOR 2	Camshaft Position Sensor – LH Bank
DSC	Dynamic Stability Control
ECT SENSOR	Engine Coolant Temperature Sensor
EFT SENSOR	Engine Fuel Temperature Sensor
EOT SENSOR	Engine Oil Temperature Sensor
EVAP CANISTER CLOSE VALVE	Evaporative Emission Canister Close Valve
EVAP CANISTER PURGE VALVE	Evaporative Emission Canister Purge Valve
FTP SENSOR	Fuel Tank Pressure Sensor
GECM	General Electronic Control Module
GPS	Global Positioning System
HO2 SENSOR 1 / 1	Heated Oxygen Sensor – RH Bank / Upstream
HO2 SENSOR 1 / 2	Heated Oxygen Sensor – RH Bank / Downstream
HO2 SENSOR 2 / 1	Heated Oxygen Sensor – LH Bank / Upstream
HO2 SENSOR 2 / 2	Heated Oxygen Sensor – LH Bank / Downstream
IAT SENSOR	Intake Air Temperature Sensor
ICE	In-Car Entertainment
IMT VALVE	Intake Manifold Tuning Valve
INST	Instrument Pack
IP SENSOR	Injection Pressure Sensor
KS 1	Knock Sensor – RH Bank
KS 2	Knock Sensor – LH Bank
LH	Left Hand
LHD	Left Hand Drive
MAF SENSOR	Mass Air Flow Sensor
MAN	Manual Transmission
MEM	Memory
N/A	Normally Aspirated
NAS	North American Specification
NAV	Navigation
PCM	Powertrain Control Module
PSP SWITCH	Power Steering Pressure Switch
PWM	Pulse Width Modulated
RECM	Rear Electronic Control Module
RH	Right Hand
RHD	Right Hand Drive
ROW	Rest Of World
SC	Supercharged
SCP	Standard Corporate Protocol Network
TEL	Telephone
TP SENSOR	Throttle Position Sensor
TURN	Turn Signal
V6	V6 Engine
V8	V8 Engine
VEMS	Vehicle Emergency Message System
VIN	Vehicle Identification Number
VOICE	Voice Control
VVT VALVE 1	Variable Valve Timing Valve – RH Bank
VVT VALVE 2	Variable Valve Timing Valve – LH Bank



Electrical Guide Format

This Electrical Guide is made up of two major sections. The first section, at the front of the book, provides general information for and about the use of the book, and information and illustrations to aid in the understanding of the Jaguar S-TYPE electrical / electronic systems, as well as the location and identification of components.

The second section includes the Figures, which are the basis of the book. Each Figure is identified by a Figure Number (i.e. Fig. 01.1) and Title, and is accompanied by a page of data containing information specific to that Figure.

It is recommended that the user read through the front section of the book to develop a familiarity with the layout of the book and with the system of symbols and abbreviations used. The Table of Contents should help to guide the user.

Vehicle Identification Numbers (VIN)

VIN ranges are presented throughout the book in the following manner:

→ VIN 123456 indicates "up to VIN 123456"; VIN 123456 → indicates "from VIN 123456 on".

Jaguar S-TYPE Electrical System Architecture

The Jaguar S-TYPE electrical system is a supply-side switched system. The ignition switch directly carries much of the ignition switched power supply load. Power supply is provided via three methods: direct battery power supply, ignition switched power supply, and switched system power supply.

The switched system power supply is controlled via the GECM and the RECM from SCP messages. After ignition ON, four relays are activated by either the GECM or the RECM for as long as SCP messages remain on the SCP network. The relays will remain activated after ignition OFF, until all SCP messages are removed. Refer to Figure 01.5.

Engine management and transmission control are combined into a single Powertrain Control Module eliminating the need for a controller area network. The Jaguar S-TYPE employs an SCP network for all powertrain, chassis and body systems interface / control. An ACP network is employed for audio and communications systems interface / control.

Circuit ground connections are made at body studs located throughout the vehicle. There are no separate power and logic grounding systems.

The electrical harness incorporates hard-wired front and rear power distribution boxes and a serviceable primary junction box. All fuses and relays (except the trailer towing accessory kit) are located in the two power distribution boxes and the primary junction box.



ABS / Traction Control Control Module (ABS/TCCM)	Fig. 05.2	Brake Switch	Fig. 03.1
.....	Fig. 05.3	Fig. 03.3
.....	Fig. 20.1	Fig. 04.1
.....	Fig. 20.2	Fig. 04.2
Accelerator Pedal Position Sensor (APP Sensor)	Fig. 03.1	Fig. 05.1
.....	Fig. 03.4	Fig. 05.2
Accelerometer – Lateral	Fig. 05.1	Fig. 08.2
.....	Fig. 05.3	Fig. 08.3
Accelerometers – Vertical	Fig. 05.3	Camshaft Position Sensor (CMP Sensor)	Fig. 03.1
Accessory Connector	Fig. 19.1	Fig. 03.3
Active Brake Booster	Fig. 05.1	CD Autochanger	Fig. 15.1
Active Security Sounder	Fig. 12.3	Fig. 15.2
Actuators – Climate Control	Fig. 06.1	Fig. 20.2
Adaptive Damping Control Module	Fig. 05.3	Cellular Telephone Control Module	Fig. 16.1
.....	Fig. 20.1	Fig. 16.2
.....	Fig. 20.2	Fig. 16.3
Air Assist Injection Valve (AAI Valve)	Fig. 03.1	Fig. 16.4
Air Conditioning Compressor Clutch	Fig. 03.3	Fig. 20.2
.....	Fig. 03.4	Cigar Lighter	Fig. 09.2
Air Conditioning Control Module (A/CCM)	Fig. 03.2	Fig. 19.1
.....	Fig. 03.4	Clutch Pedal Switch	Fig. 02.1
.....	Fig. 06.1	Fig. 04.2
.....	Fig. 09.2	Column Position Feedback Potentiometers	Fig. 10.1
.....	Fig. 10.2	Column Switchgear	Fig. 08.1
.....	Fig. 20.1	Fig. 08.2
Air Conditioning Pressure Sensor	Fig. 03.2	Control Valves (ABS/TC)	Fig. 05.2
.....	Fig. 03.4	Control Valves (DSC)	Fig. 05.1
Airbags	Fig. 17.1	Cooling Fan	Fig. 03.2
Ambient Air Temperature Sensor	Fig. 06.1	Fig. 03.4
Amplifier – Center Fill	Fig. 15.2	Cooling Fan Module	Fig. 03.2
.....	Fig. 15.2	Fig. 03.4
Amplifier – Subwoofer	Fig. 15.2	Crankshaft Position Sensor (CKP Sensor)	Fig. 03.1
Antenna Module	Fig. 15.1	Fig. 03.3
.....	Fig. 15.2	Cruise Control Switches (Steering Wheel)	Fig. 03.2
.....	Fig. 15.2	Fig. 03.4
Audio Control Switches (Steering Wheel)	Fig. 15.1	Cylinder Head Temperature Sensor (CHT Sensor)	Fig. 03.3
.....	Fig. 15.2	Damper Solenoids	Fig. 05.3
Autolamp Sensor	Fig. 08.1	Data Link Connector	Fig. 20.1
.....	Fig. 08.2	Fig. 20.2
Auxiliary Coolant Pump	Fig. 06.1	Dimmer Switch	Fig. 09.2
Battery	Fig. 01.1	Discharge Temperature Sensors	Fig. 06.1
.....	Fig. 02.1	Door Courtesy Lamps	Fig. 09.1
Blower Motor	Fig. 06.1	Door Latch Assemblies – Rear	Fig. 12.1
Blower Motor Controller	Fig. 06.1	Fig. 12.2
Brake Cancel Switch	Fig. 03.2	Door Latch Assembly – Driver	Fig. 12.1
.....	Fig. 03.4	Fig. 12.2
Brake Fluid Level Sensor	Fig. 07.1	Fig. 12.3
Brake Pressure Sensors	Fig. 05.1	Fig. 12.4



Door Latch Assembly – Passenger	Fig. 12.1	Fold Back Mirror Switch	Fig. 10.3
.....	Fig. 12.2	Front Power Distribution Box	Fig. 01.1
Door Mirrors – Complete Assembly	Fig. 10.2	Fig. 01.3
Door Mirrors – Motor Only	Fig. 10.3	Fig. 01.6
Door Switch Pack – Driver	Fig. 09.2	Fig. 02.1
.....	Fig. 10.1	Fig. 03.1
.....	Fig. 10.2	Fig. 03.2
.....	Fig. 11.1	Fig. 03.3
.....	Fig. 14.1	Fig. 03.4
Door Switch – Driver	Fig. 09.1	Fig. 06.1
Door Switch – Passenger	Fig. 09.1	Fig. 08.1
.....	Fig. 12.3	Fig. 12.3
.....	Fig. 12.4	Fig. 12.4
Door Switches – Rear	Fig. 09.1	Fig. 13.1
.....	Fig. 12.3	Fig. 19.1
.....	Fig. 12.4	Fuel Filler Flap Release	Fig. 12.1
Driver Door Control Module (DDCM)	Fig. 10.1	Fig. 12.2
.....	Fig. 10.2	Fuel Injectors	Fig. 03.2
.....	Fig. 11.1	Fig. 03.4
.....	Fig. 12.1	Fuel Level Sensors	Fig. 07.1
.....	Fig. 12.2	Fuel Pump	Fig. 03.2
.....	Fig. 12.3	Fig. 03.4
.....	Fig. 12.4	Fuel Pump Diode	Fig. 03.2
.....	Fig. 14.1	Fig. 03.4
.....	Fig. 20.1	Fuel Tank Pressure Sensor (FTP Sensor)	Fig. 03.1
Driver Seat Control Module (DSCM)	Fig. 11.1	Fig. 03.3
.....	Fig. 20.1	Garage Door Opener	Fig. 09.1
Dual Coolant Control Valve	Fig. 06.1	Gearshift Interlock Solenoid	Fig. 04.1
Dual Solar Sensor	Fig. 06.1	General Electronic Control Module (GECM)	Fig. 01.5
Dynamic Stability Control Control Module (DSCCM)	Fig. 05.1	Fig. 02.1
.....	Fig. 05.3	Fig. 04.1
.....	Fig. 20.1	Fig. 04.2
.....	Fig. 20.2	Fig. 07.1
Electronic Road Pricing Module	Fig. 19.1	Fig. 08.1
Engine Coolant Temperature Sensor (ECT Sensor)	Fig. 03.1	Fig. 09.1
Engine Fuel Temperature Sensor (EFT Sensor)	Fig. 03.1	Fig. 09.2
.....	Fig. 03.3	Fig. 10.1
Engine Oil Temperature Sensor (EOT Sensor)	Fig. 03.1	Fig. 10.2
.....	Fig. 03.3	Fig. 12.1
EVAP Discharge Temperature Sensor	Fig. 06.1	Fig. 12.2
Evaporative Emission Canister Close Valve (EVAP Canister Close Valve)	Fig. 03.1	Fig. 12.3
.....	Fig. 03.3	Fig. 12.4
Evaporative Emission Canister Purge Valve (EVAP Canister Purge Valve)	Fig. 03.1	Fig. 13.1
.....	Fig. 03.3	Fig. 14.1
External Trunk Release Switch	Fig. 12.1	Fig. 19.1
.....	Fig. 12.2	Fig. 20.1
Fascia Lamps	Fig. 09.1	Generator	Fig. 02.1
Fog Lamps – Front	Fig. 08.1	Glove Box Lamp	Fig. 09.1
		Hazard Switch (Message Center Switch Pack)	Fig. 08.1
		Fig. 08.2
		Headlamp Leveling Actuators	Fig. 08.4
		Headlamp Leveling Switch	Fig. 08.4
		Fig. 09.2
		Headlamp Units	Fig. 08.1



Heated Backlight	Fig. 10.2	Intermediate Speed Sensor	Fig. 04.1
.....	Fig. 15.1	Intrusion Sensors	Fig. 12.3
.....	Fig. 15.2	J-Gate	Fig. 09.2
.....	Fig. 16.1	J-Gate Assembly	Fig. 04.1
.....	Fig. 16.2	Fig. 04.2
.....	Fig. 16.3	Knock Sensors (KS)	Fig. 03.1
.....	Fig. 16.4	Fig. 03.3
Heated Oxygen Sensors (HO ₂ Sensors)	Fig. 03.1	Lighting Stalk (Column Switchgear)	Fig. 08.1
.....	Fig. 03.3	Fig. 08.2
Heated Seat Switches	Fig. 09.2	Lighting Switch	Fig. 08.1
High-Mounted Stop Lamp	Fig. 08.2	Fig. 08.2
.....	Fig. 08.3	Fig. 09.2
Hood Switch	Fig. 12.3	Fig. 10.3
.....	Fig. 12.4	Lumbar Pump – Driver	Fig. 11.1
Horn Switch (Steering Wheel)	Fig. 19.1	Fig. 11.2
Horns	Fig. 12.3	Lumbar Pump – Passenger	Fig. 11.3
.....	Fig. 12.4	Lumbar Switch – Driver	Fig. 11.1
.....	Fig. 19.1	Fig. 11.2
Ignition Coils	Fig. 03.2	Lumbar Switch – Passenger	Fig. 11.3
.....	Fig. 03.4	Map Lamp Switches	Fig. 09.1
Ignition Suppression Capacitors	Fig. 03.2	Map Lamps	Fig. 09.1
.....	Fig. 03.4	Mass Air Flow Sensor (MAF Sensor)	Fig. 03.1
Ignition Switch	Fig. 01.1	Fig. 03.3
.....	Fig. 01.4	Master Window Switches (Driver Door Switch Pack)	Fig. 14.1
.....	Fig. 02.1	Message Center Switch Pack	Fig. 07.1
.....	Fig. 07.1	Fig. 08.1
.....	Fig. 12.3	Fig. 08.2
.....	Fig. 12.4	Fig. 09.2
Impact Sensors – Side	Fig. 17.1	Microphone	Fig. 16.1
In-Car Temperature Sensor	Fig. 06.1	Fig. 16.2
Inclination Sensor	Fig. 12.3	Fig. 16.3
Inertia Switch	Fig. 01.1	Fig. 16.4
.....	Fig. 01.4	Mode Switch (Transmission)	Fig. 04.1
.....	Fig. 02.1	Fig. 04.2
Instrument Pack (INST)	Fig. 05.1	NAV GPS Antenna	Fig. 16.5
.....	Fig. 05.2	Navigation Control Module	Fig. 16.5
.....	Fig. 05.3	Fig. 20.1
.....	Fig. 07.1	Navigation Display Module	Fig. 09.2
.....	Fig. 08.1	Fig. 16.5
.....	Fig. 08.2	Number Plate Lamps	Fig. 08.2
.....	Fig. 09.1	Fig. 08.3
.....	Fig. 09.2	Oil Pressure Switch	Fig. 07.1
.....	Fig. 10.1		
.....	Fig. 10.3		
.....	Fig. 12.3		
.....	Fig. 12.4		
.....	Fig. 19.1		
.....	Fig. 20.1		
Intake Air Temperature Sensor (IAT Sensor)	Fig. 03.1		
.....	Fig. 03.3		
Intake Manifold Tuning Valves (IMT Valve)	Fig. 03.3		



Output Speed Sensor	Fig. 04.1	Rear Electronic Control Module (RECM)	Fig. 01.5
.....	Fig. 04.2	Fig. 03.2
Parking Aid Control Module	Fig. 18.1	Fig. 03.4
.....	Fig. 20.2	Fig. 05.1
Parking Aid Sensors	Fig. 18.1	Fig. 06.1
Parking Aid Sounder	Fig. 18.1	Fig. 07.1
Parking Aid Switch (Roof Console Switch Pack)	Fig. 18.1	Fig. 08.2
Parking Brake Switch	Fig. 07.1	Fig. 08.3
Passive Anti-Theft System Transceiver	Fig. 02.1	Fig. 09.1
.....	Fig. 12.3	Fig. 10.2
.....	Fig. 12.4	Fig. 10.3
Passive Security Sounder	Fig. 12.3	Fig. 12.1
Power Steering Pressure Switch (PSP Switch)	Fig. 03.1	Fig. 12.2
.....	Fig. 03.3	Fig. 12.3
Power Wash Pump	Fig. 13.1	Fig. 12.4
Powertrain Control Diode	Fig. 01.6	Fig. 14.1
Powertrain Control Module (PCM)	Fig. 02.1	Fig. 20.1
.....	Fig. 03.1	Rear Power Distribution Box	Fig. 01.1
.....	Fig. 03.2	Fig. 01.2
.....	Fig. 03.3	Fig. 01.5
.....	Fig. 03.4	Fig. 03.2
.....	Fig. 04.1	Fig. 03.4
.....	Fig. 04.2	Fig. 04.1
.....	Fig. 05.3	Fig. 04.2
.....	Fig. 07.1	Fig. 10.2
.....	Fig. 08.2	Rear View Mirror	Fig. 10.3
.....	Fig. 20.1	Relay – Air Conditioning Compressor Clutch	Fig. 03.2
.....	Fig. 20.2	Fig. 03.4
Pressure Pump – ABS / TC / DSC	Fig. 05.1	Relay – Auxiliary Coolant Pump	Fig. 06.1
.....	Fig. 05.2	Relay – Blower Motor	Fig. 06.1
Primary Junction Box	Fig. 01.1	Relay – Cigar Lighter	Fig. 19.1
.....	Fig. 01.2	Relay – Front Fog Lamp	Fig. 08.1
.....	Fig. 01.4	Relay – Fuel Pump	Fig. 03.2
.....	Fig. 01.5	Fig. 03.4
.....	Fig. 02.1	Relay – Gearshift Interlock	Fig. 04.1
.....	Fig. 09.1	Fig. 04.2
.....	Fig. 09.2	Relay – Heated Backlight	Fig. 10.2
.....	Fig. 19.1	Relay – Horn	Fig. 12.3
Radio Head Unit	Fig. 09.2	Fig. 12.4
.....	Fig. 12.3	Fig. 19.1
.....	Fig. 12.4	Relay – Power Wash	Fig. 13.1
.....	Fig. 15.1	Relay – Starter	Fig. 02.1
.....	Fig. 15.2	Relay – Throttle Motor Control	Fig. 03.1
.....	Fig. 16.1	Fig. 03.3
.....	Fig. 16.2	Relay – Trailer Towing Power	Fig. 08.3
.....	Fig. 16.3	Relay – Transit Isolation	Fig. 01.1
.....	Fig. 16.4	Relay – Wiper High / Low	Fig. 13.1
.....	Fig. 16.5	Relay – Wiper Park	Fig. 13.1
.....	Fig. 20.1	Relay – Wiper Park Heater	Fig. 06.1
.....	Fig. 20.2	Relays – Switched System Power	Fig. 01.5
Rain Sensing Module	Fig. 13.1	Relays – Powertrain Control	Fig. 01.6
		Relays – Windshield Heater	Fig. 06.1



Remote Keyless Entry Module	Fig. 12.1	Starter Motor	Fig. 02.1
Restraints Control Module	Fig. 17.1	Steering Angle Rate Sensor	Fig. 05.1
.....	Fig. 20.2	Fig. 05.2
Reverse Switch	Fig. 04.2	Steering Column Adjust Switch	Fig. 10.1
Roof Console Switch Pack	Fig. 09.1	Steering Column Lock Control Module	Fig. 12.3
.....	Fig. 18.1	Fig. 20.1
.....	Fig. 19.1	Steering Column Motors	Fig. 10.1
Seat Back Heater – Driver	Fig. 11.1	Steering Wheel	Fig. 03.2
.....	Fig. 11.2	Fig. 03.4
Seat Back Heater – Passenger	Fig. 11.3	Fig. 09.2
Seat Belt Pretensioners	Fig. 17.1	Fig. 15.1
Seat Belt Switch	Fig. 07.1	Fig. 15.2
Seat Heater Control Module – Driver	Fig. 11.1	Fig. 16.2
.....	Fig. 11.2	Fig. 16.3
Seat Heater Control Module – Passenger	Fig. 11.3	Fig. 16.4
Seat Heater Switch – Driver	Fig. 11.1	Fig. 17.1
.....	Fig. 11.2	Fig. 19.1
Seat Heater Switch – Passenger	Fig. 11.3	Sun Shade Motor Assembly	Fig. 19.1
Seat Heater – Driver	Fig. 11.1	Sun Shade Switch (Roof Console Switch Pack)	Fig. 19.1
.....	Fig. 11.2	Sunvisor Lamps	Fig. 09.1
Seat Heater – Passenger	Fig. 11.3	Tail Lamp Units	Fig. 08.2
Seat Motors – Driver	Fig. 11.1	Fig. 08.3
.....	Fig. 11.2	Telephone Hand Set	Fig. 16.1
Seat Motors – Passenger	Fig. 11.3	Fig. 16.2
Seat Switch Pack – Driver	Fig. 11.1	Fig. 16.3
.....	Fig. 11.2	Fig. 16.4
Seat Switch Pack – Passenger	Fig. 11.3	Television Amplifiers	Fig. 16.5
Secondary Junction Box	Fig. 01.1	Television Antennas	Fig. 16.5
.....	Fig. 09.1	Television Module	Fig. 16.5
.....	Fig. 09.2	Television Monitor	Fig. 16.5
.....	Fig. 16.1	Throttle Actuator Control Module (TACM)	Fig. 03.1
.....	Fig. 16.2	Fig. 03.3
.....	Fig. 16.3	Fig. 20.1
.....	Fig. 16.4	Throttle Assembly	Fig. 03.1
.....	Fig. 17.1	Fig. 03.3
.....	Fig. 20.1	Throttle Position Sensor (TP Sensor)	Fig. 03.1
.....	Fig. 20.2	Fig. 03.3
Security Indicator	Fig. 12.3	Traction Control Switch	Fig. 05.1
.....	Fig. 12.4	Fig. 05.2
Side Marker Lamps – Front	Fig. 08.1	Fig. 09.2
Side Marker Lamps – Rear	Fig. 08.2	Trailer Connector	Fig. 19.1
.....	Fig. 08.3	Trailer Towing Connectors	Fig. 08.3
Sliding Roof Control Module	Fig. 14.1	Trailer Towing Junction Box	Fig. 08.3
Sliding Roof Motor Assembly	Fig. 14.1	Trailer Towing Module	Fig. 08.3
Sliding Roof Switch Pack	Fig. 14.1	Transmission	Fig. 04.1
Speakers – Center Fill	Fig. 15.2	Transmission Mode Switch	Fig. 09.2
Speakers – Door	Fig. 15.1		
.....	Fig. 15.2		
Speakers – Subwoofer	Fig. 15.2		



Transmission Range Sensor	Fig. 02.1
.....	Fig. 04.1
Trunk / Fuel Release Switch Pack	Fig. 12.1
.....	Fig. 12.2
Trunk Lamps	Fig. 09.1
Trunk Release	Fig. 12.1
.....	Fig. 12.2
Trunk Switch	Fig. 09.1
.....	Fig. 12.3
.....	Fig. 12.4
Turbine Speed Sensor	Fig. 04.1
Turn Signal Repeaters	Fig. 08.1
Valet Switch	Fig. 12.2
Variable Assist Steering Actuator	Fig. 10.1
Variable Valve Timing Valves (VVT Valve)	Fig. 03.1
.....	Fig. 03.3
Vehicle Emergency Control Module	Fig. 16.3
.....	Fig. 16.5
.....	Fig. 20.1
Vehicle Information Antenna	Fig. 16.5
Vehicle Information Control Module	Fig. 16.5
VEMS GPS Antenna	Fig. 16.3
.....	Fig. 16.5
Voice Activation Control Module	Fig. 16.2
.....	Fig. 16.3
.....	Fig. 16.4
.....	Fig. 20.1
.....	Fig. 20.2
Washer Fluid Level Switch	Fig. 07.1
.....	Fig. 13.1
Wheel Speed Sensors	Fig. 05.1
.....	Fig. 05.2
Window Motors	Fig. 14.1
Window Switch – Passenger	Fig. 09.2
.....	Fig. 14.1
Window Switches – Rear	Fig. 09.2
.....	Fig. 14.1
Windshield Heaters	Fig. 06.1
Windshield Washer Pump	Fig. 13.1
Windshield Wipe / Wash Switch	Fig. 13.1
Wiper Motor Assembly	Fig. 13.1
Wiper Park Heater	Fig. 06.1
Yaw Velocity Sensor	Fig. 05.1



Figure and Data Page Layout

Figure Pages

Each Figure represents a specific electrical system of the vehicle. The Figures are arranged numerically by system (**01 - Power Distribution, 02 - Battery; Starter; Generator, etc.**) with variations in the system identified by a numeral following a decimal point (01.1, 01.2, etc.). Refer to the **Table of Contents: Figures** for a complete list of the Figures.

The Figures **01 - Power Distribution** detail the distribution of power to each of the systems. Numbered reference symbols refer the user to a specific Figure and from a specific Figure back to the Power Distribution Figures. This method eliminates the need to include detailed Power Distribution information on each of the Figures. The reference symbols are defined on page 14.

Each Figure appears on a right-hand page with a corresponding Data page to the left. The Figure and Data pages are folding pages. The user must fold out both pages in order to access all the information provided.

Data Pages

The Data page includes information to assist the user in identifying and locating components, connectors and grounds. This information is supplemented by the illustrations in this front section of the book.

When network data is required for the understanding of a particular circuit, the user is directed to the Appendix.

Where circuits include a Control Module, Pin Out information is provided with values for “active” and “inactive” states. The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. “Active” means a load is applied or a switch is ON; “inactive” means a load is not applied or a switch is OFF. This information is provided to assist the user in understanding circuit operation and should be used **FOR REFERENCE ONLY**.



CONTROL MODULE PIN OUT INFORMATION

FIGURE NUMBER

COMPONENT, CONNECTOR AND GROUND INFORMATION

CONTROL MODULE PIN-OUT INFORMATION			Fig. 02.1		
General Electronic Control Module					
<input checked="" type="checkbox"/> Pin	Description	Active	Component	Connector(s)	Location
S 8A61-1	SCP +	Active	FRONT POWER DISTRIBUTION BOX	2 NEW BLACK	ENGINE COMPARTMENT RH FRONT
S 8A61-2	SCP -	Inactive	GENERAL ELECTRONIC CONTROL MODULE	CASH	# POST L+H SIDE
D 8A61	SCP +	Inactive		CAB1	# POST L+H SIDE
I 8C15-1	IGNITION KEY SWITCH	Active		CAB2	# POST L+H SIDE
I 8C15-2	IGNITION KEY TRANSFER	Active		CAB3	# POST L+H SIDE
D 8C15-3	IGNITION ANTI TAFT SYSTEM TRANSMITTER	Active		CAB4	# POST L+H SIDE
I 8C15-4	GROUND SUPPLY	Ground		CAB5	# POST L+H SIDE
I 8C15-5	GROUND	Ground		CAB6	# POST L+H SIDE
S 8C15-6	SCP -	Ground		CAB7	# POST L+H SIDE
S 8C15-7	IGNITION RELAY ACTUATOR	Ground		CAB8	# POST L+H SIDE
O 8D4-4	IGNITION ANTI TAFT SYSTEM TRANSMITTER GROUND SUPPLY	Ground		PCB#	STEERING COLUMN
Instrument Pack				SC14	FASCIA
<input checked="" type="checkbox"/> Pin	Description	Active		SC15	FASCIA
S 8A61-1	IGNITION CIRCUIT POWER SUPPLY	Active		SC24	IGNITION SWITCH
I 8C15-1	GATE DRIVE	Ground		SC25	IGNITION SWITCH
I 8C15-2	IGNITION KEY CUT	Ground		SC26	IGNITION SWITCH
D 8C15-3	IGNITION ANTI TAFT SYSTEM TRANSMITTER	Ground		SC27	IGNITION SWITCH
I 8C15-4	GROUND	Ground		SC28	IGNITION SWITCH
I 8C15-5	GROUND	Ground		SC29	IGNITION SWITCH
S 8C15-6	SCP -	Ground		SC30	IGNITION SWITCH
S 8C15-7	IGNITION RELAY ACTUATOR	Ground		SC31	IGNITION SWITCH
O 8D4-4	IGNITION ANTI TAFT SYSTEM TRANSMITTER GROUND SUPPLY	Ground		SC32	IGNITION SWITCH
Powertrain Control Module				SC33	IGNITION SWITCH
<input checked="" type="checkbox"/> Pin	Description	Active		SC34	IGNITION SWITCH
S 8A61-1	SCP +	Active		SC35	IGNITION SWITCH
S 8A61-2	SCP -	Inactive		SC36	IGNITION SWITCH
IM 8C15-1	ALC NETWORK COMMON GND	Ground		SC37	IGNITION SWITCH
IM 8C15-2	ALC NETWORK POWER	Ground		SC38	IGNITION SWITCH
I 8C15-3	IGNITION SW	Ground		SC39	IGNITION SWITCH
I 8C15-4	GENERATOR SWINGING	Ground		SC40	IGNITION SWITCH
I 8C15-5	GENERATOR LOAD SWINGING	Ground		SC41	IGNITION SWITCH
NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.			FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.		
The following abbreviations are used to represent values for Control Module Pin-Out data					
I Input	SS Sensor Supply V	D Serial and Encoded Data	PWM Pulse Width Modulated		
O Output	S SCP Network	B Battery Voltage	Hz Frequency		
G Ground	A ALC Network	V Voltage (DC)	kHz Frequency x 1000		
NC No Connection			Hz Frequency		
			1Hz Frequency x 1000		
CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.					
NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "inactive" means a load is not applied or a switch is OFF.					
Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.					
DATE OF ISSUE: October 2000					

DATA PAGE

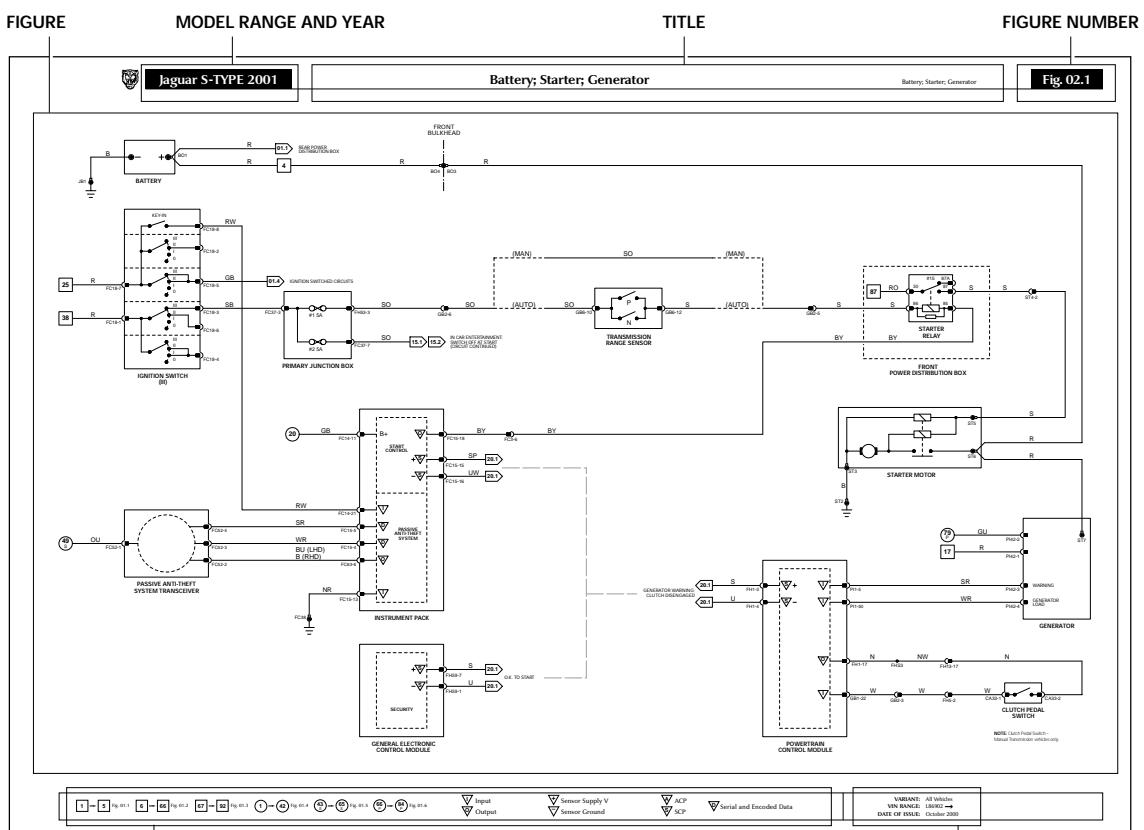


FIGURE PAGE

KEY TO REFERENCE SYMBOLS

VARIANT, VIN RANGE AND DATE OF ISSUE



NOTE: In the examples on this page, an 'X' is used where a number would appear on an actual Figure.

Reference Symbols

	Battery power supply
	Ignition switched power supply (key I, II, III)
	Switched system power supply
	Powertrain control system power supply
	Figure number reference
	SCP network

Wiring Color Codes

N	Brown	O	Orange
B	Black	S	Slate
W	White	L	Light
K	Pink	U	Blue
G	Green	P	Purple
R	Red	Y	Yellow
BRD	Braid		

Control Module Pin Symbols

	Input
	Output
	Reference voltage / ground
	SCP network

ACP network

Serial and encoded data

Wiring Symbols

Splice			Light emitting diode (LED)
Simplified splice			Motor
Bulb			Potentiometer
Capacitor			Power distribution box terminal
Connector			Pressure transducer
Diode			Resistor
Diode in harness			Solenoid
Eyelet and stud			Suppression diode
Fuse			Suppression resistor
Ground			Thermistor
Hall effect sensor			Transistor
Junction connector			Wire continued
			Zener diode



Grounds

On Figures where LHD and RHD circuits are combined and the ground designation differs from LHD to RHD, the RHD ground code is shown in parentheses. If the ground designation is the same for LHD and RHD, only one ground code is used, with no parentheses.

EXAMPLE:



Relays

All relays are located in the power distribution boxes and the primary junction box. Relays do not have a separate relay connector (base). Standard relays (full size) use the DIN pin numbering system; micro relays use the ISO pin numbering system. The normally closed circuit (pin 87A or pin 4) is not used in Jaguar S-TYPE vehicles. The relay location number (#1, for example) and the pin numbers are shown inside each relay.


EXAMPLE:



SCP Network


In most instances, the SCP Network is shown as a broken grey line to indicate that there is network communication between the depicted control modules. Refer to Fig. 20.1 for circuit details.


EXAMPLE:

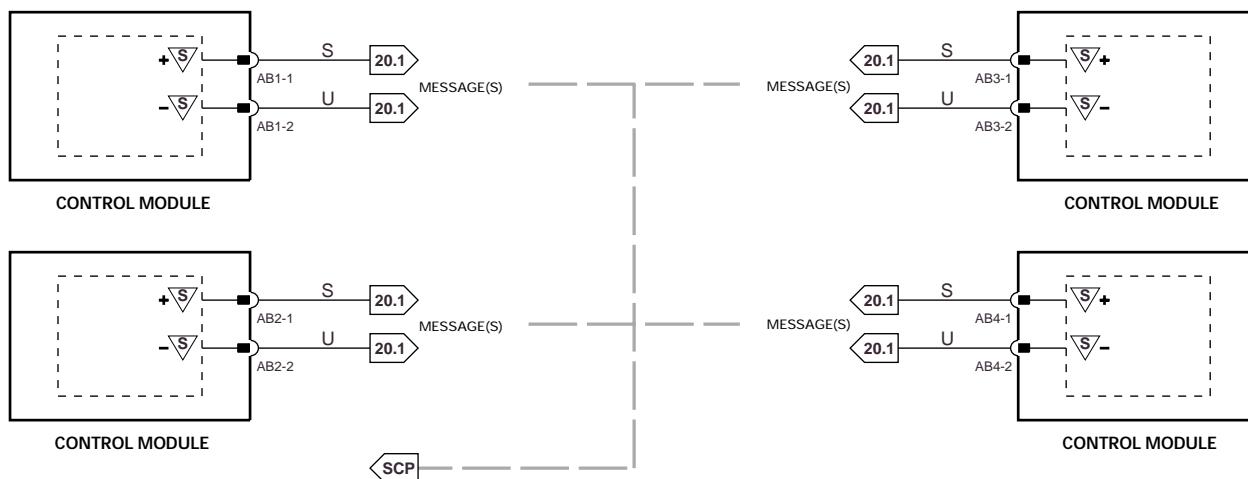

Code Numbering


When numbering connectors, grounds and splices, Jaguar Engineering uses a three-position format: AC001, AC002, etc. Because space is limited in this Electrical Guide, the codes have been shortened. Thus AC001-001 becomes AC1-1, AC002-001 becomes AC2-1, etc.

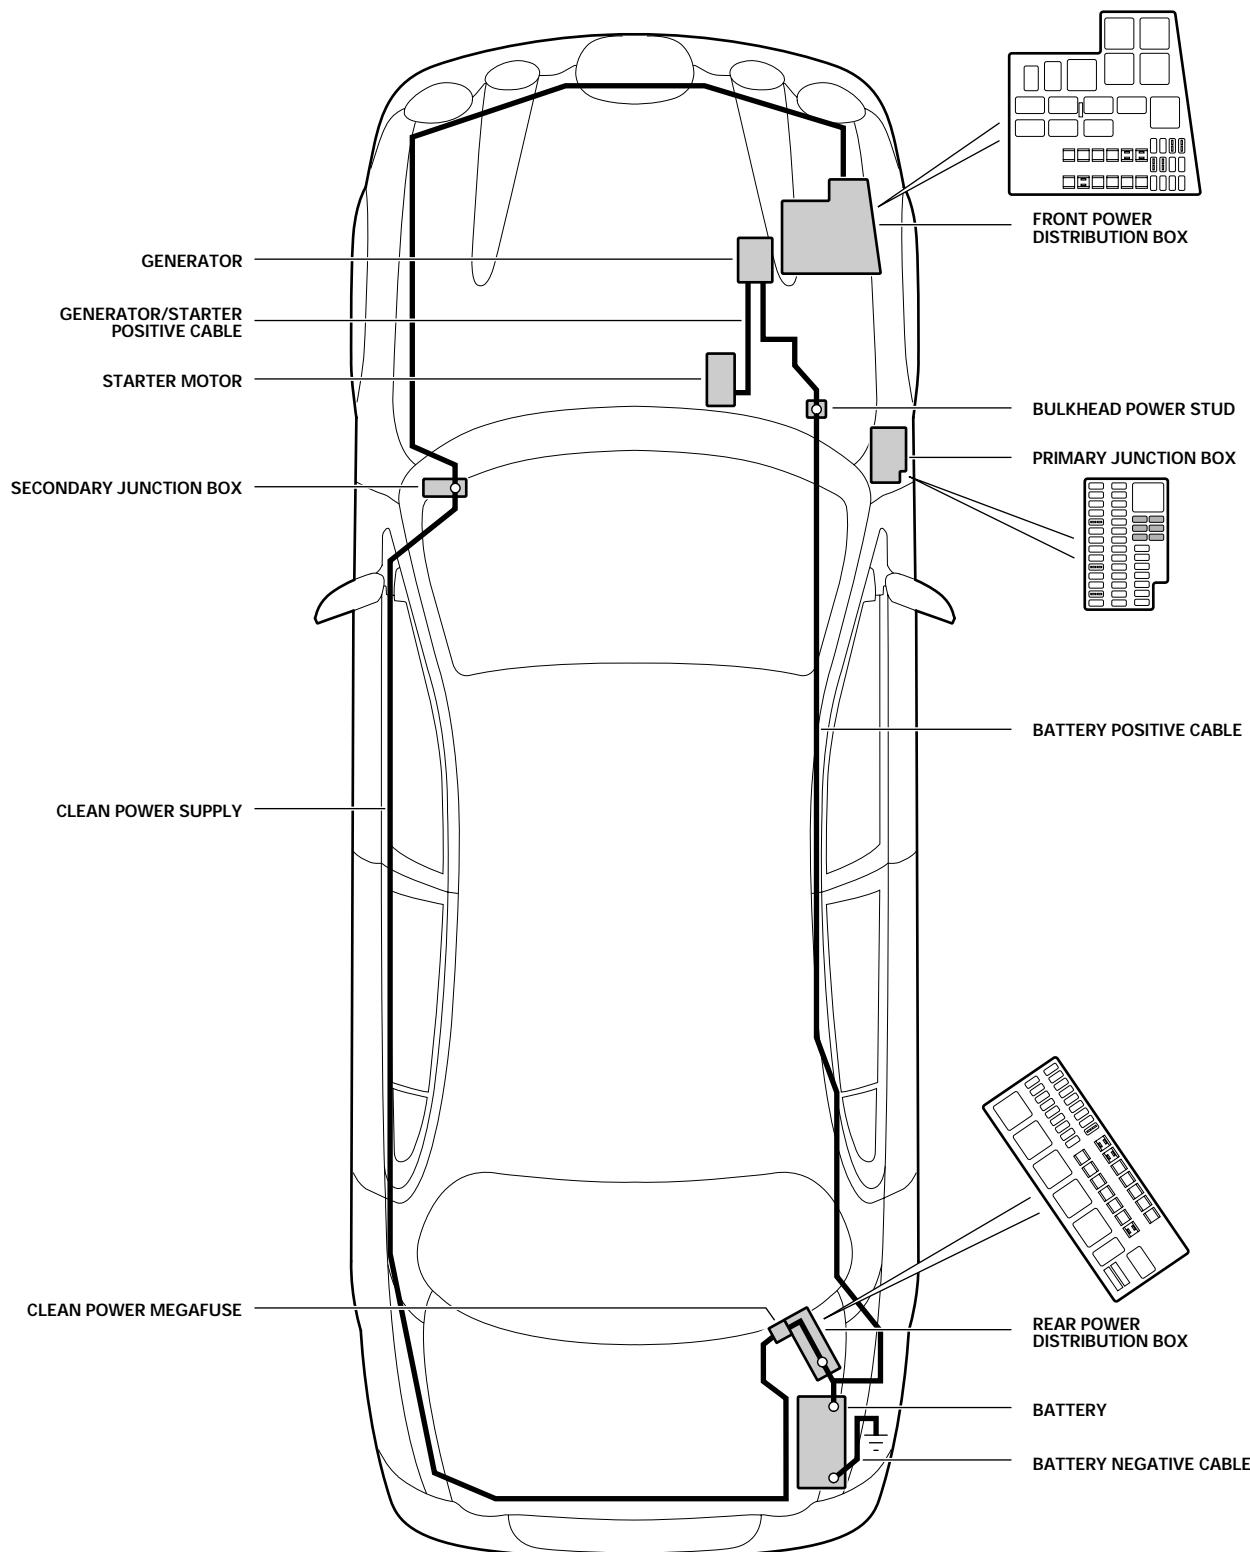

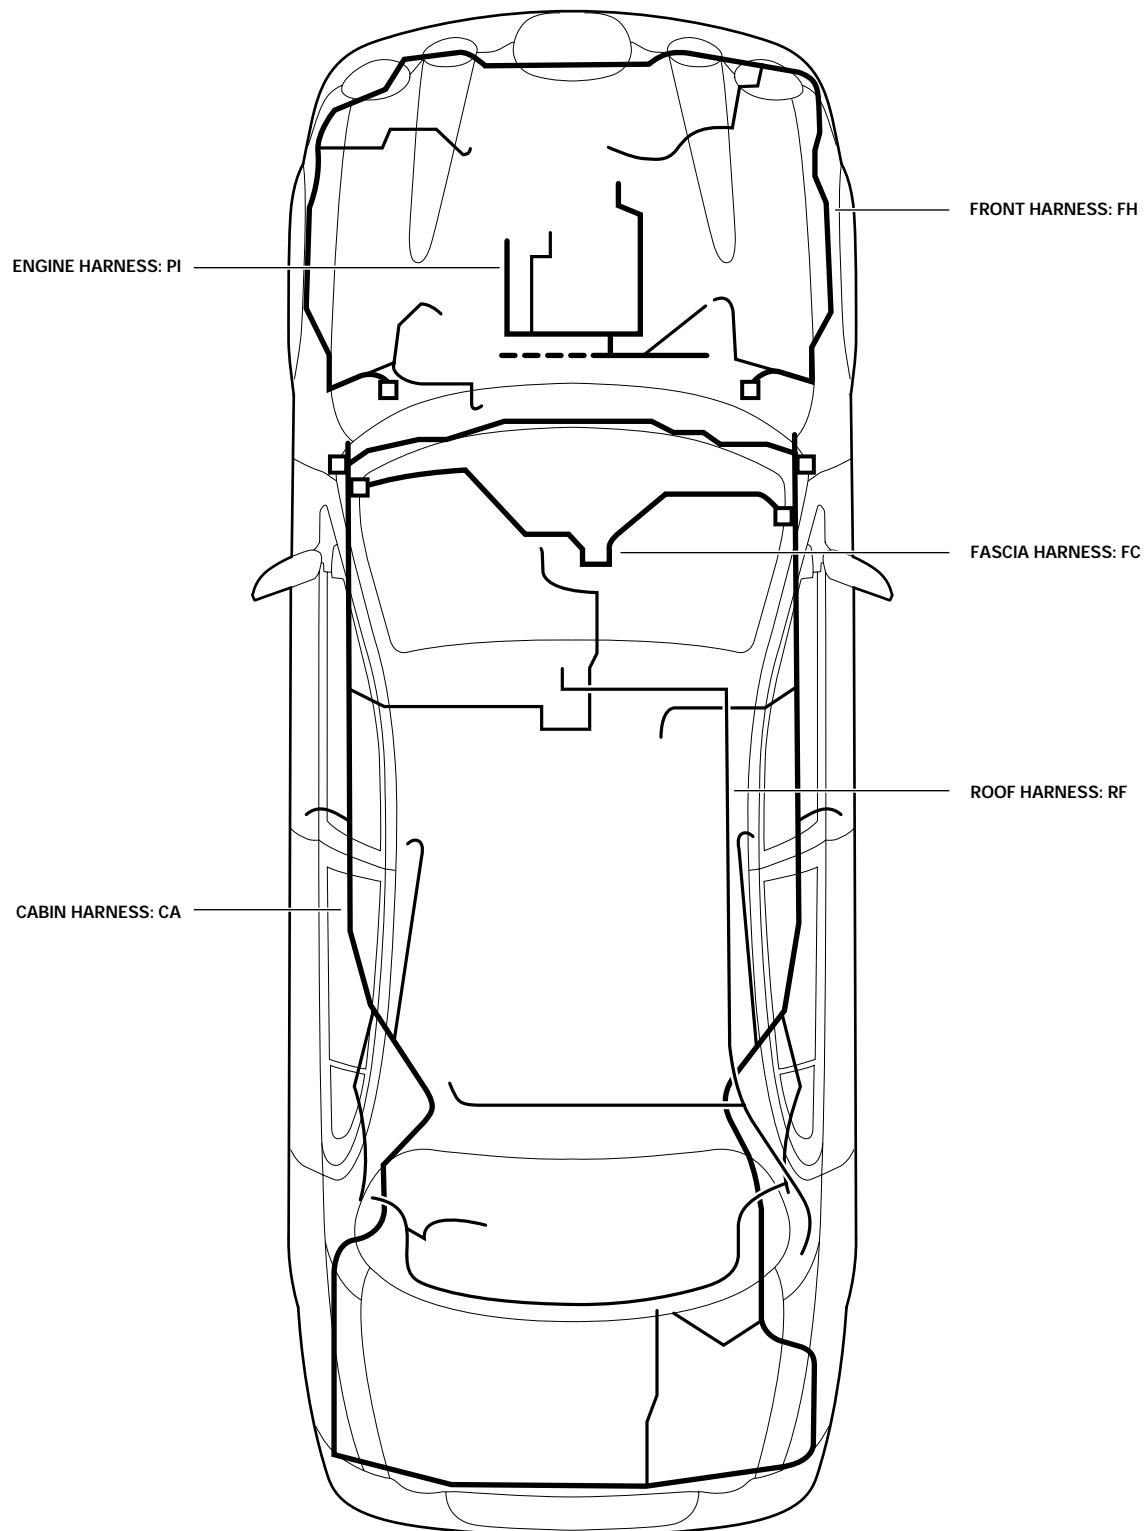




STANDARD RELAY

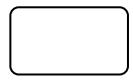

MICRO RELAY

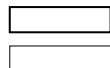


NOT USED



DIODES


FRONT POWER DISTRIBUTION BOX

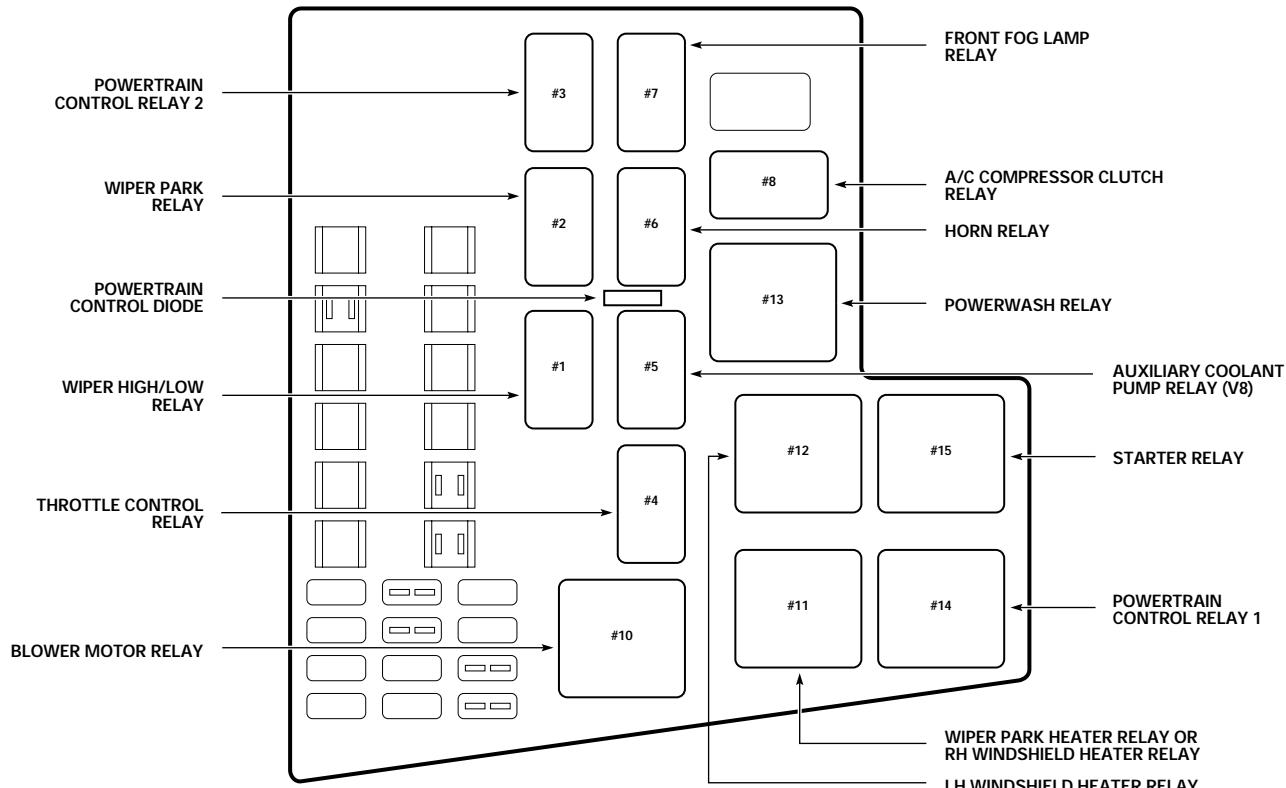


FRONT OF VEHICLE



STANDARD RELAY


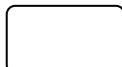


MICRO RELAY

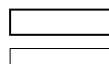

NOT USED

DIODES

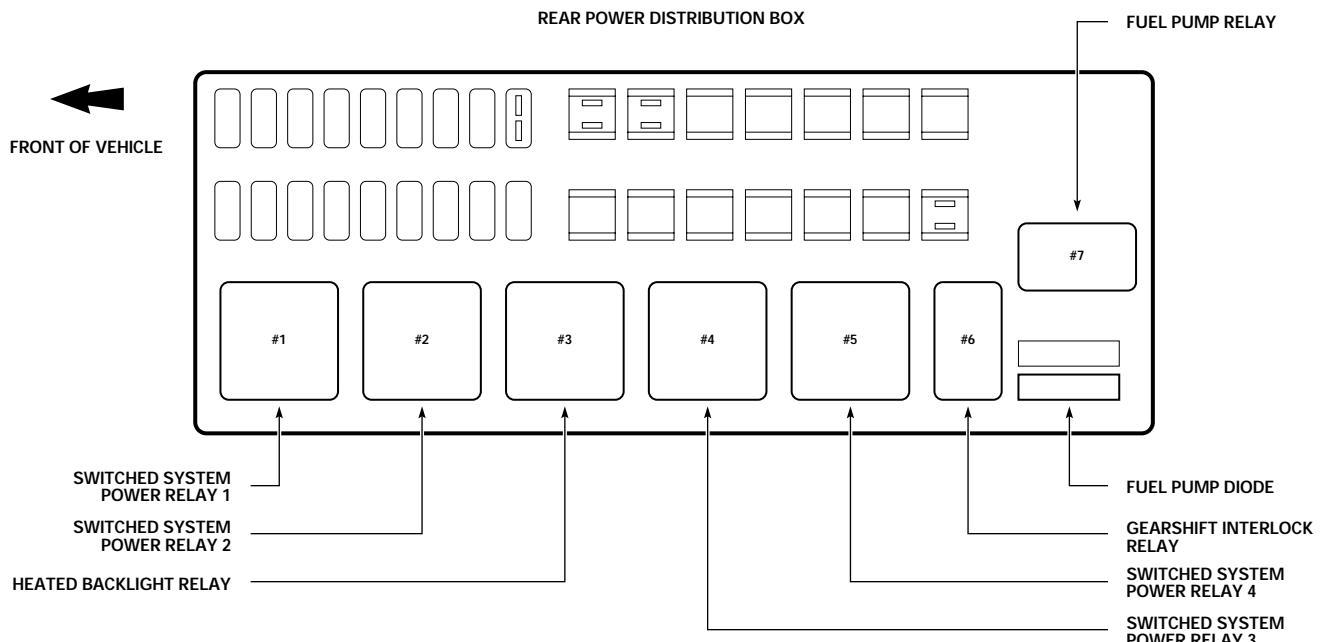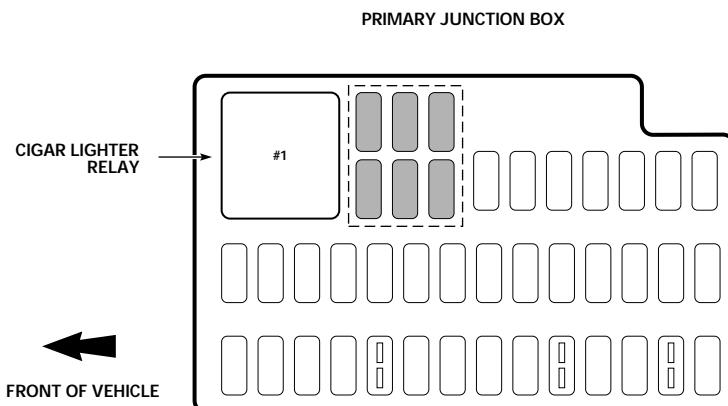




FRONT POWER DISTRIBUTION BOX

MINI-FUSES
 NOT USED


CARTRIDGE FUSES
 NOT USED

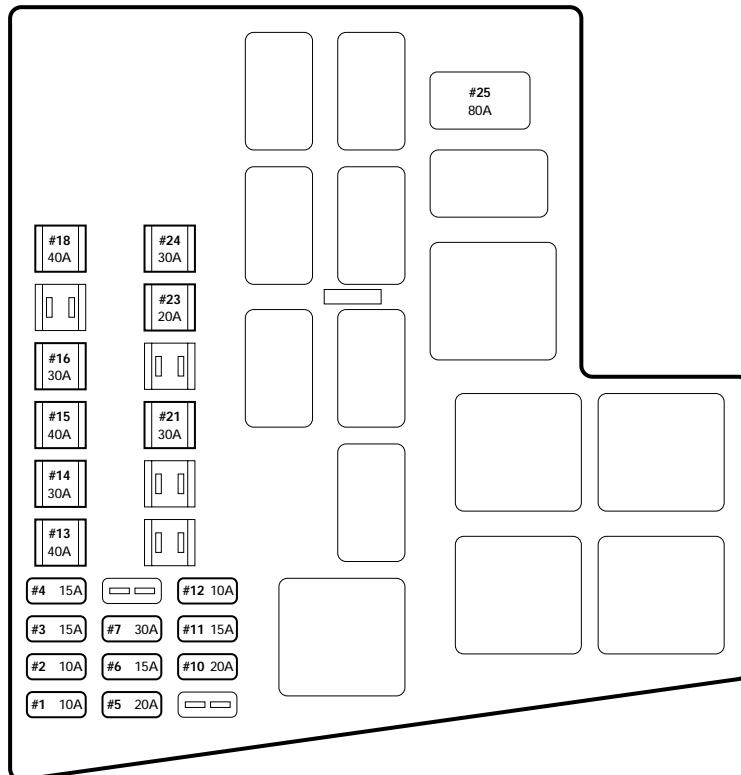

FRONT OF VEHICLE




PRIMARY JUNCTION BOX

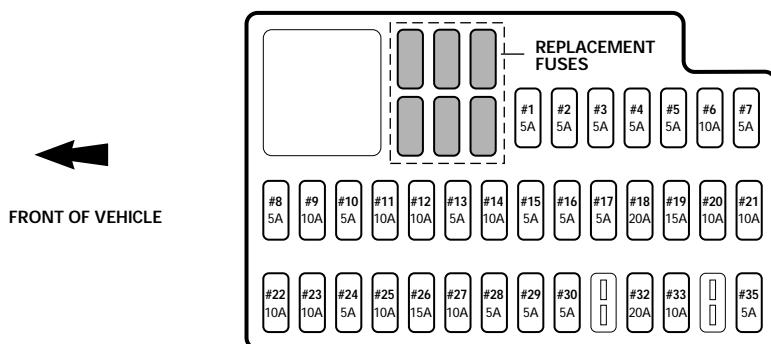

FRONT OF VEHICLE




REAR POWER DISTRIBUTION BOX

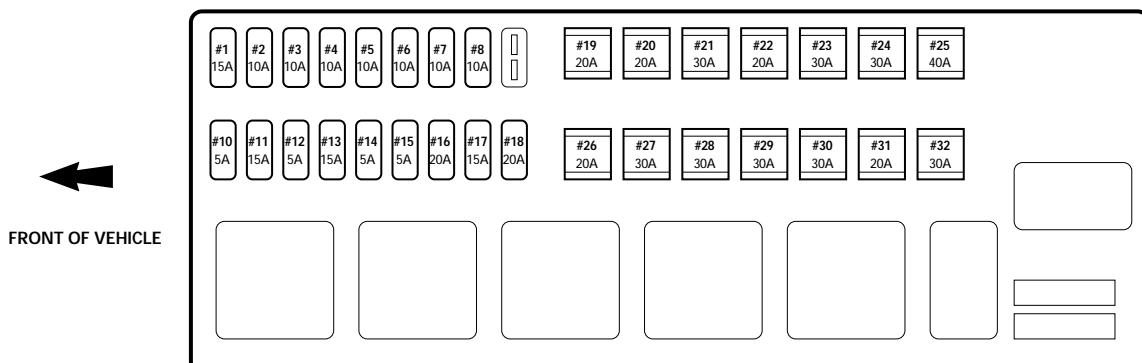


FRONT OF VEHICLE



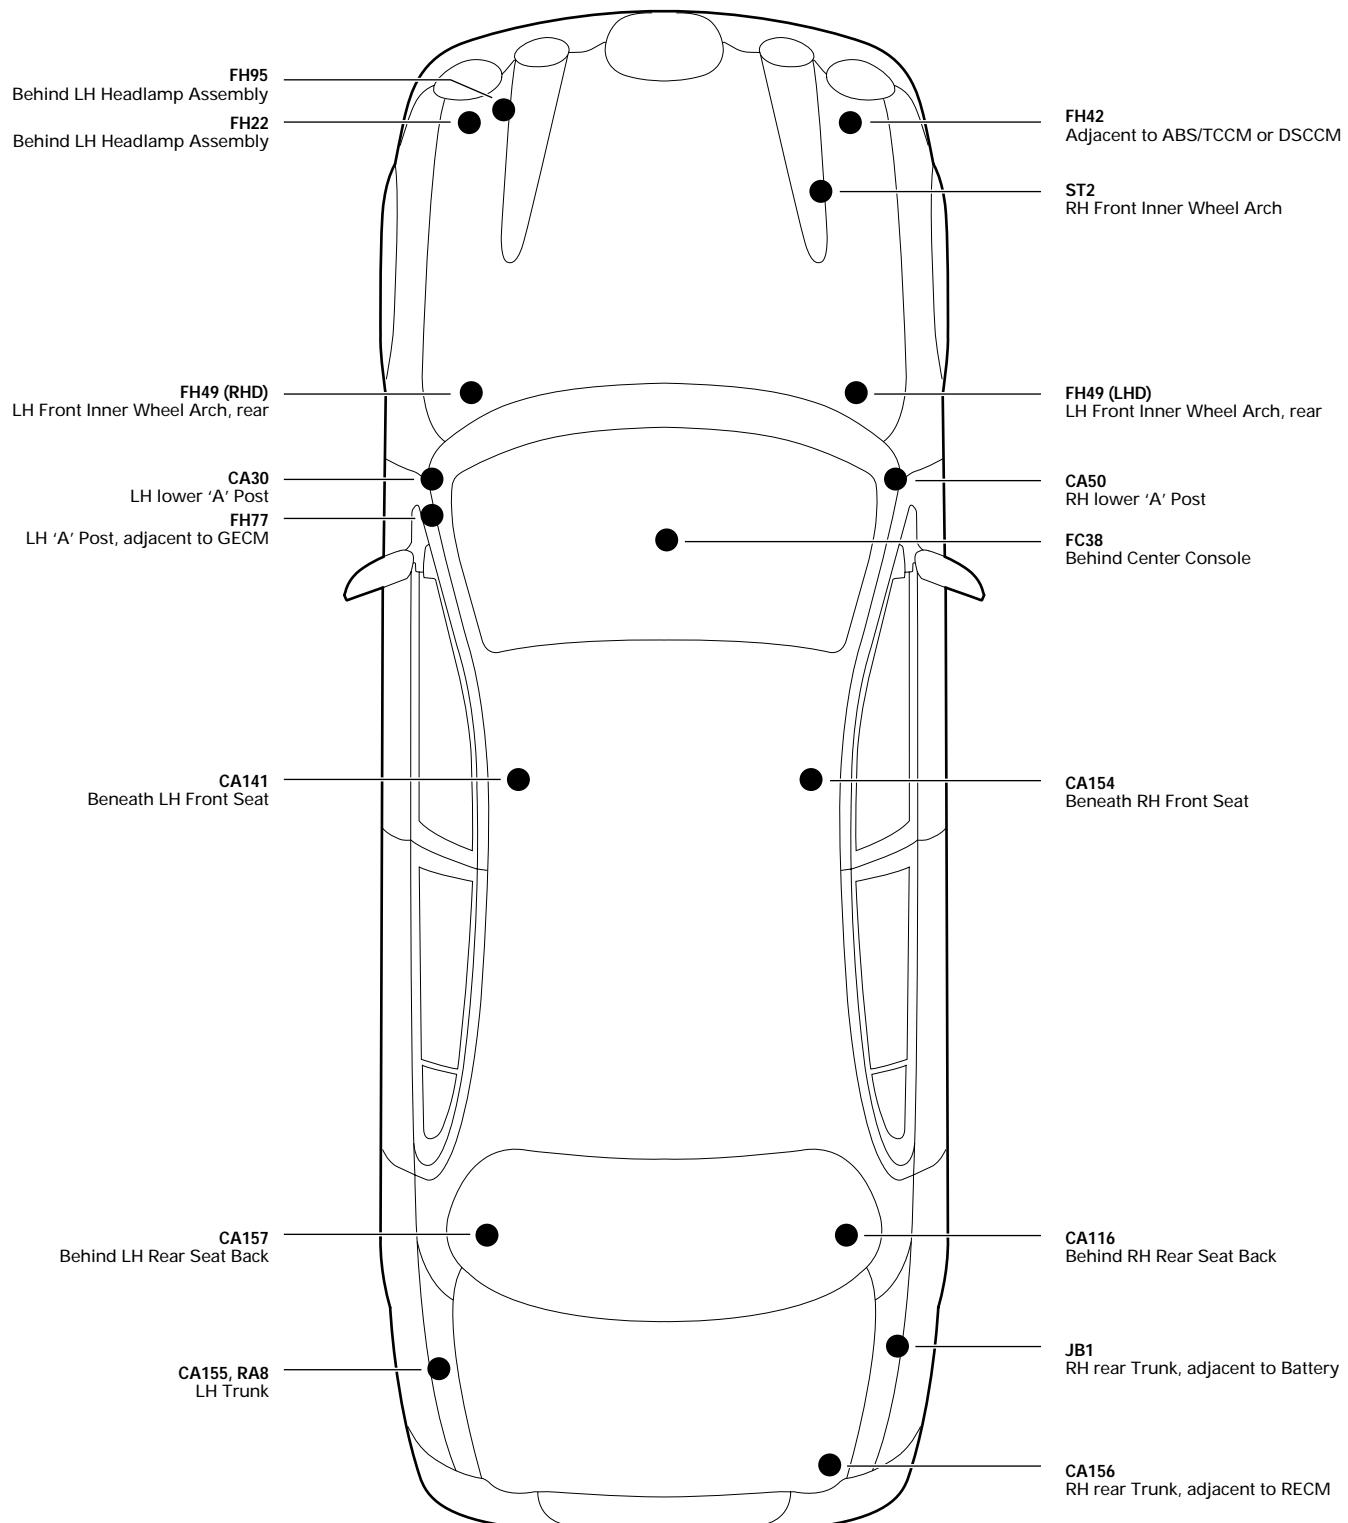




LHD

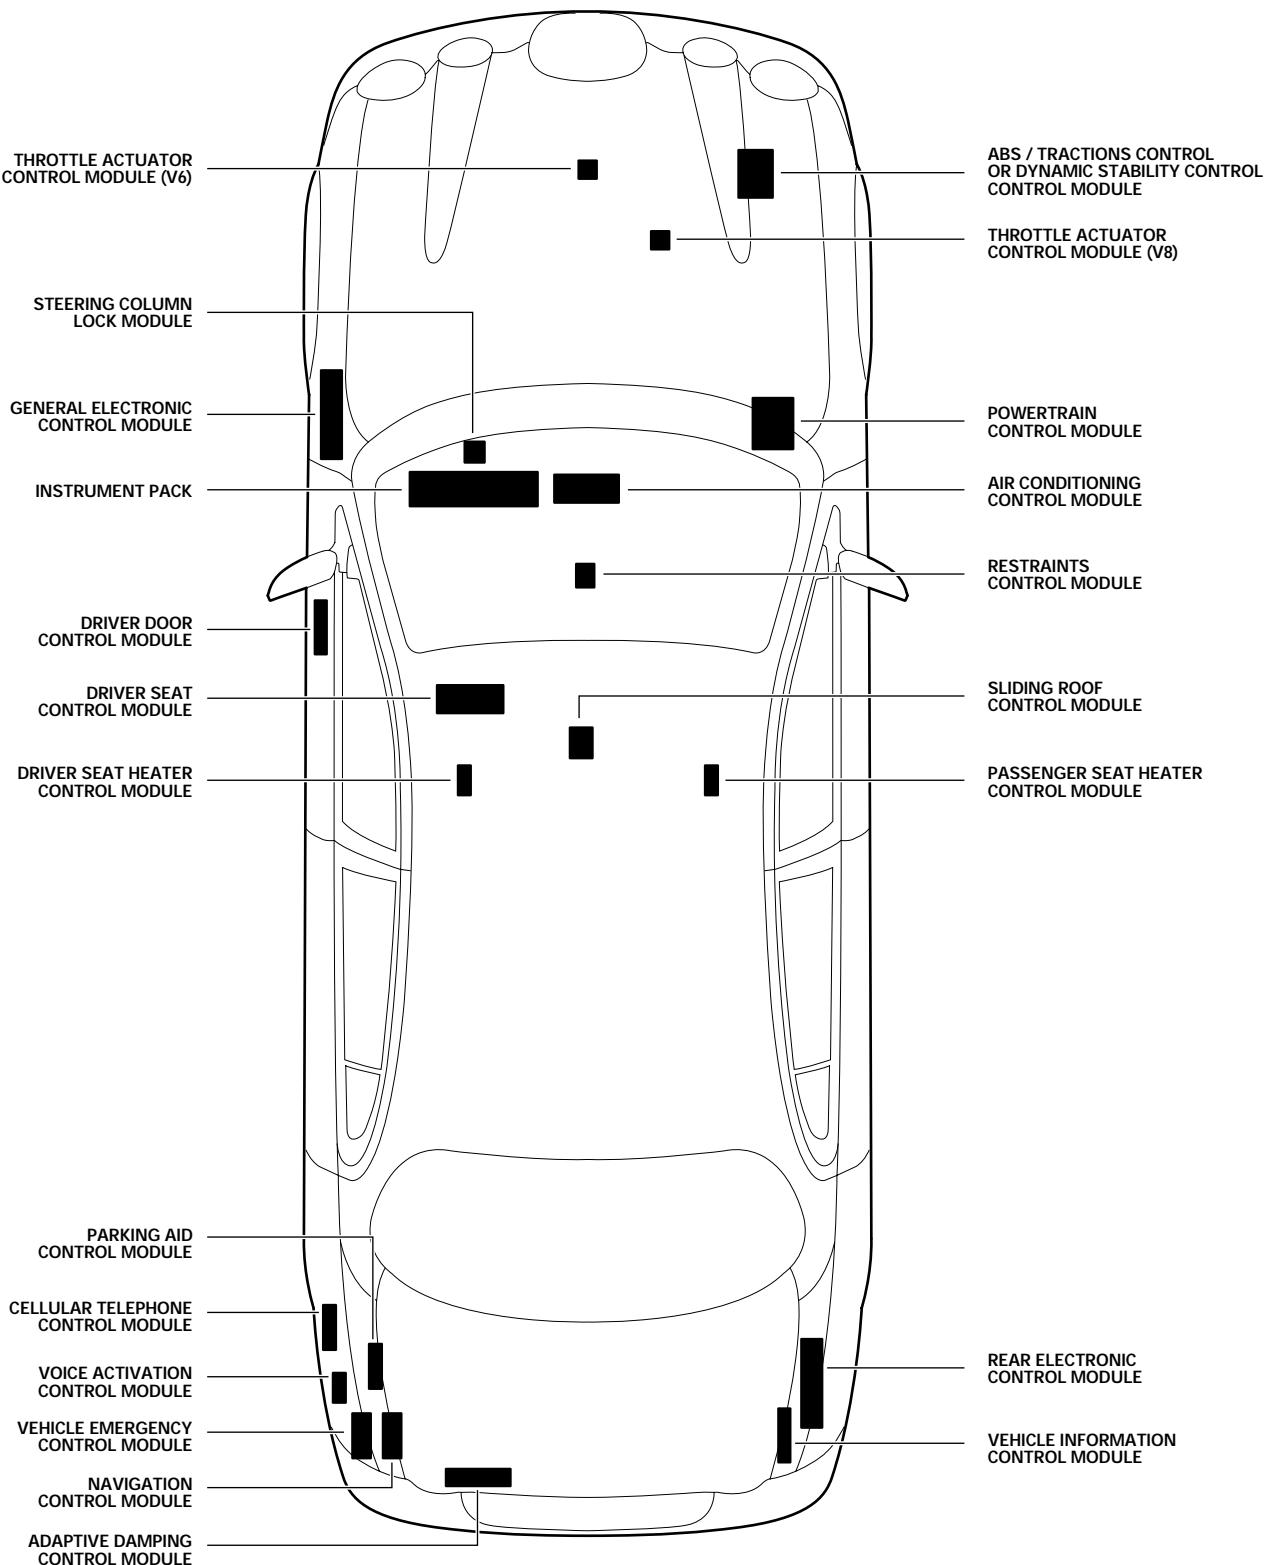




RHD

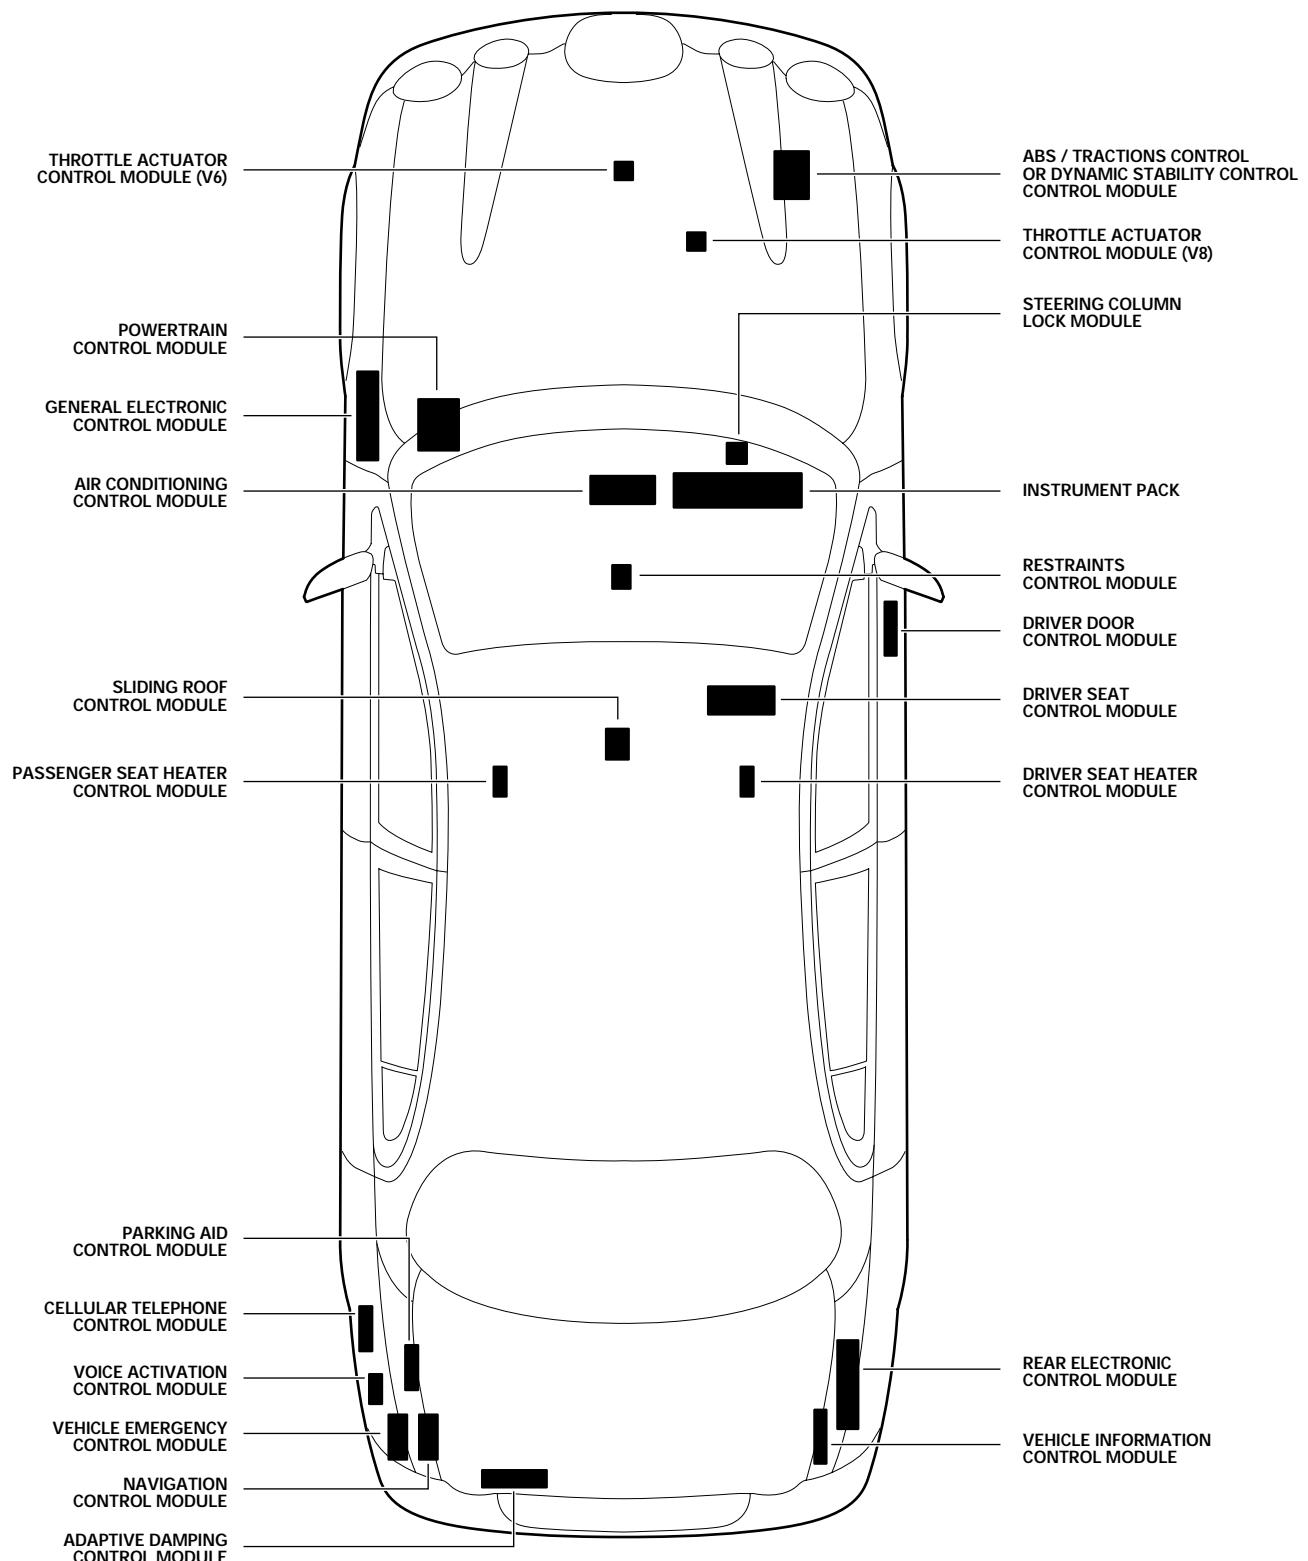



POWERTRAIN CONTROL MODULE: V8

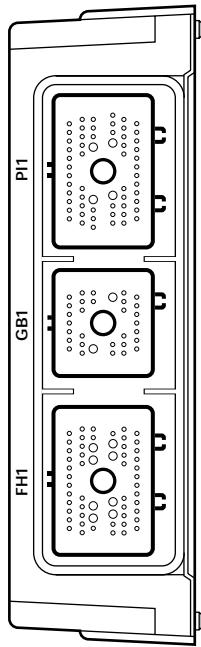

FH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
WR	—	S	U	N	BO	W	WR	NU	NR	—	NR
13	14	15	16	17	18	19	20	21	22	—	—
YG	—	W	WU	N	—	—	Y	WU	—	—	—
23	24	25	B	B	26	27	28	29	30	—	—
YR	—	—	—	—	B	B	—	—	—	—	—
30	31	32	GY	GQ	34	35	33	36	17	18	—
37	38	39	40	41	WU	WU	WU	WU	20	21	22
W	NU	—	O	WG	—	—	—	—	WR	WG	—
47	48	49	50	51	52	53	54	55	27	28	29
WU	WP	SP	—	WP	WP	—	—	YU	WP	WU	WG

V8 NAS

GB1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
WR	—	S	U	N	—	W	WR	NU	NR	—	NR
13	14	15	16	17	18	19	20	21	22	—	—
YG	—	W	WU	N	—	—	Y	WU	—	—	—
23	24	25	B	B	26	27	28	29	30	—	—
YR	—	—	—	—	B	B	—	—	—	—	—
30	31	32	33	34	35	36	37	38	39	40	41
37	38	39	40	41	WU	WU	WU	WU	23	24	25
W	NU	—	O	WG	—	—	—	—	WR	SB	SR
47	48	49	50	51	52	53	54	55	26	27	28
WU	WP	SP	—	WP	WP	—	—	YU	WP	WU	WG

PH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
NR	NR	NW	NV	NW	—	NR	NR	NR	NR	NR	NR
13	14	15	16	17	18	19	20	21	22	—	—
YG	—	W	WU	N	—	—	Y	WU	—	—	—
23	24	25	B	B	26	27	28	29	30	—	—
YR	—	—	—	—	B	B	—	—	—	—	—
30	31	32	33	34	35	36	37	38	39	40	41
37	38	39	40	41	WU	WU	WU	WU	23	24	25
W	NU	—	O	WG	—	—	—	—	WR	SB	SR
47	48	49	50	51	52	53	54	55	26	27	28
WU	WP	SP	—	WP	WP	—	—	YU	WP	WU	WG

FH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
NR	NR	NW	NV	NW	—	NR	NR	NR	NR	NR	NR
13	14	15	16	17	18	19	20	21	22	—	—
YG	—	W	WU	N	—	—	Y	WU	—	—	—
23	24	25	B	B	26	27	28	29	30	—	—
YR	—	—	—	—	B	B	—	—	—	—	—
30	31	32	33	34	35	36	37	38	39	40	41
37	38	39	40	41	WU	WU	WU	WU	23	24	25
W	NU	—	O	WG	—	—	—	—	WR	SB	SR
47	48	49	50	51	52	53	54	55	26	27	28
WU	WP	SP	—	WP	WP	—	—	YU	WP	WU	WG

V8 ROW


PH / GREY

1	2	3	4	5	6	7	8	9	10	11	12
NR	NR	NW	NV	NW	—	NR	NR	NR	NR	NR	NR
13	14	15	16	17	18	19	20	21	22	—	—
YG	—	W	WU	N	—	—	Y	WU	—	—	—
23	24	25	B	B	26	27	28	29	30	—	—
YR	—	—	—	—	B	B	—	—	—	—	—
30	31	32	33	34	35	36	37	38	39	40	41
37	38	39	40	41	WU	WU	WU	WU	23	24	25
W	NU	—	O	WG	—	—	—	—	WR	SB	SR
47	48	49	50	51	52	53	54	55	26	27	28
WU	WP	SP	—	WP	WP	—	—	YU	WP	WU	WG

1	2	3	4	5	6	7	8	9	10	11	12
NR	NR	NW	NV	NW	—	NR	NR	NR	NR	NR	NR
13	14	15	16	17	18	19	20	21	22	—	—
YG	—	W	WU	N	—	—	Y	WU	—	—	—
23	24	25	B	B	26	27	28	29	30	—	—
YR	—	—	—	—	B	B	—	—	—	—	—
30	31	32	33	34	35	36	37	38	39	40	41
37	38	39	40	41	WU	WU	WU	WU	23	24	25
W	NU	—	O	WG	—	—	—	—	WR	SB	SR
47	48	49	50	51	52	53	54	55	26	27	28
WU	WP	SP	—	WP	WP	—	—	YU	WP	WU	WG



POWERTRAIN CONTROL MODULE: V6

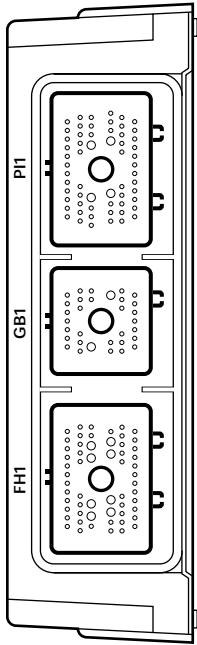

FH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
WR	-	S	U	N	NU	W	WR	-	NR	-	NR
13	14	15	16	17	-	WU	N	-	-	-	-
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

V6 ROW AUTO

P11 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

FH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

P11 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

FH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

FH1 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

P11 / GREY

1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

V6 ROW MAN


1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-

P11 / GREY


1	2	3	4	5	6	7	8	9	10	11	12
N	NR	NN	NY	NW	-	7	6	7	8	9	10
13	14	15	16	17	-	WU	Y	WU	NU	NR	NG
YG	-	W	-	-	-	-	-	-	-	-	-
23	24	25	B	B	-	-	-	-	-	-	-
YR	-	-	-	-	-	-	-	-	-	-	-



**DYNAMIC STABILITY CONTROL
CONTROL MODULE**

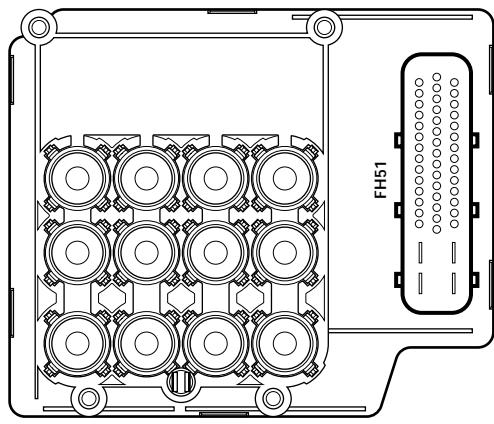

**ABS / TRACTION CONTROL
CONTROL MODULE**

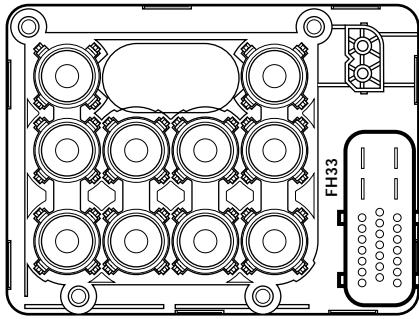


FH51 / GREY

16	15	S	14	13	12	11	10	9	8	7	6	5	4	3	2	1
RV	B	RY	NB	NU	YP	NR	YB	WP	WR	SO	WG	YL	WU	—	W	Y
31	30	—	30	29	28	27	26	25	24	23	22	21	20	19	18	17
32	47	R	NV	WU	WP	WR	WP	WR	WB	—	NR	—	QY	OU	U	S
33	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31
WR	YU	NW	YR	NV	—	—	NG	—	NG	—	YG	WG	—	YR	WR	WR

FH33 / BLACK

17	18	W	19	18	Y	—	20	21	22	23	24	25
WU	YU	S	WU	YU	S	—	WU	YU	S	—	WU	YU
10	11	U	12	11	S	—	13	14	15	16	—	—
—	—	—	—	—	—	—	WP	—	—	—	—	—
1	2	OG	3	2	WR	—	4	5	6	7	8	9
—	—	—	—	—	YR	—	—	—	—	WG	WG	—

ADAPTIVE DAMPING CONTROL MODULE

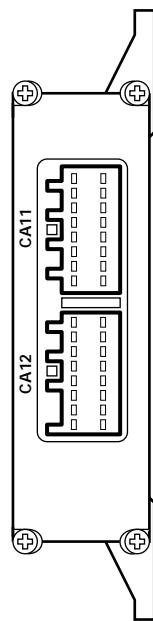

CA12 / GREY


1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
KB	BG	K	BO	BY	KY	BU	KU	—	—	—	—	—	—	—	—
9	10	11	12	13	14	15	16	Y	SW	WB	—	12	13	14	15

CA11 / BLUE

1	2	3	4	5	6	7	8	1	2	3	4	5	6	7	8
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
9	10	11	12	13	14	15	16	Y	SW	WB	—	12	13	14	15



AIR CONDITIONING CONTROL MODULE

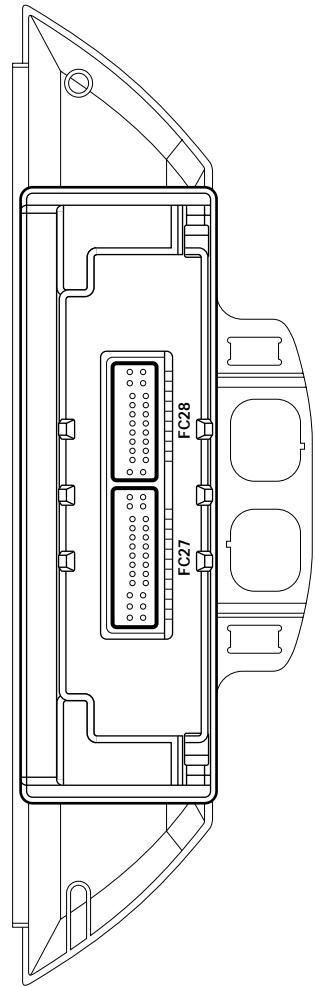

FC27 / GREY

13	12	11	10	9	8	7	6	5	4	3	2	1
WB	YR	WR	WR	YR	SP	_	NG	NU	_	W	WR	WB
26	25	24	23	22	21	20	19	18	17	16	15	14
YB	Y	W	WP	WP	WP	WP	NR	BU	NU	NR	WR	NG
			WP	WP	WP	WP	NR	BU	NU	NR	WR	NG

FC28 / GREY

11	10	9	8	7	6	5	4	3	2	1
WB	WR	WG	NW	WU	WB	WB	KO	UV	BR	UV
22	21	20	19	18	17	16	15	14	13	12
Y	SP	NU	WG	WR	NR	NR	WR	NG	—	SB
			NU	WG	WR	NR	WR	NG		

FC27 / GREY

11	10	9	8	7	6	5	4	3	2	1
WB	WR	WR	YR	SP	_	NG	NU	_	WB	WB
22	21	20	19	18	17	16	15	14	13	12
Y	SP	NU	WG	WR	NR	NR	WR	NG	—	SB
			NU	WG	WR	NR	WR	NG		

LHD


FC28 / GREY

11	10	9	8	7	6	5	4	3	2	1
WB	WR	WG	NW	WU	WB	WB	KO	UV	BR	UV
22	21	20	19	18	17	16	15	14	13	12
Y	SP	NU	WG	WR	NR	NR	WR	NG	—	SB
			NU	WG	WR	NR	WR	NG		

RHD



GENERAL ELECTRONIC CONTROL MODULE

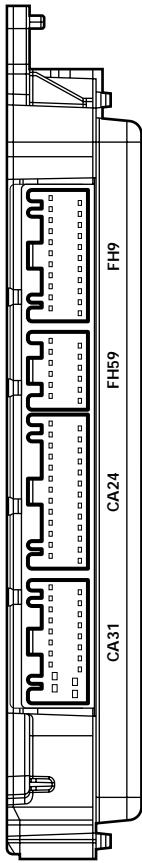

CA31 / BLACKs


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
OY	WR	KO	N	—	BG	BY	—	YG	—	WR	YR	—	SW	SR	—	U	BU	W	OG
TR	OU	13	14	15	16	UB	17	18	19	20	21	22	23	24	25	26	S	NR	WG
UR	SP	SD	Y	—	UB	—	N	BG	—	PW	WB	YB	WP	—	BR	WR	Y	BO	BW

CA24 / WHITE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
U	—	—	—	—	—	WR	YR	—	—	SW	SR	—	U	BU	W	OG	—	—	—
14	15	16	17	18	19	20	21	22	23	24	25	26	S	NR	WG	BR	WR	Y	BO
—	BU	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

FH9 / BLACK

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
NY	—	NG	—	OG	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	—	BU	WU	Y	BO
—	BU	BW	YU	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

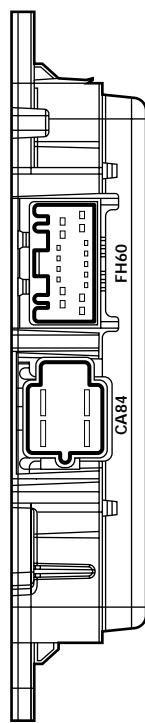

CA84 / GREY


1	2	3	4	5	6	7	8
YP	WP	NG	WG	BY	BW	B	BR
9	10	11	12	13	14	15	16
WG	BR	B	B	B	B	B	BG

FH60 / BLACK

1	2	3	4	5	6	7	8
OW	NG	WG	BY	BW	B	BR	BR
3	4	5	6	7	8	9	10
RY	BY	NG	BR	B	B	B	BG



REAR ELECTRONIC CONTROL MODULE

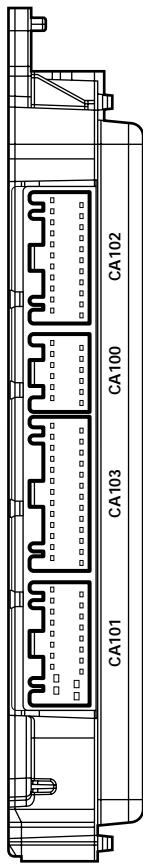

LHD

CA101 / BLACK	
1	2
GR	B
11	12
GO	BR
13	14
WR	WU
15	16
WR	WG
17	18
WR	WB
19	20
WR	WP
21	22
WR	SP
23	24
WR	N
25	26
WR	B
27	S

CA100 / BLACK


CA103 / WHITE	
1	2
—	—
1	2
GR	B
11	12
GO	BR
13	14
WR	—
15	16
WR	WU
17	18
WR	WB
19	20
WR	WP
21	22
WR	SP
23	24
WR	N
25	26
WR	B
27	S

RHD

CA101 / BLACK	
1	2
GR	B
11	12
GO	BR
13	14
WR	—
15	16
WR	WU
17	18
WR	WB
19	20
WR	WP
21	22
WR	SP
23	24
WR	N
25	26
WR	B
27	S


CA100 / BLACK

CA103 / WHITE	
1	2
—	—
1	2
GR	B
11	12
GO	BR
13	14
WR	—
15	16
WR	WU
17	18
WR	WB
19	20
WR	WP
21	22
WR	SP
23	24
WR	N
25	26
WR	B
27	S

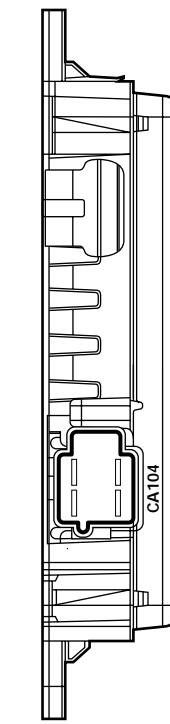


CA104 / BLACK

1	2
PW	BO
3	4
UO	RO

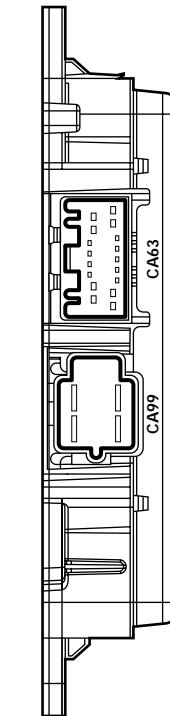

CA99 / GREY

1	2
UR	PU
BG	BO
9	10
BG	BR
11	—

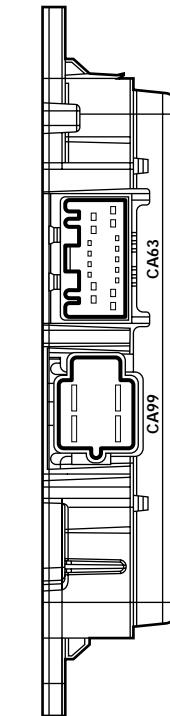


CA63 / BLACK

1	2
BG	BO
2	3
BG	BY
3	4
BY	BY
4	5
BY	BY
5	6
BY	BY
6	7
BY	BY
7	8
BY	BY
8	9
BY	BY
9	10
BY	BY
10	11
BY	BY
11	12
BY	BY
12	13
BY	BY
13	14
BY	BY
14	15
BY	BY
15	16
BY	BY
16	17
BY	BY
17	18
BY	BY
18	19
BY	BY
19	20
BY	BY
20	21
BY	BY



INSTRUMENT PACK

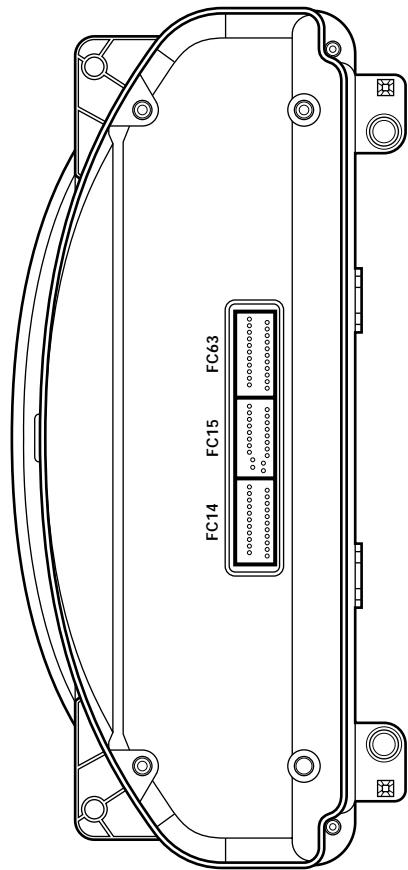

FC14 / GREY

1	2	3	4	5	6	7	8	9	10	11
O	YU	WU	PB	UB	BU	UR	NU	WU	SP	GB
12	13	14	15	16	17	18	19	20	21	22

FC15 / BLACK

1	2	3	4	5	6	7	8	9	10	11
NG	YR	N	N	—	BU	—	B	—	NW	BW
11	12	13	14	15	16	17	18	19	20	21

FC63 / BLACK

1	2	3	4	5	6	7	8	9	10	11
NG	YR	N	N	—	BU	—	B	—	NW	BW
12	13	14	15	16	17	18	19	20	21	22

LHD

FC14 / GREY

1	2	3	4	5	6	7	8	9	10	11
O	YU	WU	PB	UB	B	UR	NU	WU	SP	GB
12	13	14	15	16	17	18	19	20	21	22

FC15 / BLACK

1	2	3	4	5	6	7	8	9	10	11
NG	YR	N	N	—	BU	—	B	—	NW	BW
11	12	13	14	15	16	17	18	19	20	21

FC63 / BLACK

1	2	3	4	5	6	7	8	9	10	11
NG	YR	N	N	—	BU	—	B	—	NW	BW
12	13	14	15	16	17	18	19	20	21	22

RHD

FC14 / GREY

1	2	3	4	5	6	7	8	9	10	11
O	YU	WU	PB	UB	B	UR	NU	WU	SP	GB
12	13	14	15	16	17	18	19	20	21	22

FC15 / BLACK



1	2	3	4	5	6	7	8	9	10	11
NG	YR	N	N	—	BU	—	B	—	NW	BW
11	12	13	14	15	16	17	18	19	20	21

FC63 / BLACK

1	2	3	4	5	6	7	8	9	10	11
NG	YR	N	N	—	BU	—	B	—	NW	BW
12	13	14	15	16	17	18	19	20	21	22




DRIVER SEAT CONTROL MODULE

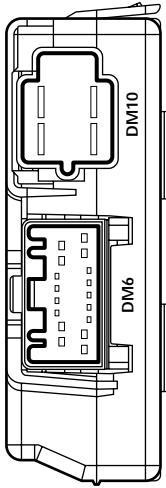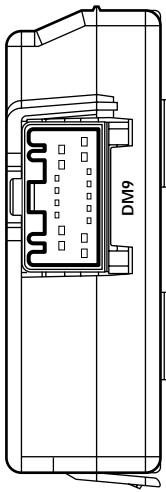

DT2 / BLACK
1 WR 11 —

DM6 / BLACK
1 YG 9 YR

DRIVER DOOR CONTROL MODULE

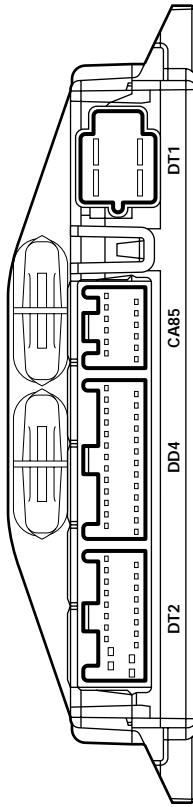

LHD
1 WR 11 —

RHD
1 WR 11 —

CA85 / BLACK
1 —

DM10 / BROWN

DT1 / GREY

CA85 / BLACK

DD4 / WHITE

DT1 / GREY

Fig. 01.1

COMPONENTS

Component	Connector(s)	Connector Description	Location
BATTERY	VARIES		TRUNK, RH SIDE
CLEAN POWER FUSE	CA133 CA135	EYELET EYELET	REAR POWER DISTRIBUTION BOX REAR POWER DISTRIBUTION BOX
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
IGNITION SWITCH	FC18	8-WAY / BLACK	STEERING COLUMN
PRIMARY JUNCTION BOX	CA2 CA56 FC37 FH7 FH53	26-WAY / BLACK 8-WAY / GREY 26-WAY / BLACK 6-WAY / GREY 10-WAY / GREY	'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE
REAR POWER DISTRIBUTION BOX			TRUNK, RH SIDE
TRANSIT ISOLATION RELAY	CA16 JB2	2-WAY / WHITE 1-WAY / BLACK	ADJACENT TO BATTERY ADJACENT TO BATTERY

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CF3	1-WAY / BLACK / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF THE RADIATOR
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
JB1	GROUND EYELET	ADJACENT TO BATTERY / TRUNK TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

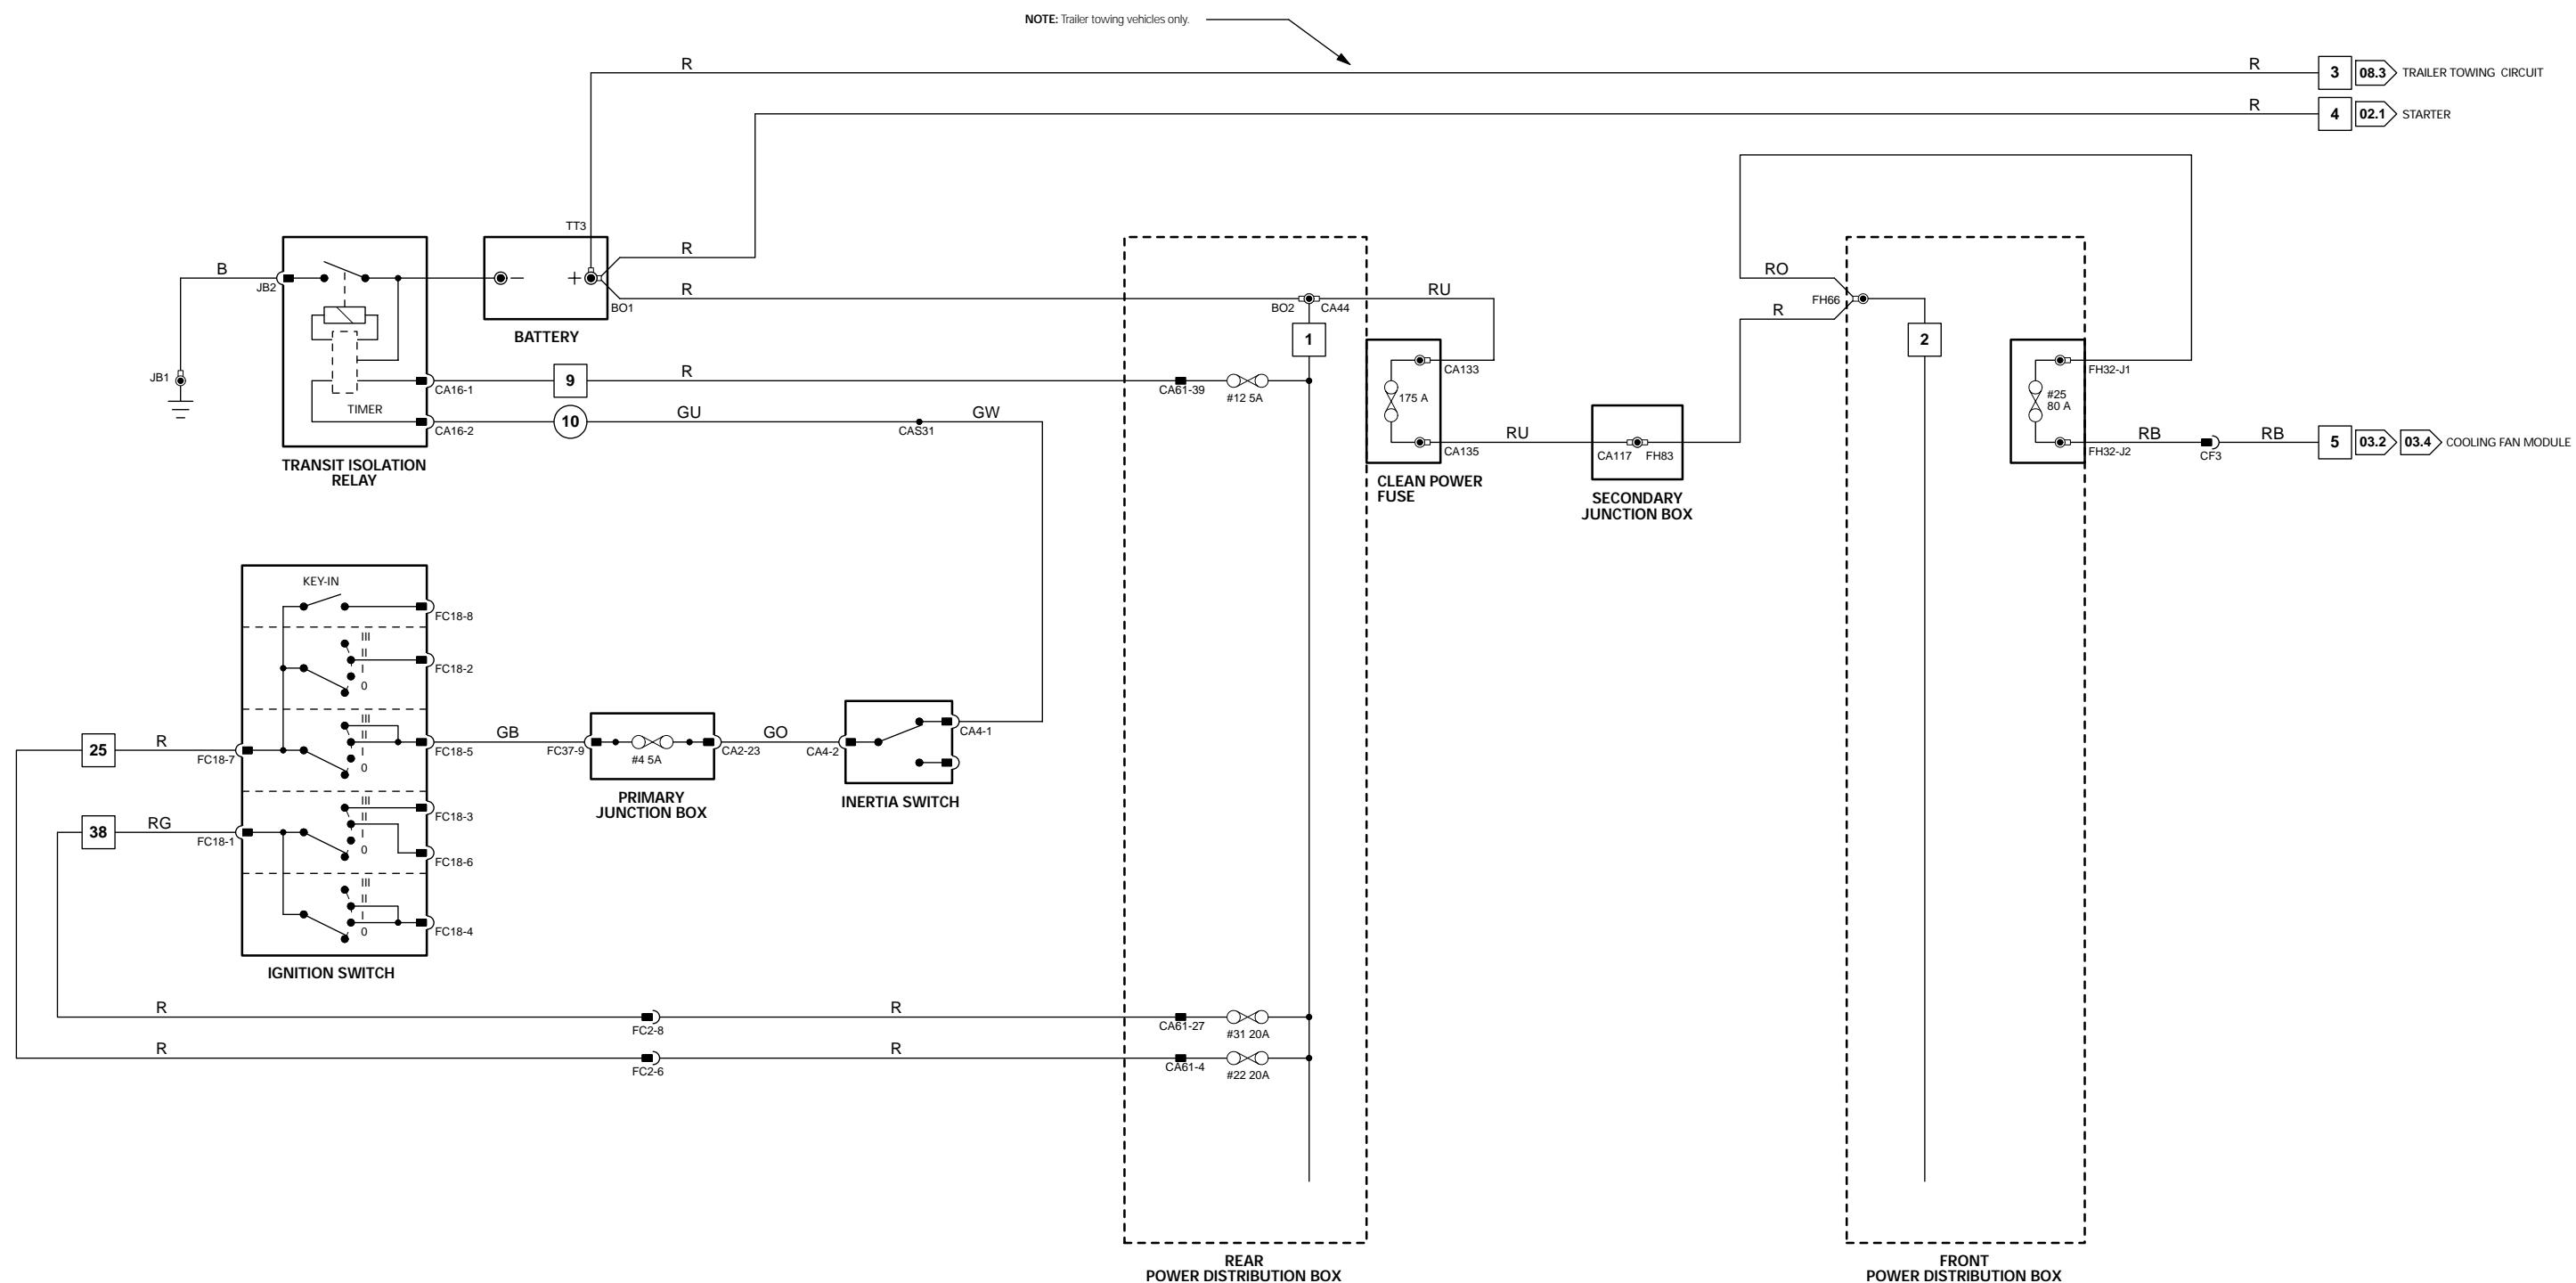


Fig. 01.2

COMPONENTS			
Component	Connector(s)	Connector Description	Location
PRIMARY JUNCTION BOX	CA2 CA56 FC37 FH7 FH53	26-WAY / BLACK 8-WAY / GREY 26-WAY / BLACK 6-WAY / GREY 10-WAY / GREY	'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE
REAR POWER DISTRIBUTION BOX			TRUNK, RH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS		
Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL
DM18	14-WAY / GREY / CABIN HARNESS TO DRIVER SEAT HARNESS	BELOW SEAT CUSHION
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FH5	16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
PN8	8-WAY / GREY / CABIN HARNESS TO PASSENGER SEAT HARNESS	BELOW SEAT CUSHION
RA1	22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RF6	8-WAY / BLACK / SLIDING ROOF LINK LEAD	BEHIND LEFT REAR QUARTER PANEL
RF34	14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELOW PARCEL SHELF
SL3	10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD	BEHIND FASCIA END PANEL, RH SIDE
SW1	6-WAY / GREY / SUBWOOFER LINK LEAD	BELOW PARCEL SHELF

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

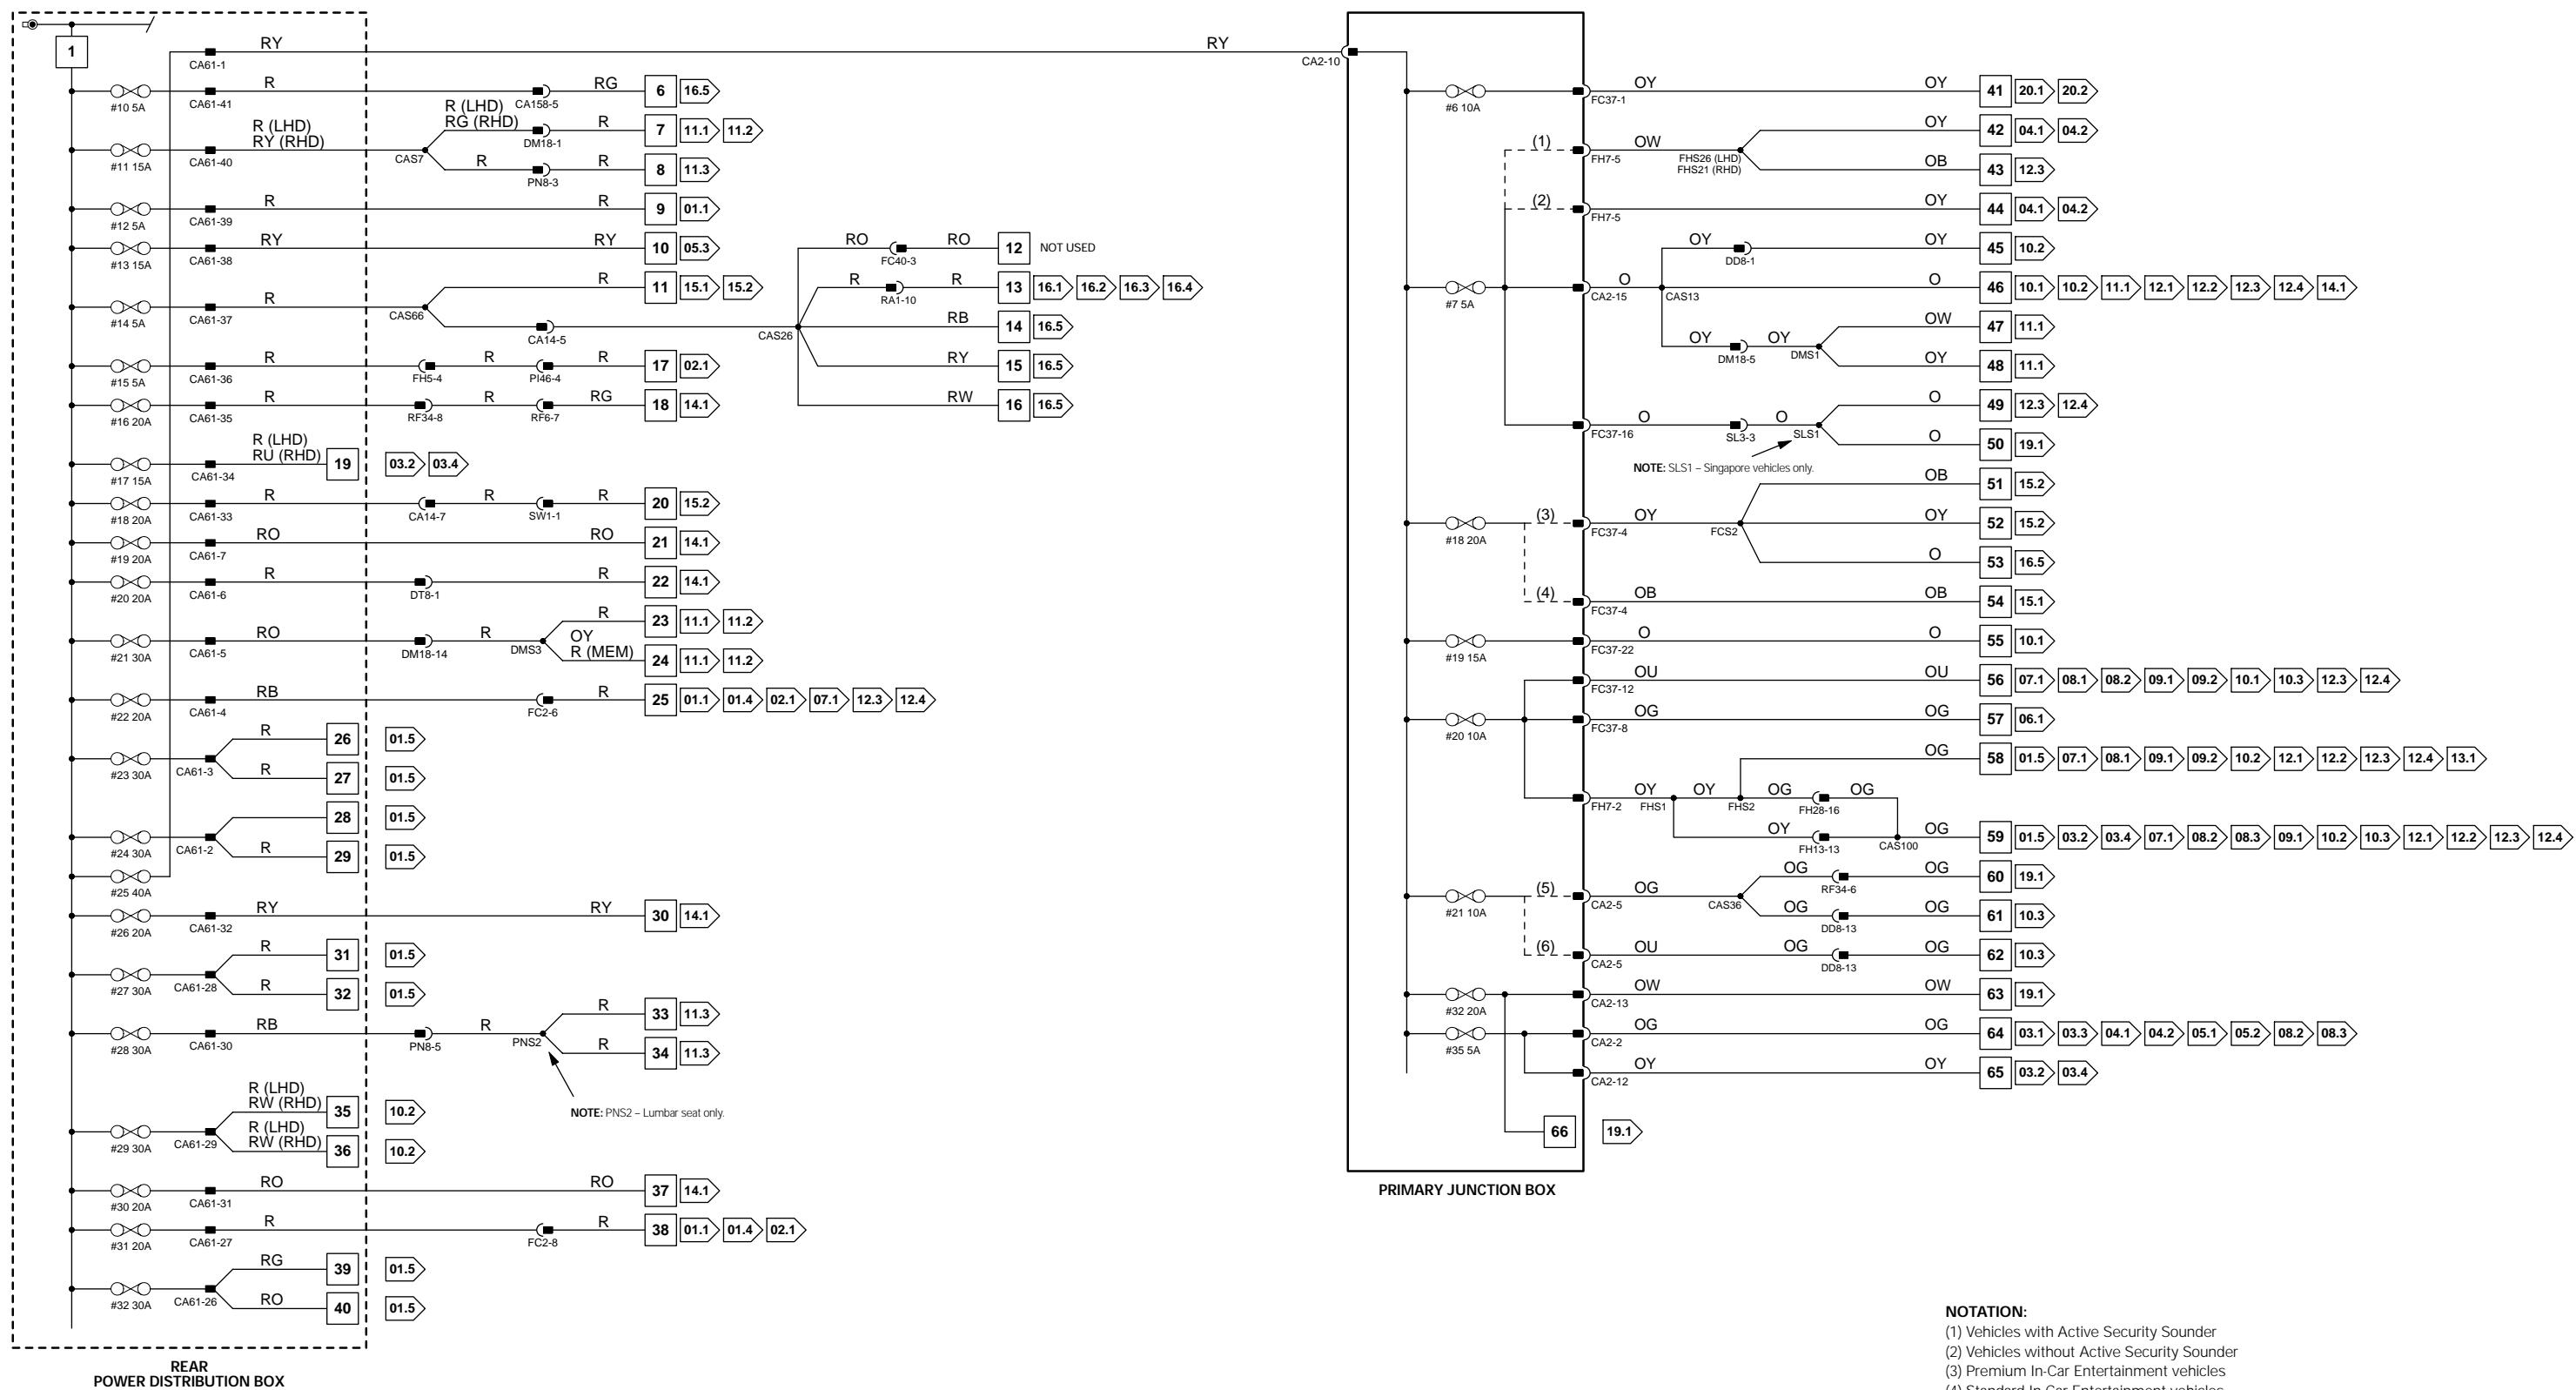


Fig. 01.3

COMPONENTS			
Component	Connector(s)	Connector Description	Location
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS			
Connector	Connector Description	Location	
CF1	6-WAY / GREY / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF RADIATOR	

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

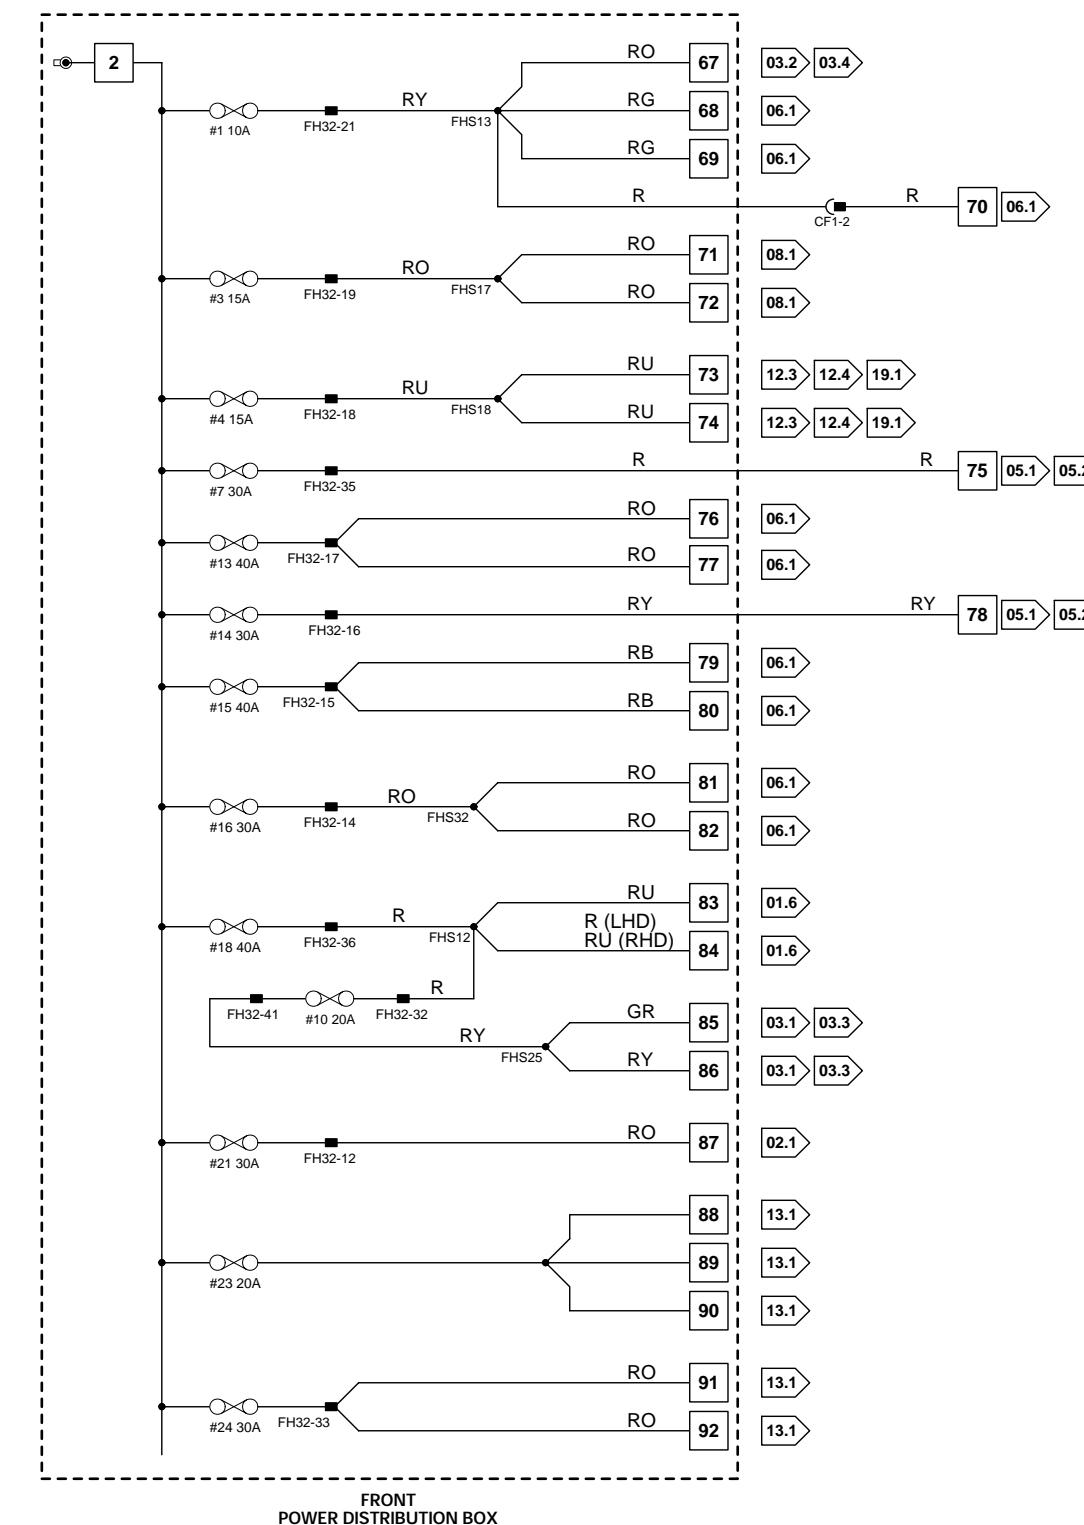


Fig. 01.4

COMPONENTS

Component

IGNITION SWITCH
INERTIA SWITCH
PRIMARY JUNCTION BOX

Connector(s)

FC18
CA4
CA2
CA56
FC37
FH7
FH53

Connector Description

8-WAY / BLACK
3-WAY / GREY
26-WAY / BLACK
8-WAY / GREY
26-WAY / BLACK
6-WAY / GREY
10-WAY / GREY

Location

STEERING COLUMN
'A' POST, LH SIDE
'A' POST, RH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS


Connector **Connector Description**

CA168 10-WAY / BLUE / DIODE MODULE
CA193 2-WAY / GREY / CABIN HARNESS TO CABIN HARNESS
CA194 2-WAY / GREY / CABIN HARNESS TO CABIN HARNESS
DM18 14-WAY / GREY / CABIN HARNESS TO DRIVER SEAT HARNESS
FC13 22-WAY / WHITE / JUNCTION CONNECTOR
FC40 16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS
FC88 2-WAY / BLACK / DIODE
FH5 16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS
FH98 10-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS
PN8 8-WAY / GREY / CABIN HARNESS TO PASSENGER SEAT HARNESS
RA1 22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD
RF34 14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS
SL3 10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD

Location

TRUNK, RH SIDE
TRUNK; BEHIND SEAT BACK
TRUNK; BEHIND SEAT BACK
BELOW SEAT CUSHION
ADJACENT TO STEERING COLUMN MOTOR
BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
BEHIND CENTER CONSOLE
BEHIND LOWER 'A' POST TRIM, LH SIDE
ENGINE COMPARTMENT
BELOW SEAT CUSHION
TRUNK; ABOVE WHEEL ARCH, LH SIDE
BELOW PARCEL SHELF
BEHIND FASCIA END PANEL, RH SIDE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

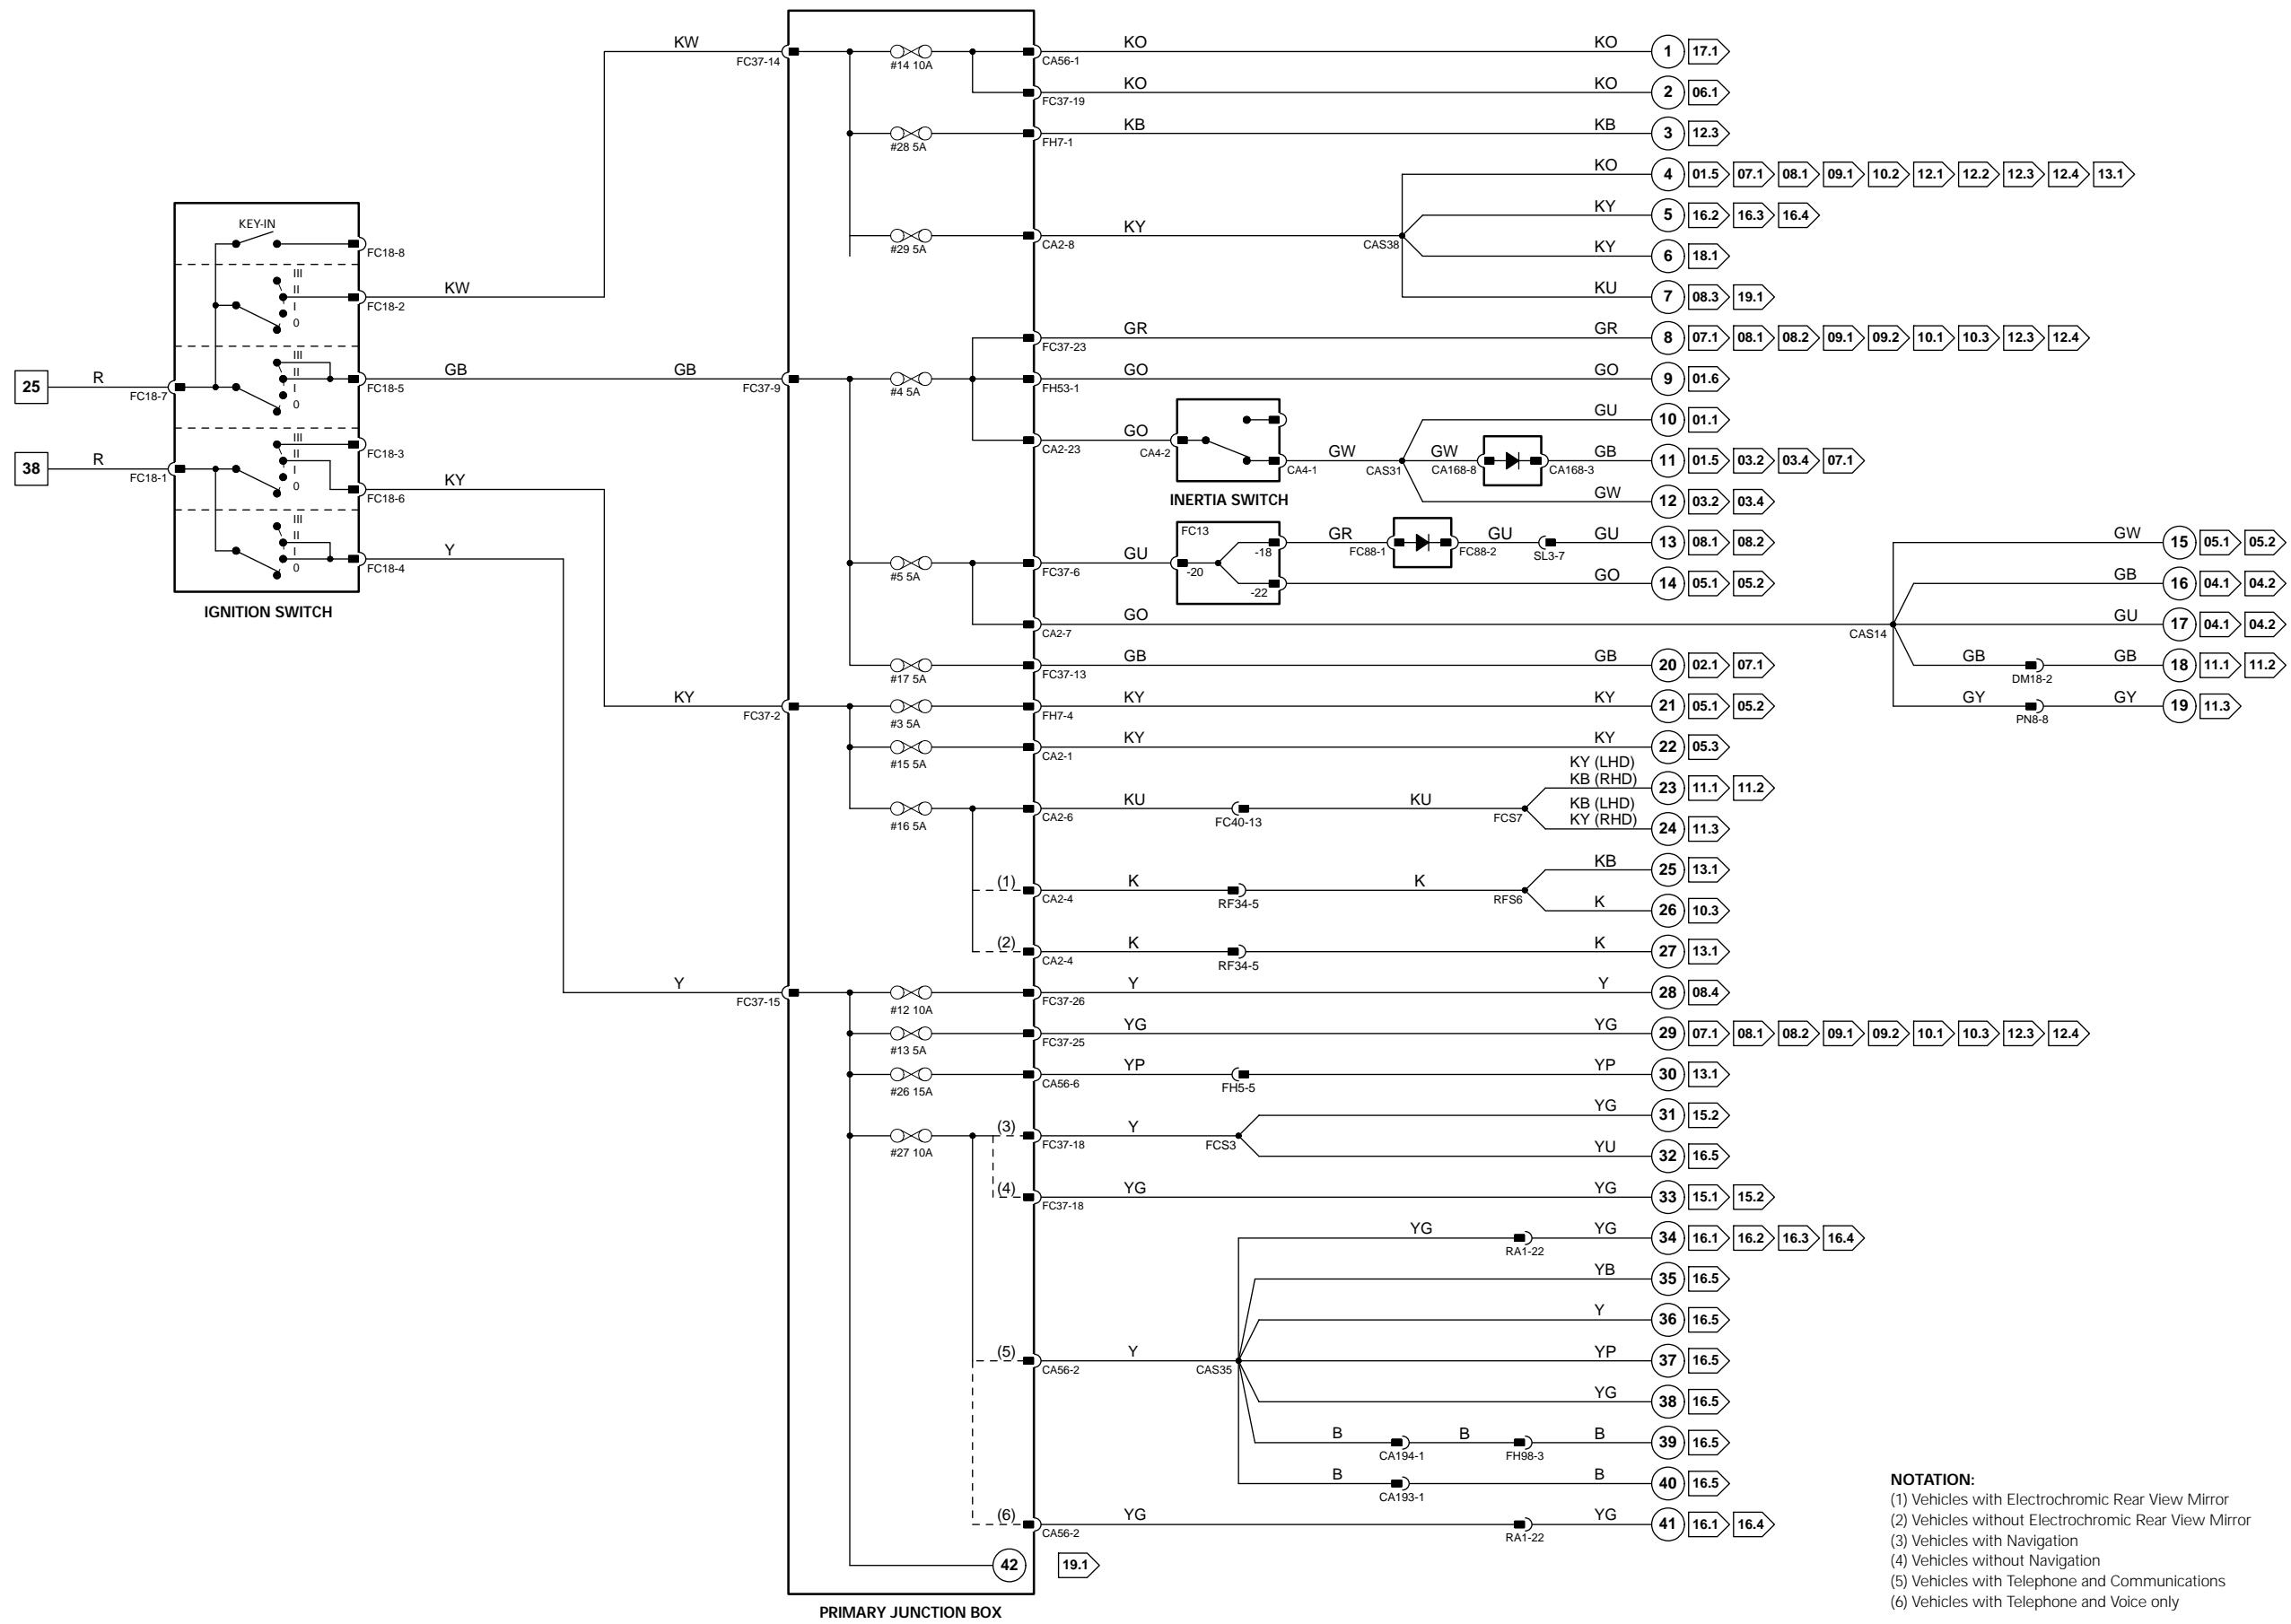**NOTATION:**

- (1) Vehicles with Electrochromic Rear View Mirror
- (2) Vehicles without Electrochromic Rear View Mirror
- (3) Vehicles with Navigation
- (4) Vehicles without Navigation
- (5) Vehicles with Telephone and Communications
- (6) Vehicles with Telephone and Voice only

General Electronic Control Module

Pin	Description	Active	Inactive
I	CA31-3	IGNITION SWITCHED POWER SUPPLY - LOGIC	B+
O	FH9-21	SWITCHED SYSTEM POWER RELAYS ACTIVATE	GROUND
S	FH59-1	SCP -	2 - 1600 Hz
I	FH59-6	BATTERY POWER SUPPLY	B+
S	FH59-7	SCP +	2 - 1600 Hz
I	FH59-12	GROUND SUPPLY	GROUND
I	FH60-11	GROUND SUPPLY	GROUND
I	FH60-13	GROUND SUPPLY	GROUND
I	FH60-14	GROUND SUPPLY	GROUND
I	FH60-15	GROUND SUPPLY	GROUND

Rear Electronic Control Module

Pin	Description	Active	Inactive
I	CA100-8	IGNITION SWITCHED POWER SUPPLY - INERTIA SWITCH	B+
I	CA101-3	BATTERY POWER SUPPLY - LOGIC	B+
O	CA101-4	SWITCHED SYSTEM POWER RELAYS ACTIVATE	GROUND
S	CA102-1	SCP +	2 - 1600 Hz
S	CA102-2	SCP -	2 - 1600 Hz
I	CA102-12	GROUND	GROUND
I	CA103-11	GROUND SUPPLY	GROUND
I	CA103-12	GROUND SUPPLY	GROUND
I	CA103-25	GROUND SUPPLY	GROUND
I	CA103-26	GROUND SUPPLY	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY	'A' POST, LH SIDE 'A' POST, LH SIDE 'A' POST, LH SIDE
PRIMARY JUNCTION BOX	FH9 FH59 FH60	22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE 'A' POST, LH SIDE
REAR ELECTRONIC CONTROL MODULE	CA2 CA56 FC37 FH7 FH53	26-WAY / BLACK 8-WAY / GREY 26-WAY / BLACK 6-WAY / GREY 10-WAY / GREY	'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE
REAR POWER DISTRIBUTION BOX	CA63 CA99 CA100 CA101 CA102 CA103 CA104	17-WAY / BLACK 4-WAY / GREY 12-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK 26-WAY / WHITE 4-WAY / BLACK	TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH SIDE
HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS			
Connector	Connector Description	Location	
CA98	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ADJACENT TO RECM, RH SIDE	
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE	
RF34	14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELOW PARCEL SHELF	

GROUNDS

Ground	Ground Description	Location
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.



SCP NOTE: The switched system power relays are activated by the GECM or the RECM whenever messages are present on the SCP Network. After the ignition is switched off, the relays remain activated until all SCP messages are removed.


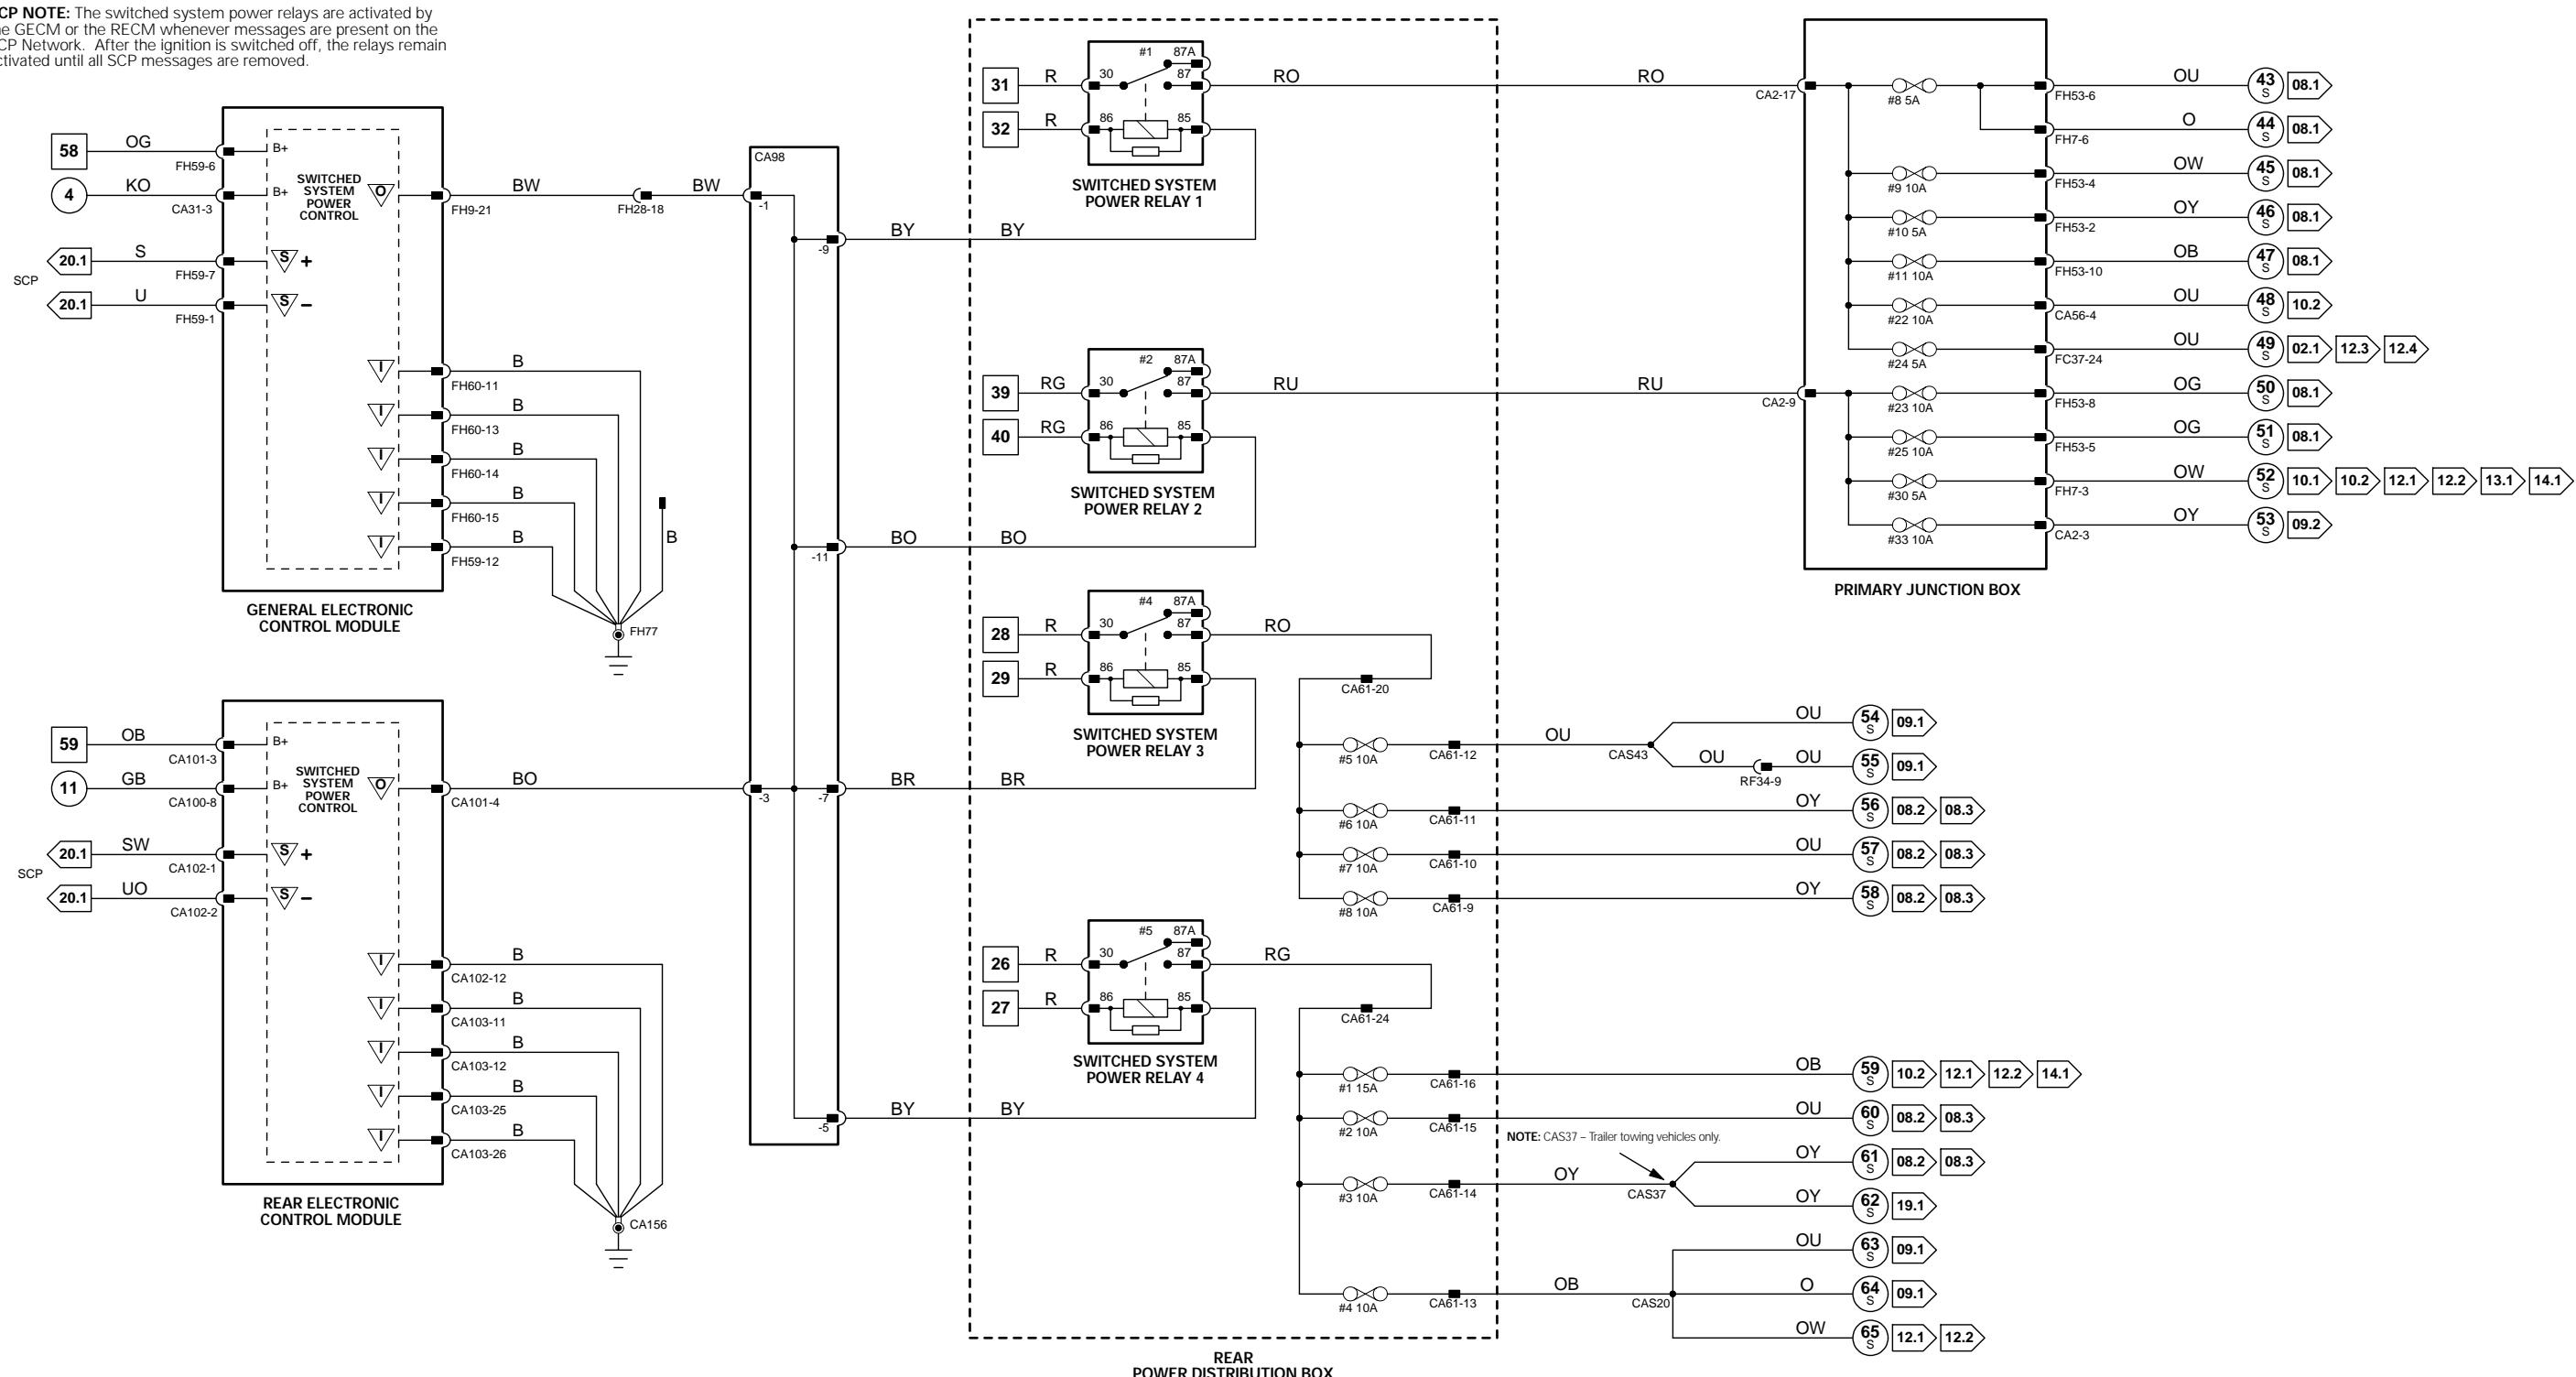


Fig. 01.6

COMPONENTS			
Component	Connector(s)	Connector Description	Location
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS			
Connector	Connector Description		Location
CF1	6-WAY / GREY / FRONT HARNESS TO COOLING FANS LINK LEAD		REARWARD OF RADIATOR
CV1	6-WAY / GREY / CABIN HARNESS TO CANISTER CLOSE VALVE HARNESS		ABOVE REAR AXLE ASSEMBLY
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS		ADJACENT TO PRIMARY JUNCTION BOX
GB2	6-WAY / BLACK / FRONT HARNESS TO TRANSMISSION HARNESS		ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS		ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
GROUNDS			
Ground	Ground Description		Location
FH42	GROUND EYELET		ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

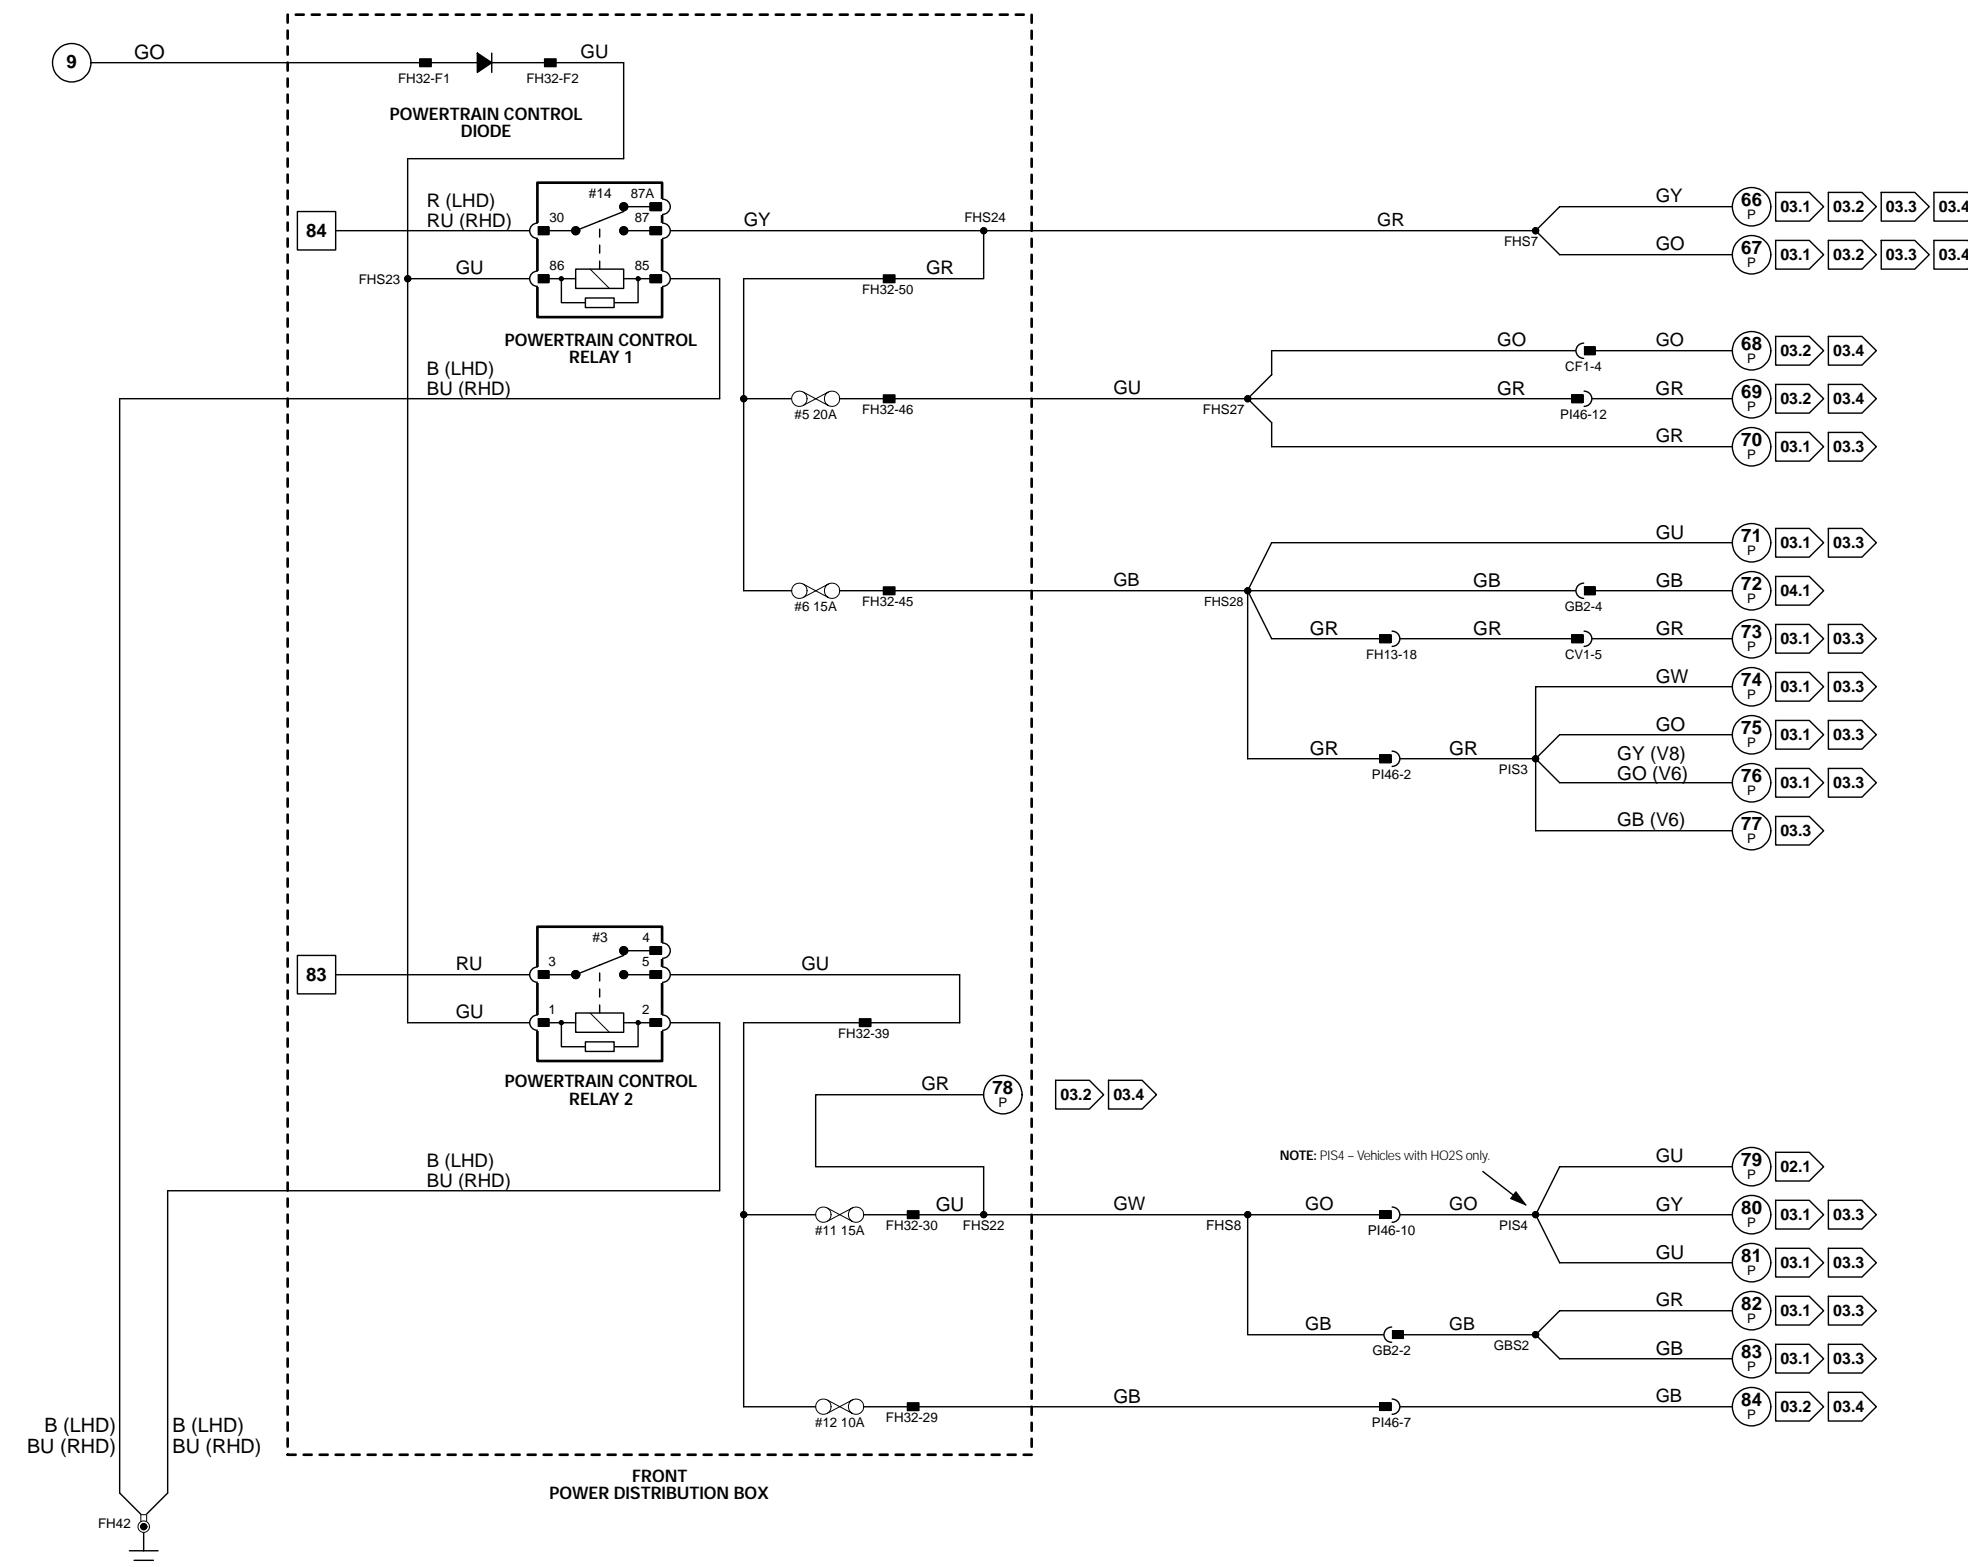

General Electronic Control Module

Pin	Description	Active	Inactive
S	FH59-1	SCP -	2 – 1600 Hz
S	FH59-7	SCP +	2 – 1600 Hz

Instrument Pack

Pin	Description	Active	Inactive
I	FC14-11	AIR BAG MIL IGNITION SWITCHED POWER SUPPLY	B+
I	FC14-21	IGNITION KEY IN BARREL	GROUNDS = IGNITION KEY OUT
D	FC15-4	PASSIVE ANTI THEFT SYSTEM TRANSCIEVER	ENCODED COMMUNICATIONS
D	FC15-5	PASSIVE ANTI THEFT SYSTEM TRANSCIEVER	ENCODED COMMUNICATIONS
I	FC15-13	GROUND SUPPLY	GROUND
S	FC16-15	SCP +	2 – 1600 Hz
S	FC16-16	SCP -	2 – 1600 Hz
O	FC16-18	STARTER RELAY ACTIVATE	GROUND
O	FC63-6	PASSIVE ANTI THEFT SYSTEM TRANSCIEVER GROUND SUPPLY	GROUND

Powertrain Control Module

Pin	Description	Active	Inactive
S	FH1-3	SCP +	2 – 1600 Hz
S	FH1-4	SCP -	2 – 1600 Hz
SG	FH1-17	IAT, FTP, APP2 SENSORS COMMON REFERENCE GROUND	GROUND
I	GB1-22	CLUTCH PEDAL SWITCH	GROUND
I	PI1-5	GENERATOR WARNING	B+ (MIL OFF)
I	PI1-50	GENERATOR LOAD SIGNAL	0V (PWM)

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
CLUTCH PEDAL SWITCH	CA33	2-WAY / BLACK	ABOVE CLUTCH PEDAL
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
GENERATOR	PI42	10-WAY / BLACK	ENGINE, RH SIDE
IGNITION SWITCH	FC18	8-WAY / BLACK	STEERING COLUMN
INSTRUMENT PACK	FC14 FC15 FC63	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	FASCIA FASCIA FASCIA
PASSIVE ANTI-THEFT SYSTEM TRANSCIEVER	FC52	10-WAY / GREEN	IGNITION SWITCH
POWERTRAIN CONTROL MODULE	FH1 GB1 PI1	58-WAY / GREY 32-WAY / GREY 60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE
PRIMARY JUNCTION BOX	CA2 CA56 FC37 FH7 FH53	26-WAY / BLACK 8-WAY / GREY 26-WAY / BLACK 6-WAY / GREY 10-WAY / GREY	'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE
STARTER MOTOR	ST3 ST5 ST6	EYELET EYELET EYELET	ENGINE, RH SIDE, REAR ENGINE, RH SIDE, REAR ENGINE, RH SIDE, REAR
TRANSMISSION RANGE SENSOR	GB6	12-WAY / BLACK	TRANSMISSION SELECTOR SHAFT

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
BO3	EYELET / BULKHEAD POWER STUD	FRONT BULKHEAD; RH SIDE
BO4	EYELET / BULKHEAD POWER STUD	FRONT BULKHEAD; RH SIDE
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FH5	16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
GB2	6-WAY / BLACK / FRONT HARNESS TO TRANSMISSION HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
ST4	2-WAY / GREY / FORWARD HARNESS TO BATTERY LINK LEAD	BEHIND RH FRONT WHEEL ARCH LINER

GROUNDS

Ground	Ground Description	Location
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
JB1	GROUND EYELET	ADJACENT TO BATTERY / TRUNK TRIM
ST2	GROUND EYELET	RH FRONT INNER WHEEL ARCH / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

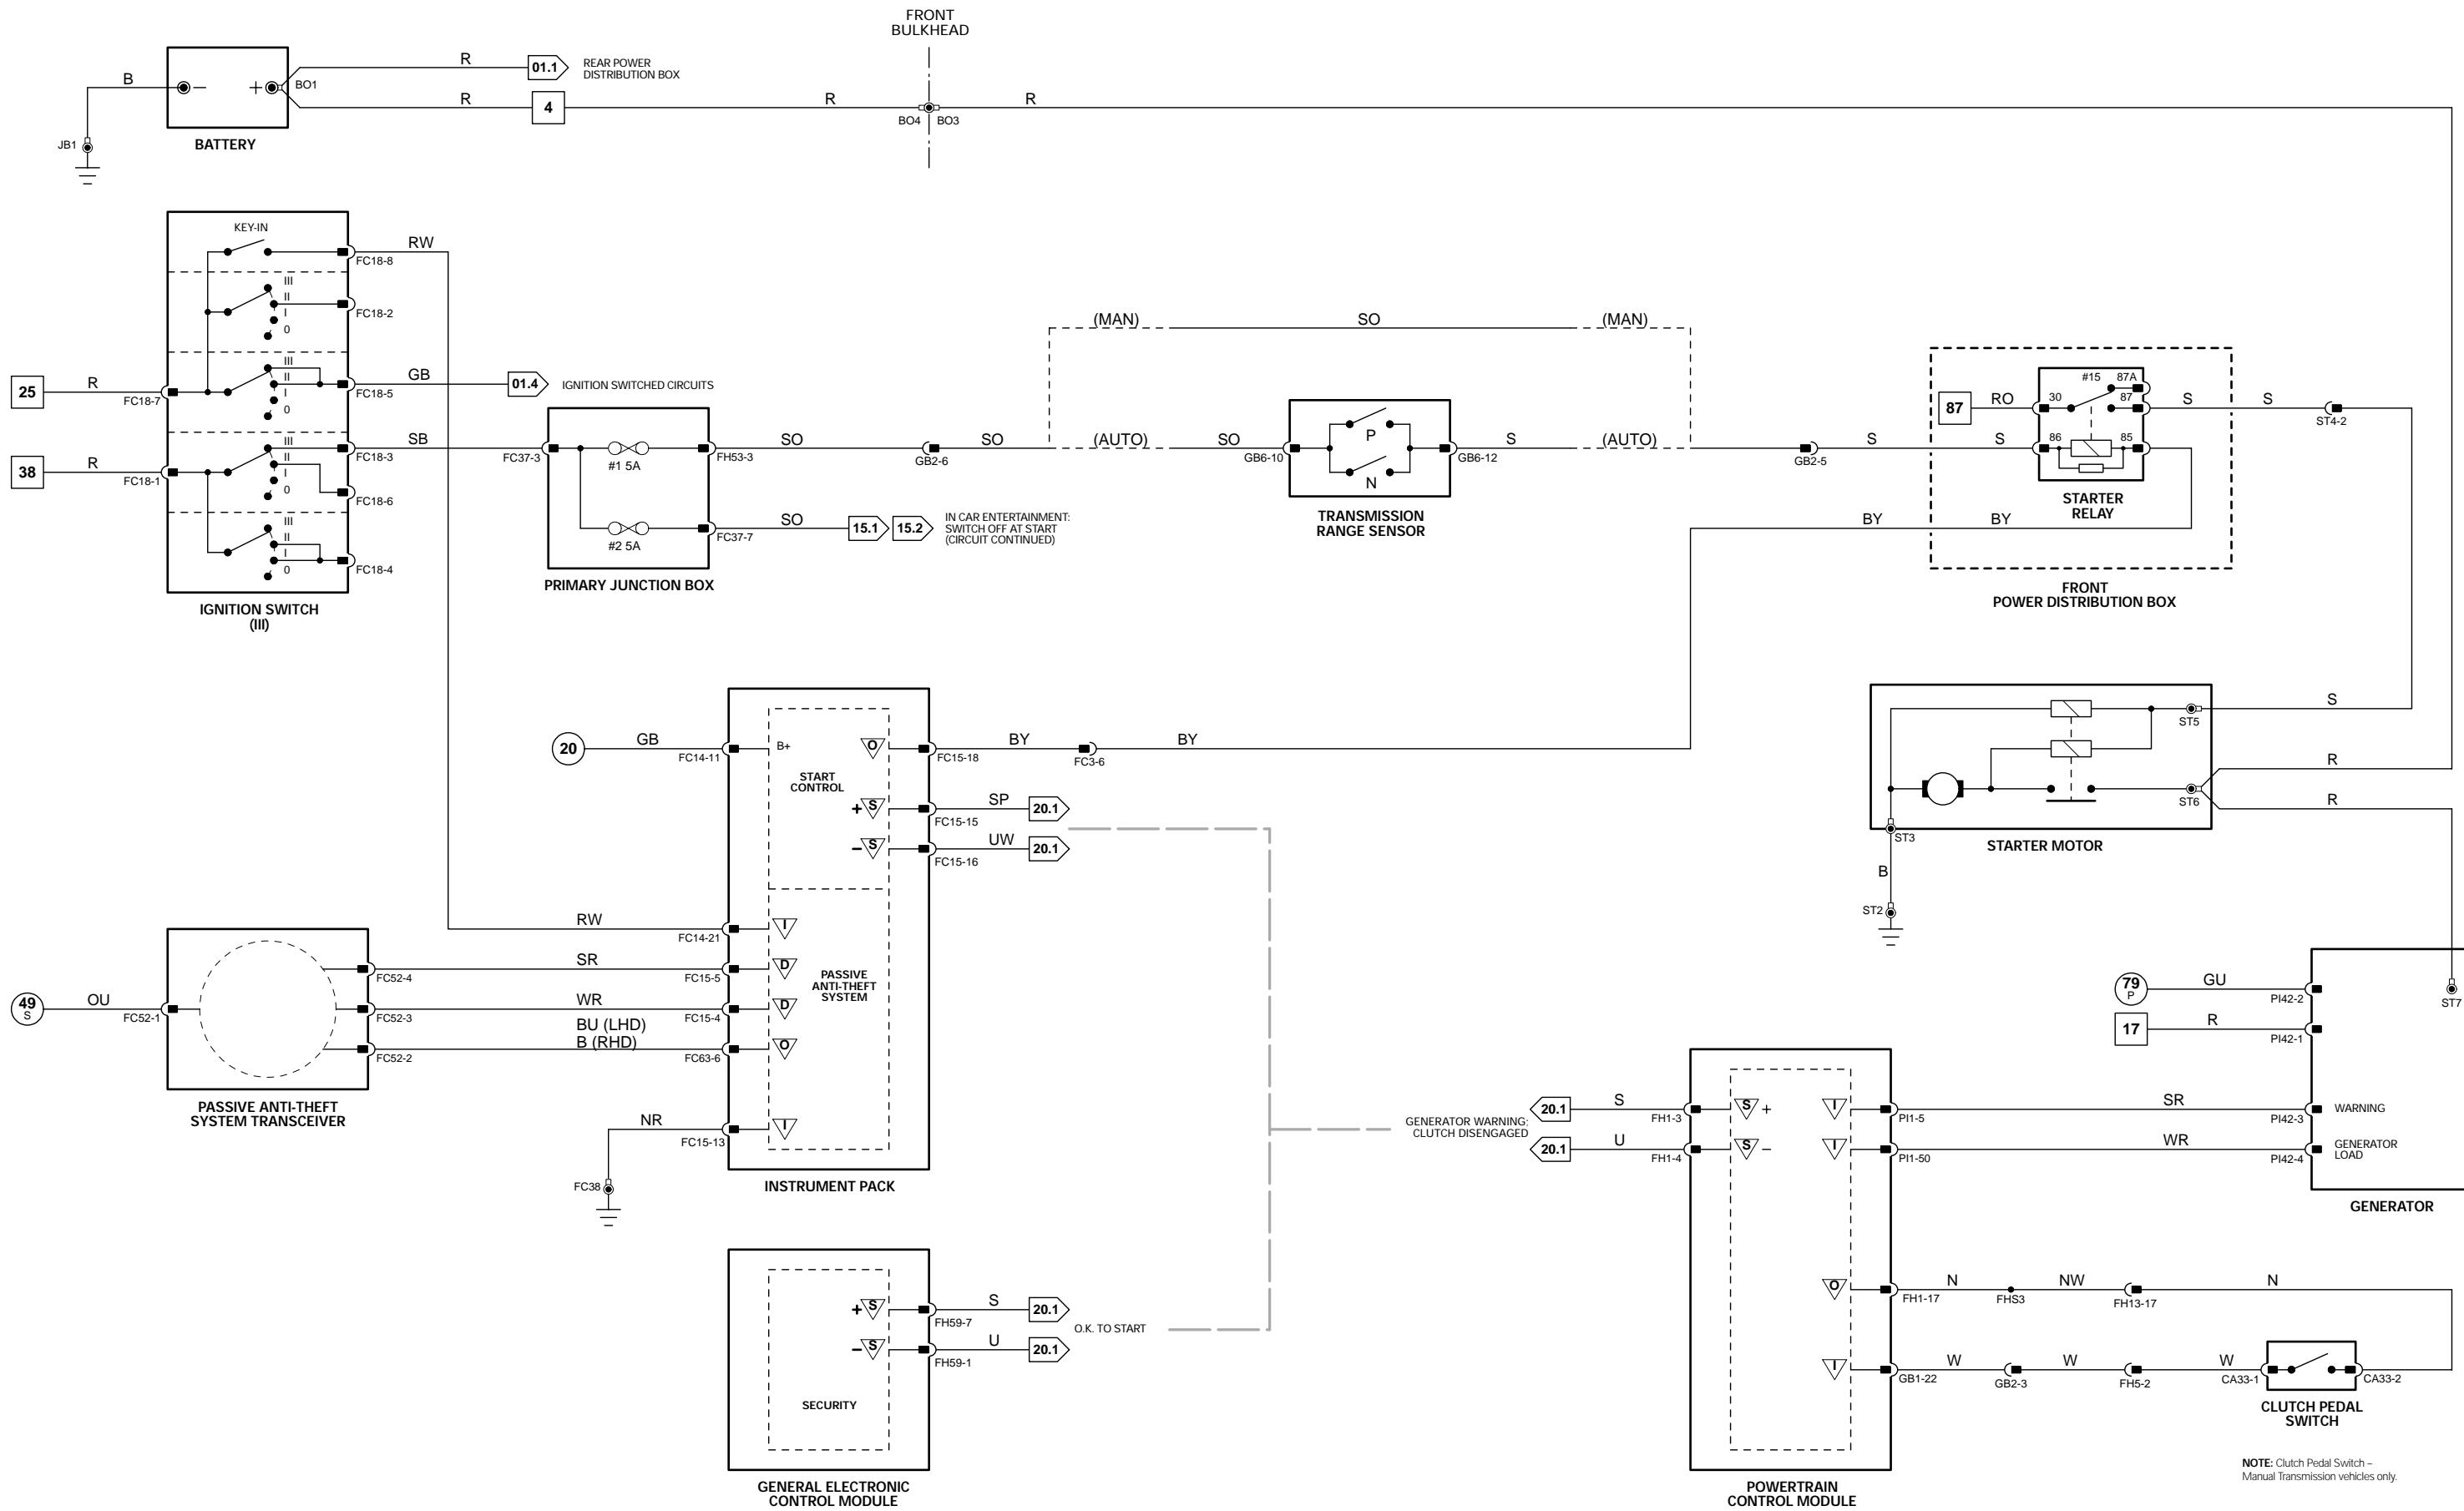


Fig. 03.1

Powertrain Control Module (V8)

Pin	Description	Active	Inactive
I	FH1-1 APP2 SIGNAL	1.4V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION) 2 - 1600 Hz	
S	FH1-3 SCP +	GROUND	GROUND
S	FH1-4 SCP -	GROUND	B+
SG	FH1-5 APP1 REFERENCE GROUND	GROUND	GROUND
O	FH1-6 EVAP CANISTER CLOSE VALVE ACTIVATE	GROUND	GROUND
SG	FH1-10 APP3 REFERENCE GROUND	GROUND	B+
O	FH1-12 EVAP CANISTER PURGE VALVE ACTIVATE	GROUND (PWM)	GROUND
D	FH1-13 PCM FLASH PROGRAMMING	ENCODED COMMUNICATIONS	
I	FH1-15 APP1 SIGNAL	4.02V @ IDLE (DECREASING VOLTAGE WITH ACCELERATION) 0.9V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION)	
I	FH1-16 APP3 SIGNAL	GROUND	GROUND
SG	FH1-17 IAT, FTP, APP2 SENSORS COMMON REFERENCE GROUND	NOMINAL 5V	NOMINAL 5V
SS	FH1-20 APP2, FTP, A/C PRESSURE SENSORS COMMON REFERENCE VOLTAGE	GROUND	B+
O	FH1-22 THROTTLE MOTOR CONTROL RELAY ACTIVATE	GROUND	GROUND
SS	FH1-23 APP1 REFERENCE VOLTAGE	NOMINAL 5V	NOMINAL 5V
I	FH1-24 GROUND SUPPLY	GROUND	GROUND
I	FH1-25 GROUND SUPPLY	GROUND	GROUND
I	FH1-26 GROUND SUPPLY	GROUND	GROUND
I	FH1-27 GROUND SUPPLY	GROUND	GROUND
I	FH1-31 MAF SENSOR SIGNAL	0V = IGNITION ON; ENGINE OFF	IV = IDLE
I	FH1-32 IGNITION SWITCHED POWER SUPPLY	B+	GROUND
I	FH1-33 IGNITION SWITCHED POWER SUPPLY	B+	GROUND
I	FH1-37 PSP SWITCH INPUT	GROUND	B+
SG	FH1-38 MAF SENSOR REFERENCE GROUND	GROUND	GROUND
I	FH1-40 BRAKE ON / OFF SIGNAL	GROUND = BRAKE OFF	B+ = BRAKE ON
I	FH1-43 GROUND SUPPLY	GROUND	GROUND
I	FH1-47 AIRBAG DEPLOYMENT SIGNAL	ENCODED COMMUNICATIONS	
D	FH1-49 SERIAL COMMUNICATIONS	ENCODED COMMUNICATIONS	
I	FH1-51 IAT SENSOR SIGNAL	0.61V @ 90 °C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I	FH1-52 FTP SENSOR SIGNAL	4.9V = LOW PRESSURE	0.2V = HIGH PRESSURE
SS	FH1-55 APP3 SENSOR REFERENCE VOLTAGE	5V	5V
O	GB1-15 HO2 SENSOR HEATER, BANK 1 DOWNSTREAM, CONTROL	GROUND (PWM)	
O	GB1-16 HO2 SENSOR HEATER, BANK 1 DOWNSTREAM, CONTROL	GROUND (PWM)	
SG	GB1-17 SENSOR SIGNAL GROUND	GROUND	GROUND
I	GB1-28 HO2 SENSOR, BANK 1 DOWNSTREAM	0.1 - 0.9V @ IDLE (SWING)	
I	GB1-29 HO2 SENSOR, BANK 2 DOWNSTREAM	0.1 - 0.9V @ IDLE (SWING)	
I	P1-5 GENERATOR WARNING	B+ (MIL OFF)	GROUND (MIL ON)
O	P1-7 HO2 SENSOR HEATER, BANK 2 UPSTREAM, CONTROL	GROUND (PWM)	B+
O	P1-8 HO2 SENSOR HEATER, BANK 1 UPSTREAM, CONTROL	GROUND (PWM)	B+
O	P1-9 AIR ASSIST INJECTION CONTROL	GROUND(PWM)	B+
O	P1-10 VARIABLE VALVE TIMING, BANK 1, CONTROL	GROUND	B+
SG	P1-15 TP SENSOR SIGNAL GROUND	GROUND	GROUND
SG	P1-17 SENSOR SIGNAL COMMON GROUND	GROUND	GROUND
O	P1-18 THROTTLE MOTOR CONTROL SIGNAL	GROUND (PWM); 9.9%@IDLE INCREASING WITH THROTTLE OPENING	
O	P1-19 THROTTLE MOTOR CONTROL SIGNAL	GROUND (PWM); 9.9%@IDLE INCREASING WITH THROTTLE OPENING	
SS	P1-20 IP, TP SENSOR COMMON REFERENCE VOLTAGE	NOMINAL 5V	NOMINAL 5V
I	P1-25 ACTUAL THROTTLE ANGLE	0 - 20 mA	
O	P1-33 VARIABLE VALVE TIMING, BANK 2, CONTROL	GROUND	B+
I	P1-39 EOT SENSOR SIGNAL	0.61V @ 90°C INCR. w/ TEMP.	
SG	P1-42 KNOCK SENSOR 1 GROUND	GROUND	GROUND
SG	P1-43 KNOCK SENSOR 2 GROUND	GROUND	GROUND
I	P1-44 HO2 SENSOR, BANK 1 UPSTREAM	0.1 - 0.9V @ IDLE (SWING)	
I	P1-45 HO2 SENSOR, BANK 2 UPSTREAM	0.1 - 0.9V @ IDLE (SWING)	
I	P1-46 ECT SENSOR SIGNAL	0.61V @ 90 °C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I	P1-47 EFT SENSOR SIGNAL	0.61V @ 90 °C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
SS	P1-48 TP SENSOR REFERENCE VOLTAGE	B+	B+
I	P1-49 IP SENSOR SIGNAL	2.6V @ 2.48 bar (36 psi); INCREASING VOLTAGE WITH PRESSURE INCREASE	
I	P1-50 GENERATOR LOAD SIGNAL	0V (PWM)	61% @ IDLE, INCREASING WITH LOAD
I	P1-51 KNOCK SENSOR 1 SIGNAL	0 kHz = NO KNOCK, 2 - 20 kHz = KNOCK	
I	P1-52 KNOCK SENSOR 2 SIGNAL	0 kHz = NO KNOCK, 2 - 20 kHz = KNOCK	
I	P1-53 CMP SENSOR 1 SIGNAL	5 Hz @ IDLE	
I	P1-54 CMP SENSOR 2 SIGNAL	5 Hz @ IDLE	
I	P1-55 CKP SENSOR SIGNAL	5 V @ 1000 rpm = 45 Hz; 2000 rpm = 90 Hz	
SG	P1-56 CKP SENSOR GROUND	GROUND	GROUND
I	P1-57 TP1 SENSOR SIGNAL	4.1V @ IDLE (DECREASING VOLTAGE WITH ACCELERATION)	
I	P1-58 TP3 SENSOR SIGNAL	0.8V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION)	
I	P1-59 TP2 SENSOR SIGNAL	1.4V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION)	

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data	PWM	Pulse Width Modulated
O	Output	S	SCP Network	B+	Battery Voltage	Hz	Frequency
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AAI VALVE: AIR ASSIST INJECTION VALVE	PI18	2-WAY / BLACK	ABOVE INTAKE MANIFOLD
APP SENSOR: ACCELERATOR PEDAL POSITION SENSOR	CA88	10-WAY / BLACK	ABOVE ACCELERATOR PEDAL
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
CKP SENSOR: CRANKSHAFT POSITION SENSOR - V8	PI40	2-WAY / BLACK	ENGINE, FORWARD OF THE BELL HOUSING
CMP SENSOR: CAMSHAFT POSITION SENSOR 1 - V8	PI11	2-WAY / BLACK	ENGINE RH CAMSHAFT COVER
CMP SENSOR: CAMSHAFT POSITION SENSOR 2 - V8	PI10	2-WAY / BLACK	ENGINE LH CAMSHAFT COVER
ECT SENSOR: ENGINE COOLANT TEMPERATURE SENSOR	PI39	2-WAY / GREY	COOLANT OUTLET ELBOW
EFT SENSOR: ENGINE FUEL TEMPERATURE SENSOR - V8	PI9	2-WAY / GREY	ADJACENT TO THROTTLE HOUSING
EOT SENSOR: ENGINE OIL TEMPERATURE SENSOR	PI12	2-WAY / GREY	ADJACENT TO THE OIL FILTER
EVAP CANISTER CLOSE VALVE	CV4	2-WAY / BLACK	ABOVE REAR AXLE ASSEMBLY
EVAP CANISTER PURGE VALVE	FH3	2-WAY / BLACK	ADJACENT TO LH FRONT SUSPENSION TURRET
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
FTP SENSOR: FUEL TANK PRESSURE SENSOR	FP1	3-WAY / BLACK	BELOW THE LEFT FUEL PUMP COVER
HO2 SENSOR: HEATED OXYGEN SENSOR 1 / 1	PI7	4-WAY / GREEN	EXHAUST, RH, UPSTREAM
HO2 SENSOR: HEATED OXYGEN SENSOR 1 / 2	GB3	4-WAY / BLUE	EXHAUST, RH, DOWNSTREAM
HO2 SENSOR: HEATED OXYGEN SENSOR 2 / 1	PI6	4-WAY / GREEN	EXHAUST, LH, UPSTREAM
HO2 SENSOR: HEATED OXYGEN SENSOR 2 / 2	GB4	4-WAY / BLUE	EXHAUST, LH, DOWNSTREAM
IAT SENSOR: INTAKE AIR TEMPERATURE SENSOR	FH68	2-WAY / BLACK	ENGINE AIR INTAKE DUCT
IP SENSOR: INJECTION PRESSURE SENSOR	PI15	3-WAY / BLACK	FUEL RAIL
KS: KNOCK SENSOR 1 - V8	PI26	2-WAY / BLACK	ADJACENT TO INTAKE MANIFOLD
KS: KNOCK SENSOR 2 - V8	PI27	2-WAY / BLACK	FORWARD OF STARTER MOTOR
MAF SENSOR: MASS AIR FLOW SENSOR	FH20	6-WAY / BLACK	ENGINE AIR INTAKE DUCT
POWERTRAIN CONTROL MODULE	FH1	58-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
POWERTRAIN CONTROL MODULE	GB1	32-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
POWERTRAIN CONTROL MODULE	PI1	60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
PSP SWITCH: POWER STEERING PRESSURE SWITCH	PI50	2-WAY / BLACK	HIGH PRESSURE PIPE, ADJACENT TO PUMP
THROTTLE ACTUATOR CONTROL MODULE	PI44	10-WAY / BLACK	ON THROTTLE BODY
TP SENSOR: THROTTLE POSITION SENSOR	PI16	10-WAY / BLACK	ON THROTTLE BODY
VVT VALVE: VARIABLE VALVE TIMING VALVE 1	PI5	2-WAY / BLACK	ON RH CYLINDER HEAD
VVT VALVE: VARIABLE VALVE TIMING VALVE 2	PI4	2-WAY / BLACK	ON LH CYLINDER HEAD

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CV1	6-WAY / GREY / CABIN HARNESS TO CANISTER CLOSE VALVE HARNESS	ABOVE REAR AXLE ASSEMBLY
FH5	16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FP2	8-WAY / GREY / CABIN HARNESS TO FUEL TANK LINK LEAD	REARWARD OF FUEL TANK
PI2	10-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
FH49	GROUND EYELET	RH FRONT (LHD) OR LH FRONT (RHD) INNER WHEEL ARCH; REAR / ENGINE COMPARTMENT


FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.



SCP NOTE: The PCM communicates with the Throttle Actuator Control Module for diagnostic purposes only.

*NOTE: EVAP Canister Close Valve and FTP Sensor - OBD II vehicles only.

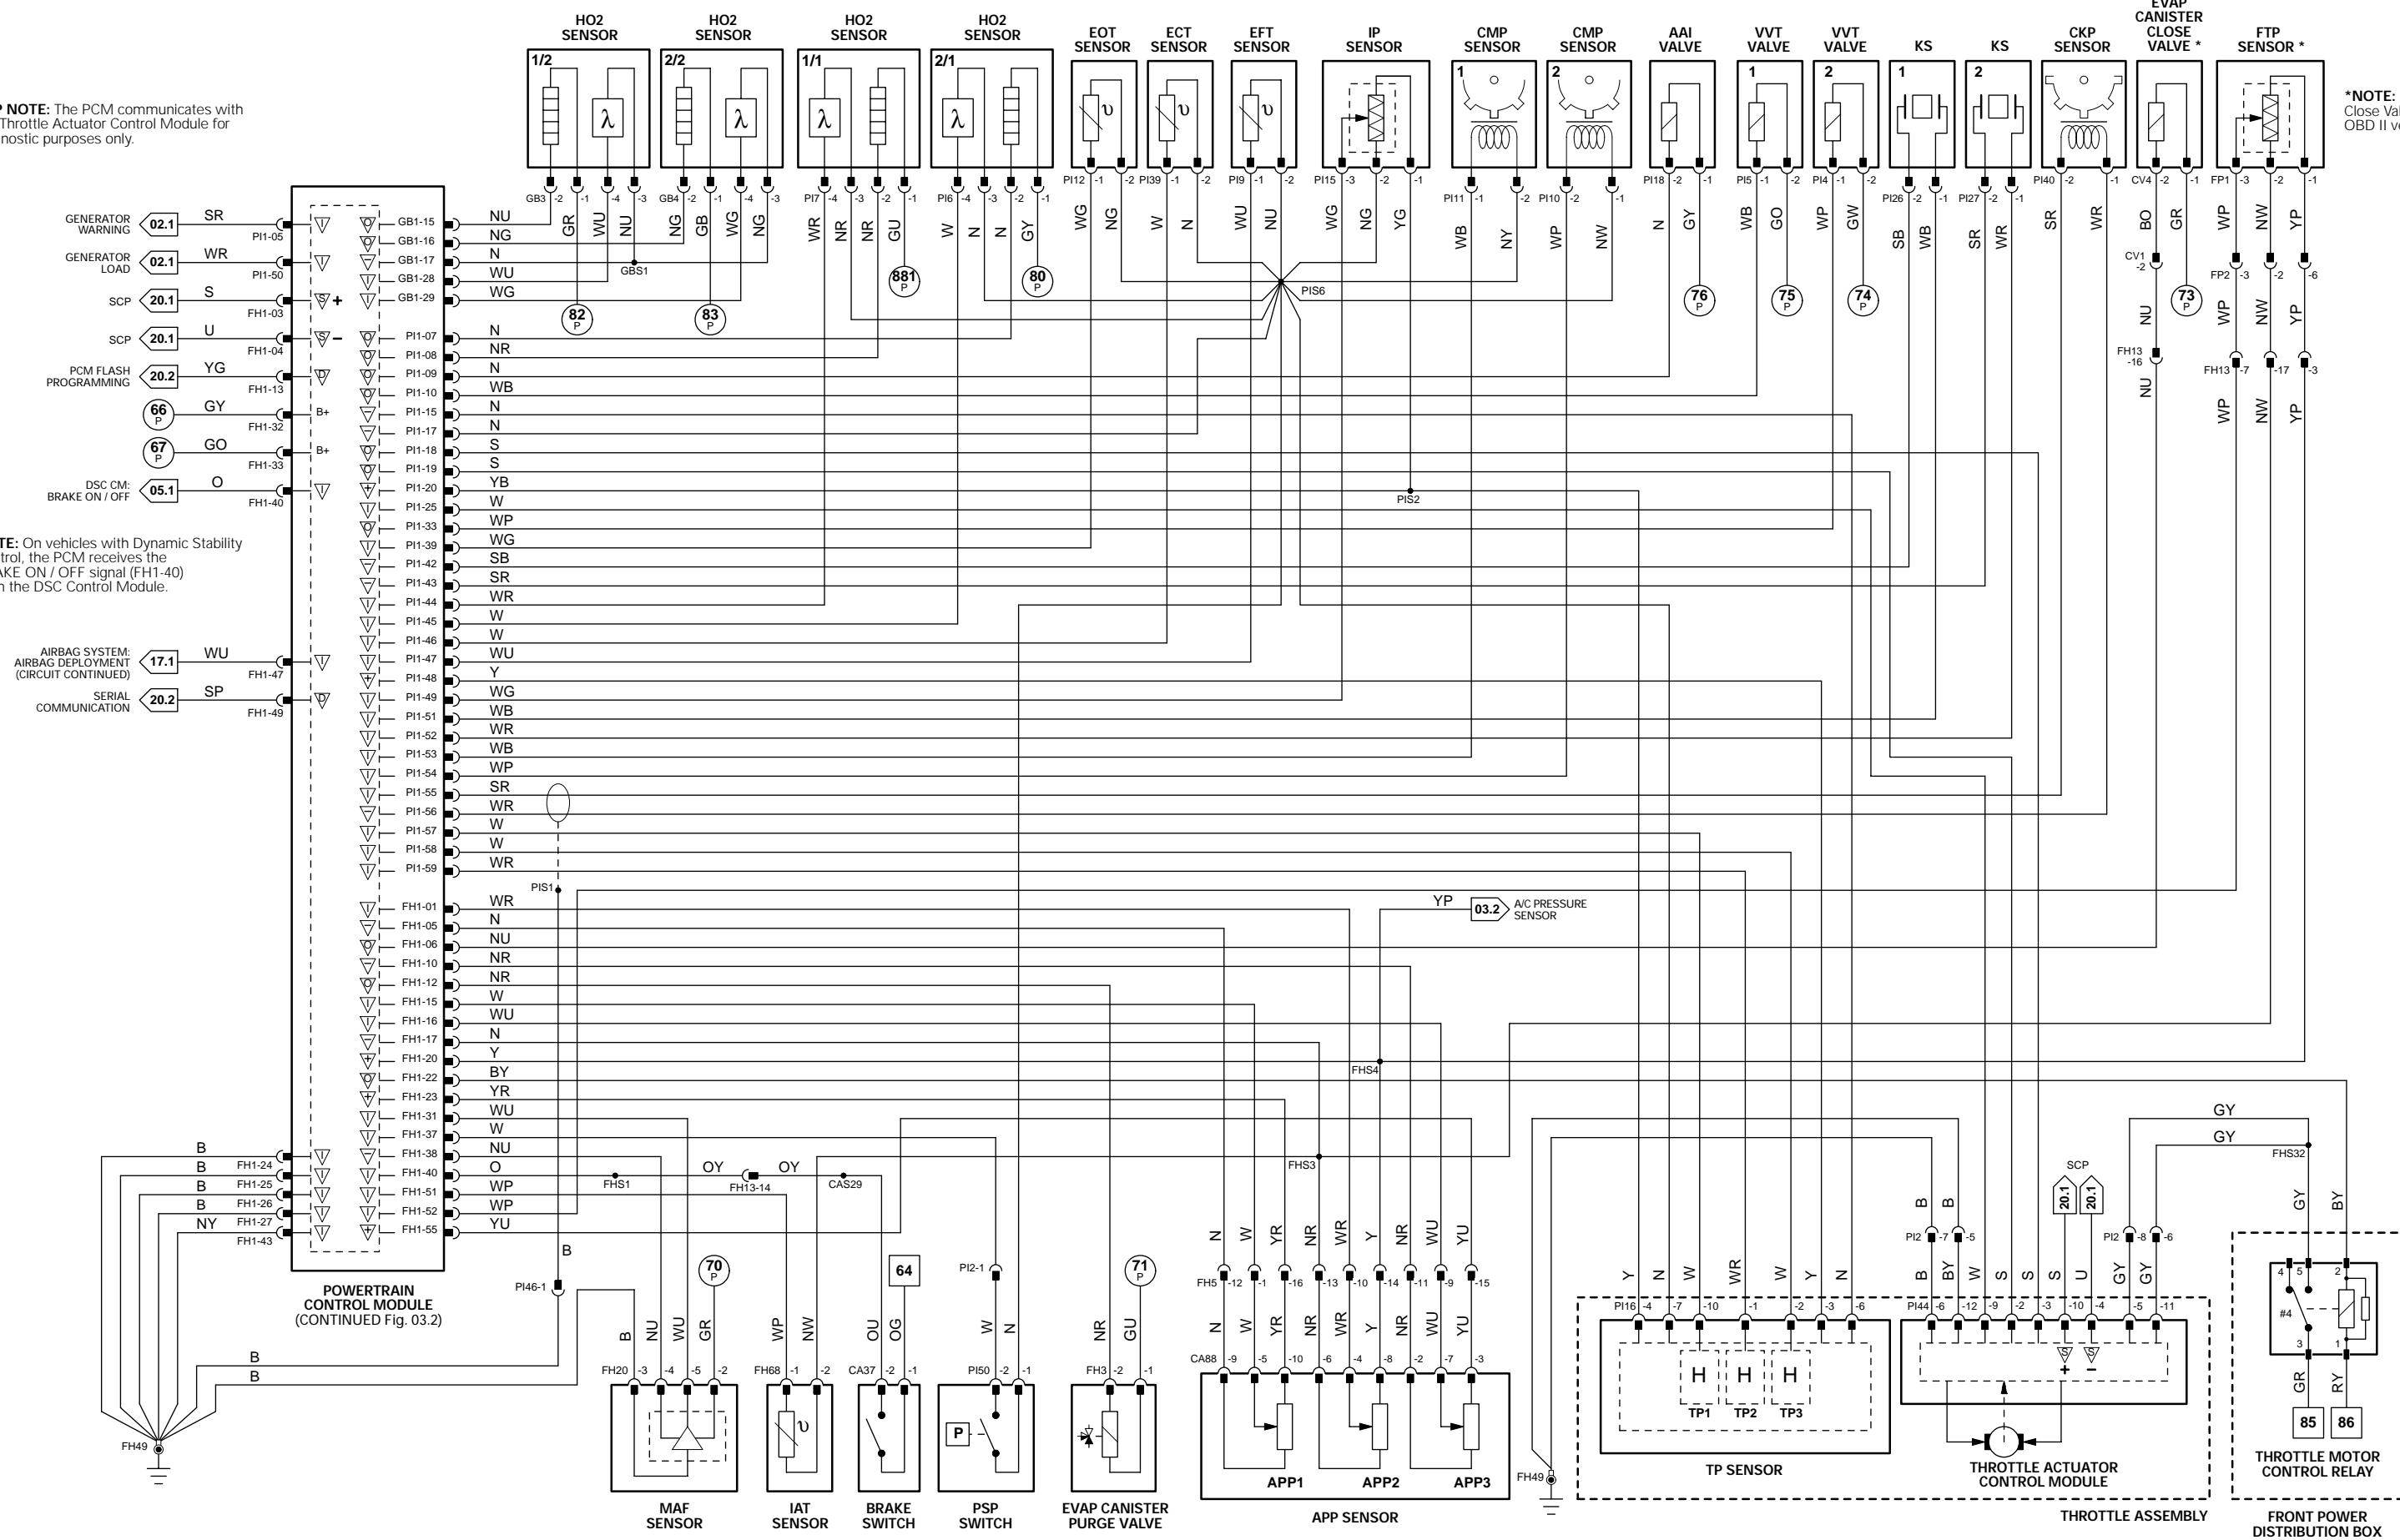

Air Conditioning Control Module

Pin	Description	Active	Inactive
S	FC28-1	SCP -	2 – 1600 Hz
O	FC28-4	COOLING FAN ACTIVATE	GROUND (PWM)
S	FC28-12	SCP +	2 – 1600 Hz

Powertrain Control Module (V8)

Pin	Description	Active	Inactive
S	FH1-3	SCP +	2 – 1600 Hz
S	FH1-4	SCP -	2 – 1600 Hz
O	FH1-9	A/C COMPRESSOR CLUTCH RELAY ACTIVATE	GROUND
SG	FH1-17	IAT, FTP, APP2 SENSORS COMMON REFERENCE GROUND	GROUND
SS	FH1-20	APP2, FTP, A/C PRESSURE SENSORS COMMON REFERENCE VOLTAGE	NOMINAL 5V
I	FH1-24	GROUND SUPPLY	GROUND
I	FH1-25	GROUND SUPPLY	GROUND
I	FH1-26	GROUND SUPPLY	GROUND
I	FH1-27	GROUND SUPPLY	GROUND
I	FH1-28	BRAKE CANCEL SWITCH INPUT	GROUND = BRAKE OFF
I	FH1-32	IGNITION SWITCHED POWER SUPPLY	B+ = BRAKE ON
I	FH1-33	IGNITION SWITCHED POWER SUPPLY	GROUND
O	FH1-36	COOLING FAN ACTIVATE	GROUND (PWM)
I	FH1-42	A/C PRESSURE SENSOR SIGNAL	0 – 5V; DECREASING VOLTAGE WITH PRESSURE INCREASE
I	FH1-43	GROUND SUPPLY	GROUND
SG	FH1-56	CRUISE CONTROL SWITCH PACK REFERENCE GROUND	GROUND
I	FH1-57	CRUISE CONTROL SWITCH PACK MODE REQUEST	0V = ON, 1.4V = CANCEL, 2.4V = DECREASE, 3.2V = INCREASE, 3.8V = RESUME, 4.5V = ON
O	FH1-58	FUEL PUMP CONTROL SIGNAL	4.5V (PWM @ 69%) = IDLE; 8.6V (PWM @ 25%) = IGNITION ON; ENGINE OFF
O	P11-1	IGNITION COIL 1/2 ACTIVATE	GROUND
O	P11-2	INJECTOR 1/1 ACTIVATE	GROUND (PULSED)
O	P11-11	INJECTOR 2/2 ACTIVATE	GROUND (PULSED)
O	P11-12	IGNITION COIL 2/1 ACTIVATE	GROUND
O	P11-13	IGNITION COIL 1/3 ACTIVATE	GROUND
O	P11-14	INJECTOR 1/2 ACTIVATE	GROUND (PULSED)
O	P11-21	INJECTOR 2/3 ACTIVATE	GROUND (PULSED)
O	P11-22	IGNITION COIL 2/2 ACTIVATE	GROUND
O	P11-23	IGNITION COIL 1/2 ACTIVATE	GROUND
O	P11-24	INJECTOR 1/3 ACTIVATE	GROUND (PULSED)
O	P11-29	INJECTOR 2/3 ACTIVATE	GROUND (PULSED)
O	P11-30	IGNITION COIL 2/3 ACTIVATE	GROUND
O	P11-31	IGNITION COIL 1/1 ACTIVATE	GROUND
O	P11-32	INJECTOR 1/4 ACTIVATE	GROUND (PULSED)
O	P11-37	INJECTOR 2/4 ACTIVATE	GROUND (PULSED)
O	P11-38	IGNITION COIL 2/4 ACTIVATE	GROUND

Rear Electronic Control Module

Pin	Description	Active	Inactive
I	CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH	B+
I	CA101-1	FUEL PUMP POWER SUPPLY	B+
I	CA101-2	FUEL PUMP POWER GROUND	GROUND
I	CA101-3	BATTERY POWER SUPPLY – LOGIC	B+
O	CA101-11	FUEL PUMP POWER SUPPLY	B+
O	CA101-12	FUEL PUMP ACTIVATE	GROUND (PWM)
S	CA102-1	SCP +	2 – 1600 Hz
S	CA102-2	SCP -	2 – 1600 Hz
I	CA102-12	GROUND	GROUND
I	CA103-19	PCM TO RECM FUEL PUMP CONTROL DRIVE SIGNAL	4.5V (PWM @ 69%) = IDLE 8.6V (PWM @ 25%) = KEY ON / E OFF

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING COMPRESSOR CLUTCH	PI41	2-WAY / BLACK	ADJACENT TO AIR CONDITIONING COMPRESSOR
AIR CONDITIONING CONTROL MODULE	FC27	26-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
AIR CONDITIONING PRESSURE SENSOR	FC28	22-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
BRAKE CANCEL SWITCH	FH6	4-WAY / BLACK	ADJACENT TO RADIATOR
COOLING FAN	CA36	2-WAY / GREY	TOP OF BRAKE PEDAL
COOLING FAN MODULE	CF6	2-WAY / BLACK	REARWARD OF RADIATOR
FUEL INJECTOR 1 / 1	CF5	7-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 1 / 2	PI19	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 1 / 3	PI20	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 1 / 4	PI21	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 1	PI22	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 2	PI23	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 3	PI24	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 4	PI25	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL PUMP	PI30	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
IGNITION COIL 1 / 1 – V8	FP4	4-WAY / BLACK	BELOW REAR SEAT CUSHION
IGNITION COIL 1 / 2 – V8	PI28	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 1 / 3 – V8	PI29	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 1 / 4 – V8	PI31	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 1 – V8	PI32	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 2 – V8	PI33	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 3 – V8	PI34	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 4 – V8	PI35	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION SUPPRESSION CAPACITOR 1	PI36	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION SUPPRESSION CAPACITOR 2	PI38	1-WAY / GREY	RH CYLINDER HEAD, REAR
POWERTRAIN CONTROL MODULE	FH1	58-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	GB1	32-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	PI1	60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
REAR POWER DISTRIBUTION BOX			TRUNK, RH SIDE
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
STEERING WHEEL CRUISE CONTROL SWITCHES	SQ2	10-WAY / WHITE	STEERING WHEEL

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CF1	6-WAY / GREY / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF RADIATOR
CF2	1-WAY / BLACK / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF RADIATOR
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FC5	12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FP2	8-WAY / GREY / CABIN HARNESS TO FUEL TANK LINK LEAD	REARWARD OF FUEL TANK
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
FH22	GROUND EYELET	BEHIND LH HEADLAMP ASSEMBLY / ENGINE COMPARTMENT
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT
FH49	GROUND EYELET	RH FRONT (LHD) OR LH FRONT (RHD) INNER WHEEL ARCH; REAR / ENGINE COMPARTMENT
FH95	GROUND EYELET	BEHIND LH HEADLAMP ASSEMBLY / ENGINE COMPARTMENT


FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated

<tbl_r cells="2" ix="3"

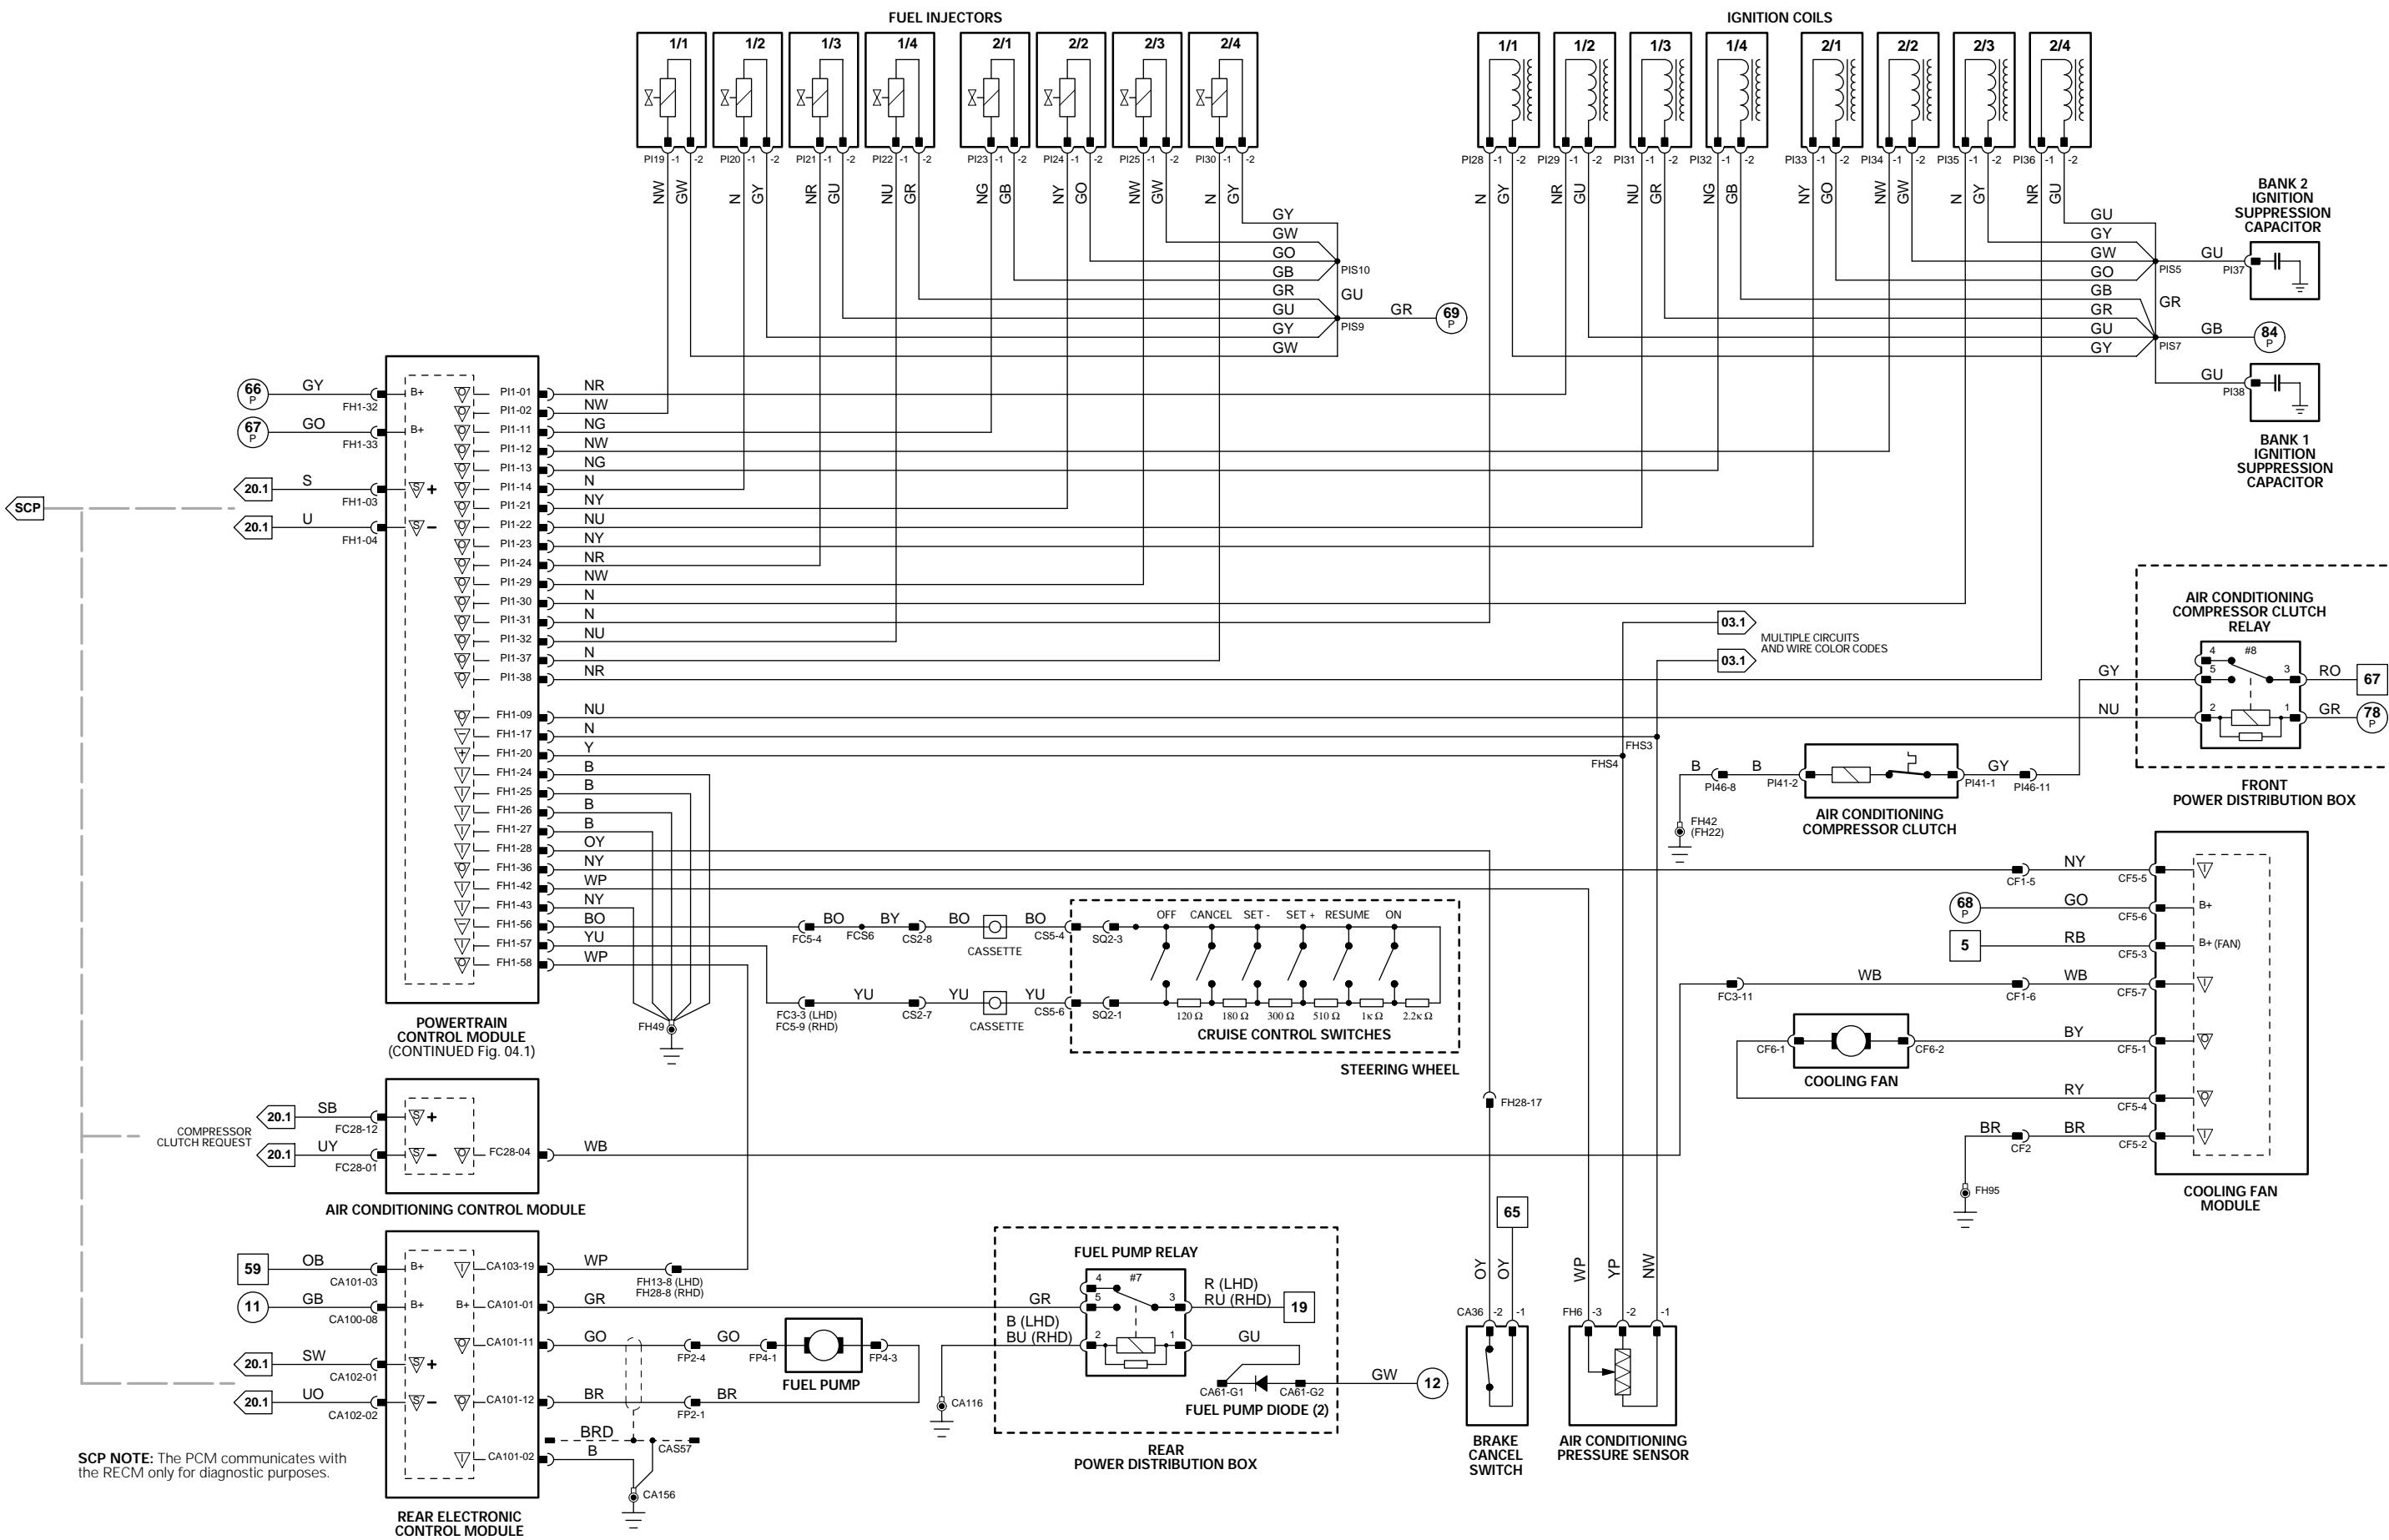

Powertrain Control Module (V6)

Pin	Description	Active	Inactive
I FH1-1	APP2 SIGNAL	1.4V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION) 2 – 1600 Hz	
S FH1-3	SCP +	GROUND	GROUND
S FH1-4	SCP -	GROUND	B+
SG FH1-5	APP1 REFERENCE GROUND	GROUND	GROUND
O FH1-6	EVAP CANISTER CLOSE VALVE ACTIVATE	GROUND	GROUND
SG FH1-10	APP3 REFERENCE GROUND	GROUND	GROUND
O FH1-12	EVAP CANISTER PURGE VALVE ACTIVATE	GROUND (PWM)	B+
D FH1-13	PCM FLASH PROGRAMMING	ENCODED COMMUNICATIONS	
I FH1-15	APP1 SIGNAL	4.02V @ IDLE (DECREASING VOLTAGE WITH ACCELERATION) 0.9V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION)	
I FH1-16	APP3 SIGNAL	GROUND	GROUND
SG FH1-17	IAT, FTP, APP2 SENSORS COMMON REFERENCE GROUND	NOMINAL 5V	NOMINAL 5V
SS FH1-20	APP2, FTP, A/C PRESSURE SENSORS COMMON REFERENCE VOLTAGE	GROUND	B+
O FH1-22	THROTTLE MOTOR CONTROL RELAY ACTIVATE	GROUND	GROUND
SS FH1-23	APP1 REFERENCE VOLTAGE	NOMINAL 5V	NOMINAL 5V
I FH1-24	GROUND SUPPLY	GROUND	GROUND
I FH1-25	GROUND SUPPLY	GROUND	GROUND
I FH1-26	GROUND SUPPLY	GROUND	GROUND
I FH1-27	GROUND SUPPLY	GROUND	GROUND
I FH1-31	MAF SENSOR SIGNAL	0V = IGNITION ON / ENGINE OFF	IV = IDLE
I FH1-32	IGNITION SWITCHED POWER SUPPLY	B+	GROUND
I FH1-33	IGNITION SWITCHED POWER SUPPLY	B+	GROUND
I FH1-37	PSP SWITCH INPUT	GROUND	B+
SG FH1-38	MAF SENSOR REFERENCE GROUND	GROUND = BRAKE OFF	GROUND
I FH1-40	BRAKE ON / OFF SIGNAL	GROUND = BRAKE ON	GROUND
I FH1-43	GROUND SUPPLY	GROUND	GROUND
I FH1-47	AIRBAG DEPLOYMENT SIGNAL	ENCODED COMMUNICATIONS	
D FH1-49	SERIAL COMMUNICATIONS	ENCODED COMMUNICATIONS	
I FH1-51	IAT SENSOR SIGNAL	0.61V @ 90°C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I FH1-52	FTP SENSOR SIGNAL	4.9V = LOW PRESSURE	0.2V = HIGH PRESSURE
SS FH1-55	APP3 SENSOR REFERENCE VOLTAGE	5V	5V
O GB1-15	HO2 SENSOR HEATER, BANK 1 DOWNSTREAM, CONTROL	GROUND (PWM)	
O GB1-16	HO2 SENSOR HEATER, BANK 1 DOWNSTREAM, CONTROL	GROUND (PWM)	
SG GB1-17	SENSOR SIGNAL GROUND	GROUND	GROUND
I GB1-28	HO2 SENSOR, BANK 1 DOWNSTREAM	0.1 – 0.9 V @ IDLE (SWING)	
I GB1-29	HO2 SENSOR, BANK 2 DOWNSTREAM	0.1 – 0.9 V @ IDLE (SWING)	
I PI1-5	GENERATOR WARNING	B+ (MIL OFF)	GROUND(MIL ON)
O PI1-7	HO2 SENSOR HEATER, BANK 2 UPSTREAM, CONTROL	GROUND(PWM)	B+
O PI1-8	HO2 SENSOR HEATER, BANK 1 UPSTREAM, CONTROL	GROUND(PWM)	B+
O PI1-10	VARIABLE VALVE TIMING, BANK 1, CONTROL	GROUND	B+
SG PI1-15	TP SENSOR SIGNAL GROUND	GROUND	GROUND
SG PI1-17	SENSOR SIGNAL COMMON GROUND	GROUND	GROUND
O PI1-18	THROTTLE MOTOR CONTROL SIGNAL	GROUND(PWM); 9.9%@IDLE INCREASING WITH THROTTLE OPENING	
O PI1-19	THROTTLE MOTOR CONTROL SIGNAL	GROUND(PWM); 9.9%@IDLE INCREASING WITH THROTTLE OPENING	
O PI1-20	IP, TP SENSOR COMMON REFERENCE VOLTAGE	NOMINAL 5V	NOMINAL 5V
I PI1-25	ACTUAL THROTTLE ANGLE	0 – 20 mA	
O PI1-29	IMT BOTTOM VALVE ACTIVATE	GROUND	B+
O PI1-33	VARIABLE VALVE TIMING, BANK 2, CONTROL	GROUND	B+
O PI1-37	IMT TOP VALVE ACTIVATE	GROUND	B+
I PI1-39	EOT SENSOR SIGNAL	0.61V @ 90°C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I PI1-40	CHT SENSOR SIGNAL	0.60V @ 90°C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
SG PI1-42	KNOCK SENSOR 1 GROUND	GROUND	GROUND
SG PI1-43	KNOCK SENSOR 2 GROUND	GROUND	GROUND
I PI1-44	HO2 SENSOR, BANK 1 UPSTREAM	0.1 – 0.9 V @ IDLE (SWING)	
I PI1-45	HO2 SENSOR, BANK 2 UPSTREAM	0.1 – 0.9 V @ IDLE (SWING)	
I PI1-47	EFT SENSOR SIGNAL	0.61V @ 90°C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
SS PI1-48	TP SENSOR REFERENCE VOLTAGE	B+	B+
I PI1-49	IP SENSOR SIGNAL	2.6V @ 2.48 bar (36 psi); INCREASING VOLTAGE WITH PRESSURE INCREASE	
I PI1-50	GENERATOR LOAD SIGNAL	0V(PWM)	61% @ IDLE, INCREASING WITH LOAD
I PI1-51	KNOCK SENSOR 1 SIGNAL	0 kHz = NO KNOCK, 2 – 20 kHz = KNOCK	
I PI1-52	KNOCK SENSOR 2 SIGNAL	0 kHz = NO KNOCK, 2 – 20 kHz = KNOCK	
I PI1-53	CMP SENSOR 1 SIGNAL	5 Hz @ IDLE	
I PI1-54	CMP SENSOR 2 SIGNAL	5 Hz @ IDLE	
I PI1-55	CKP SENSOR SIGNAL	5 V @ 1000 rpm = 45 Hz; 2000 rpm = 90 Hz	
SG PI1-56	CKP SENSOR GROUND	GROUND	GROUND
I PI1-57	TP1 SENSOR SIGNAL	4.1V @ IDLE (DECREASING VOLTAGE WITH ACCELERATION)	
I PI1-58	TP3 SENSOR SIGNAL	0.8V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION)	
I PI1-59	TP2 SENSOR SIGNAL	1.4V @ IDLE (INCREASING VOLTAGE WITH ACCELERATION)	

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
APP SENSOR: ACCELERATOR PEDAL POSITION SENSOR	CA88	10-WAY / BLACK	ABOVE ACCELERATOR PEDAL
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
CHT SENSOR: CYLINDER HEAD TEMPERATURE SENSOR	PI13	2-WAY / WHITE	CYLINDER HEAD, LH COVER PLATE
CKP SENSOR: CRANKSHAFT POSITION SENSOR – V6	PI40	2-WAY / BLACK	ENGINE, FORWARD OF GENERATOR
CMP SENSOR: CAMSHAFT POSITION SENSOR 1 – V6	PI11	2-WAY / BLACK	ENGINE RH CAMSHAFT COVER
CMP SENSOR: CAMSHAFT POSITION SENSOR 2 – V6	PI10	2-WAY / BLACK	ENGINE LH CAMSHAFT COVER
EFT SENSOR: ENGINE FUEL TEMPERATURE SENSOR – V6	IL9	2-WAY / BLACK	ADJACENT TO AIR INTAKE PIPE
EOT SENSOR: ENGINE OIL TEMPERATURE SENSOR	PI12	2-WAY / GREY	ADJACENT TO THE OIL FILTER
EVAP CANISTER CLOSE VALVE	CV4	2-WAY / BLACK	ABOVE REAR AXLE ASSEMBLY
EVAP CANISTER PURGE VALVE	FH3	2-WAY / BLACK	ADJACENT TO LH FRONT SUSPENSION TURRET
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
FTP SENSOR: FUEL TANK PRESSURE SENSOR	FP1	3-WAY / BLACK	BELOW THE LEFT FUEL PUMP COVER
HO2 SENSOR: HEATED OXYGEN SENSOR 1 / 1	PI7	4-WAY / GREEN	EXHAUST, RH, UPSTREAM
HO2 SENSOR: HEATED OXYGEN SENSOR 1 / 2	GB3	4-WAY / BLUE	EXHAUST, RH, DOWNSTREAM
HO2 SENSOR: HEATED OXYGEN SENSOR 2 / 1	PI6	4-WAY / GREEN	EXHAUST, LH, UPSTREAM
HO2 SENSOR: HEATED OXYGEN SENSOR 2 / 2	GB4	4-WAY / BLUE	EXHAUST, LH, DOWNSTREAM
IAT SENSOR: INTAKE AIR TEMPERATURE SENSOR	FH68	2-WAY / BLACK	ENGINE AIR INTAKE DUCT
IMT VALVE: INTAKE MANIFOLD TUNING VALVE – BOTTOM	PI47	2-WAY / BLACK	ON INTAKE MANIFOLD
IMT VALVE: INTAKE MANIFOLD TUNING VALVE – TOP	PI48	2-WAY / BLACK	ON INTAKE MANIFOLD
IP SENSOR: INJECTION PRESSURE SENSOR	IL2	3-WAY / BLACK	FUEL RAIL
KS: KNOCK SENSOR 1 – V6	PI26	2-WAY / BLACK	FORWARD OF INTAKE MANIFOLD
KS: KNOCK SENSOR 2 – V6	PI27	2-WAY / BLACK	FORWARD OF INTAKE MANIFOLD
MAF SENSOR: MASS AIR FLOW SENSOR	FH20	6-WAY / BLACK	ENGINE AIR INTAKE DUCT
POWERTRAIN CONTROL MODULE	FH1	58-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	GB1	32-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	PI1	60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
PSP SWITCH: POWER STEERING PRESSURE SWITCH	PI51	2-WAY / BLACK	HIGH PRESSURE PIPE, ADJACENT TO PUMP
THROTTLE ACTUATOR CONTROL MODULE	PI44	10-WAY / BLACK	ON THROTTLE BODY
TP SENSOR: THROTTLE POSITION SENSOR	PI16	10-WAY / BLACK	ON THROTTLE BODY
VVT VALVE: VARIABLE VALVE TIMING VALVE 1	PI5	2-WAY / BLACK	ON RH CYLINDER HEAD
VVT VALVE: VARIABLE VALVE TIMING VALVE 2	PI4	2-WAY / BLACK	ON LH CYLINDER HEAD

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CV1	6-WAY / GREY / CABIN HARNESS TO CANISTER CLOSE VALVE HARNESS	ABOVE REAR AXLE ASSEMBLY
FH5	16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FP2	8-WAY / GREY / CABIN HARNESS TO FUEL TANK LINK LEAD	REARWARD OF FUEL TANK
IL10	12-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTION LINK LEAD	CENTER REAR OF ENGINE
PI2	10-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
FH49	GROUND EYELET	RH FRONT (LHD) OR LH FRONT (RHD) INNER WHEEL ARCH; REAR / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

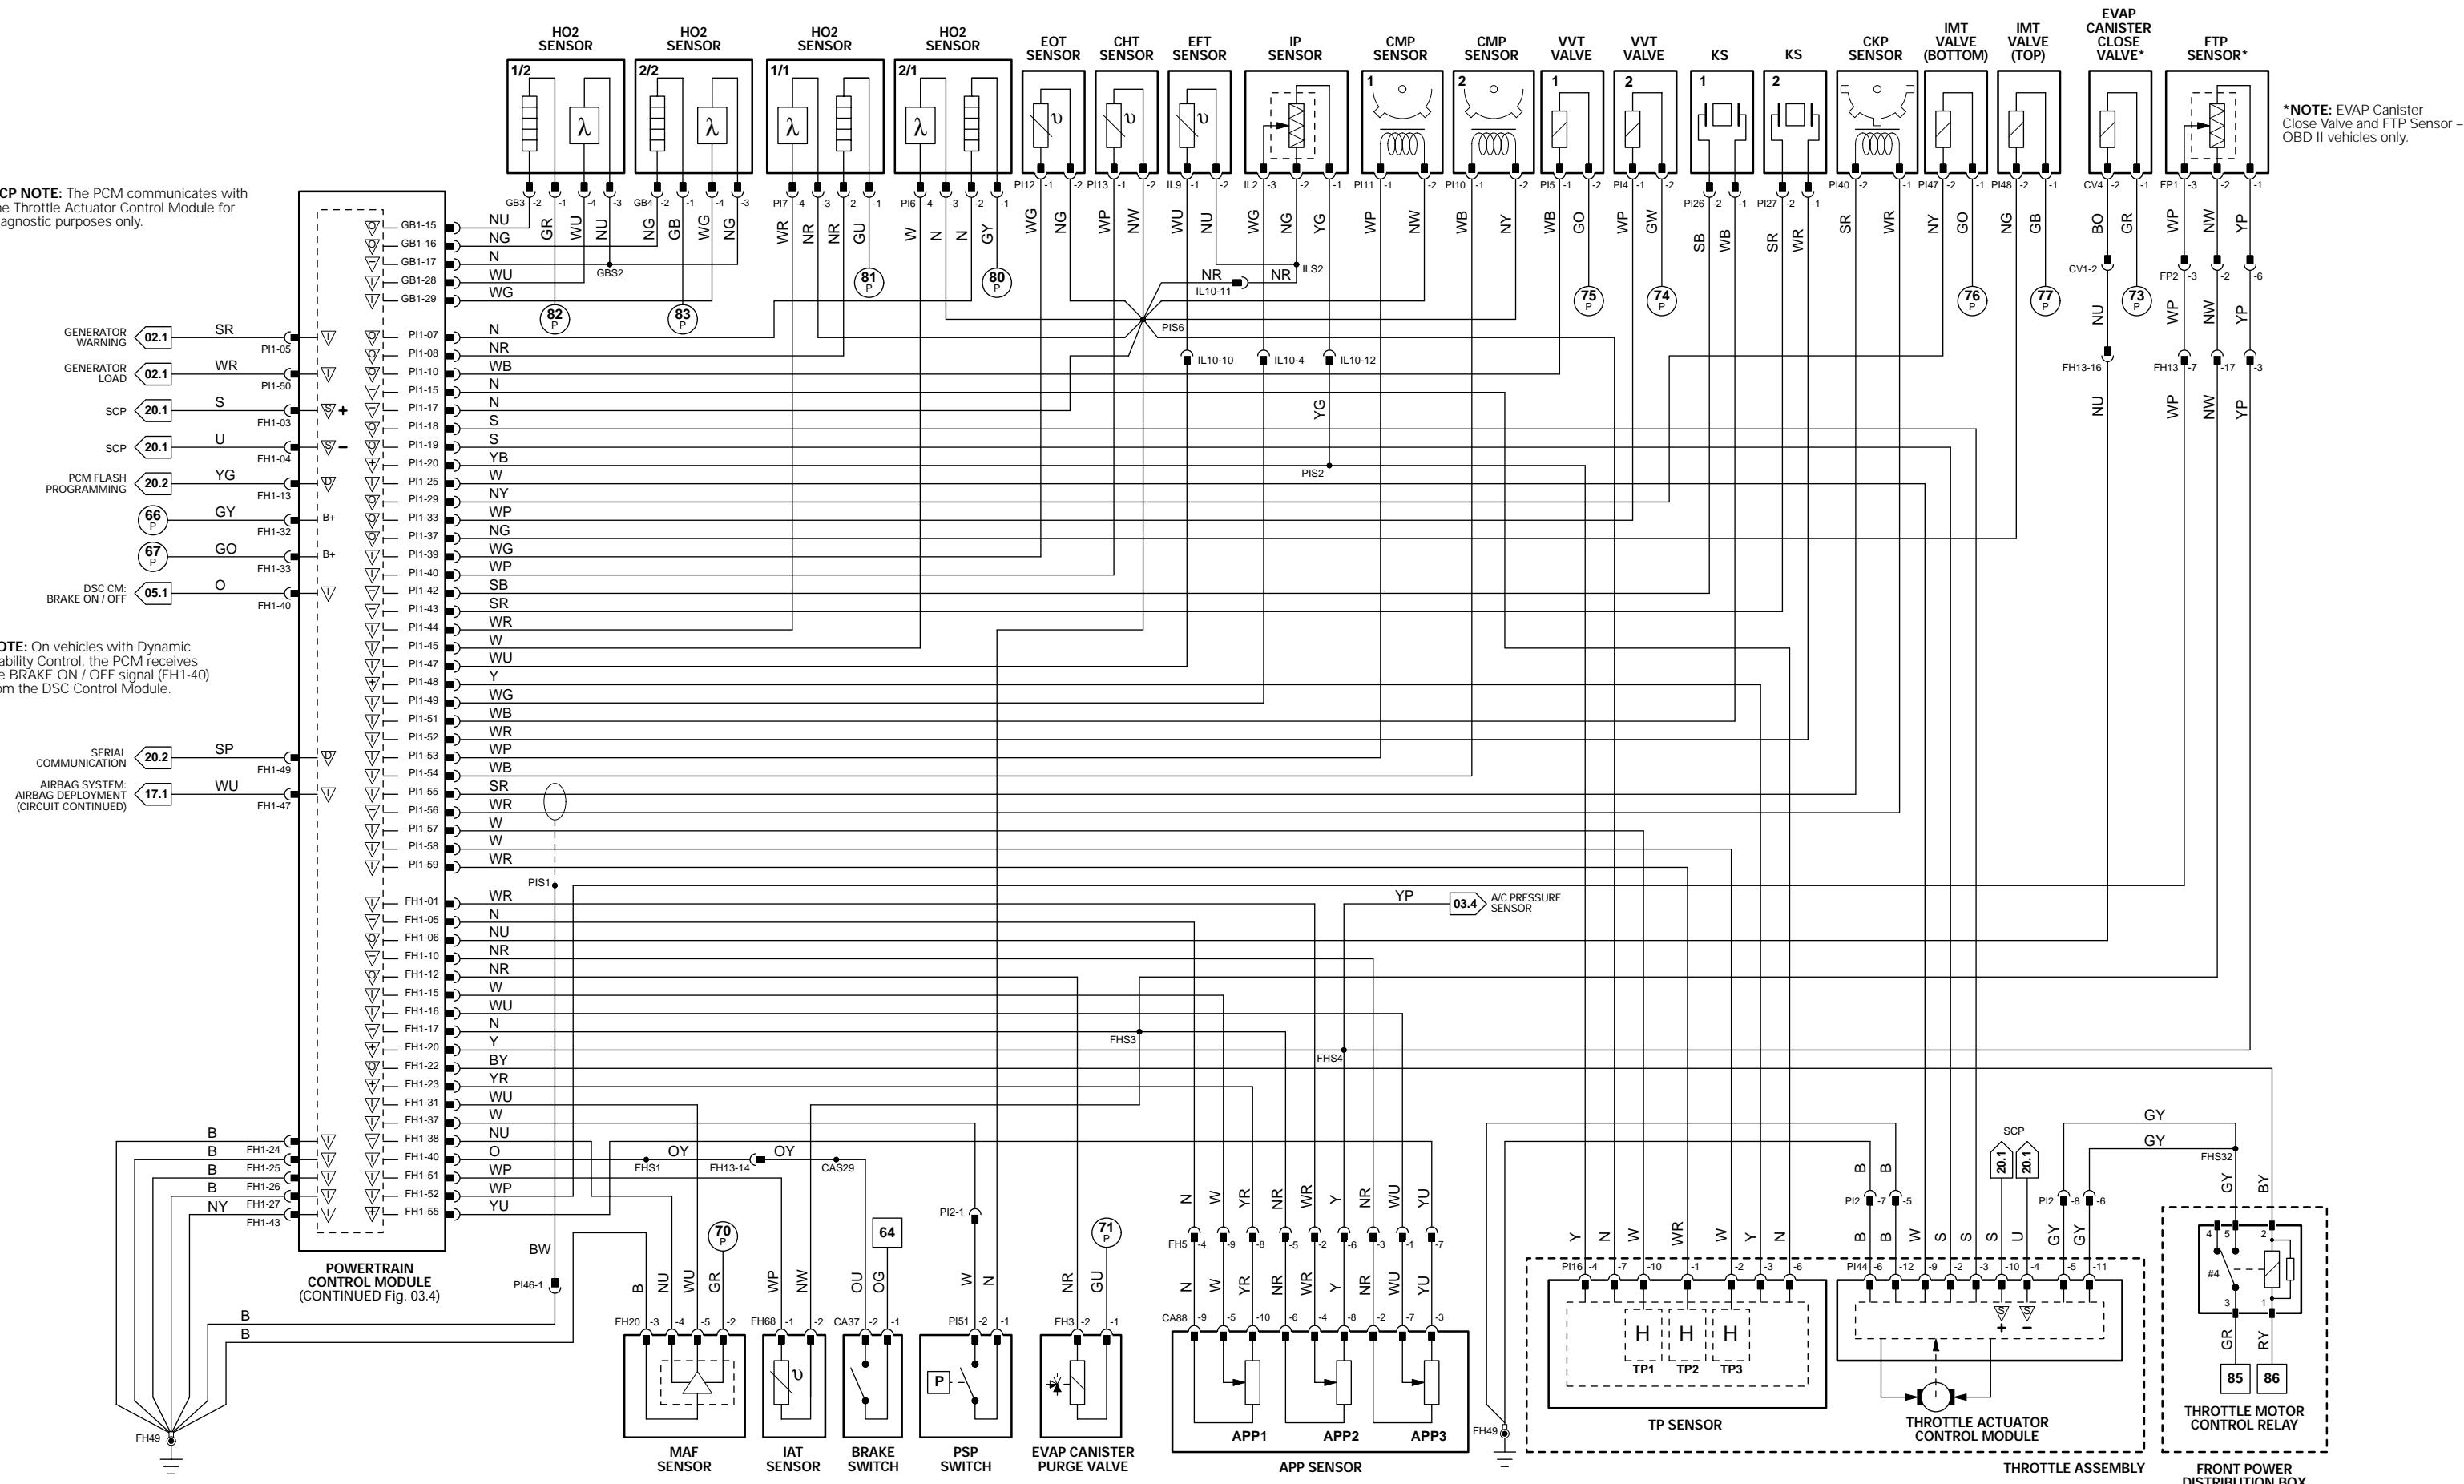


Fig. 03.4

Air Conditioning Control Module

Pin	Description	Active	Inactive
S	FC28-1	SCP -	2 – 1600 Hz
O	FC28-4	COOLING FAN ACTIVATE	GROUND (PWM)
S	FC28-12	SCP +	2 – 1600 Hz

Powertrain Control Module (V6)

Pin	Description	Active	Inactive
S	FH1-4	SCP -	2 – 1600 Hz
O	FH1-9	A/C COMPRESSOR CLUTCH RELAY ACTIVATE	GROUND
SG	FH1-17	IAT, FTP, APP2 SENSORS COMMON REFERENCE GROUND	GROUND
SS	FH1-20	APP2, FTP, A/C PRESSURE SENSORS COMMON REFERENCE VOLTAGE	NOMINAL 5V
I	FH1-24	GROUND SUPPLY	GROUND
I	FH1-25	GROUND SUPPLY	GROUND
I	FH1-26	GROUND SUPPLY	GROUND
I	FH1-27	GROUND SUPPLY	GROUND
I	FH1-28	BRAKE CANCEL SWITCH INPUT	GROUND = BRAKE OFF
I	FH1-32	IGNITION SWITCHED POWER SUPPLY	B+
I	FH1-33	IGNITION SWITCHED POWER SUPPLY	B+
O	FH1-36	COOLING FAN ACTIVATE	GROUND (PWM)
I	FH1-42	A/C PRESSURE SENSOR SIGNAL	0 – 5 V DECREASING WITH PRESSURE
I	FH1-43	GROUND SUPPLY	GROUND
SG	FH1-56	CRUISE CONTROL SWITCH PACK REFERENCE GROUND	GROUND
I	FH1-57	CRUISE CONTROL SWITCH PACK MODE REQUEST	0V = ON, 1.4V = CANCEL, 2.4V = DECREASE, 3.2V = INCREASE, 3.8V = RESUME, 4.5V = ON
O	FH1-58	FUEL PUMP CONTROL SIGNAL	4.5V (PWM @ 69%) = IDLE; 8.6V (PWM @ 25%) = IGNITION ON; ENGINE OFF
O	PI1-2	INJECTOR 1/1 ACTIVATE	GROUND (PULSED)
O	PI1-11	INJECTOR 2/2 ACTIVATE	GROUND (PULSED)
O	PI1-12	IGNITION COIL 2/1 ACTIVATE	GROUND
O	PI1-13	IGNITION COIL 1/3 ACTIVATE	GROUND
O	PI1-14	INJECTOR 1/2 ACTIVATE	GROUND (PULSED)
O	PI1-21	INJECTOR 2/3 ACTIVATE	GROUND (PULSED)
O	PI1-22	IGNITION COIL 2/2 ACTIVATE	GROUND
O	PI1-23	IGNITION COIL 1/2 ACTIVATE	GROUND
O	PI1-24	INJECTOR 1/3 ACTIVATE	GROUND (PULSED)
O	PI1-30	IGNITION COIL 2/3 ACTIVATE	GROUND
O	PI1-31	IGNITION COIL 1/1 ACTIVATE	GROUND
O	PI1-32	INJECTOR 2/1 ACTIVATE	GROUND (PULSED)

Rear Electronic Control Module

Pin	Description	Active	Inactive
I	CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH	B+
I	CA101-1	FUEL PUMP POWER SUPPLY	GROUND
I	CA101-2	FUEL PUMP POWER GROUND	GROUND
I	CA101-3	BATTERY POWER SUPPLY – LOGIC	B+
O	CA101-11	FUEL PUMP POWER SUPPLY	GROUND
O	CA101-12	FUEL PUMP ACTIVATE	GROUND (PWM)
S	CA102-1	SCP +	2 – 1600 Hz
S	CA102-2	SCP -	2 – 1600 Hz
I	CA102-12	GROUND	GROUND
I	CA103-19	PCM TO RECM FUEL PUMP CONTROL DRIVE SIGNAL	4.5V (PWM @ 69%) = IDLE 8.6V (PWM @ 25%) = KEY ON / E OFF

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING COMPRESSOR CLUTCH	PI41	2-WAY / BLACK	ADJACENT TO AIR CONDITIONING COMPRESSOR
AIR CONDITIONING CONTROL MODULE	FC27	26-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
AIR CONDITIONING PRESSURE SENSOR	FC28	22-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
BRAKE CANCEL SWITCH	FH6	4-WAY / BLACK	ADJACENT TO RADIATOR
COOLING FAN	CA36	2-WAY / GREY	TOP OF BRAKE PEDAL
COOLING FAN MODULE	CF6	2-WAY / BLACK	REARWARD OF RADIATOR
FRONT POWER DISTRIBUTION BOX	CF5	7-WAY / BLACK	REARWARD OF RADIATOR
FUEL INJECTOR 1 / 1	IL3	1-WAY / GREY	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 1 / 2	IL4	1-WAY / GREY	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 1 / 3	IL5	1-WAY / GREY	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 1	IL6	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 2	IL7	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL INJECTOR 2 / 3	IL8	2-WAY / BLACK	INTAKE MANIFOLD, FUEL RAIL
FUEL PUMP	FP4	4-WAY / BLACK	BELOW REAR SEAT CUSHION
IGNITION COIL 1 / 1 – V6	PI28	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 1 / 2 – V6	PI29	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 1 / 3 – V6	PI31	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 1 – V6	PI32	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 2 – V6	PI33	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION COIL 2 / 3 – V6	PI34	2-WAY / BLACK	ON CYLINDER HEAD
IGNITION SUPPRESSION CAPACITOR 1	PI38	1-WAY / GREY	RH CYLINDER HEAD, REAR
IGNITION SUPPRESSION CAPACITOR 2	PI37	1-WAY / GREY	LH CYLINDER HEAD, REAR
POWERTRAIN CONTROL MODULE	FH1	58-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	GB1	32-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	PI1	60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH SIDE
REAR POWER DISTRIBUTION BOX			
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
STEERING WHEEL CRUISE CONTROL SWITCHES	SQ2	10-WAY / WHITE	STEERING WHEEL

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CF1	6-WAY / GREY / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF RADIATOR
CF2	1-WAY / BLACK / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF RADIATOR
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FC5	12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FP2	8-WAY / GREY / CABIN HARNESS TO FUEL TANK LINK LEAD	REARWARD OF FUEL TANK
IL10	12-WAY / BLACK / ENGINE HARNESS TO FUEL INJECTION LINK LEAD	CENTER REAR OF ENGINE
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK, RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
FH22	GROUND EYELET	BEHIND LH HEADLAMP ASSEMBLY / ENGINE COMPARTMENT
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT
FH49	GROUND EYELET	RH FRONT (LHD) OR LH FRONT (RHD) INNER WHEEL ARCH; REAR / ENGINE COMPARTMENT
FH95	GROUND EYELET	BEHIND LH HEADLAMP ASSEMBLY / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data	PWM	Pulse Width Modulated
O	Output	S	SCP Network	B+	Battery Voltage	Hz	Frequency
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

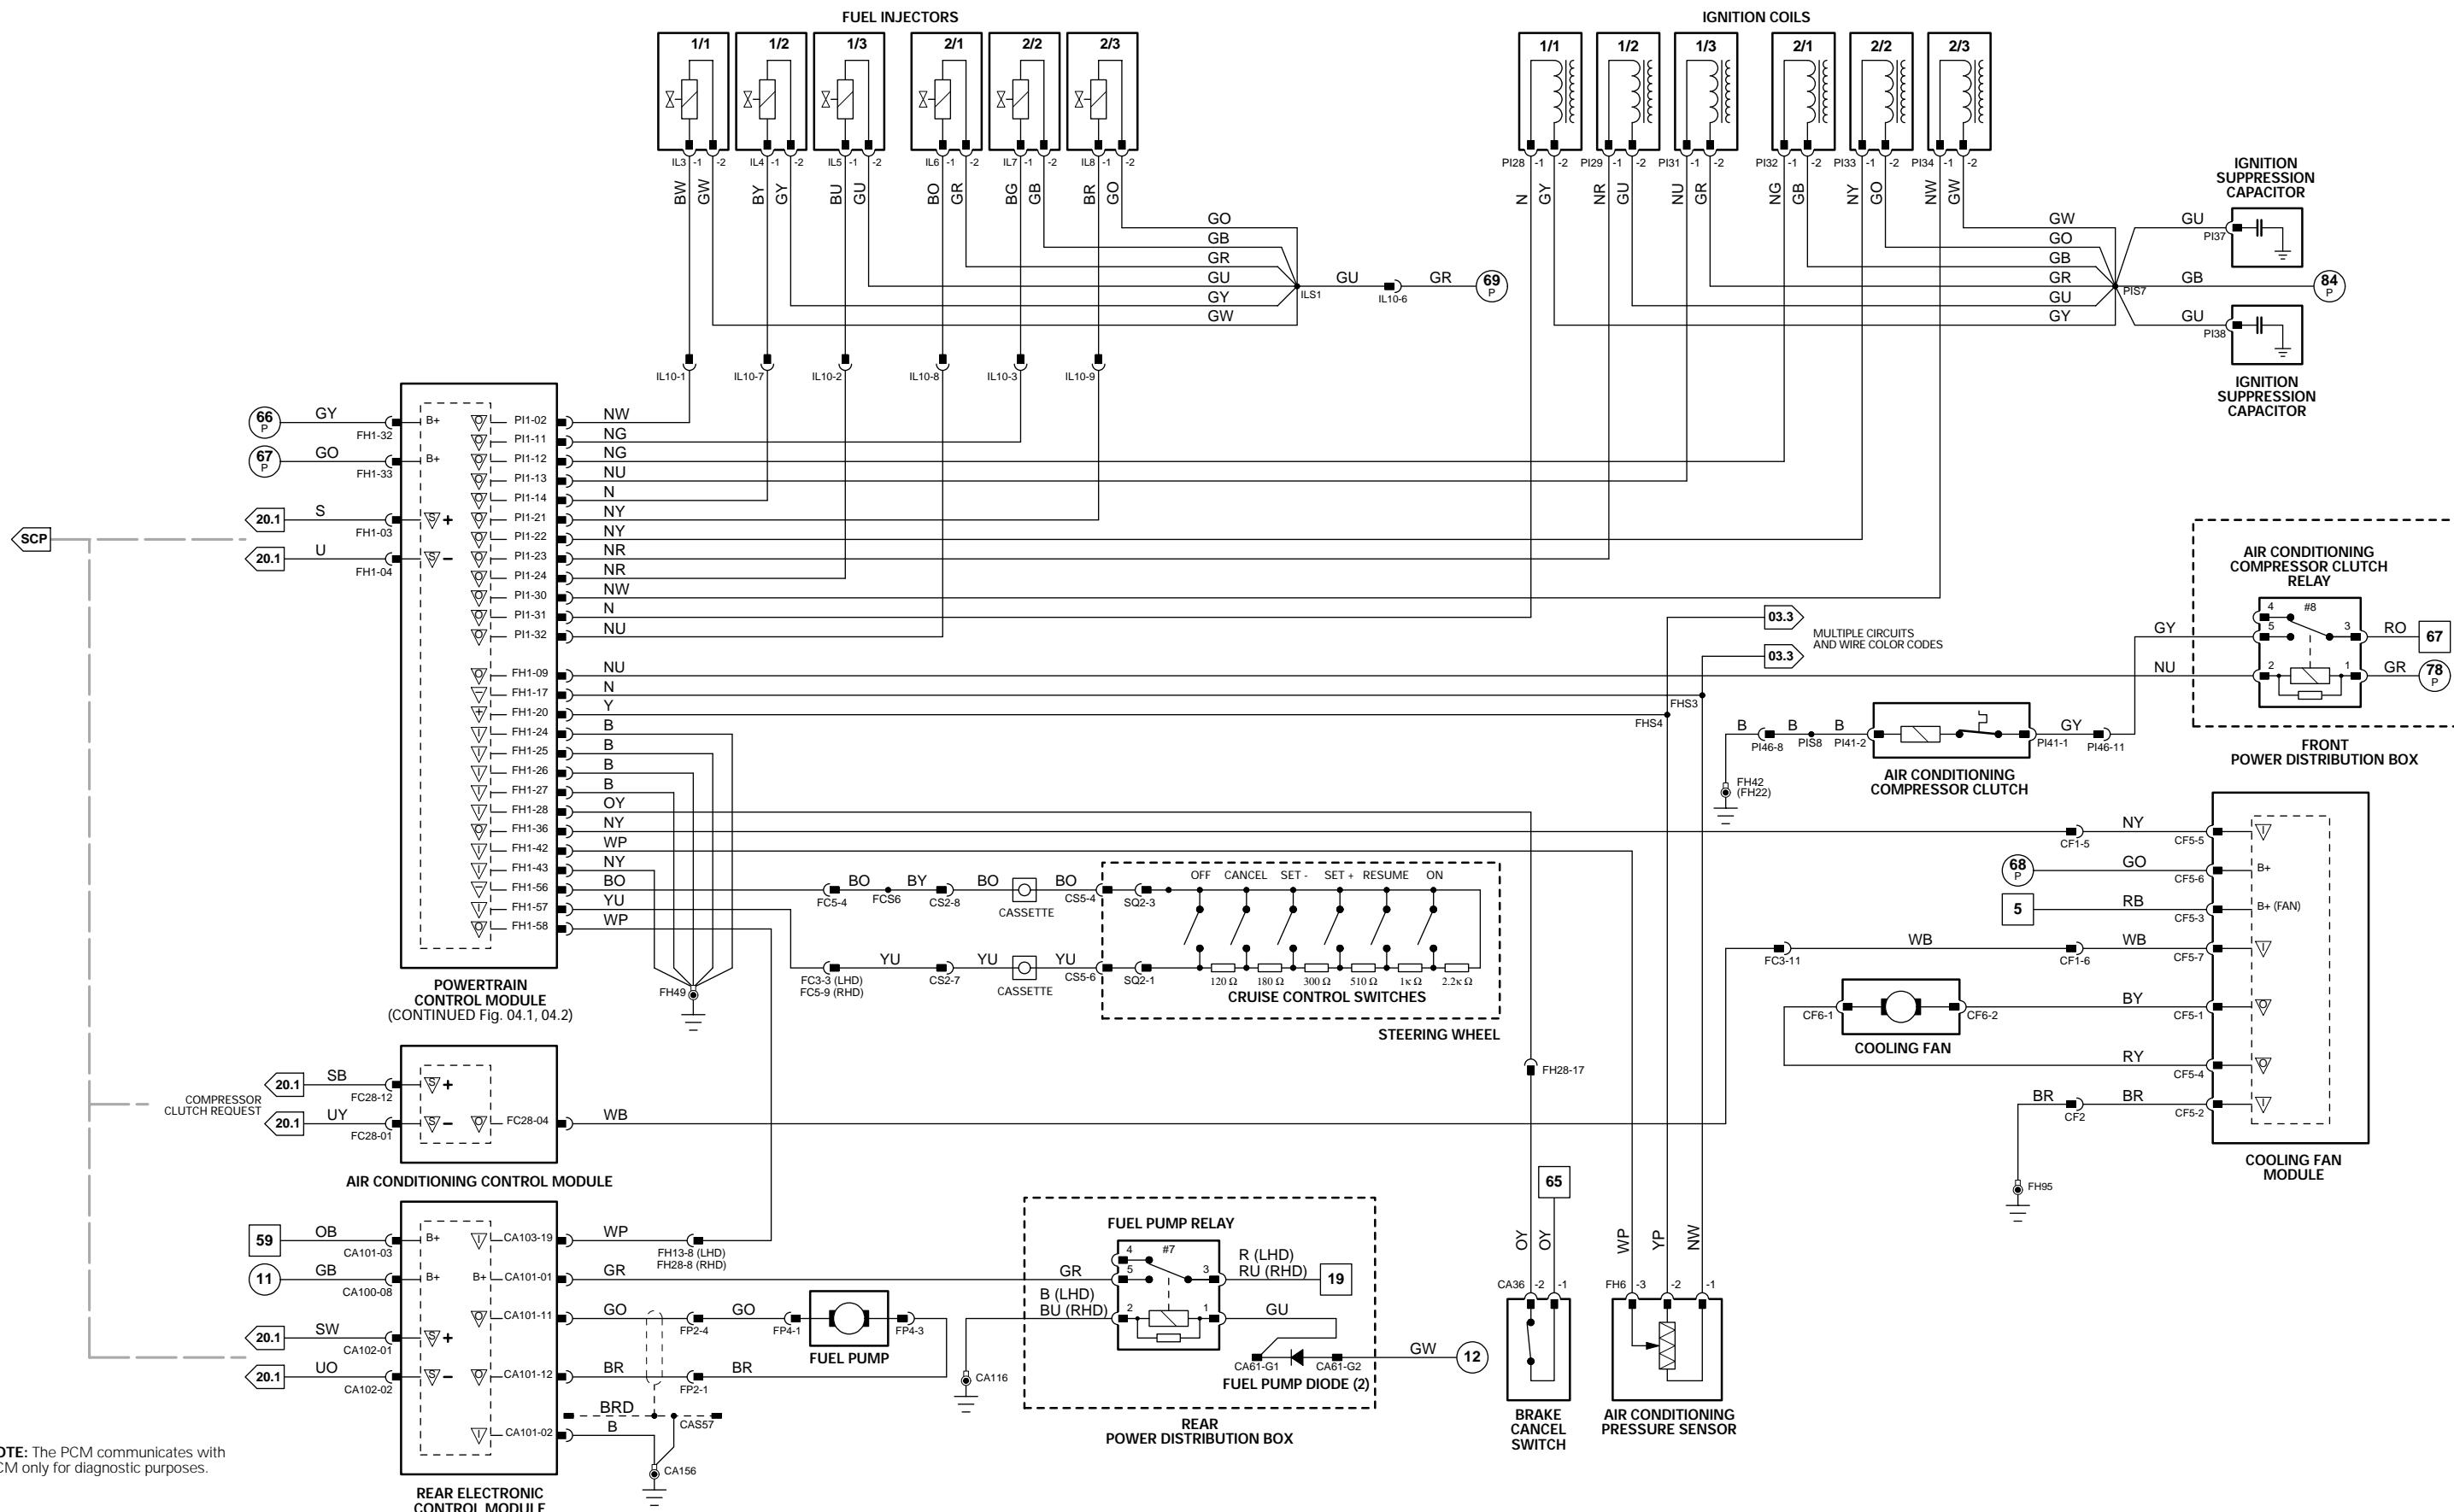

General Electronic Control Module

Pin	Description	Active	Inactive
I	CA31-10	TRANSMISSION MODE SELECT SWITCH	GROUND
O	CA31-16	TRANSMISSION MODE SELECT SWITCH	9V = SPORT
S	FH59-1	SCP -	2 – 1600 Hz
S	FH59-7	SCP +	2 – 1600 Hz

Powertrain Control Module

Pin	Description	Active	Inactive
S	FH1-3	SCP +	2 – 1600 Hz
S	FH1-4	SCP -	2 – 1600 Hz
I	FH1-7	GEAR SELECTOR STATE	GROUND = PR,N,4
I	FH1-8	GEAR SELECTOR STATE	GROUND = PR,D,3
D	FH1-13	PCM FLASH PROGRAMMING	ENCODED COMMUNICATIONS
I	FH1-21	GEAR SELECTOR STATE	GROUND = PN,D,2
I	FH1-24	GROUND SUPPLY	GROUND
I	FH1-25	GROUND SUPPLY	GROUND
I	FH1-26	GROUND SUPPLY	GROUND
I	FH1-27	GROUND SUPPLY	GROUND
I	FH1-41	D – 4 J-GATE SWITCH	GROUND = D
I	FH1-43	GROUND SUPPLY	GROUND
I	FH1-44	BATTERY POWER SUPPLY	B+
D	FH1-49	SERIAL COMMUNICATIONS	ENCODED COMMUNICATIONS
O	GB1-1	SHIFT SOLENOID VALVE 1 CONTROL	GROUND
O	GB1-2	SHIFT SOLENOID VALVE 2 CONTROL	GROUND
O	GB1-3	SHIFT SOLENOID VALVE 3 CONTROL	GROUND
O	GB1-4	SHIFT SOLENOID VALVE 4 CONTROL	GROUND
O	GB1-5	TCC SOLENOID VALVE CONTROL DRIVE	GROUND (PWM)
O	GB1-7	PRESSURE REGULATOR 1 CONTROL DRIVE	GROUND (PWM); GROUND = MAXIMUM PRESSURE; B+ = NO PRESSURE
I	GB1-9	TRANSMISSION RANGE 3A	GROUND
I	GB1-10	TRANSMISSION RANGE 4	GROUND
O	GB1-12	PRESSURE REGULATOR 2 CONTROL DRIVE	GROUND (PWM); GROUND = MAXIMUM PRESSURE; B+ = NO PRESSURE
O	GB1-13	PRESSURE REGULATOR 3 CONTROL DRIVE	GROUND (PWM); GROUND = MAXIMUM PRESSURE; B+ = NO PRESSURE
SG	GB1-17	SENSOR SIGNAL GROUND	GROUND
I	GB1-18	TRANSMISSION RANGE 2	GROUND
I	GB1-21	INTERMEDIATE SPEED SENSOR SIGNAL	107 Hz @ 1000 rpm – P SELECTED
I	GB1-22	TRANSMISSION RANGE 1	GROUND
I	GB1-23	FLUID TEMPERATURE SENSOR FEEDBACK	1.2V @ 90° C; DECREASING VOLTAGE WITH TEMPERATURE INCREASE
I	GB1-26	OUTPUT SPEED SENSOR SIGNAL	140 Hz @ 10 mph (16 km/h); 280 Hz @ 20 mph (32 km/h)
I	GB1-27	TURBINE SPEED SENSOR SIGNAL	540 Hz @ 10 mph (16 km/h); 1080 Hz @ 20 mph (32 km/h)
I	GB1-30	PRESSURE SWITCH INPUT	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
INTERMEDIATE SPEED SENSOR	GB10	2-WAY / GREEN	TRANSMISSION, LH SIDE
J-GATE ASSEMBLY	CA41	16-WAY / GREEN	CENTER CONSOLE
OUTPUT SPEED SENSOR	GB9	2-WAY / BLACK	TRANSMISSION, LH SIDE
POWERTRAIN CONTROL MODULE	FH1 GB1 PI1	58-WAY / GREY 32-WAY / GREY 60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE
REAR POWER DISTRIBUTION BOX			TRUNK, RH SIDE
TRANSMISSION	GB5	16-WAY / GREY	VEHICLE, REARWARD OF ENGINE
TRANSMISSION MODE SWITCH	CA38	10-WAY / GREEN	CENTER CONSOLE
TRANSMISSION RANGE SENSOR	GB6	12-WAY / BLACK	TRANSMISSION SELECTOR SHAFT
TURBINE SPEED SENSOR	GB11	2-WAY / BLACK	TRANSMISSION, LH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX

GROUNDS

Ground	Ground Description	Location
CA141	GROUND EYELET	BELLOW FRONT SEAT; LH SIDE / UNDER SEAT
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
FH49	GROUND EYELET	RH FRONT (LHD) OR LH FRONT (RHD) INNER WHEEL ARCH; REAR / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

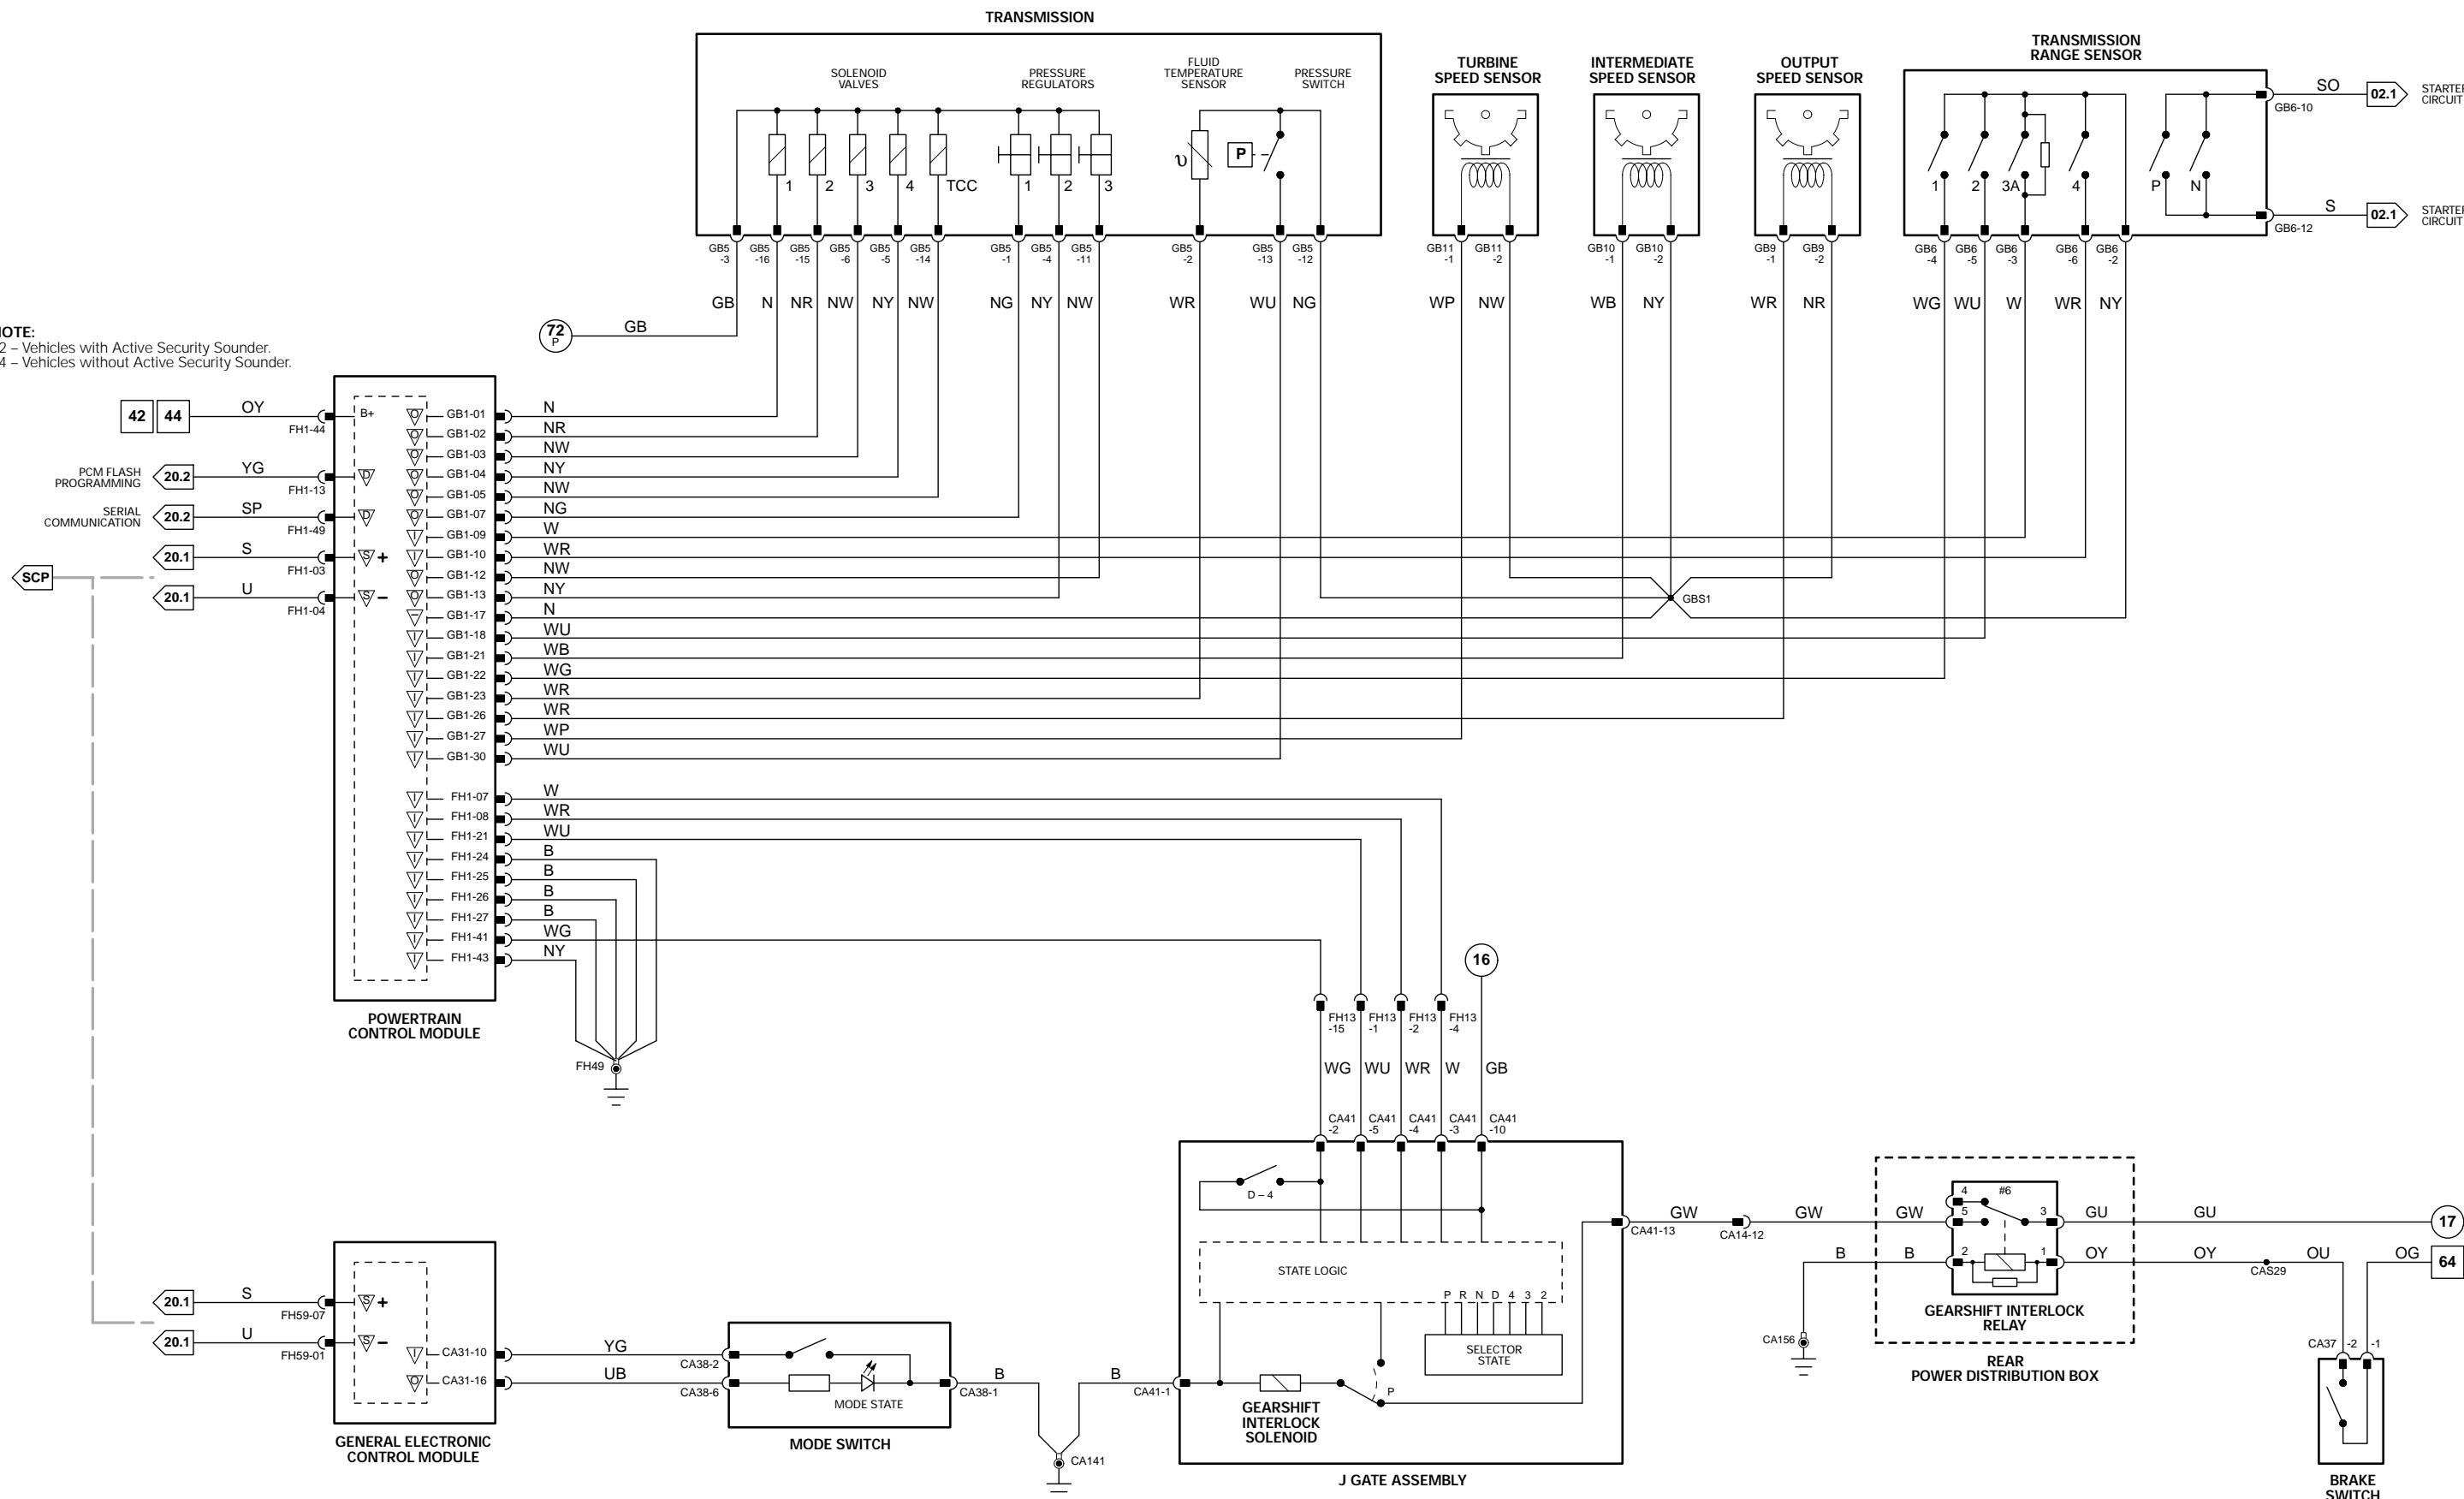


Fig. 04.2

General Electronic Control Module

Pin	Description
I CA31-10	TRANSMISSION MODE SELECT SWITCH
O CA31-16	TRANSMISSION MODE SELECT SWITCH

Powertrain Control Module

Pin	Description	Active	Inactive
S FH1-3	SCP +	2 – 1600 Hz	
S FH1-4	SCP -	2 – 1600 Hz	
I FH1-7	NOT USED		
I FH1-8	NOT USED		
D FH1-13	PCM FLASH PROGRAMMING	ENCODED COMMUNICATIONS	
SG FH1-17	NOT USED		
I FH1-21	NOT USED		
I FH1-24	GROUND SUPPLY	GROUND	GROUND
I FH1-25	GROUND SUPPLY	GROUND	GROUND
I FH1-26	GROUND SUPPLY	GROUND	GROUND
I FH1-27	GROUND SUPPLY	GROUND	GROUND
I FH1-41	D – 4 J-GATE SWITCH	GROUND = D	4 = B+
I FH1-43	GROUND SUPPLY	GROUND	GROUND
I FH1-44	BATTERY POWER SUPPLY	B+	B+
D FH1-49	SERIAL COMMUNICATIONS	ENCODED COMMUNICATIONS	
I GB1-10	TRANSMISSION RANGE 4	GROUND	B+
SG GB1-17	SENSOR SIGNAL GROUND	GROUND	GROUND
I GB1-22	CLUTCH PEDAL SWITCH	GROUND	B+
I GB1-26	OUTPUT SPEED SENSOR SIGNAL		140 Hz @ 10 mph (16 km/h); 280 Hz @ 20 mph (32 km/h)

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
CLUTCH PEDAL SWITCH	CA33	2-WAY / BLACK	ABOVE CLUTCH PEDAL
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
J-GATE ASSEMBLY	CA41	16-WAY / GREEN	CENTER CONSOLE
OUTPUT SPEED SENSOR	GB89	2-WAY / BLACK	TRANSMISSION, LH SIDE
POWERTRAIN CONTROL MODULE	FH1 GB1 PI1	58-WAY / GREY 32-WAY / GREY 60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE
REAR POWER DISTRIBUTION BOX			TRUNK, RH SIDE
REVERSE SWITCH	GB14	2-WAY / BLACK	TRANSMISSION, LH SIDE
TRANSMISSION MODE SWITCH	CA38	10-WAY / GREEN	CENTER CONSOLE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
FH5	16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
GB2	6-WAY / BLACK / FRONT HARNESS TO TRANSMISSION HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
CA141	GROUND EYELET	BELOW FRONT SEAT; LH SIDE / UNDER SEAT
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
FH49	GROUND EYELET	RH FRONT (LHD) OR LH FRONT (RHD) INNER WHEEL ARCH; REAR / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data


I Input	SS Sensor Supply V	D Serial and Encoded Data
O Output	S SCP Network	B+ Battery Voltage
SG Sensor Ground	A ACP Network	V Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

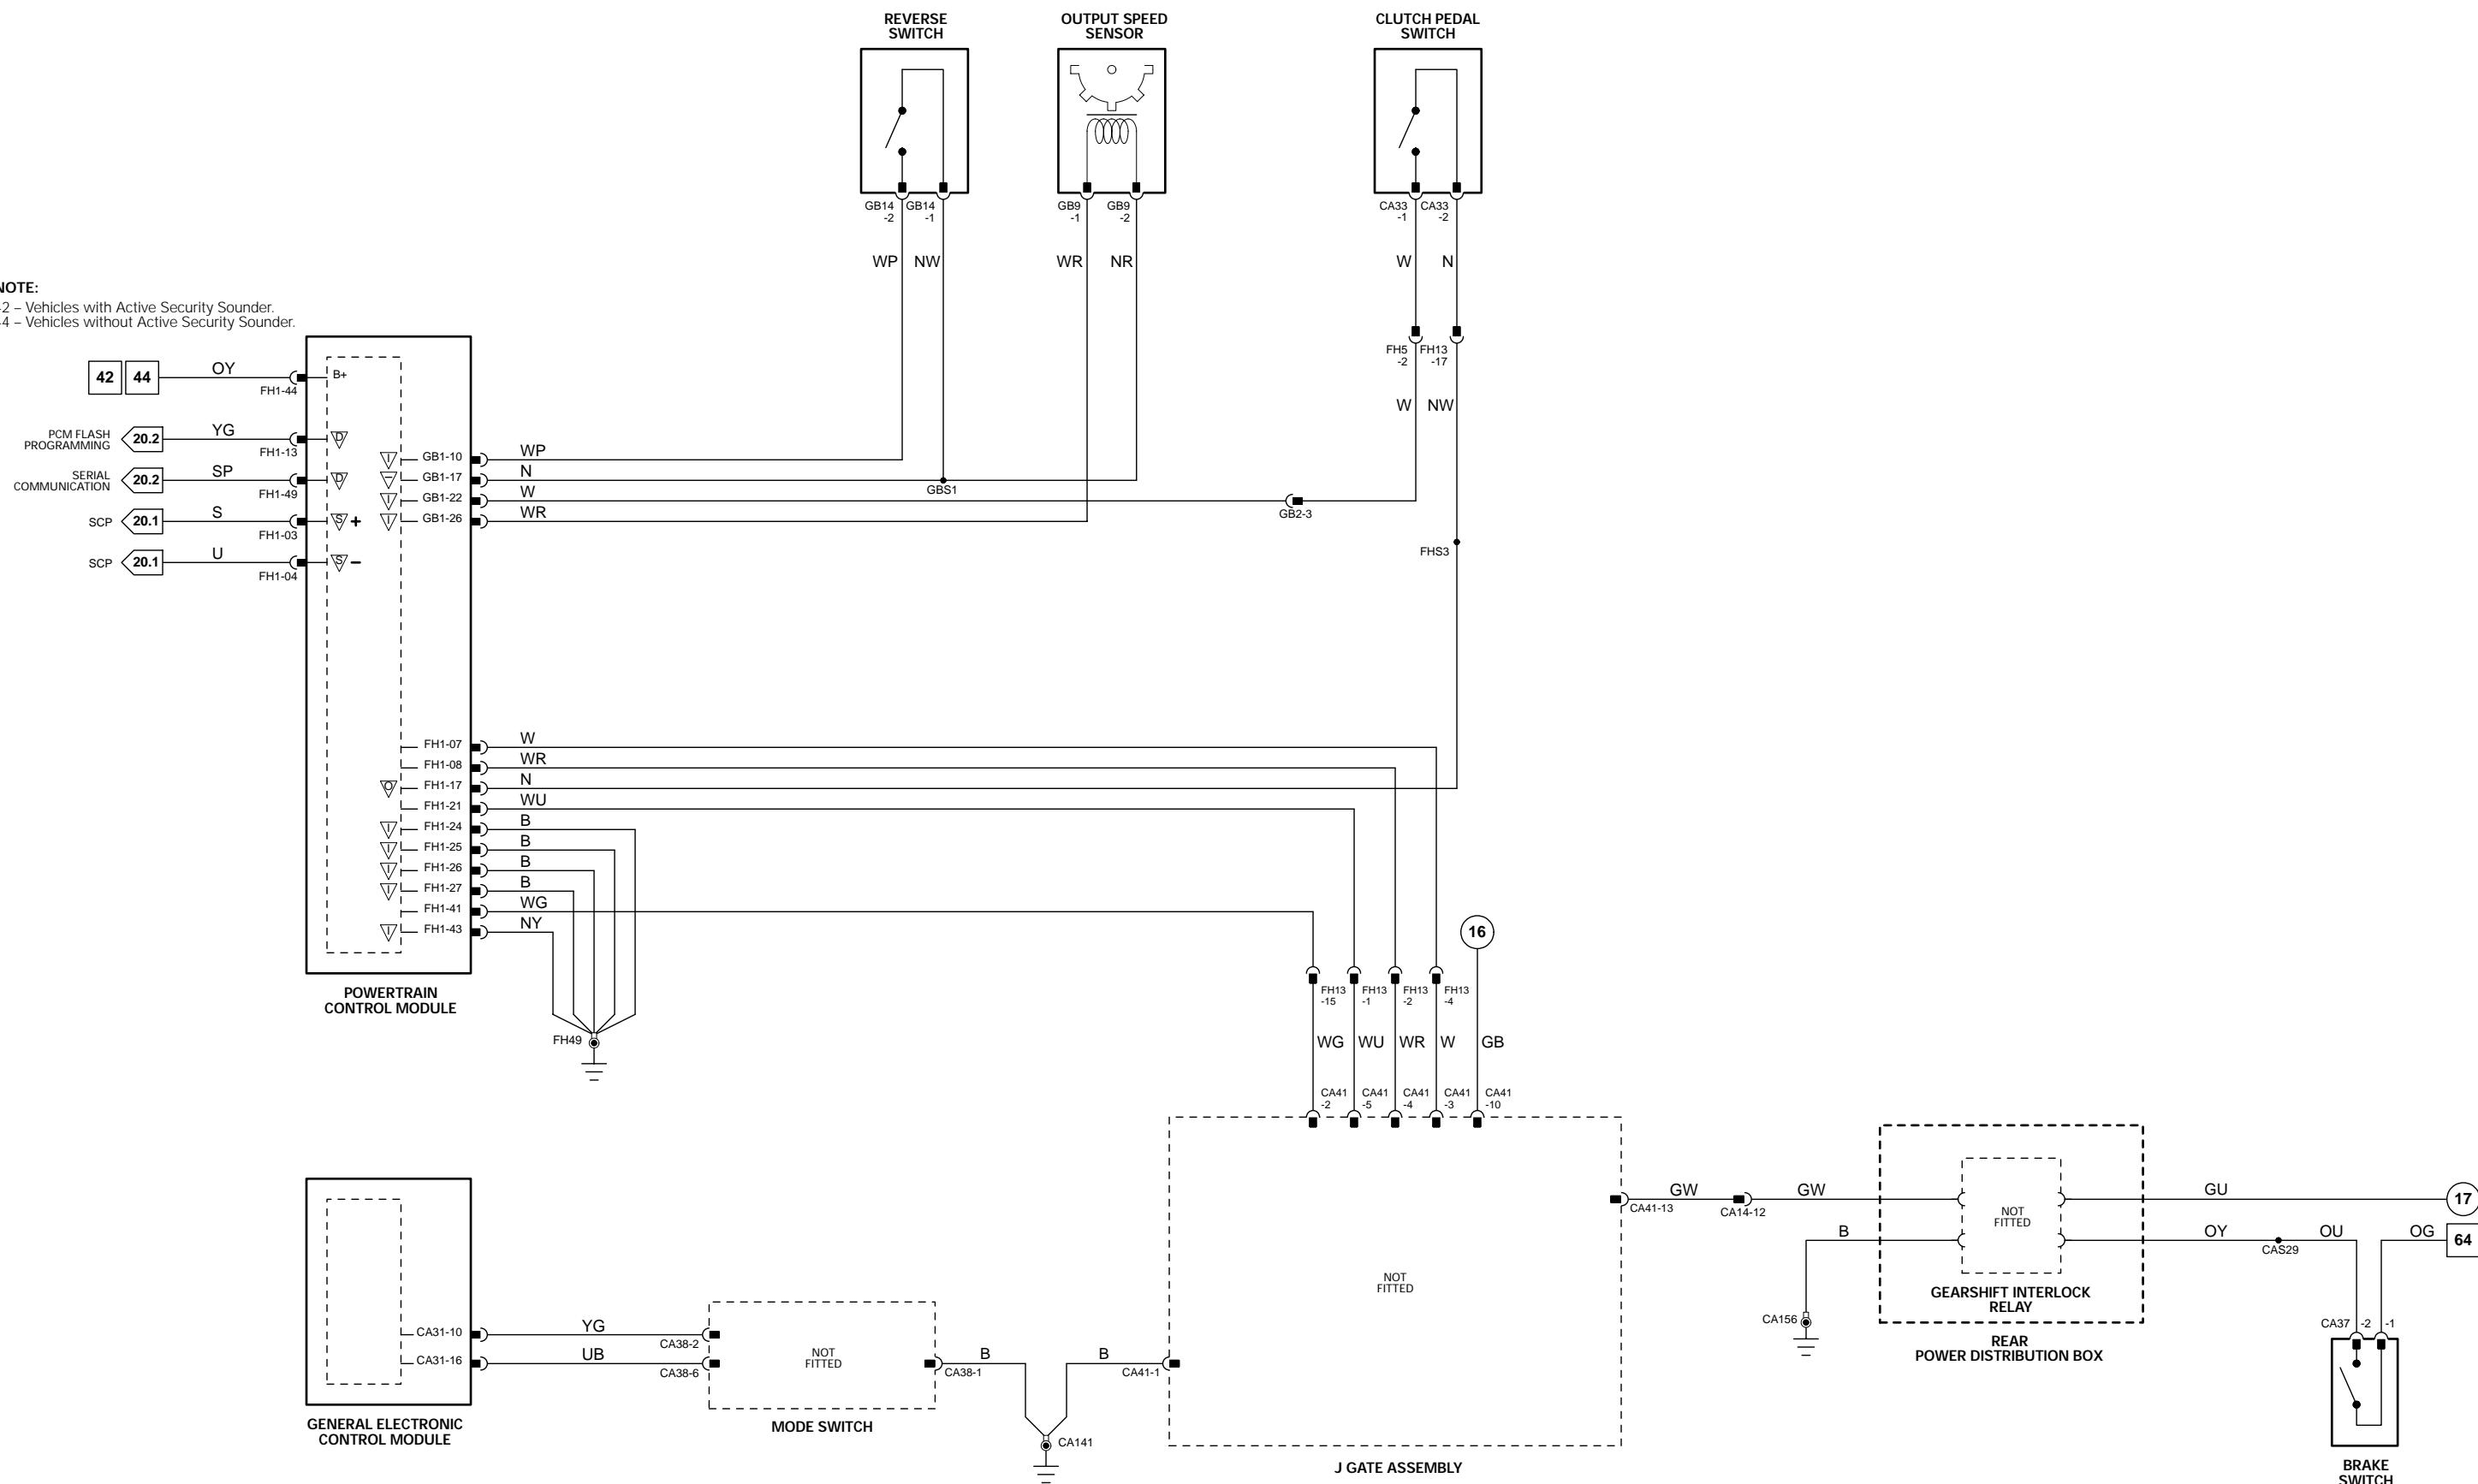

Dynamic Stability Control Control Module

Pin	Description
SS	FH51-1 LH FRONT WHEEL SPEED SENSOR REFERENCE VOLTAGE SUPPLY
I	FH51-2 LH FRONT WHEEL SPEED SENSOR
I	FH51-4 LH REAR WHEEL SPEED SENSOR
SS	FH51-5 LH REAR WHEEL SPEED SENSOR REFERENCE VOLTAGE SUPPLY
I	FH51-6 ACTIVE BRAKE BOOSTER RELEASE SWITCH (NORMALLY CLOSED)
I	FH51-7 ACTIVE BRAKE BOOSTER RELEASE SWITCH (NORMALLY OPEN)
O	FH51-8 ACTIVE BRAKE BOOSTER SOLENOID
I	FH51-9 TRACTION CONTROL ON / OFF SWITCH
SS	FH51-10 PRIMARY BRAKE PRESSURE SENSOR REFERENCE VOLTAGE
SG	FH51-11 YAW VELOCITY SENSOR SIGNAL GROUND
SS	FH51-12 SECONDARY BRAKE PRESSURE SENSOR REFERENCE VOLTAGE
SG	FH51-13 LATERAL ACCELEROMETER REFERENCE GROUND
I	FH51-14 STEERING ANGLE RATE SENSOR REFERENCE VOLTAGE
I	FH51-15 GROUND SUPPLY
I	FH51-16 BATTERY POWER SUPPLY
S	FH51-17 SCP +
D	FH51-18 SERIAL COMMUNICATIONS
S	FH51-19 SCP -
O	FH51-20 PCM BRAKE ON / OFF SIGNAL
I	FH51-21 BRAKE ON / OFF SWITCH
I	FH51-22 IGNITION SWITCHED POWER SUPPLY
O	FH51-24 ACTIVE BRAKE BOOSTER SOLENOID
I	FH51-26 PRIMARY BRAKE PRESSURE SENSOR FEEDBACK
I	FH51-27 YAW VELOCITY SENSOR FEEDBACK
I	FH51-28 SECONDARY BRAKE PRESSURE SENSOR FEEDBACK
I	FH51-29 LATERAL ACCELEROMETER FEEDBACK
SG	FH51-30 STEERING ANGLE RATE SENSOR REFERENCE GROUND
I	FH51-32 GROUND SUPPLY
I	FH51-33 PRESSURE PUMP BATTERY POWER SUPPLY
I	FH51-34 RH FRONT WHEEL SPEED SENSOR
SS	FH51-35 RH FRONT WHEEL SPEED SENSOR REFERENCE VOLTAGE SUPPLY
I	FH51-37 RH REAR WHEEL SPEED SENSOR
SS	FH51-38 RH REAR WHEEL SPEED SENSOR REFERENCE VOLTAGE SUPPLY
SS	FH51-40 ACTIVE BRAKE BOOSTER RELEASE SWITCH REFERENCE VOLTAGE
SG	FH51-43 PRIMARY BRAKE PRESSURE SENSOR REFERENCE GROUND
O	FH51-44 YAW VELOCITY SENSOR REFERENCE VOLTAGE
SG	FH51-45 SECONDARY BRAKE PRESSURE SENSOR REFERENCE GROUND
SG	FH51-46 LATERAL ACCELEROMETER REFERENCE VOLTAGE
I	FH51-47 STEERING ANGLE RATE SENSOR FEEDBACK

Instrument Pack

Pin	Description
S	FC15-15 SCP +
S	FC16-16 SCP -

Rear Electronic Control Module

Pin	Description
S	CA102-1 SCP +
S	CA102-2 SCP -
I	CA102-13 BRAKE ON / OFF SIGNAL

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

Active	Inactive
B+	B+
82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)	
B+	B+
5V	GROUND
GROUND	5V
2.7V (PWM)	
B+ (MOMENTARY)	GROUND
5V	5V
GROUND	GROUND
5V	5V
5V	5V
2 – 1600 Hz	
ENCODED COMMUNICATIONS	
2 – 1600 Hz	
GROUND	B+
BRAKE ON: B+	BRAKE OFF: GROUND
B+	GROUND
5V	5V
0 – 5V	
2.5V = AT REST	
0 – 5V	
2.5V = AT REST	
GROUND	GROUND
GROUND	GROUND
B+	B+
82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)	
B+	B+
82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)	
B+	B+
5V	5V
GROUND	GROUND
5V	5V
5V	5V
5V	5V
GROUND (PULSED)	

COMPONENTS

Component	Connector(s)	Connector Description	Location
ACCELEROMETER – REAR LATERAL	CA39	3-WAY / GREY	TRANSMISSION TUNNEL
ACTIVE BRAKE BOOSTER	FH56	6-WAY / BLACK	ON BRAKE SERVO
BRAKE PRESSURE SENSOR – PRIMARY	FH54	3-WAY / BLACK	ON BRAKE FLUID RESERVOIR
BRAKE PRESSURE SENSOR – SECONDARY	FH55	3-WAY / BLACK	ON BRAKE FLUID RESERVOIR
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
DYNAMIC STABILITY CONTROL CONTROL MODULE	FH51	47-WAY / GREY	ADJACENT TO ABS PUMP
IGNITION SWITCH	FC18	8-WAY / BLACK	STEERING COLUMN
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
TRACTION CONTROL SWITCH	CA45	8-WAY / BLUE	CENTER CONSOLE
WHEEL SPEED SENSOR – LH FRONT	FH19	2-WAY / BLACK	WHEEL HUB, LH FRONT
WHEEL SPEED SENSOR – LH REAR	CV3	2-WAY / BLACK	WHEEL HUB, LH REAR
WHEEL SPEED SENSOR – RH FRONT	FH44	2-WAY / BLACK	WHEEL HUB, RH FRONT
WHEEL SPEED SENSOR – RH REAR	CV6	2-WAY / BLACK	WHEEL HUB, RH REAR
YAW VELOCITY SENSOR	CA40	3-WAY / BLACK	TRANSMISSION TUNNEL

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CV1	6-WAY / GREY / CABIN HARNESS TO CANISTER CLOSE VALVE HARNESS	ABOVE REAR AXLE ASSEMBLY
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FC5	12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE

GROUNDS

Ground	Ground Description	Location
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

Active	Inactive
2 – 1600 Hz	
2 – 1600 Hz	
B+ = BRAKE APPLIED	GROUND

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

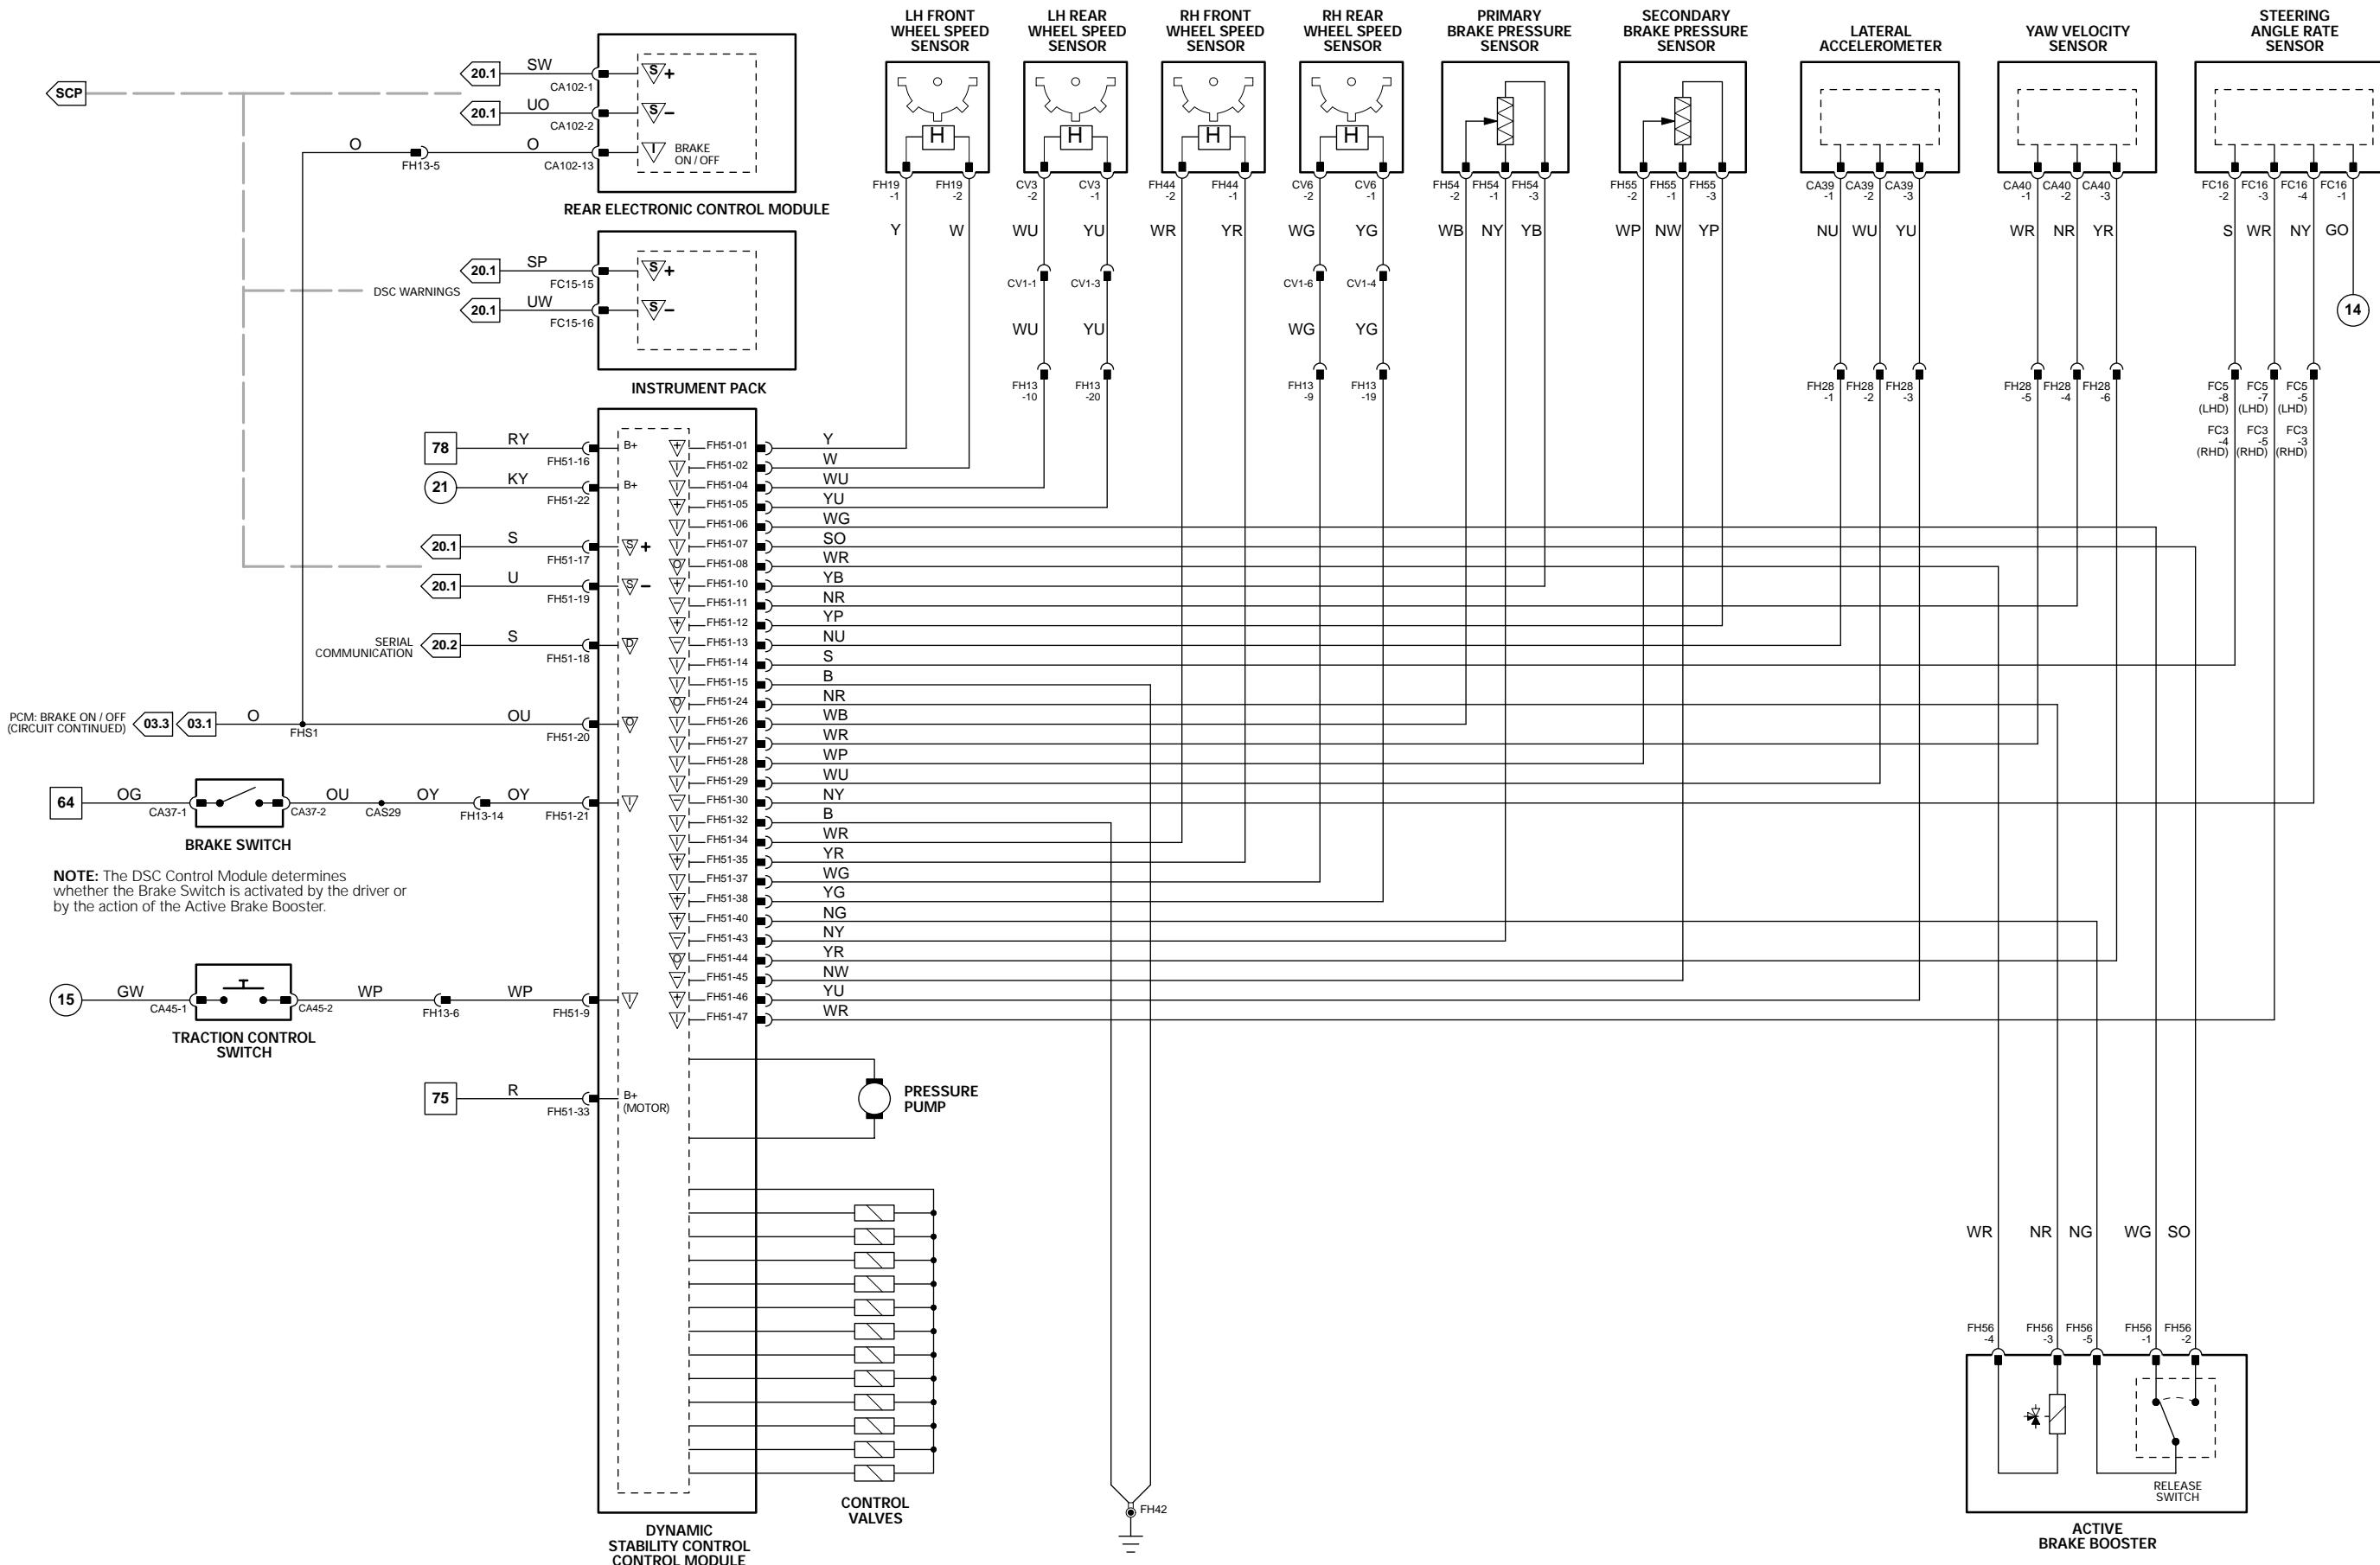

ABS / Traction Control Control Module

Pin	Description
I FH33-2	BRAKE ON / OFF SWITCH
I FH33-3	RH FRONT WHEEL SPEED SENSOR
SS FH33-4	RH FRONT WHEEL SPEED SENSOR REFERENCE SUPPLY
SS FH33-5	RH REAR WHEEL SPEED SENSOR REFERENCE SUPPLY
I FH33-6	RH REAR WHEEL SPEED SENSOR
I FH33-7	GROUND SUPPLY
I FH33-8	PRESSURE PUMP BATTERY POWER SUPPLY
S FH33-9	SCP -
S FH33-10	SCP+
I FH33-11	TRACTION CONTROL ON / OFF SWITCH
I FH33-12	LH FRONT WHEEL SPEED SENSOR
SS FH33-13	LH FRONT WHEEL SPEED SENSOR REFERENCE SUPPLY
I FH33-14	IGNITION SWITCHED POWER SUPPLY
I FH33-15	LH REAR WHEEL SPEED SENSOR
SS FH33-16	LH REAR WHEEL SPEED SENSOR REFERENCE SUPPLY
D FH33-17	SERIAL DATA LINK
I FH33-18	GROUND SUPPLY
I FH33-19	BATTERY POWER SUPPLY

Instrument Pack

Pin	Description
Active	
B+	2 – 1600 Hz
B+	2 – 1600 Hz
Inactive	
B+	(MOMENTARY)
B+	82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)
B+	82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)
B+	82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)
B+	82 Hz @ 10 mph: 164 Hz @ 20 mph (0.8 – 1.5 V)
B+	ENCODED COMMUNICATIONS
B+	GROUND
B+	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
ABS/TC CONTROL MODULE	FH33	25-WAY / BLACK	ADJACENT TO ABS PUMP
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
INSTRUMENT PACK	FC14 FC15 FC63	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	FASCIA FASCIA FASCIA
STEERING ANGLE RATE SENSOR	FC16	4-WAY / GREY	STEERING COLUMN
TRACTION CONTROL SWITCH	CA45	8-WAY / BLUE	CENTER CONSOLE
WHEEL SPEED SENSOR – LH FRONT	FH19	2-WAY / BLACK	WHEEL HUB, LH FRONT
WHEEL SPEED SENSOR – LH REAR	CV3	2-WAY / BLACK	WHEEL HUB, LH REAR
WHEEL SPEED SENSOR – RH FRONT	FH44	2-WAY / BLACK	WHEEL HUB, RH FRONT
WHEEL SPEED SENSOR – RH REAR	CV6	2-WAY / BLACK	WHEEL HUB, RH REAR

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CV1	6-WAY / GREY / CABIN HARNESS TO CANISTER CLOSE VALVE HARNESS	ABOVE REAR AXLE ASSEMBLY
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FC5	12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX

GROUNDS

Ground	Ground Description	Location
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data


I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

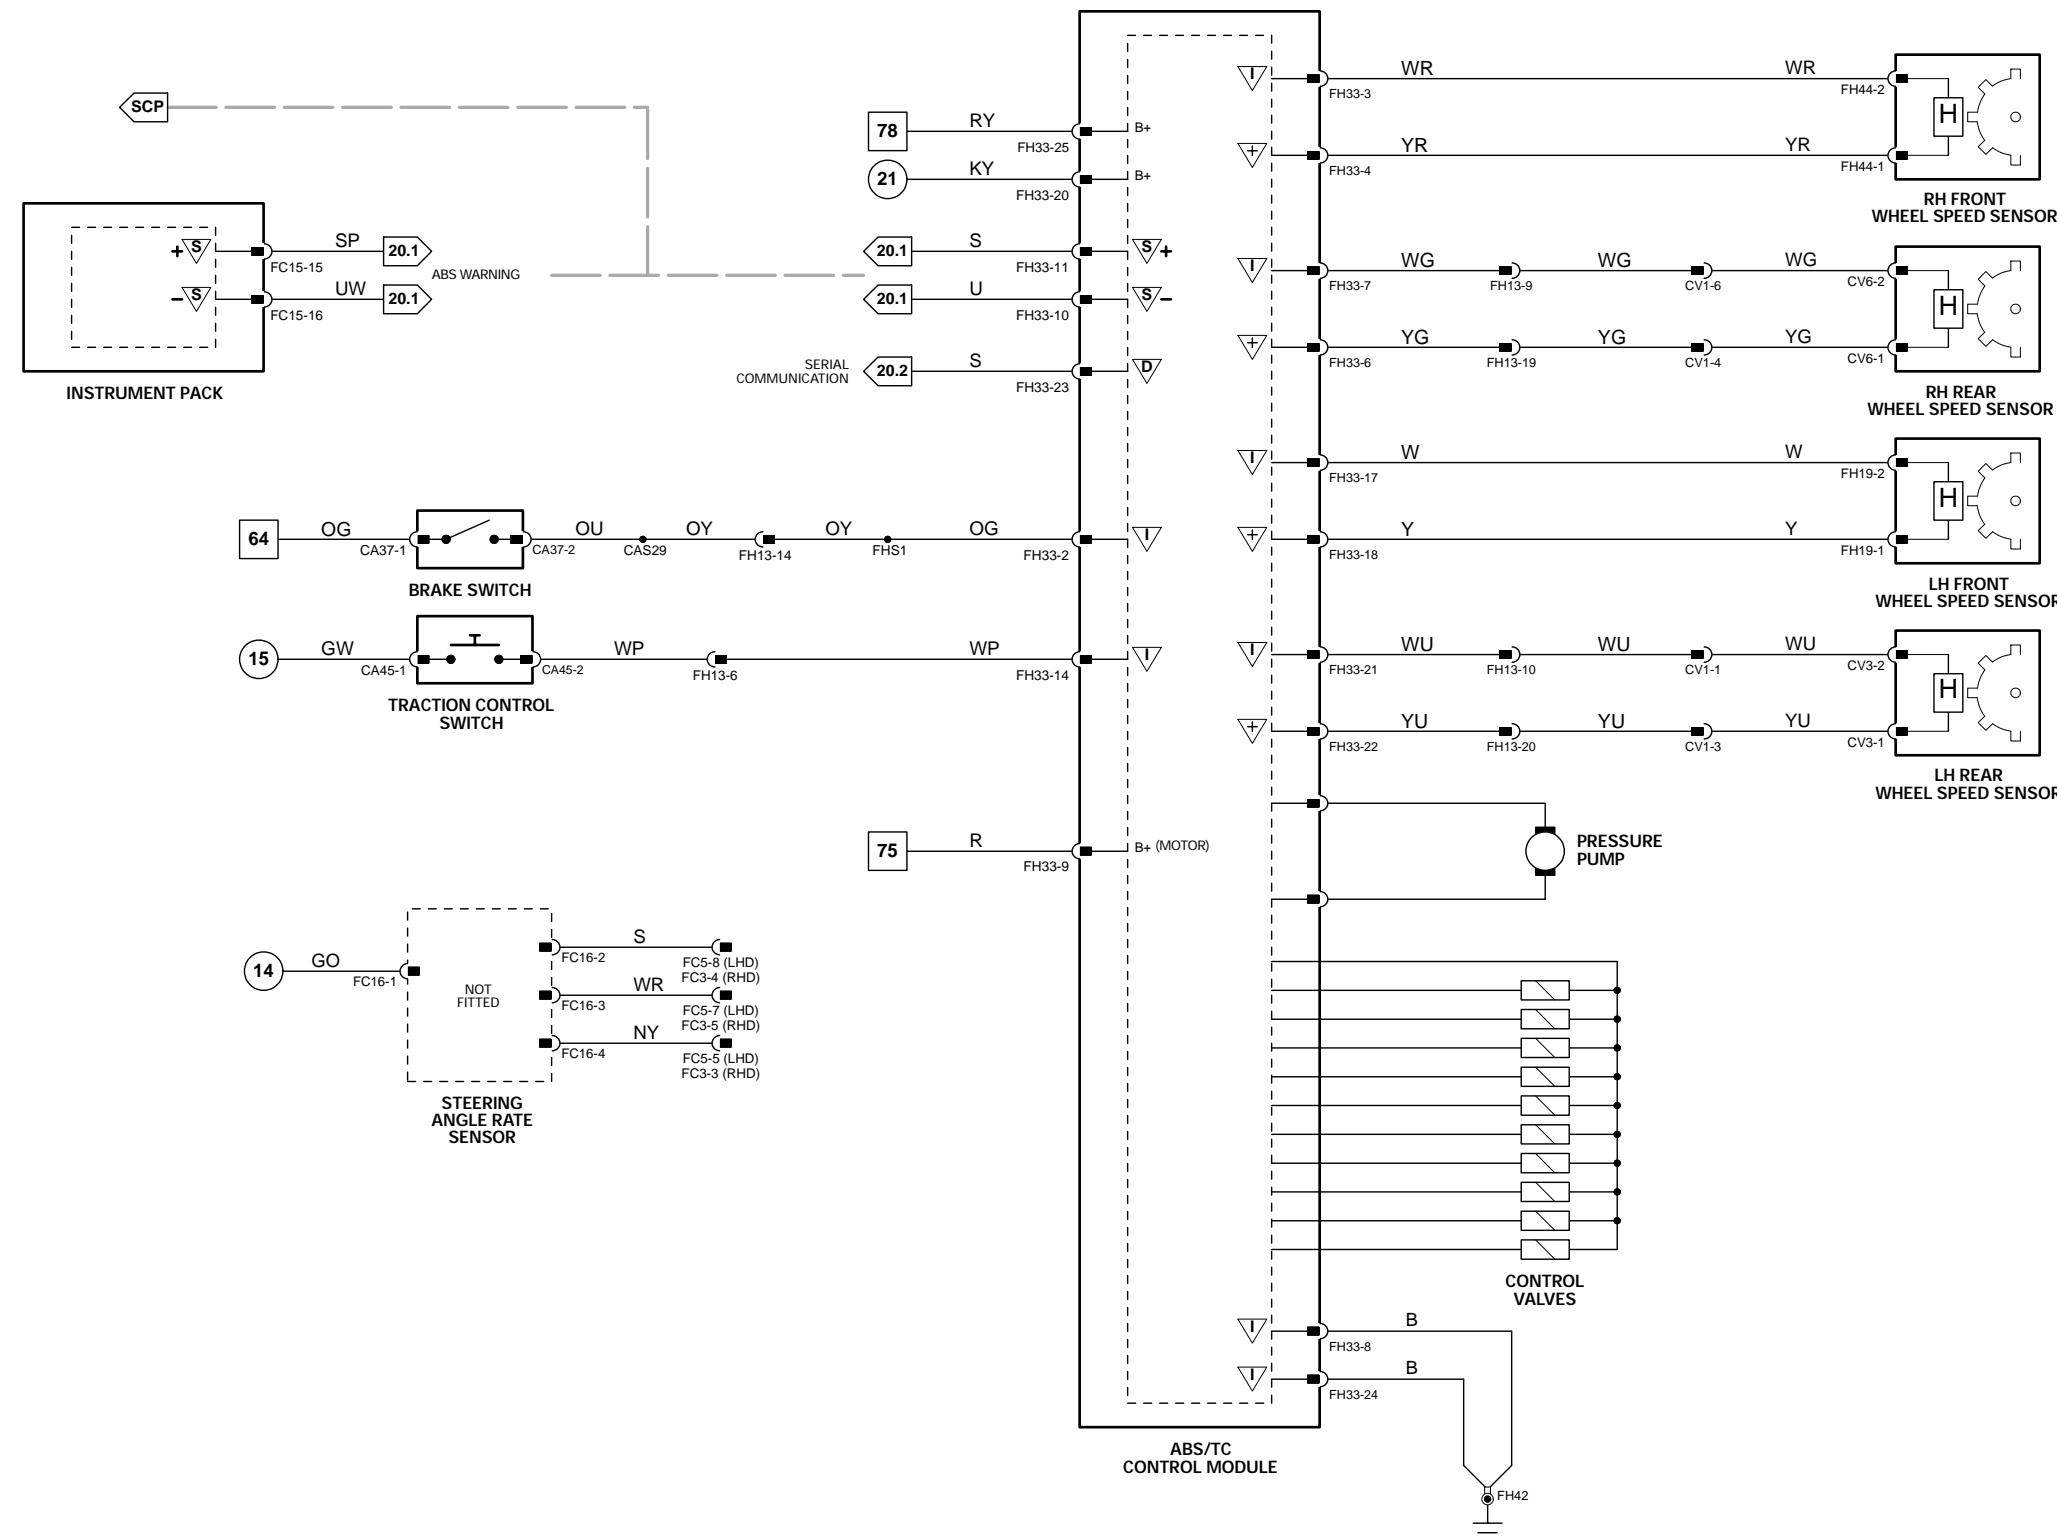

ABS / Traction Control Control Module

Pin	Description	Active	Inactive
S FH33-10	SCP -	2 – 1600 Hz	
S FH33-11	SCP +	2 – 1600 Hz	

Adaptive Damping Control Module

Pin	Description	Active	Inactive
O CA11-1	RH REAR DAMPER SUPPLY VOLTAGE	B+	B+
O CA11-2	RH REAR DAMPER ACTIVATE	GROUND	B+
O CA11-3	LH REAR DAMPER SUPPLY VOLTAGE	B+	B+
O CA11-4	LH REAR DAMPER ACTIVATE	GROUND	B+
O CA11-5	LH FRONT DAMPER ACTIVATE	GROUND	B+
O CA11-6	LH FRONT DAMPER SUPPLY VOLTAGE	B+	B+
O CA11-7	RH FRONT DAMPER ACTIVATE	GROUND	B+
O CA11-8	RH FRONT DAMPER SUPPLY VOLTAGE	B+	B+
SG CA11-9	ACCELEROMETER COMMON REFERENCE GROUND	GROUND	GROUND
I CA11-10	GROUND SUPPLY	GROUND	GROUND
I CA11-12	IGNITION SWITCHED POWER SUPPLY	B+	GROUND
S CA11-13	SCP -	2 – 1600 Hz	2 – 1600 Hz
S CA11-14	SCP +	2 – 1600 Hz	B+
I CA11-16	BATTERY POWER SUPPLY	B+	B+
D CA12-4	SERIAL COMMUNICATIONS	ENCODED COMMUNICATIONS	5V
SS CA12-9	ACCELEROMETER COMMON REFERENCE VOLTAGE	5V	<0.2V OR >4.8
I CA12-10	REAR VERTICAL ACCELEROMETER FEEDBACK	<0.2V OR >4.8	2.3 – 2.7V = FIRM
I CA12-11	LATERAL ACCELEROMETER FEEDBACK	<0.2V OR >4.8	2.3 – 2.7V = FIRM
I CA12-12	FRONT VERTICAL ACCELEROMETER FEEDBACK	<0.2V OR >4.8	2.3 – 2.7V = FIRM

Dynamic Stability Control Control Module

Pin	Description	Active	Inactive
S FH51-17	SCP +	2 – 1600 Hz	
S FH51-19	SCP -	2 – 1600 Hz	

Instrument Pack

Pin	Description	Active	Inactive
S FC15-15	SCP +	2 – 1600 Hz	
S FC15-16	SCP -	2 – 1600 Hz	

Powertrain Control Module

Pin	Description	Active	Inactive
S FH1-3	SCP +	2 – 1600 Hz	
S FH1-4	SCP -	2 – 1600 Hz	

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
ABS/TC CONTROL MODULE	FH33	25-WAY / BLACK	ADJACENT TO ABS PUMP
ACCELEROMETER – FRONT LATERAL	FH70	3-WAY / GREY	ADJACENT TO LH FRONT SUSPENSION TURRET
ACCELEROMETER – FRONT VERTICAL	FH63	3-WAY / GREY	ADJACENT TO LH FRONT SUSPENSION TURRET
ACCELEROMETER – REAR VERTICAL	CA17	3-WAY / GREY	TRUNK, BEHIND CARPET
ADAPTIVE DAMPING CONTROL MODULE	CA11	16-WAY / BLUE	IN THE SPARE WHEEL WELL
	CA12	16-WAY / GREY	IN THE SPARE WHEEL WELL
DAMPER SOLENOID – LH FRONT	AS2L	1-WAY / BLACK	ENGINE COMPARTMENT, LH FRONT DAMPER
DAMPER SOLENOID – LH REAR	CA140	1-WAY / BLACK	LH REAR DAMPER
DAMPER SOLENOID – RH FRONT	AS2R	1-WAY / BLACK	ENGINE COMPARTMENT, RH FRONT DAMPER
DAMPER SOLENOID – RH REAR	CA111	1-WAY / BLACK	RH REAR DAMPER
DYNAMIC STABILITY CONTROL CONTROL MODULE	FH51	47-WAY / GREY	ADJACENT TO ABS PUMP
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
POWERTRAIN CONTROL MODULE	FH1	58-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	GB1	32-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	PI1	60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS


Connector	Connector Description	Location
CA98	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ADJACENT TO RECM, RH SIDE
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH91	3-WAY / BLACK / FORWARD HARNESS TO ADAPTIVE DAMPING LINK LEAD	ADJACENT TO SUSPENSION TURRET, RH SIDE
FH92	3-WAY / BLACK / FORWARD HARNESS TO ADAPTIVE DAMPING LINK LEAD	ADJACENT TO SUSPENSION TURRET, LH SIDE

GROUNDS

Ground	Ground Description	Location
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

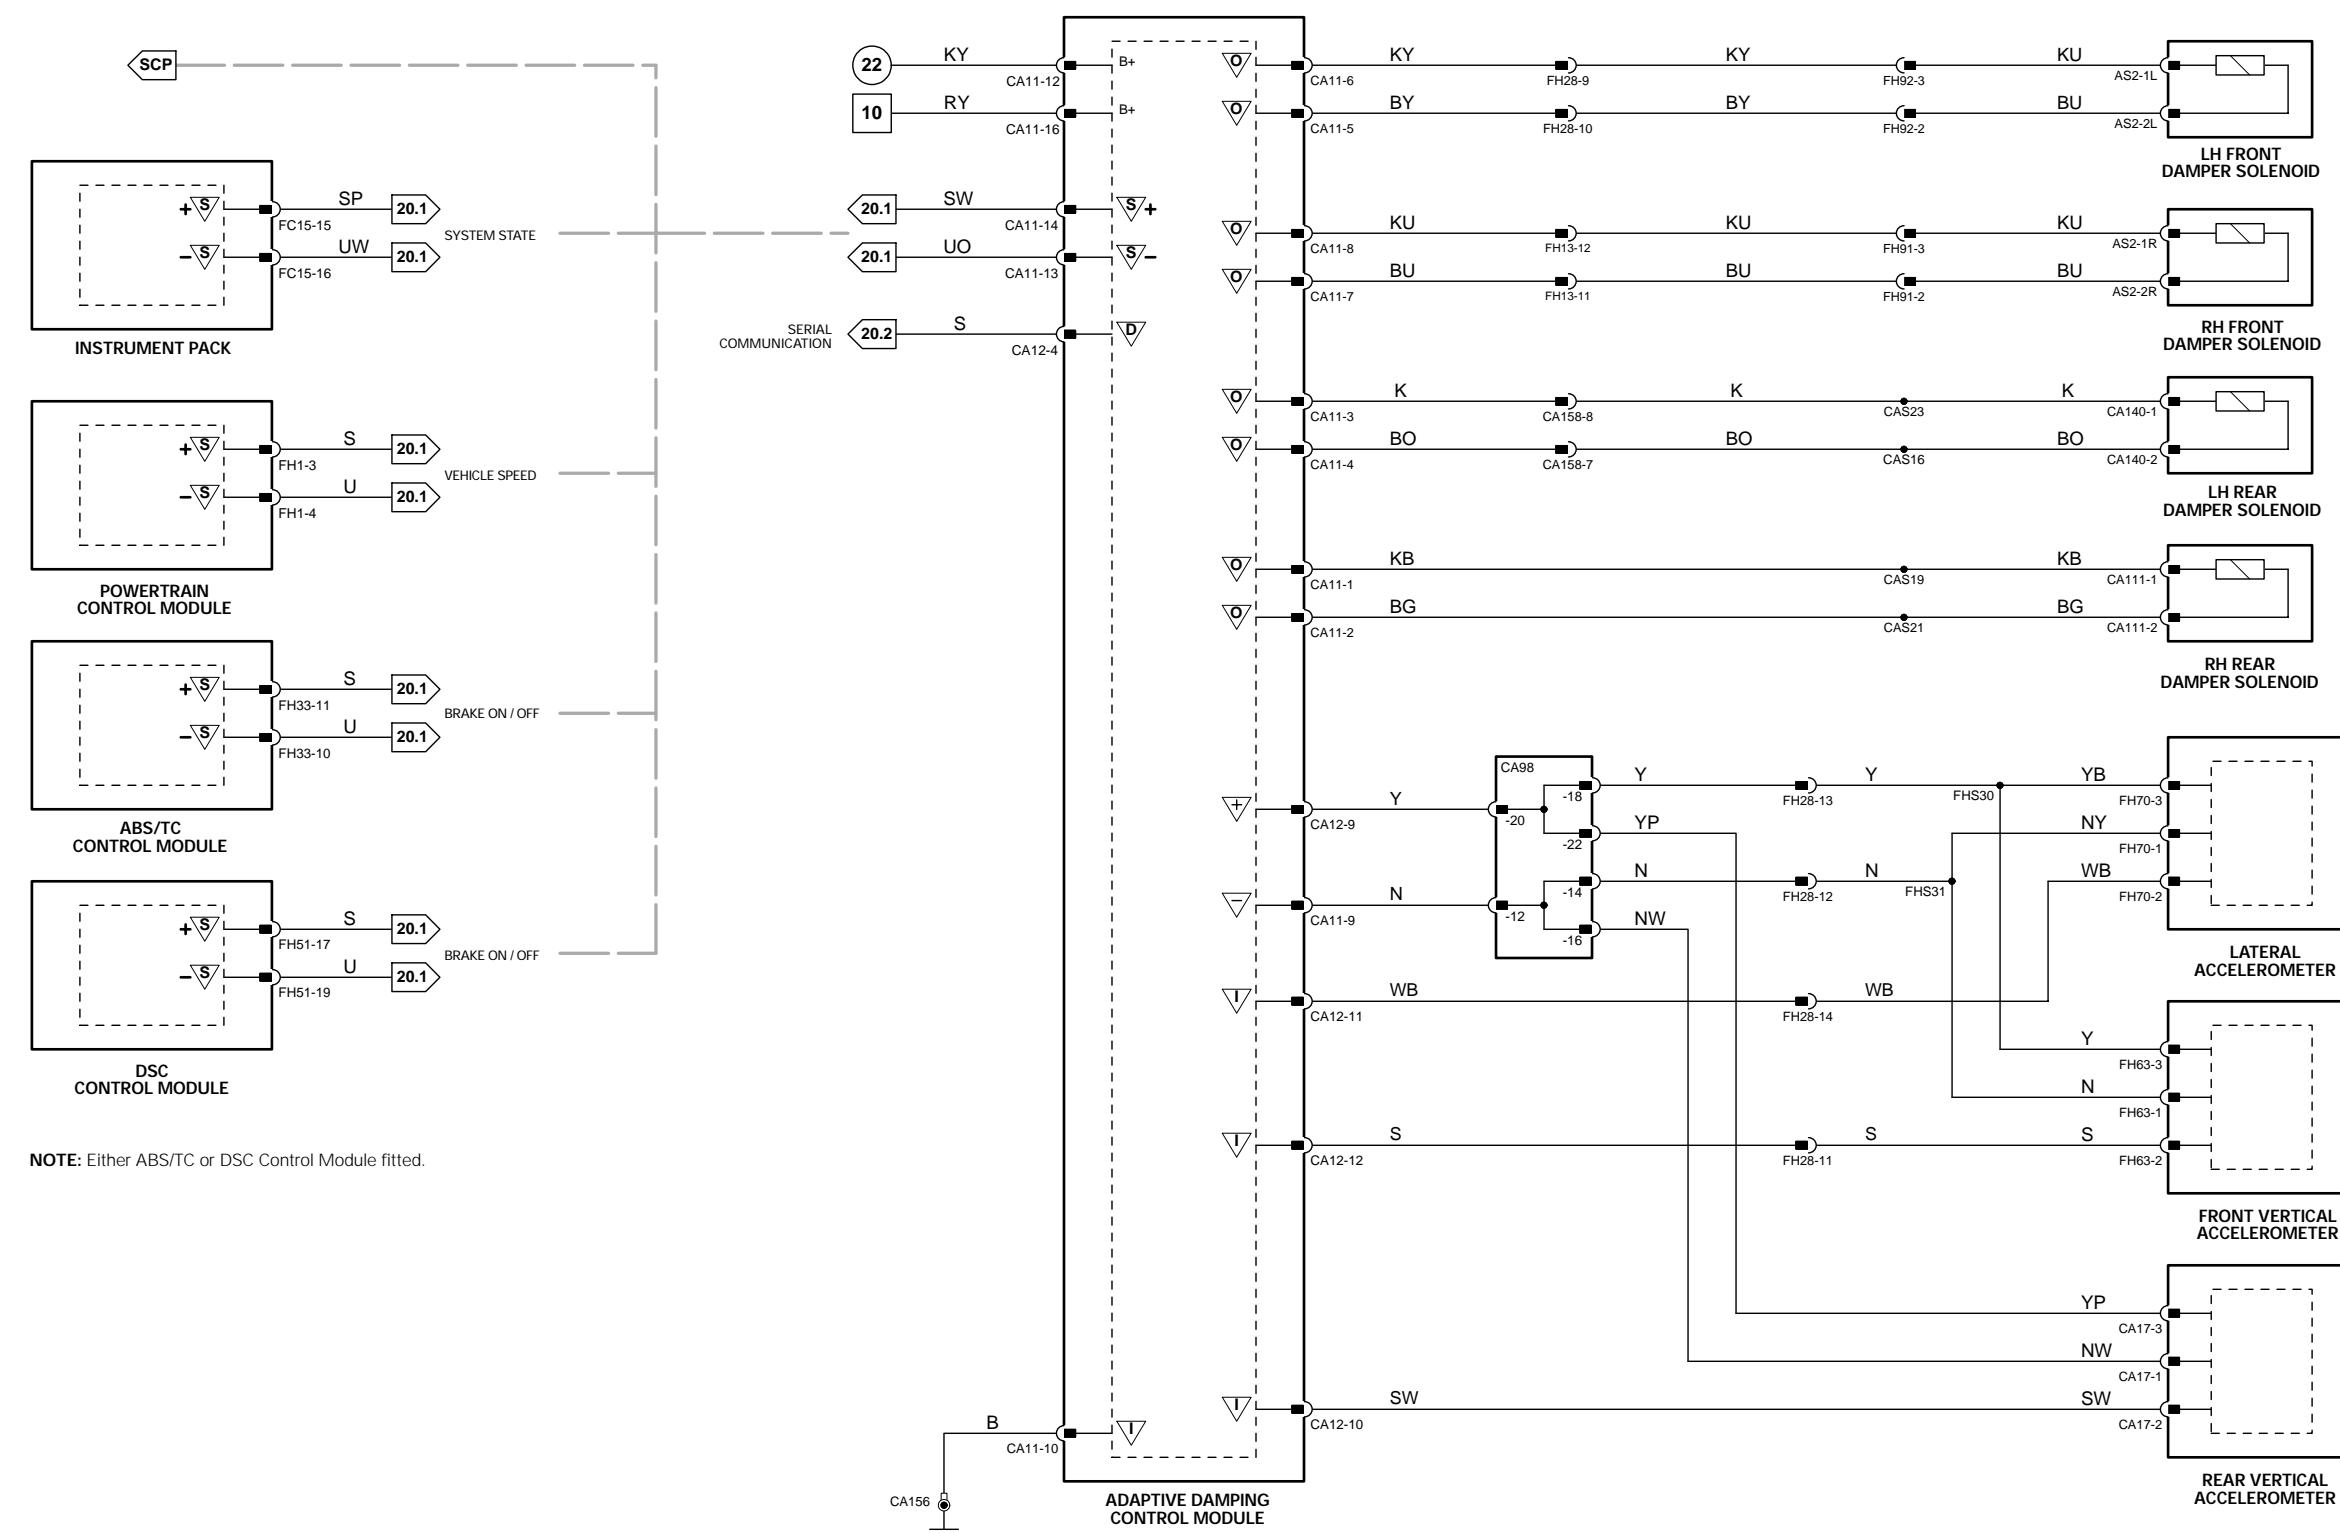

Air Conditioning Control Module

	Pin	Description	Active	Inactive
I	FC27-1	DEFROST MODE ACTUATOR POSITION FEEDBACK	2.9V = OPEN	2.5V = CLOSED
I	FC27-2	COLD AIR BY-PASS ACTUATOR POSITION FEEDBACK	0.68V = HIGH TEMPERATURE; 3.89V = LOW TEMPERATURE	
I	FC27-3	PANEL MODE ACTUATOR POSITION FEEDBACK	2.2V = OPEN	1.1V = CLOSED
O	FC27-5	PASSENGER SIDE DUAL COOLANT CONTROL VALVE CONTROL DRIVE	GROUND = HIGH TEMPERATURE; PWM (GROUND) = VARIABLE TEMPERATURE; B+ = LOW TEMPERATURE	
O	FC27-6	DRIVER SIDE DUAL COOLANT CONTROL VALVE CONTROL DRIVE	GROUND = HIGH TEMPERATURE; PWM (GROUND) = VARIABLE TEMPERATURE; B+ = LOW TEMPERATURE	
O	FC27-8	BLOWER MOTOR CONTROLLER HIGH SPEED RELAY DRIVE	B+ = HIGH SPEED; < 0.2V = LOW SPEED	
O	FC27-9	RECIRCULATION ACTUATOR DRIVE - CLOSE	B+	GROUND
O	FC27-10	RECIRCULATION ACTUATOR DRIVE - OPEN	B+	GROUND
O	FC27-11	COLD AIR BY-PASS ACTUATOR DRIVE - CLOSE	B+	GROUND
O	FC27-12	COLD AIR BY-PASS ACTUATOR DRIVE - OPEN	B+	GROUND
O	FC27-13	DEFROST MODE ACTUATOR DRIVE - OPEN	B+	GROUND
SS	FC27-14	IN CAR TEMPERATURE SENSOR REFERENCE VOLTAGE	5V (NOMINAL)	5V (NOMINAL)
I	FC27-15	RECIRCULATION ACTUATOR POSITION FEEDBACK	0.3V = OPEN	3.6V = CLOSED
I	FC27-16	FLOOR MODE ACTUATOR POSITION FEEDBACK	3.4V = OPEN	1.2V = CLOSED
SG	FC27-17	ACTUATORS COMMON REFERENCE GROUND	GROUND	GROUND
O	FC27-18	AUXILIARY COOLANT PUMP RELAY ACTIVATE	GROUND	B+
O	FC27-19	BLOWER MOTOR RELAY ACTIVATE	GROUND	B+
O	FC27-20	HEATED WIPER PARK OR HEATED WINDSHIELD RELAY(S) ACTIVATE	GROUND	B+
O	FC27-22	FLOOR MODE ACTUATOR DRIVE - OPEN	GROUND	GROUND
O	FC27-23	FLOOR MODE ACTUATOR DRIVE - CLOSE	GROUND	GROUND
O	FC27-24	PANEL MODE ACTUATOR DRIVE - OPEN	GROUND	GROUND
O	FC27-25	PANEL MODE ACTUATOR DRIVE - CLOSE	GROUND	GROUND
O	FC27-26	DEFROST MODE ACTUATOR DRIVE - CLOSE	GROUND	GROUND
S	FC28-1	SCP -	2 - 1600 Hz	
I	FC28-2	GROUND SUPPLY	GROUND	GROUND
I	FC28-3	IGNITION SWITCHED POWER SUPPLY	B+	GROUND
O	FC28-4	ENGINE COOLING FAN REQUEST	GROUND = ON	B+ = OFF
I	FC28-5	BLOWER MOTOR CONTROLLER FEEDBACK	0.3V = HIGH	9V = LOW
I	FC28-6	PASSENGER DISCHARGE AIR TEMPERATURE SENSOR FEEDBACK	3.25V @ 0 °C (32 °F) DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I	FC28-7	DUAL SOLAR SENSOR FEEDBACK - LH	4.5V = COVERED	4.4V = AMBIENT LIGHT
SG	FC28-8	AMBIENT TEMPERATURE SENSOR GROUND	GROUND	GROUND
I	FC28-9	IN CAR TEMPERATURE SENSOR FEEDBACK	3.25V @ 0 °C (32 °F) DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I	FC28-10	EVAPORATOR TEMPERATURE SENSOR FEEDBACK	3.25V @ 0 °C (32 °F) DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
SG	FC28-11	ACTUATORS COMMON REFERENCE GROUND	GROUND	GROUND
S	FC28-12	SCP +	2 - 1600 Hz	
I	FC28-14	BATTERY POWER SUPPLY	B+	B+
O	FC28-15	BLOWER MOTOR CONTROLLER DRIVE	0.7V = HIGH	1.2V = LOW
SG	FC28-16	EVAPORATOR DISCHARGE TEMPERATURE SENSOR REFERENCE GROUND	GROUND	GROUND
I	FC28-17	AMBIENT TEMPERATURE SENSOR FEEDBACK	3.25V @ 0 °C (32 °F) DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
I	FC28-18	DRIVER DISCHARGE AIR TEMPERATURE SENSOR FEEDBACK	3.25V @ 0 °C (32 °F) DECREASING VOLTAGE WITH TEMPERATURE INCREASE	
SS	FC28-19	SENSOR COMMON REFERENCE VOLTAGE	5V (NOMINAL)	5V (NOMINAL)
I	FC28-20	DUAL SOLAR SENSOR FEEDBACK - RH	4.5V = COVERED	4.4V = AMBIENT LIGHT
SS	FC28-22	ACTUATORS COMMON REFERENCE VOLTAGE	5V (NOMINAL)	5V (NOMINAL)

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING CONTROL MODULE	FC27	26-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
	FC28	22-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
AMBIENT TEMPERATURE SENSOR	FH30	2-WAY / BLACK	FORWARD OF RADIATOR; RH SIDE
AUXILIARY COOLANT PUMP	FH74	1-WAY / BLACK	REARWARD OF RADIATOR
BLOWER MOTOR	AC1	5-WAY / BLACK	BLOWER HOUSING
BLOWER MOTOR	AC2	2-WAY / BLACK	BLOWER HOUSING
COOL AIR BYPASS SERVO MOTOR	AC4	6-WAY / BLACK	AIR DISTRIBUTION BOX
DEFROST MODE ACTUATOR	FC29	6-WAY / BLACK	AIR DISTRIBUTION BOX, LH SIDE
DISCHARGE TEMPERATURE SENSOR - LH	FC20	2-WAY / GREY	AIR DISTRIBUTION BOX, LH SIDE
DISCHARGE TEMPERATURE SENSOR - RH	FC30	2-WAY / GREY	AIR DISTRIBUTION BOX, RH SIDE
DUAL COOLANT CONTROL VALVE	CF4	3-WAY / BLACK	REARWARD OF RADIATOR
DUAL SOLAR SENSOR	SL1	4-WAY / BLACK	TOP OF FASCIA
EVAPORATOR DISCHARGE TEMPERATURE SENSOR	AC5	2-WAY / GREY	EVAPORATOR / HEATER CORE DUCT
FLOOR MODE ACTUATOR	FC21	6-WAY / BLACK	AIR DISTRIBUTION BOX, LH SIDE
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
IN-CAR TEMPERATURE SENSOR	FC24	2-WAY / GREEN	FASCIA DUCT, DRIVER SIDE
PANEL MODE ACTUATOR	FC22	6-WAY / BLACK	AIR DISTRIBUTION BOX, RH SIDE
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
RECIRCULATION MODE SERVO MOTOR	AC3	6-WAY / BLACK	INTAKE AIR DUCT
WINDSHIELD HEATER - LH	CA121	1-WAY / BLACK	WINDSHIELD
	CA122	1-WAY / BLACK	WINDSHIELD
WIPER PARK HEATER OR RH WINDSHIELD HEATER	CA65	1-WAY / BLACK	WINDSHIELD
	CA71	1-WAY / BLACK	WINDSHIELD

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
AC7	2-WAY / GREY / CABIN HARNESS TO AIR CONDITIONING HARNESS	ABOVE BLOWER ASSEMBLY
CF1	6-WAY / GREY / FRONT HARNESS TO COOLING FANS LINK LEAD	REARWARD OF RADIATOR
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FC5	12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FC12	22-WAY / WHITE / JUNCTION CONNECTOR	ADJACENT TO STEERING COLUMN MOTOR
FC13	22-WAY / WHITE / JUNCTION CONNECTOR	ADJACENT TO STEERING COLUMN MOTOR
FC34	16-WAY / GREEN / FASCIA HARNESS TO A/C HARNESS	LH SIDE (LHD) OR RH SIDE (RHD) OF AIR DISTRIBUTION BOX
SL3	10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD	BEHIND FASCIA END PANEL, RH SIDE

GROUNDS

Ground	Ground Description	Location
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data	PWM	Pulse Width Modulated
O	Output	S	SCP Network	B+	Battery Voltage	Hz	Frequency
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

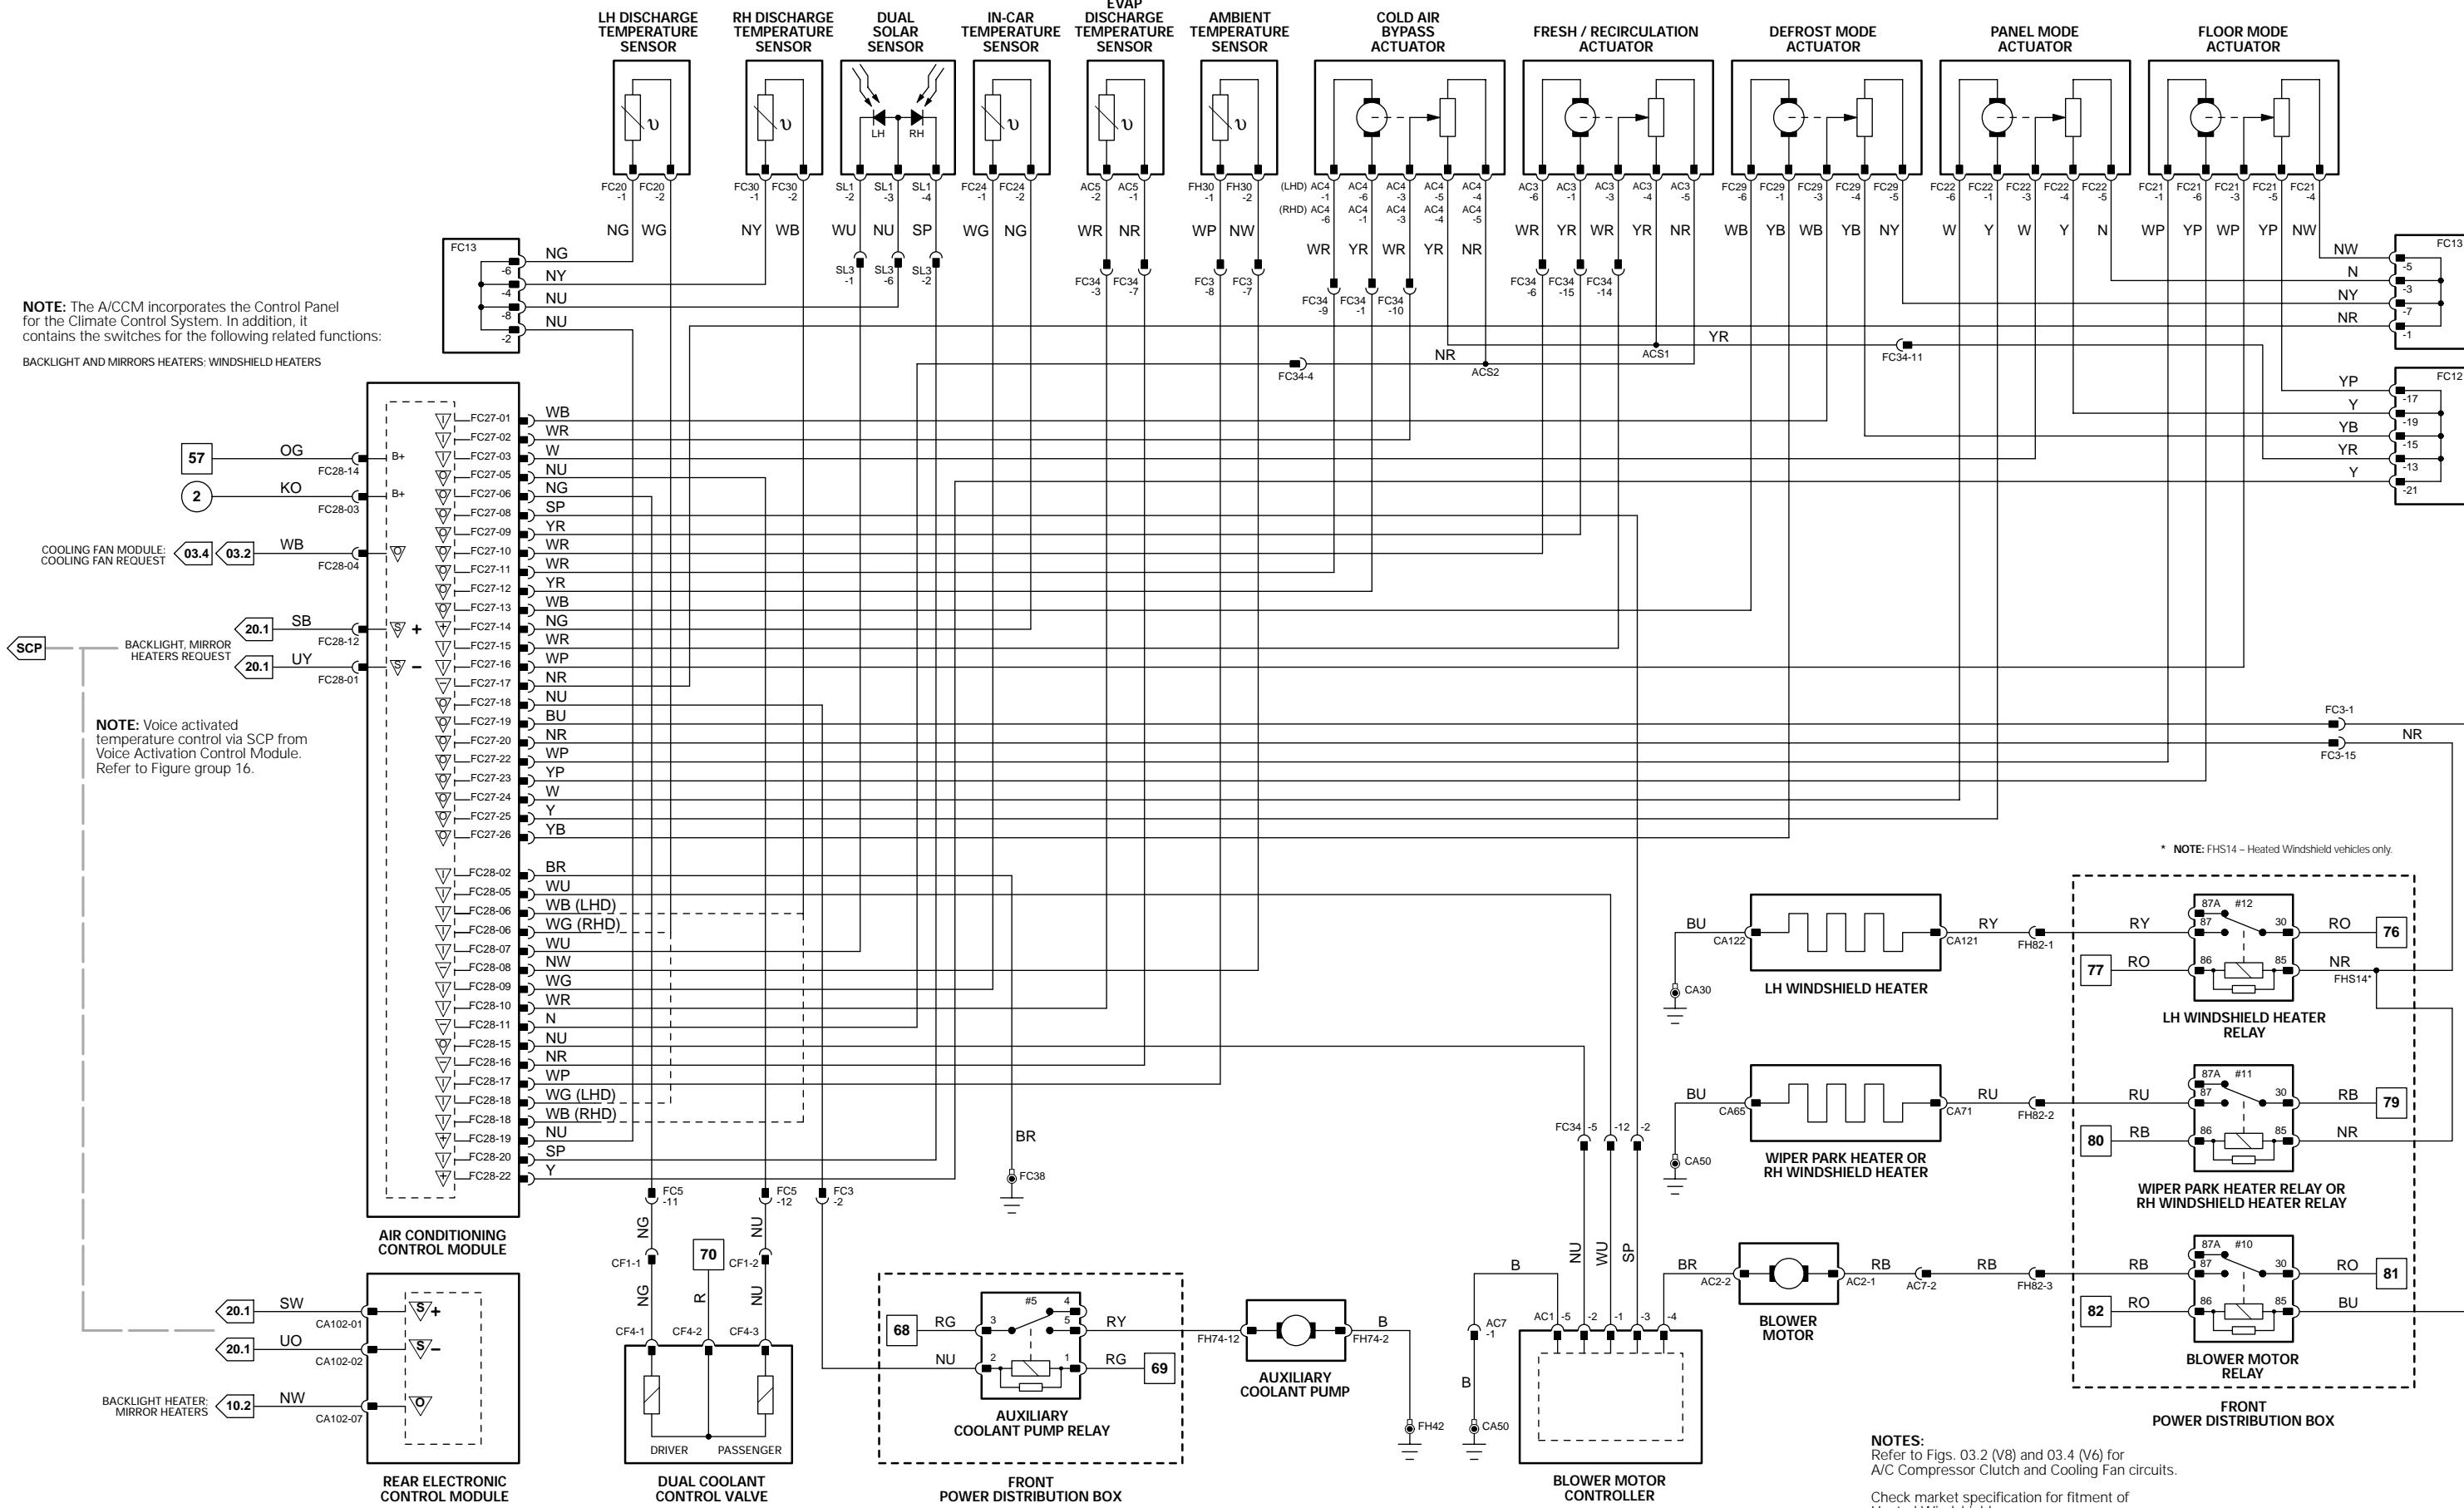


Fig. 07.1

General Electronic Control Module

Pin	Description	Active
I CA31-3	IGNITION SWITCHED POWER SUPPLY – LOGIC	B+
I CA31-19	PARKING BRAKE SWITCH	GROUND = MIL ON
I FH9-15	WASHER FLUID LEVEL SWITCH	GROUND = FULL
S FH59-1	SCP -	2 – 1600 Hz
I FH59-6	BATTERY POWER SUPPLY	B+
S FH59-7	SCP +	2 – 1600 Hz
I FH59-9	OIL PRESSURE	GROUND = MIL OFF
I FH59-11	BRAKE FLUID LEVEL SENSOR	GROUND = MIL OFF

Instrument Pack

	Pin	Description	Active
I	FC14-6	GROUND SUPPLY	GROUND
I	FC14-8	MESSAGE CENTER - 'CLEAR' AND 'MLS / KM' BUTTONS	2.3V = CLEAR; 3.7V = MLS
I	FC14-11	AIR BAG MIL IGNITION SWITCHED POWER SUPPLY	B+
I	FC14-12	MESSAGE CENTER - 'TRIP' AND 'A' / 'B' BUTTONS	2.8V = TRIP; 1.5V = A/B;
SG	FC14-13	MESSAGE CENTER SWITCH PACK REFERENCE GROUND	GROUND
I	FC14-18	SEAT BELT SWITCH	GROUND = BUCKLED
I	FC14-21	IGNITION KEY IN BARREL	B+ = IGNITION KEY IN
I	FC14-22	AIRBAG MIL	B+
I	FC15-3	BATTERY POWER SUPPLY	B+
I	FC15-6	IGNITION SWITCHED POWER SUPPLY	B+
I	FC15-13	GROUND SUPPLY	GROUND
I	FC15-14	AIRBAG AUDIBLE WARNING (REDUNDANT IF AIRBAG MIL FAILED)	B+
S	FC15-15	SCP +	2 - 1600 Hz
S	FC15-16	SCP -	2 - 1600 Hz
I	FC15-17	IGNITION SWITCHED POWER SUPPLY	B+
I	FC15-19	MAIN BEAM FLASH REQUEST	3.2V (MOMENTARY)
I	FC15-20	TURN SIGNALS / HAZARD LAMP ACTIVATE	GROUND = HAZARD; 1.5V
I	FC63-2	MESSAGE CENTER - HAZARD LAMP REQUEST	B+ (PWM) = ON

Powertrain Control Module

Pin	Description	Active
S FH1-3	SCP +	2 – 1600 Hz
S FH1-4	SCP -	2 – 1600 Hz
I FH1-47	AIRBAG DEPLOYMENT SIGNAL	ENCODED COMMUNICATION

Rear Electronic Control Module

Pin	Description	Active
I CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH	B+
I CA101-3	BATTERY POWER SUPPLY – LOGIC	B+
I CA101-15	RH FUEL LEVEL SENSOR FEEDBACK	GROUND = FULL
I CA101-16	LH FUEL LEVEL SENSOR FEEDBACK	GROUND = FULL
S CA102-1	SCP +	2 – 1600 Hz
S CA102-2	SCP -	2 – 1600 Hz
I CA102-12	GROUND	GROUND
SG CA103-23	FUEL LEVEL SENSOR COMMON REFERENCE GROUND	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data	PWM	Pulse Width Modulated
O	Output	S	SCP Network	B+	Battery Voltage	Hz	Frequency
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)	kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS	Connector(s)	Connector Description	Location
Component			
BRAKE FLUID LEVEL SENSOR	FH14	2-WAY / BLACK	ON BRAKE FLUID RESERVOIR
FUEL LEVEL SENSOR – LH SIDE	FP3	4-WAY / BLACK	BELOW REAR SEAT CUSHION
FUEL LEVEL SENSOR – RH SIDE	FP4	4-WAY / BLACK	BELOW REAR SEAT CUSHION
GENERAL ELECTRONIC CONTROL MODULE	CA24	26-WAY / WHITE	'A' POST, LH SIDE
	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
IGNITION SWITCH	FC18	8-WAY / BLACK	STEERING COLUMN
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
MESSAGE CENTER SWITCH PACK	FC65	8-WAY / BLACK	FASCIA, ADJACENT TO INSTRUMENT PACK
OIL PRESSURE SWITCH – V6	PI43	1-WAY / BLACK	ADJACENT TO BASE OF DIPSTICK
OIL PRESSURE SWITCH – V8	PI43	1-WAY / BLACK	ADJACENT TO THE OIL FILTER
PARKING BRAKE SWITCH	CA46	1-WAY / BLACK	PARKING BRAKE LEVER, CENTER CONSOLE TRIM
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
SEAT BELT SWITCH – DRIVER	DM8	2-WAY / GREY	BELOW SEAT CUSHION
WASHER FLUID LEVEL SWITCH	FH37	2-WAY / BLACK	ADJACENT TO WASHER FLUID BOTTLE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS		
Connector	Connector Description	Location
DM18	14-WAY / GREY / CABIN HARNESS TO DRIVER SEAT HARNESS	BELOW SEAT CUSHION
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FP2	8-WAY / GREY / CABIN HARNESS TO FUEL TANK LINK LEAD	REARWARD OF FUEL TANK
PI46	12-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

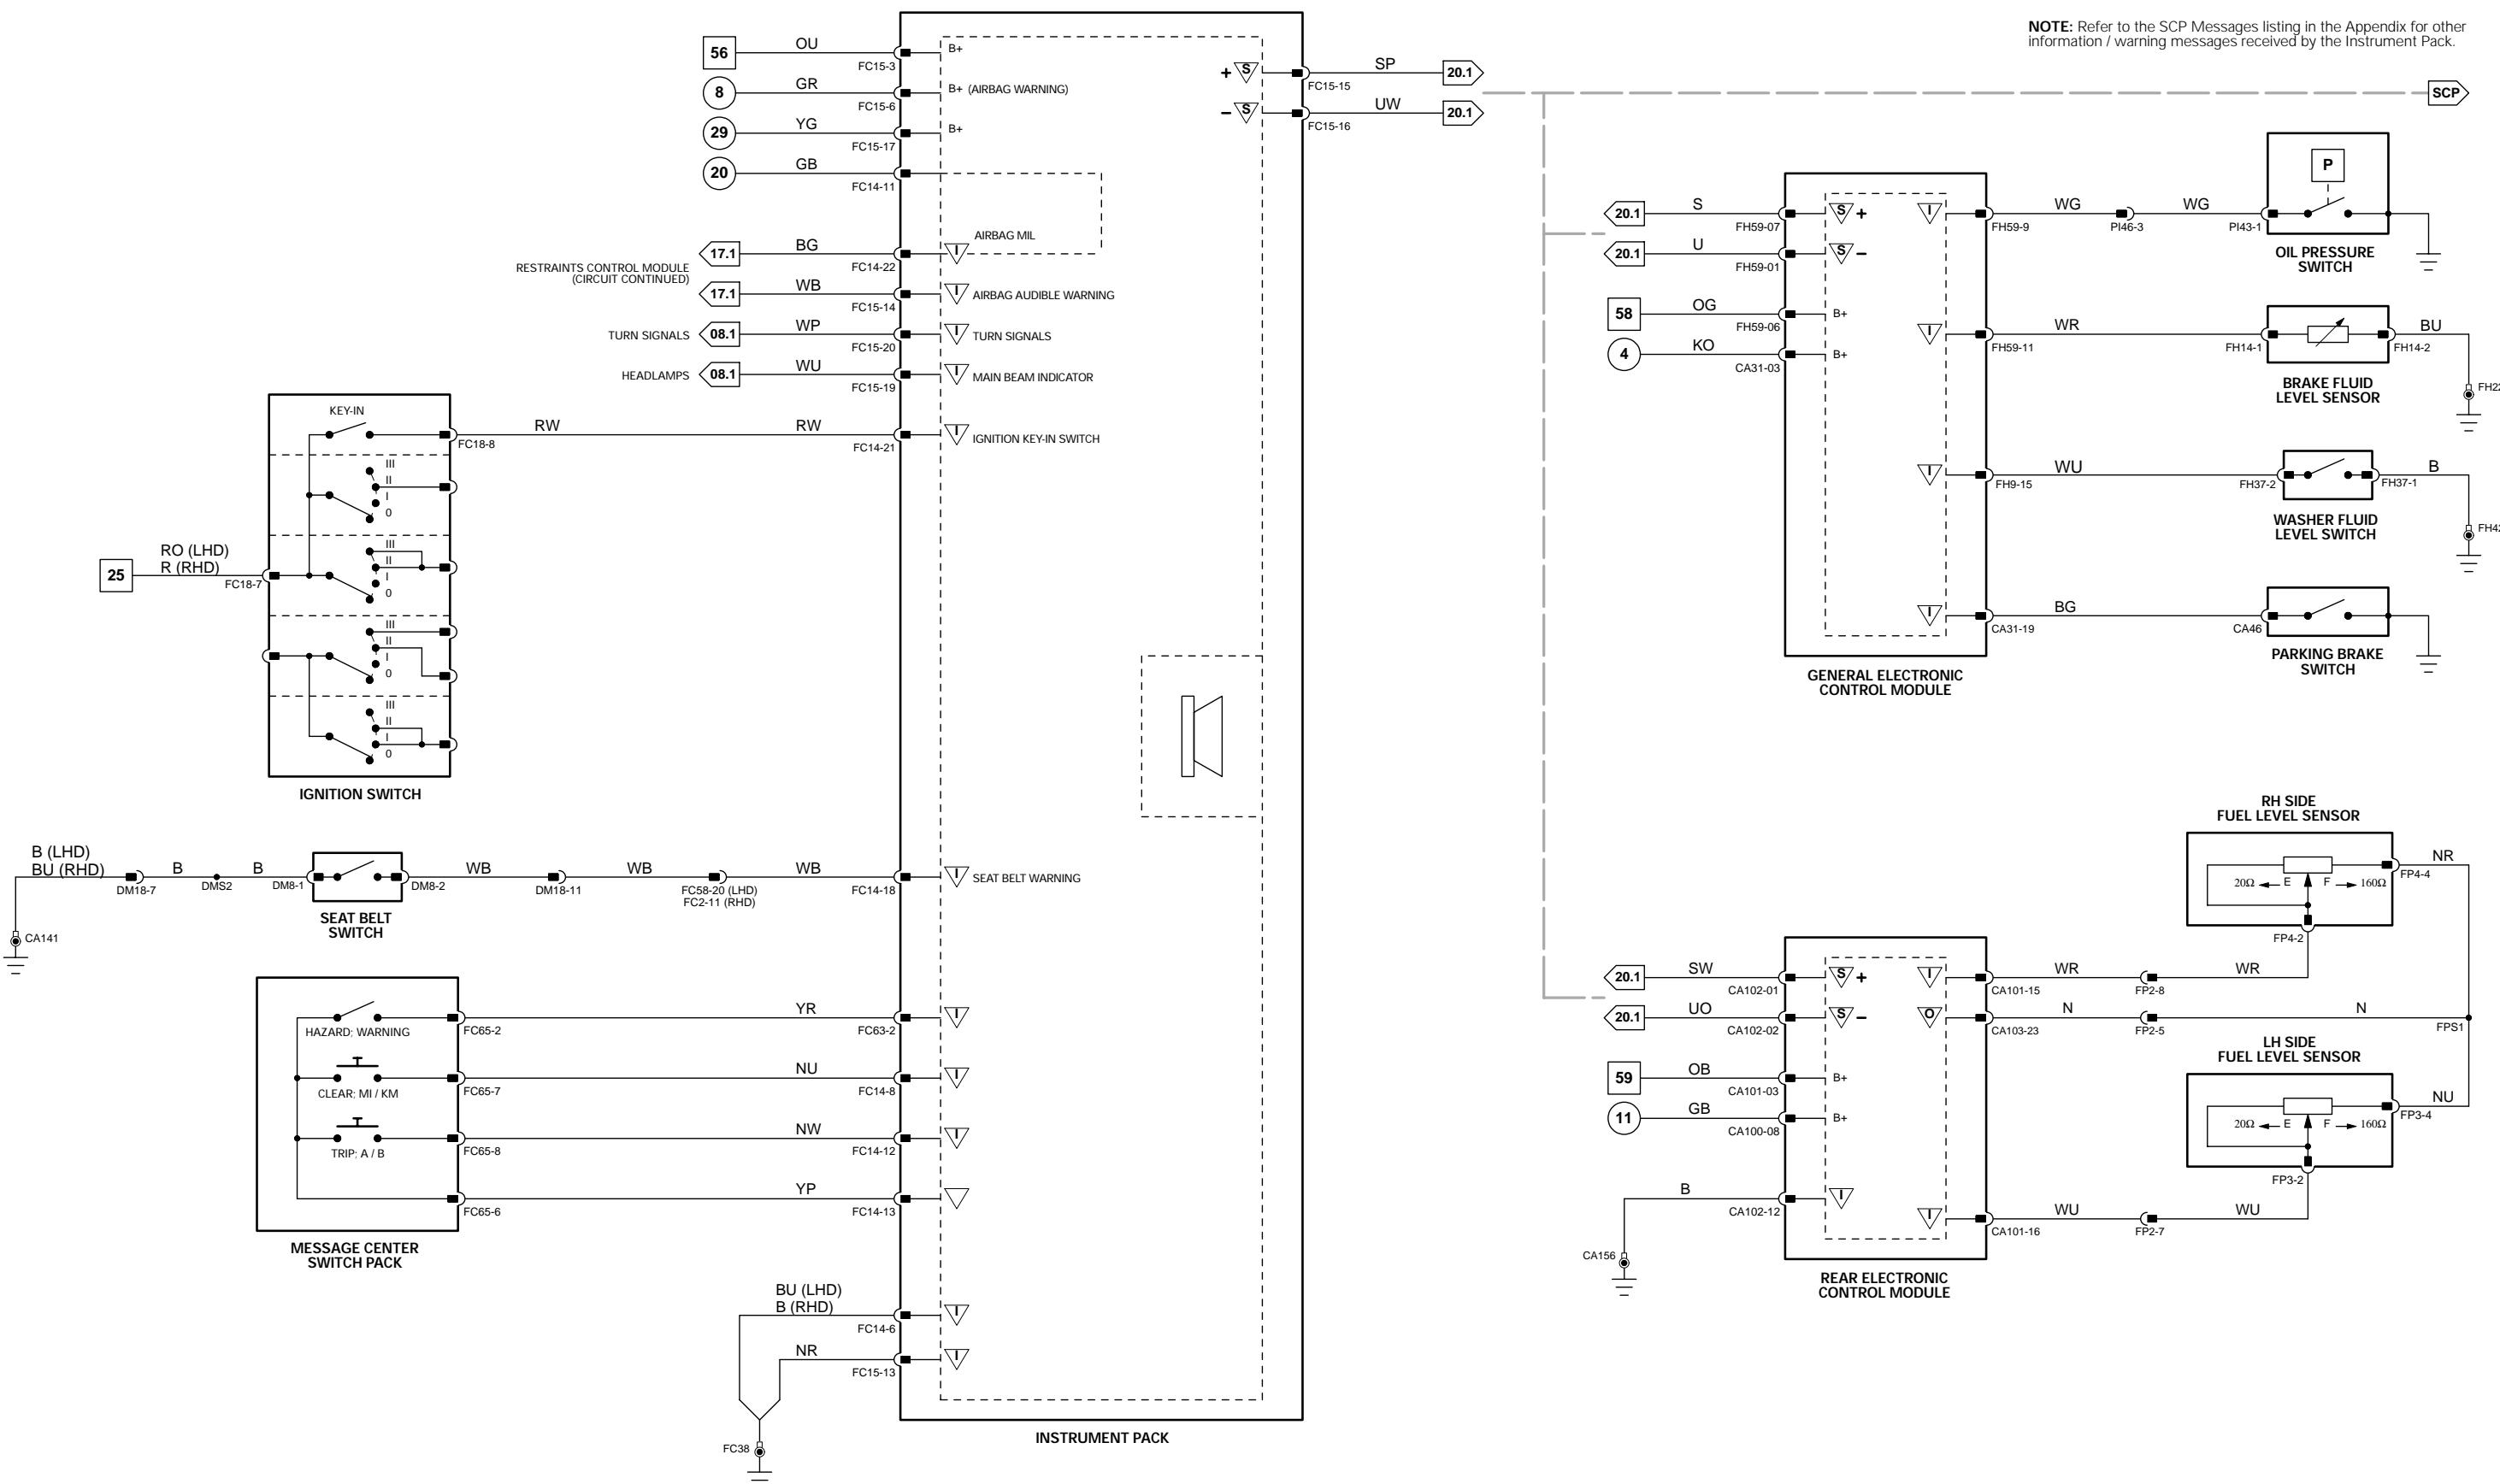


Fig. 08.1

General Electronic Control Module

Pin	Description	Active
I	CA31-3	IGNITION SWITCHED POWER SUPPLY - LOGIC
O	FH9-7	LH TURN SIGNAL REPEATER ACTIVATE
O	FH9-11	RH SIDE MARKER ACTIVATE
O	FH9-19	RH TURN SIGNAL REPEATER ACTIVATE
O	FH9-22	LH SIDE MARKER ACTIVATE
S	FH59-1	SCP -
O	FH59-2	LH FRONT PARK LAMP ACTIVATE
O	FH59-5	FRONT FOG LAMP RELAY ACTIVATE
I	FH59-6	BATTERY POWER SUPPLY
S	FH59-7	SCP +
O	FH59-10	RH FRONT PARK LAMP ACTIVATE
I	FH59-12	GROUND SUPPLY
O	FH60-4	RH FRONT TURN SIGNAL LAMP ACTIVATE
O	FH60-5	LH FRONT TURN SIGNAL LAMP
O	FH60-7	RH DIPPED BEAM ACTIVATE
O	FH60-8	LH DIPPED BEAM ACTIVATE
O	FH60-10	RH MAIN BEAM ACTIVATE
I	FH60-11	GROUND SUPPLY
I	FH60-13	GROUND SUPPLY
I	FH60-14	GROUND SUPPLY
I	FH60-15	GROUND SUPPLY
O	FH60-17	LH MAIN BEAM ACTIVATE

Instrument Pack		Pin	Description	Active
	I	FC14-19	AUTO HEADLAMP SENSOR HEADLAMP ACTIVATION REQUEST	B+ = ON
	I	FC15-3	BATTERY POWER SUPPLY	B+
	I	FC15-6	IGNITION SWITCHED POWER SUPPLY	B+
SS	I	FC15-9	LIGHTING STALK SWITCHES REFERENCE VOLTAGE	B+
	I	FC15-13	GROUND SUPPLY	GROUND
S	I	FC15-15	SCP +	2 - 1600 Hz
S	I	FC15-16	SCP -	2 - 1600 Hz
	I	FC15-17	IGNITION SWITCHED POWER SUPPLY	B+
	I	FC15-19	MAIN BEAM FLASH REQUEST	3.2V (MOMENTARY)
	I	FC15-20	TURN SIGNALS / HAZARD LAMP ACTIVATE	GROUND = HAZARD; 1.2V = LEFT; 3.2V = GROUND
SG	I	FG63-1	LIGHTING SWITCH REFERENCE GROUND	GROUND
	I	FG63-12	EXTERIOR LIGHTING MODE SELECTION REQUEST	2.9V = SIDE LAMPS; 2.1V = HEADLAMPS
	I	FG63-13	FRONT FOGLAMP ACTIVATION REQUEST	1.5V = ON
	I	FG63-14	AUTO HEADLAMP DELAY SETTING FEEDBACK	1.4V = 3 MINUTES

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AUTOLAMP SENSOR	SL2	6-WAY / WHITE	TOP OF FASCIA
COLUMN SWITCHGEAR (LIGHTING STALK)	CS13	10-WAY / BLACK	STEERING COLUMN
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
HEADLAMP UNIT - LH	HL2L HL3L HL4L HL8L	2-WAY / BLACK 2-WAY / BLACK 2-WAY / GREY 2-WAY / BLACK	ENGINE COMPARTMENT ENGINE COMPARTMENT ENGINE COMPARTMENT ENGINE COMPARTMENT
HEADLAMP UNIT - RH	HL2R HL3R HL4R HL8R	2-WAY / BLACK 2-WAY / BLACK 2-WAY / GREY 2-WAY / BLACK	ENGINE COMPARTMENT ENGINE COMPARTMENT ENGINE COMPARTMENT ENGINE COMPARTMENT
INSTRUMENT PACK	FC14 FC15 FC63	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	FASCIA FASCIA FASCIA
LIGHTING SWITCH	FC11	10-WAY / YELLOW	FASCIA, ADJACENT TO STEERING COLUMN
MESSAGE CENTER SWITCH PACK	FC65	8-WAY / BLACK	FASCIA, ADJACENT TO INSTRUMENT PACK
TURN SIGNAL REPEATER - LH	FH62	1-WAY / BLACK	FRONT FENDER, LH SIDE
TURN SIGNAL REPEATER - RH	FH76	1-WAY / BLACK	FRONT FENDER, RH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
F1	6-WAY / GREY / FRONT HARNESS TO BUMPER LINK LEAD	BEHIND LH FRONT WHEEL ARCH LINER
S3	10-WAY / GREY / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
H39	12-WAY / GREY / FRONT HARNESS TO HEADLAMP LINK LEAD	BEHIND HEADLAMP ASSEMBLY, RH SIDE
H40	12-WAY / GREY / FRONT HARNESS TO HEADLAMP LINK LEAD	BEHIND HEADLAMP ASSEMBLY, LH SIDE
L3	10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD	BEHIND FASCIA END PANEL, RH SIDE

ROADS AND GROUNDS

Ground	Ground Description	Location
C38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
H22	GROUND EYELET	BEHIND LH HEADLAMP ASSEMBLY / ENGINE COMPARTMENT
H77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data


I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM Pulse Width Modulated
Hz Frequency
kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

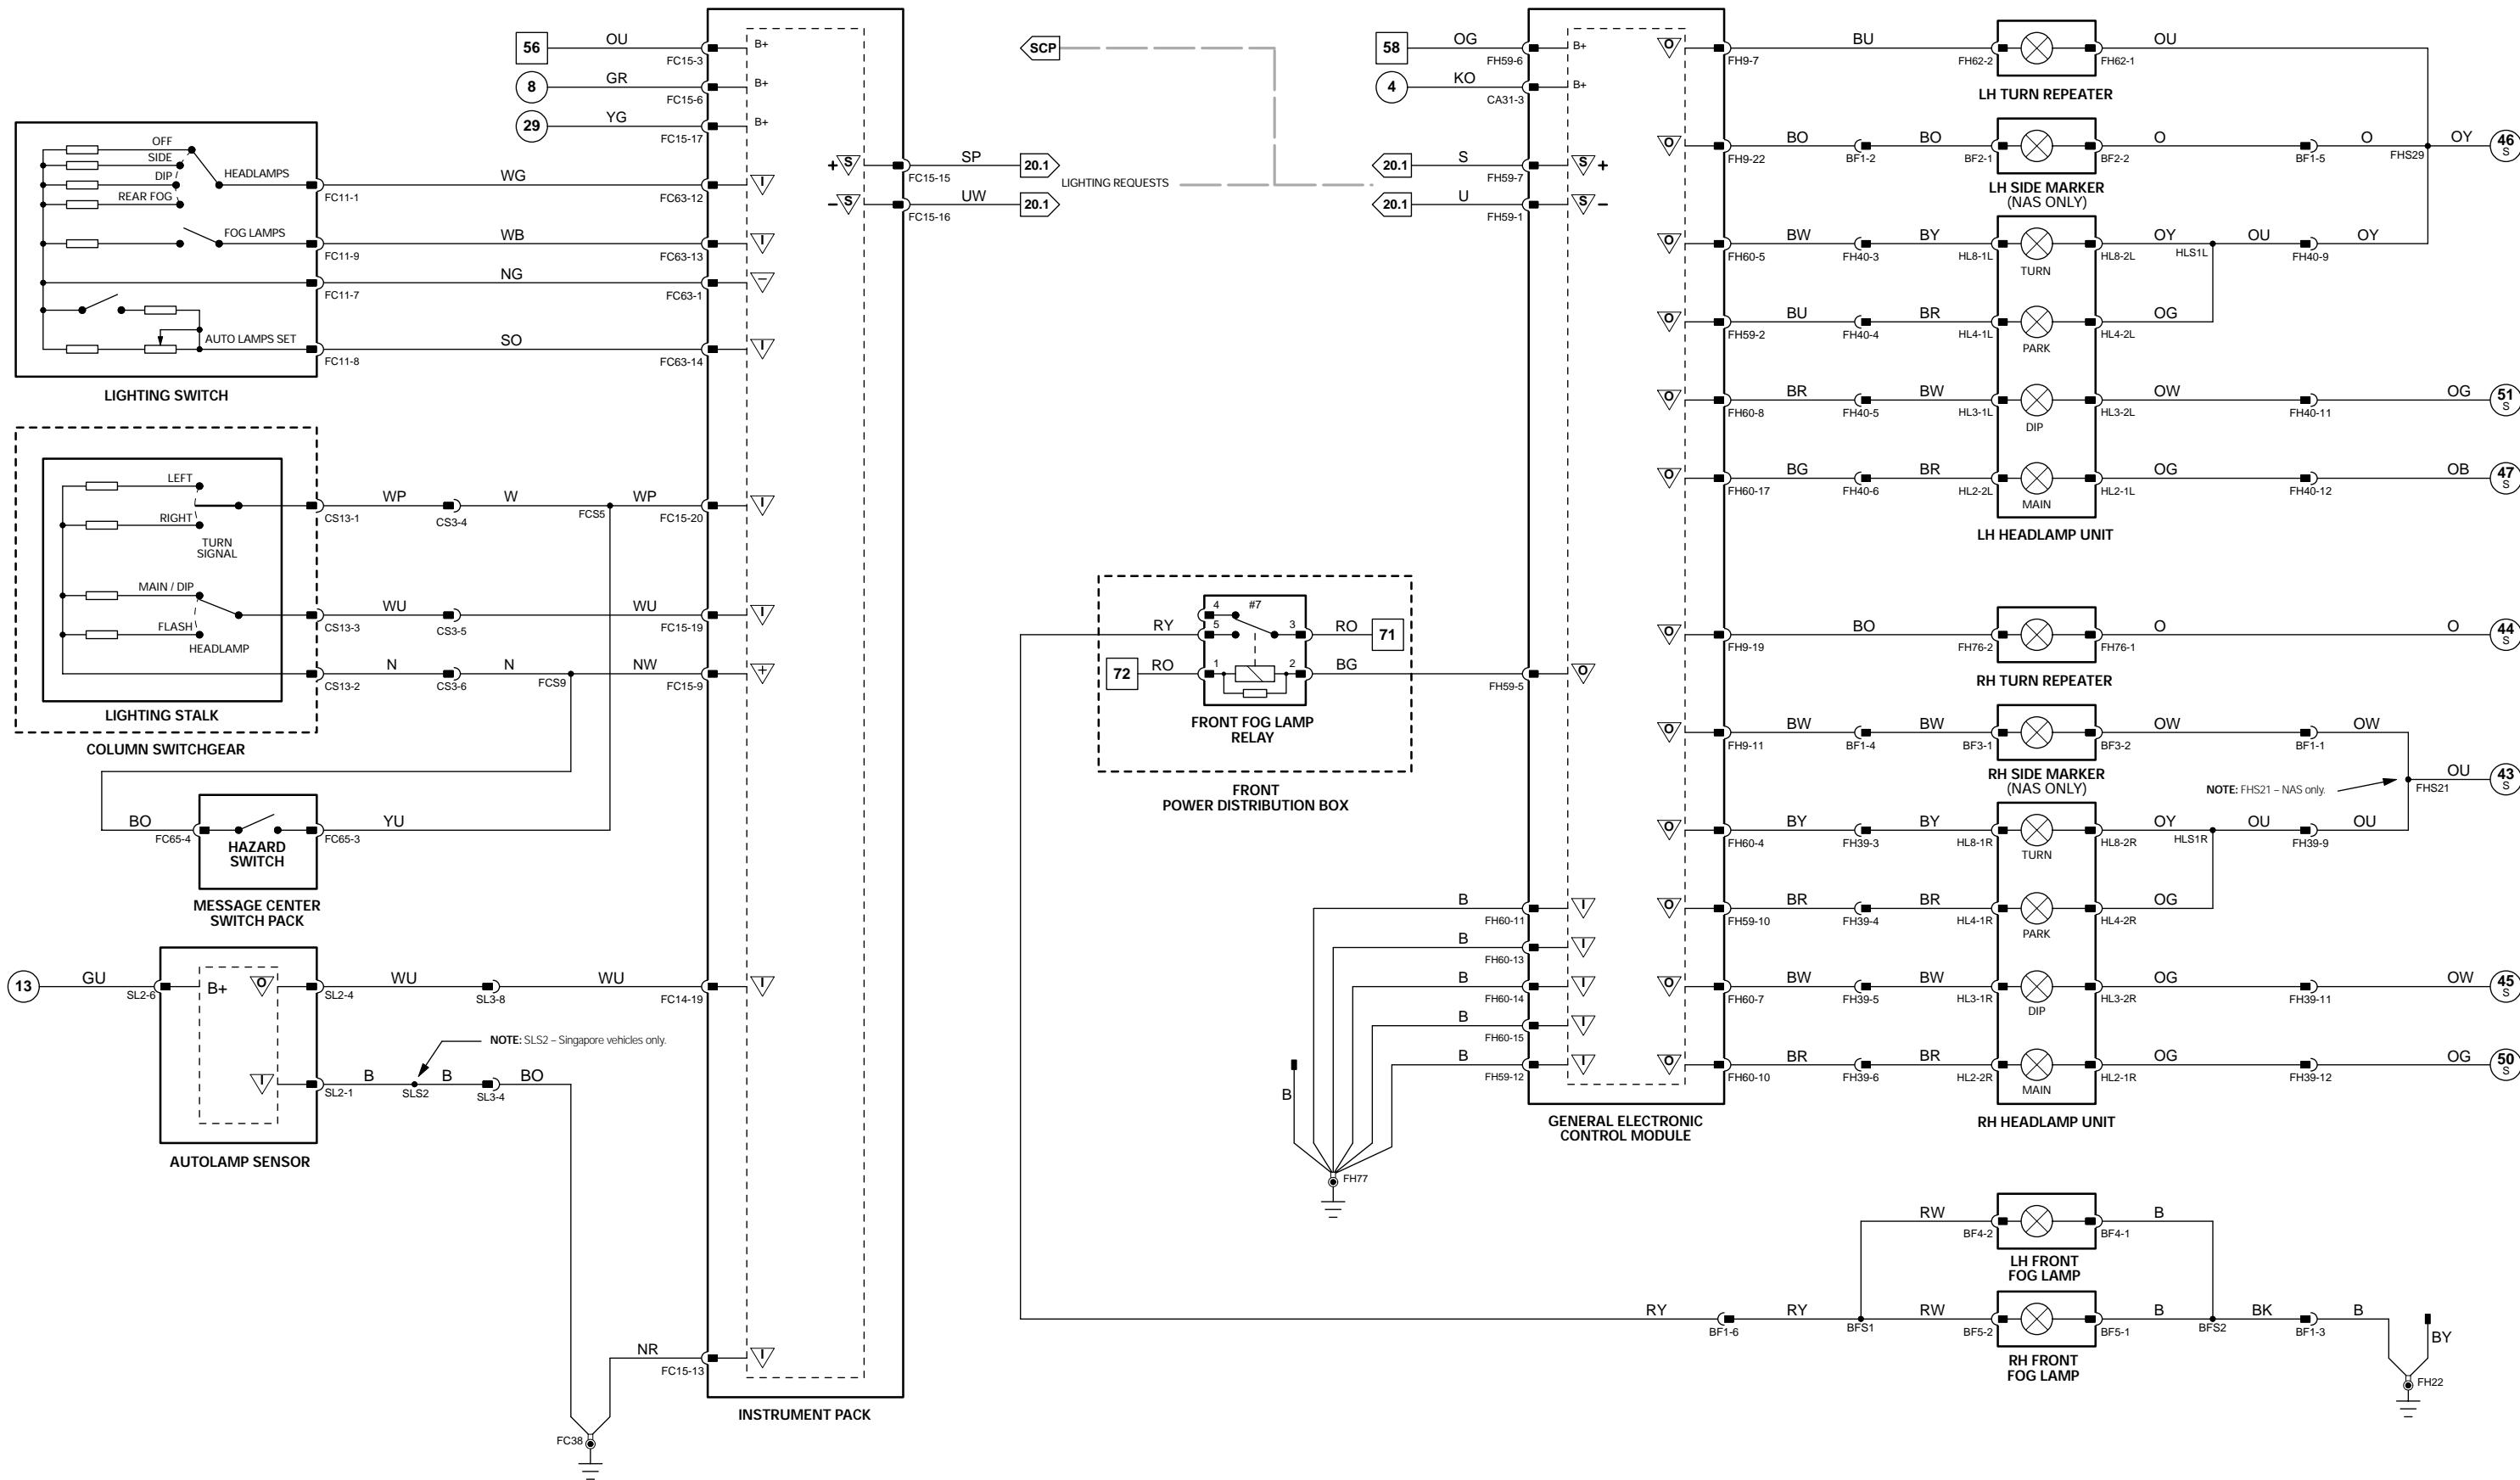

Instrument Pack

Pin	Description	Active	Inactive
I	FC14-19 AUTO HEADLAMP SENSOR HEADLAMP ACTIVATION REQUEST	B+ = ON	GROUND = OFF
I	FC15-3 BATTERY POWER SUPPLY	B+	B+
I	FC15-6 IGNITION SWITCHED POWER SUPPLY	B+	GROUND
SS	FC15-9 LIGHTING STALK SWITCHES REFERENCE VOLTAGE	GROUND	GROUND
I	FC15-13 GROUND SUPPLY	GROUND	GROUND
S	FC15-15 SCP +	2 - 1600 Hz	
S	FC15-16 SCP -	2 - 1600 Hz	
I	FC15-17 IGNITION SWITCHED POWER SUPPLY	B+	GROUND
I	FC15-19 MAIN BEAM FLASH REQUEST	3.2V (MOMENTARY)	4.8V = AT REST
I	FC15-20 TURN SIGNALS / HAZARD LAMP ACTIVATE	GROUND = HAZARD; 1.2V = LEFT; 3.2V = RIGHT	4.7V = AT REST
SG	FC63-1 LIGHTING SWITCH REFERENCE GROUND	GROUND	GROUND
I	FC63-12 EXTERIOR LIGHTING MODE SELECTION REQUEST	2.9V = SIDE LAMPS; 2.1V = HEADLAMPS; 0.8V = FOGLAMPS	
I	FC63-13 FRONT FOGLAMP ACTIVATION REQUEST	1.5V = ON	4.7V = OFF
I	FC63-14 AUTO HEADLAMP DELAY SETTING FEEDBACK	1.4V = 3 MINUTES	3.9V = SECONDS

Powertrain Control Module

Pin	Description	Active	Inactive
S	FH1-3 SCP +	2 - 1600 Hz	
S	FH1-4 SCP -	2 - 1600 Hz	

Rear Electronic Control Module

Pin	Description	Active	Inactive
O	CA63-1 RH STOP LAMP ACTIVATE	GROUND	B+
O	CA63-2 LH STOP LAMP ACTIVATE	GROUND	B+
O	CA63-3 LH REAR TURN SIGNAL ACTIVATE	GROUND (PULSED)	B+
O	CA63-4 RH REAR TURN SIGNAL ACTIVATE	GROUND (PULSED)	B+
O	CA63-5 RH TAIL LAMP ACTIVATE	GROUND	B+
O	CA63-6 LH TAIL LAMP ACTIVATE	GROUND	B+
O	CA63-7 LH REAR FOG LAMP ACTIVATE	GROUND	B+
O	CA63-8 RH REAR FOG LAMP ACTIVATE	GROUND	B+
O	CA63-9 LH REVERSE LAMP ACTIVATE	GROUND	B+
O	CA63-10 RH REVERSE LAMP ACTIVATE	GROUND	B+
O	CA63-17 HIGH MOUNTED STOP LAMP ACTIVATE	GROUND	B+
O	CA100-5 REAR NUMBER PLATE LAMP ACTIVATE	GROUND	B+
O	CA100-6 LH REAR SIDE MARKER LAMP ACTIVATE	GROUND	B+
I	CA100-8 IGNITION SWITCHED POWER SUPPLY - INERTIA SWITCH	B+	GROUND
O	CA100-12 RH REAR SIDE MARKER LAMP ACTIVATE	GROUND	B+
I	CA101-3 BATTERY POWER SUPPLY - LOGIC	B+	B+
S	CA102-1 SCP +	2 - 1600 Hz	
S	CA102-2 SCP -	2 - 1600 Hz	
I	CA102-12 GROUND	GROUND	GROUND
I	CA102-13 BRAKE ON / OFF SIGNAL	B+ = BRAKE APPLIED	GROUND
I	CA103-11 GROUND SUPPLY	GROUND	GROUND
I	CA103-12 GROUND SUPPLY	GROUND	GROUND
I	CA103-25 GROUND SUPPLY	GROUND	GROUND
I	CA103-26 GROUND SUPPLY	GROUND	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AUTOLAMP SENSOR	SL2	6-WAY / WHITE	TOP OF FASCIA
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
COLUMN SWITCHGEAR (LIGHTING STALK)	CS13	10-WAY / BLACK	STEERING COLUMN
HIGH MOUNTED STOP LAMP	CA18	3-WAY / GREY	PARCEL SHELF
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
LIGHTING SWITCH	FC11	10-WAY / YELLOW	FASCIA, ADJACENT TO STEERING COLUMN
MESSAGE CENTER SWITCH PACK	FC65	8-WAY / BLACK	FASCIA, ADJACENT TO INSTRUMENT PACK
NUMBER PLATE LAMP - LH	CA66	2-WAY / BLACK	BEHIND TRUNK LID LINER
NUMBER PLATE LAMP - RH	CA67	2-WAY / BLACK	BEHIND TRUNK LID LINER
POWERTRAIN CONTROL MODULE	FH1	58-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	GB1	32-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
	PI1	60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
SIDE MARKER LAMP - LH REAR	BR6	2-WAY / BLACK	REAR BUMPER, LH SIDE
SIDE MARKER LAMP - RH REAR	BR7	2-WAY / BLACK	REAR BUMPER, RH SIDE
TAIL LAMP UNIT - LH	CA10	7-WAY / BLACK	VEHICLE, LH REAR
TAIL LAMP UNIT - RH	CA68	7-WAY / BLACK	VEHICLE, RH REAR

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
BR1	10-WAY / GREY / CABIN HARNESS TO BUMPER HARNESS	BEHIND RH REAR QUARTER TRIM
CA98	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ADJACENT TO RECM, RH SIDE
CA168	10-WAY / BLUE / DIODE MODULE	TRUNK, RH SIDE
CA169	2-WAY / BLACK / DIODE	BELOW RH REAR LAMP ASSEMBLY
CA170	2-WAY / BLACK / DIODE	BELOW LH REAR LAMP ASSEMBLY
CS3	10-WAY / GREY / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX
SL3	10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD	BEHIND FASCIA END PANEL, RH SIDE

GROUNDS

Ground	Ground Description	Location
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

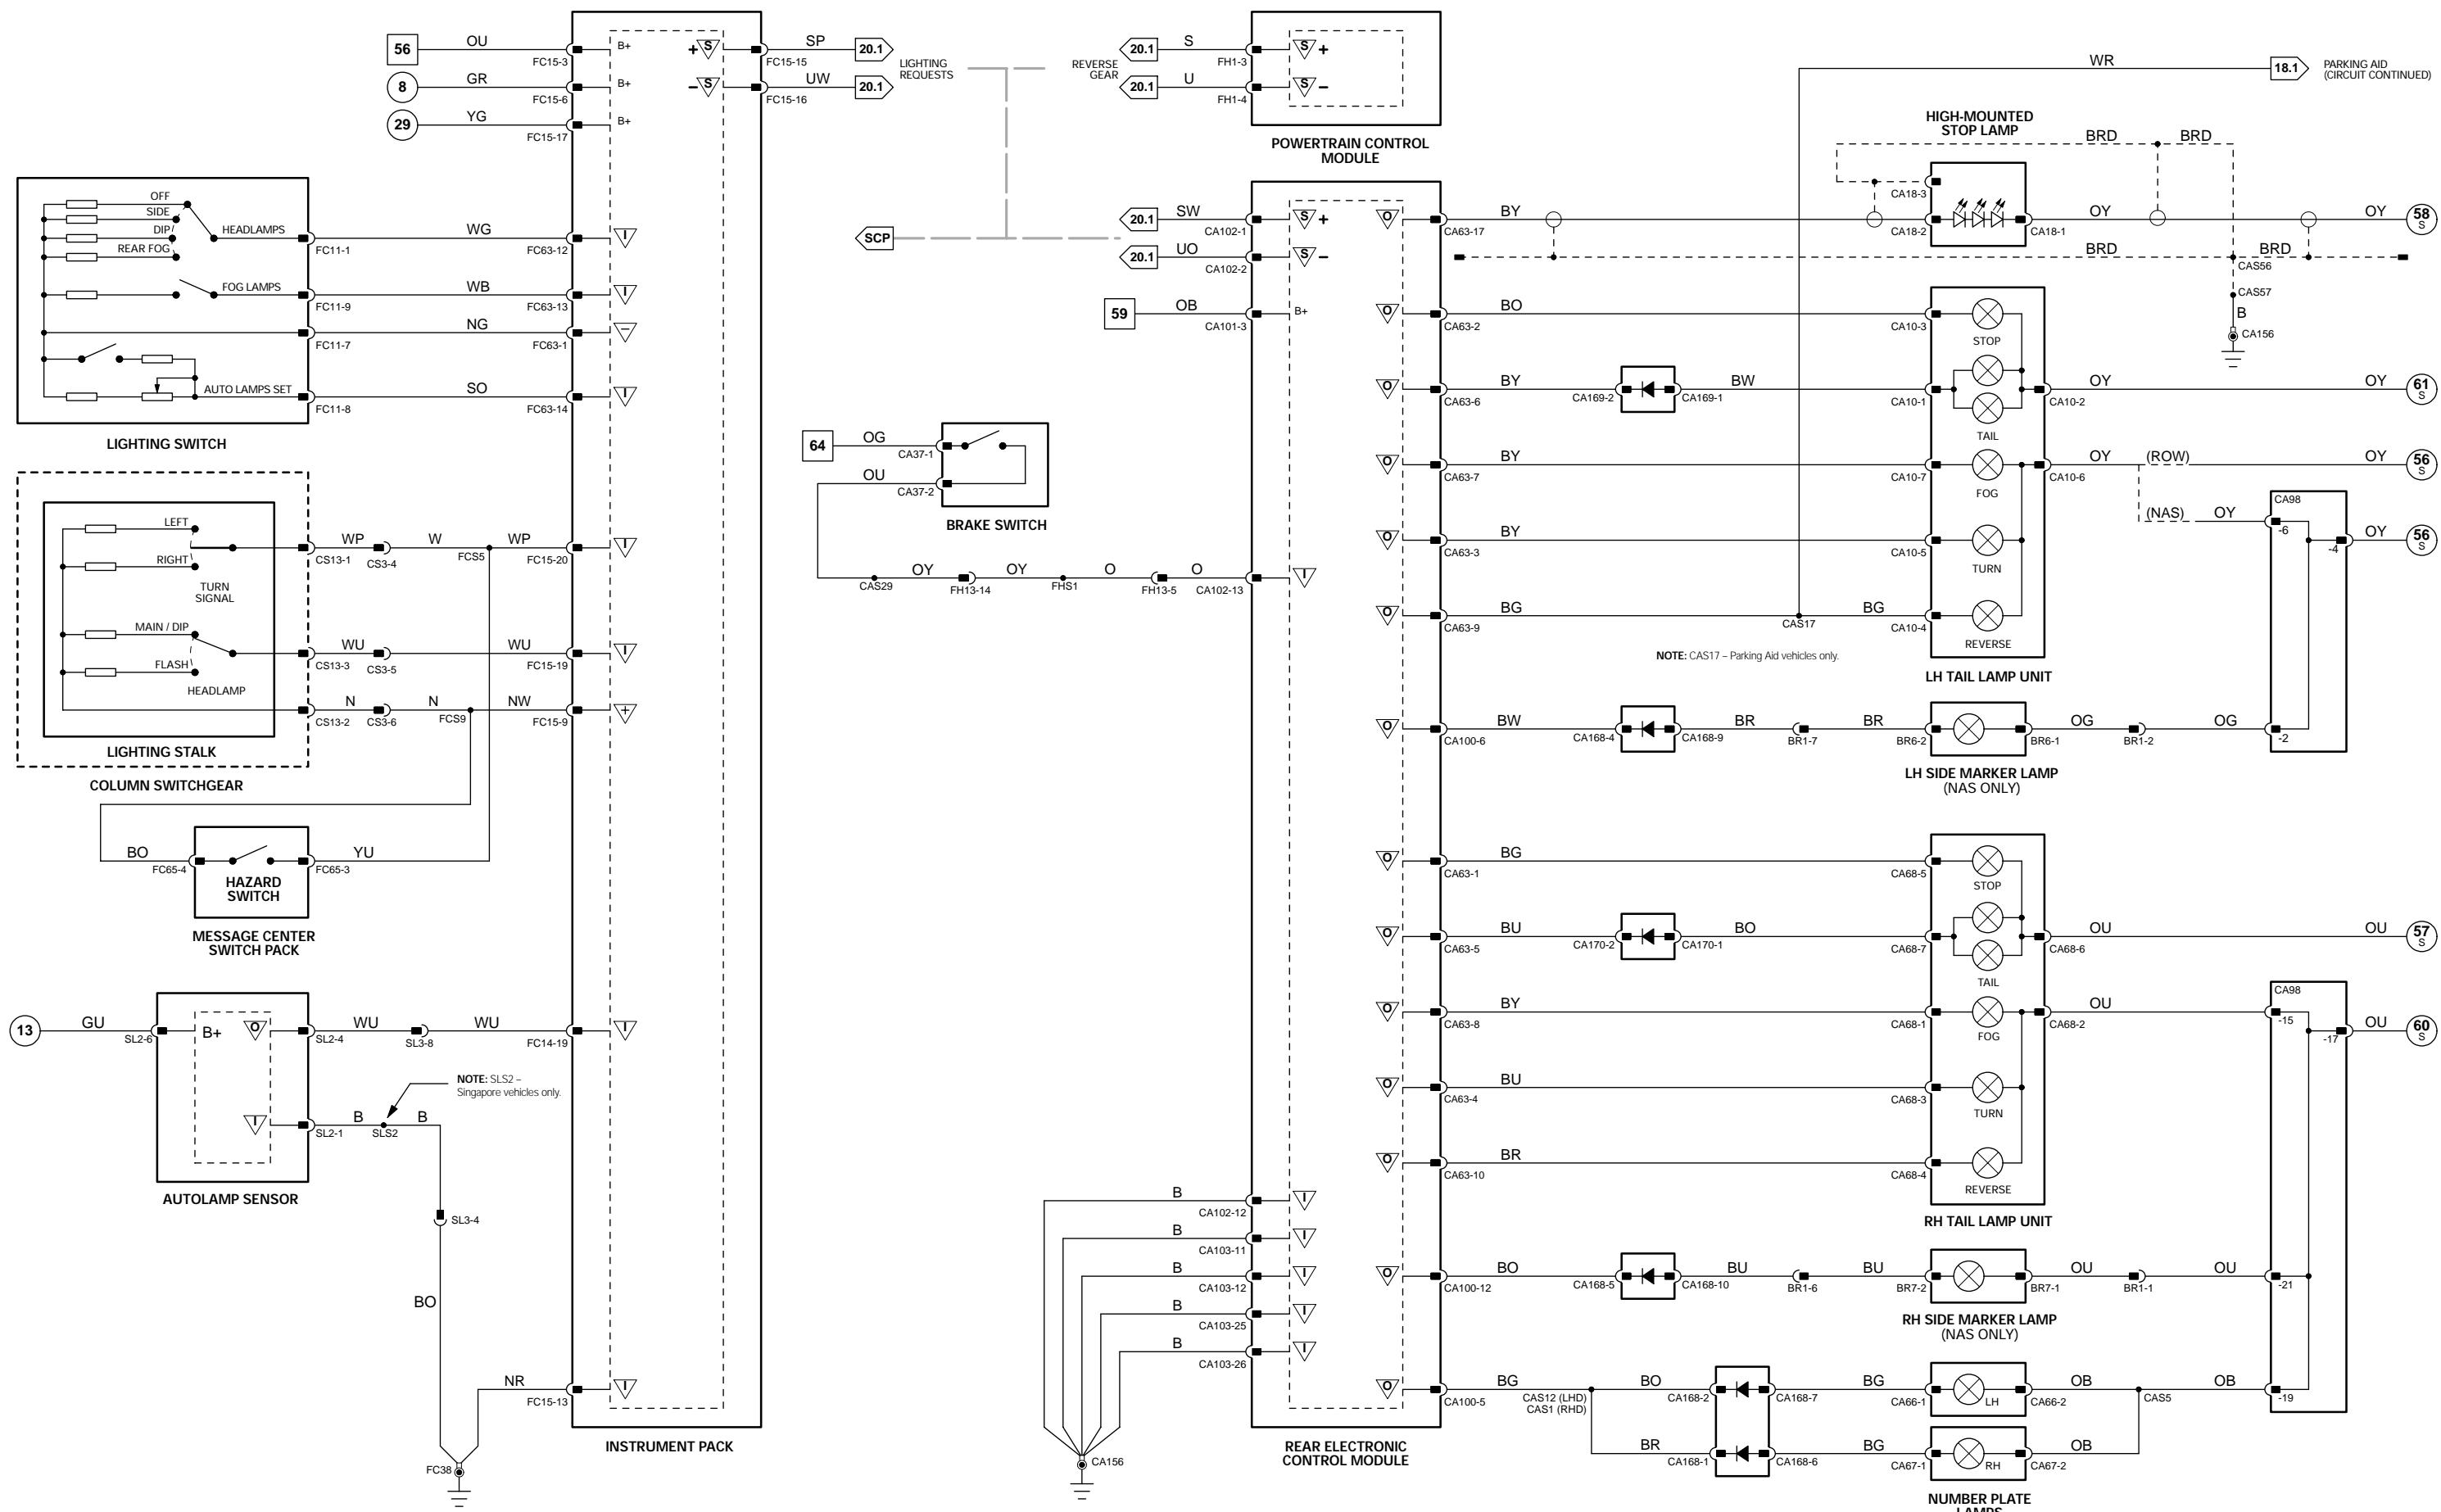


Fig. 08.3

Rear Electronic Control Module

	Pin	Description
O	CA100-5	REAR NUMBER PLATE LAMP ACTIVATE
O	CA100-6	LH REAR SIDE MARKER LAMP ACTIVATE
I	CA100-8	IGNITION SWITCHED POWER SUPPLY - INERTIA SWITCH
O	CA100-12	RH REAR SIDE MARKER LAMP ACTIVATE
I	CA101-3	BATTERY POWER SUPPLY - LOGIC
S	CA102-1	SCP +
S	CA102-2	SCP -
I	CA102-12	GROUND
I	CA102-13	BRAKE ON / OFF SIGNAL
I	CA103-11	GROUND SUPPLY
I	CA103-12	GROUND SUPPLY
I	CA103-25	GROUND SUPPLY
I	CA103-26	GROUND SUPPLY

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

	Active	Inactive
	GROUND	B+
	GROUND	B+
	B+	GROUND
	GROUND	B+
	B+	B+
	2 - 1600 Hz	
	2 - 1600 Hz	
	GROUND	GROUND
	B+ = BRAKE APPLIED	GROUND
	GROUND	GROUND

COMPONENTS

Component	Connector(s)	Connector Description	Location
BRAKE SWITCH	CA37	2-WAY / GREEN	TOP OF BRAKE PEDAL
HIGH MOUNTED STOP LAMP	CA18	3-WAY / GREY	PARCEL SHELF
NUMBER PLATE LAMP - LH	CA66	2-WAY / BLACK	BEHIND TRUNK LID LINER
NUMBER PLATE LAMP - RH	CA67	2-WAY / BLACK	BEHIND TRUNK LID LINER
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
SIDE MARKER LAMP - LH REAR	BR6	2-WAY / BLACK	REAR BUMPER, LH SIDE
SIDE MARKER LAMP - RH REAR	BR7	2-WAY / BLACK	REAR BUMPER, RH SIDE
TAIL LAMP UNIT - LH	CA10	7-WAY / BLACK	VEHICLE, LH REAR
TAIL LAMP UNIT - RH	CA68	7-WAY / BLACK	VEHICLE, RH REAR

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
BR1	10-WAY / GREY / CABIN HARNESS TO BUMPER HARNESS	BEHIND RH REAR QUARTER TRIM
CA98	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ADJACENT TO RECM, RH SIDE
CA168	10-WAY / BLUE / DIODE MODULE	TRUNK, RH SIDE
CA169	2-WAY / BLACK / DIODE	BELOW RH REAR LAMP ASSEMBLY
CA170	2-WAY / BLACK / DIODE	BELOW LH REAR LAMP ASSEMBLY
FH13	20-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS	ADJACENT TO PRIMARY JUNCTION BOX

GROUNDS

Ground	Ground Description	Location
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

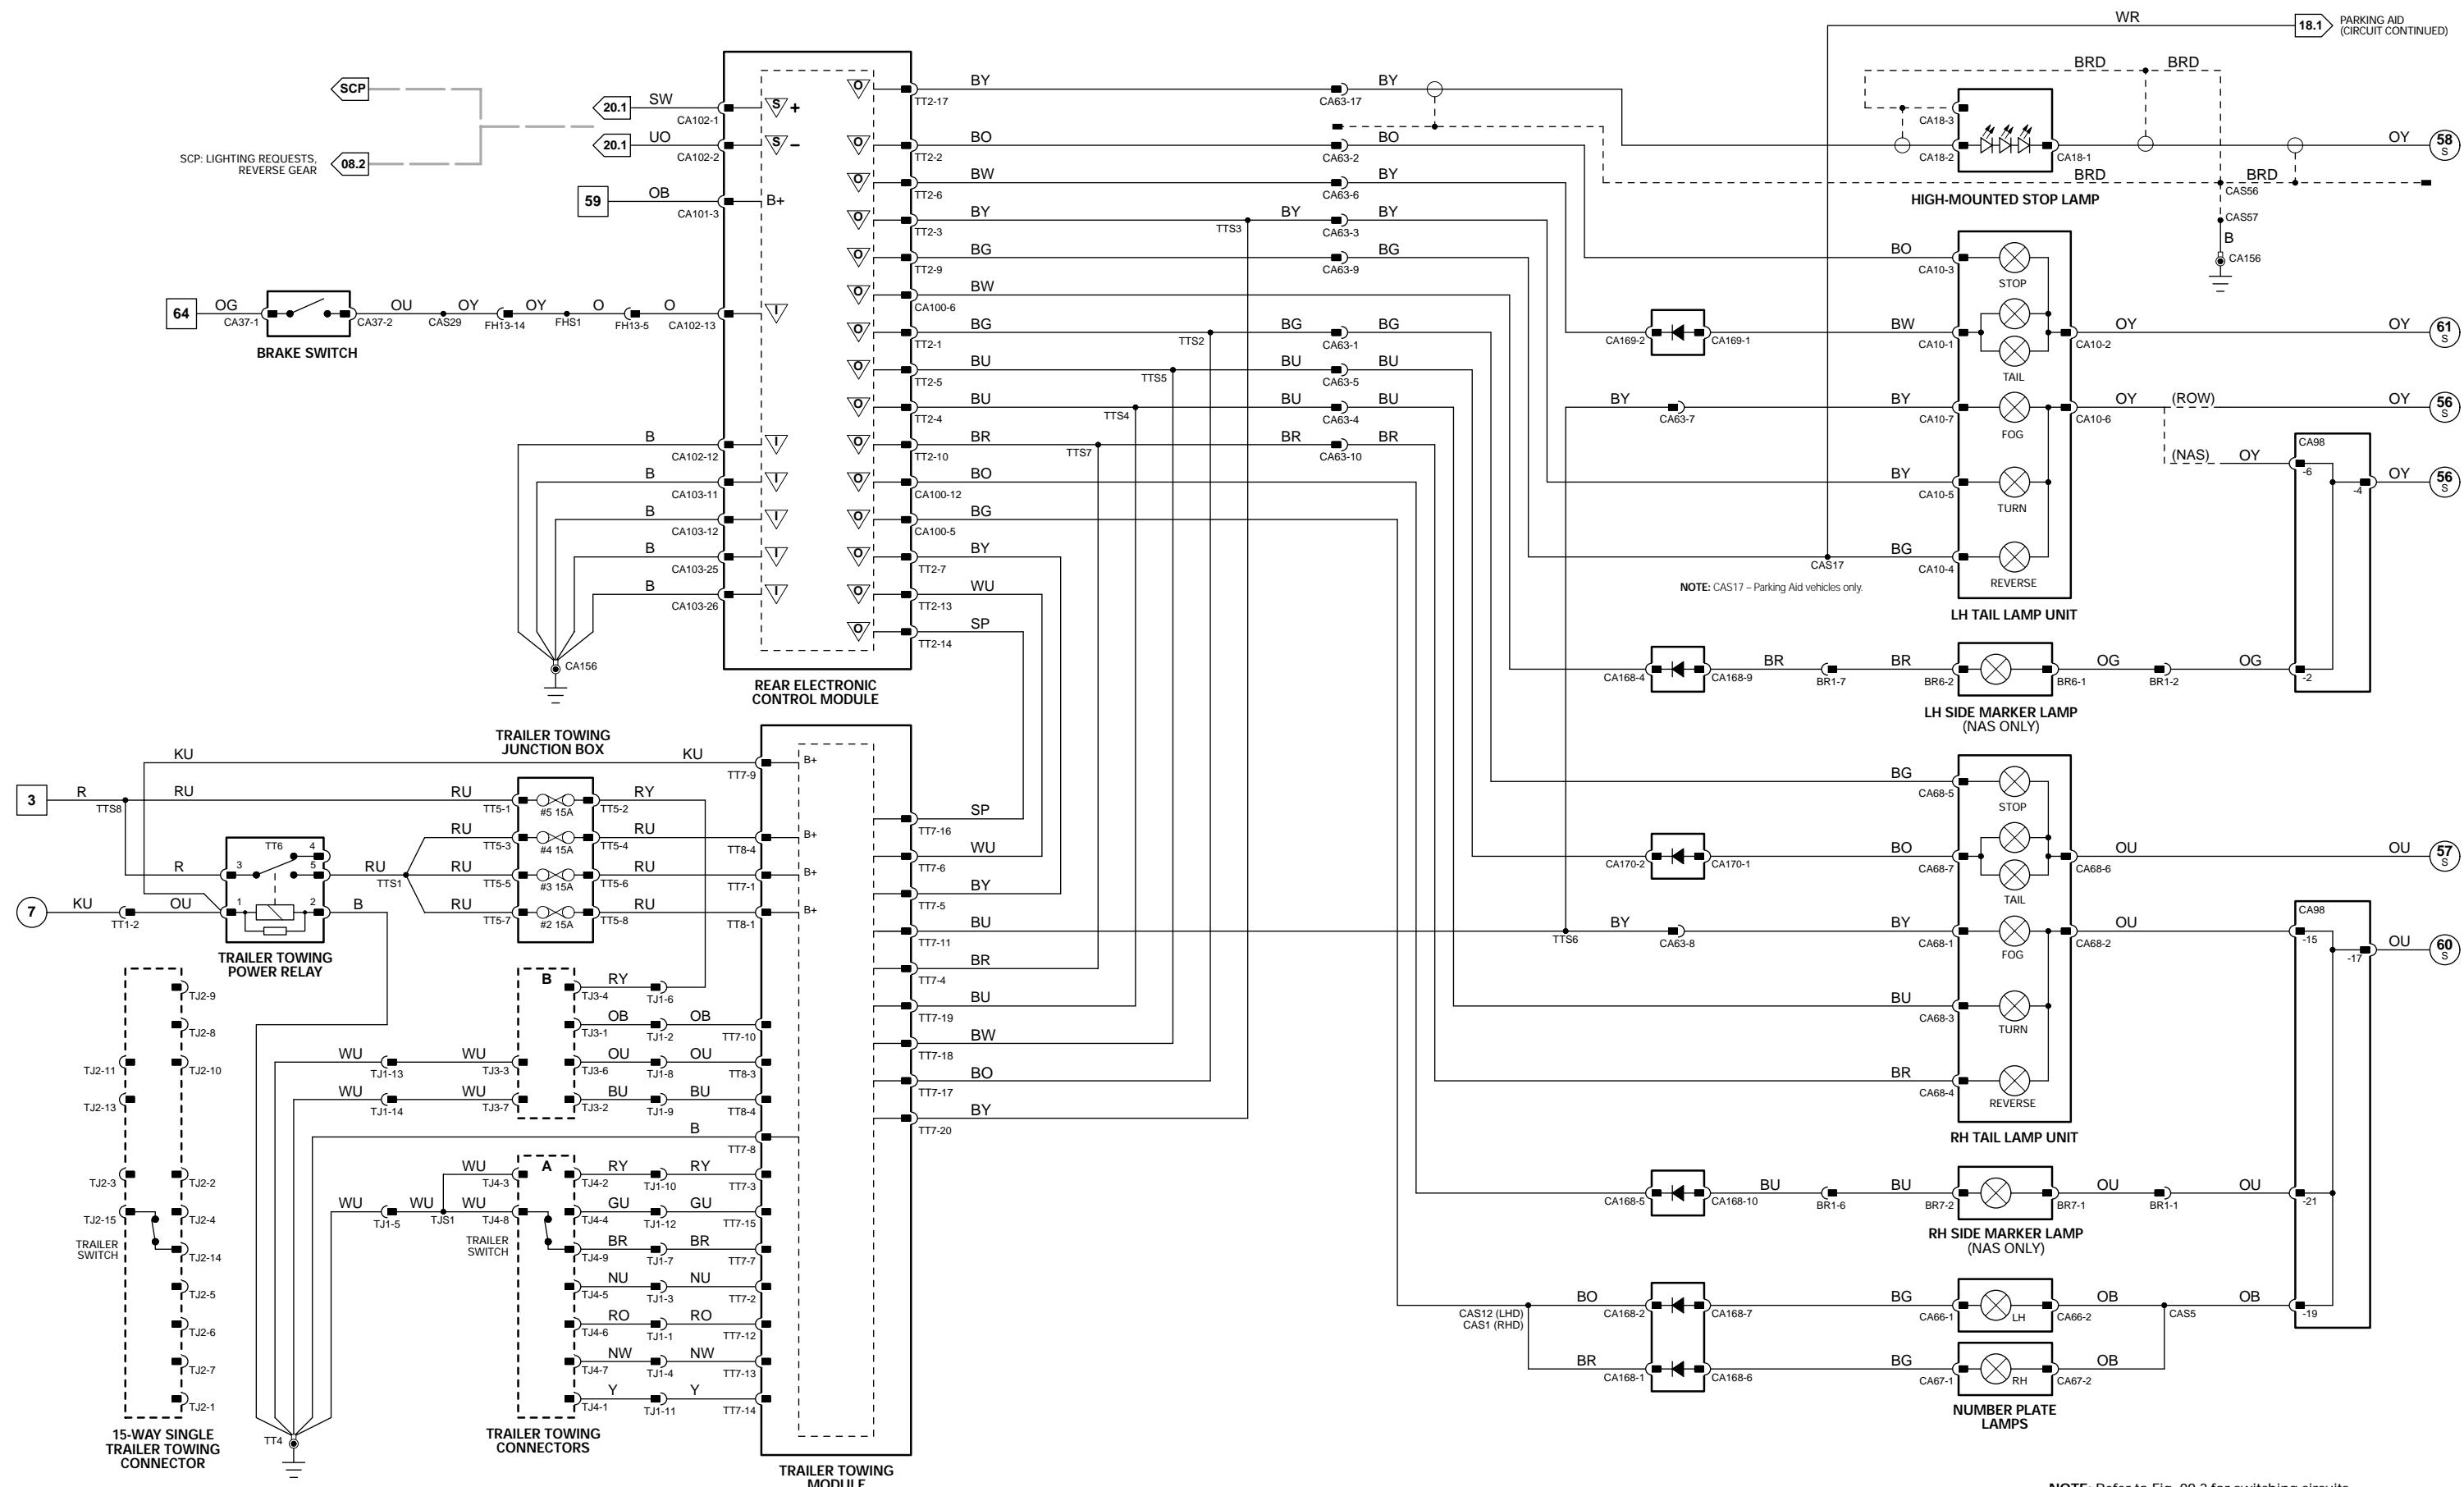


Fig. 08.4

COMPONENTS

Component

HEADLAMP LEVELING ACTUATOR – LH
HEADLAMP LEVELING ACTUATOR – RH
HEADLAMP LEVELING SWITCH

Connector(s)

HL1L
HL1R
FC41

Connector Description

10-WAY / BLACK
10-WAY / BLACK
6-WAY / BLACK

Location

BEHIND LH HEADLAMP ASSEMBLY
BEHIND RH HEADLAMP ASSEMBLY
FASCIA, ADJACENT TO STEERING COLUMN

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector

FC5
FC36
FH39
FH40

Connector Description

12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS
22-WAY WHITE / JUNCTION CONNECTOR
12-WAY / GREY / FRONT HARNESS TO HEADLAMP LINK LEAD
12-WAY / GREY / FRONT HARNESS TO HEADLAMP LINK LEAD

Location

BEHIND FASCIA END PANEL, LH SIDE
BEHIND GLOVE BOX
BEHIND HEADLAMP ASSEMBLY, RH SIDE
BEHIND HEADLAMP ASSEMBLY, LH SIDE

GROUNDS

Ground

FH22


Ground Description

GROUND EYELET

Location

BEHIND LH HEADLAMP ASSEMBLY / ENGINE COMPARTMENT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

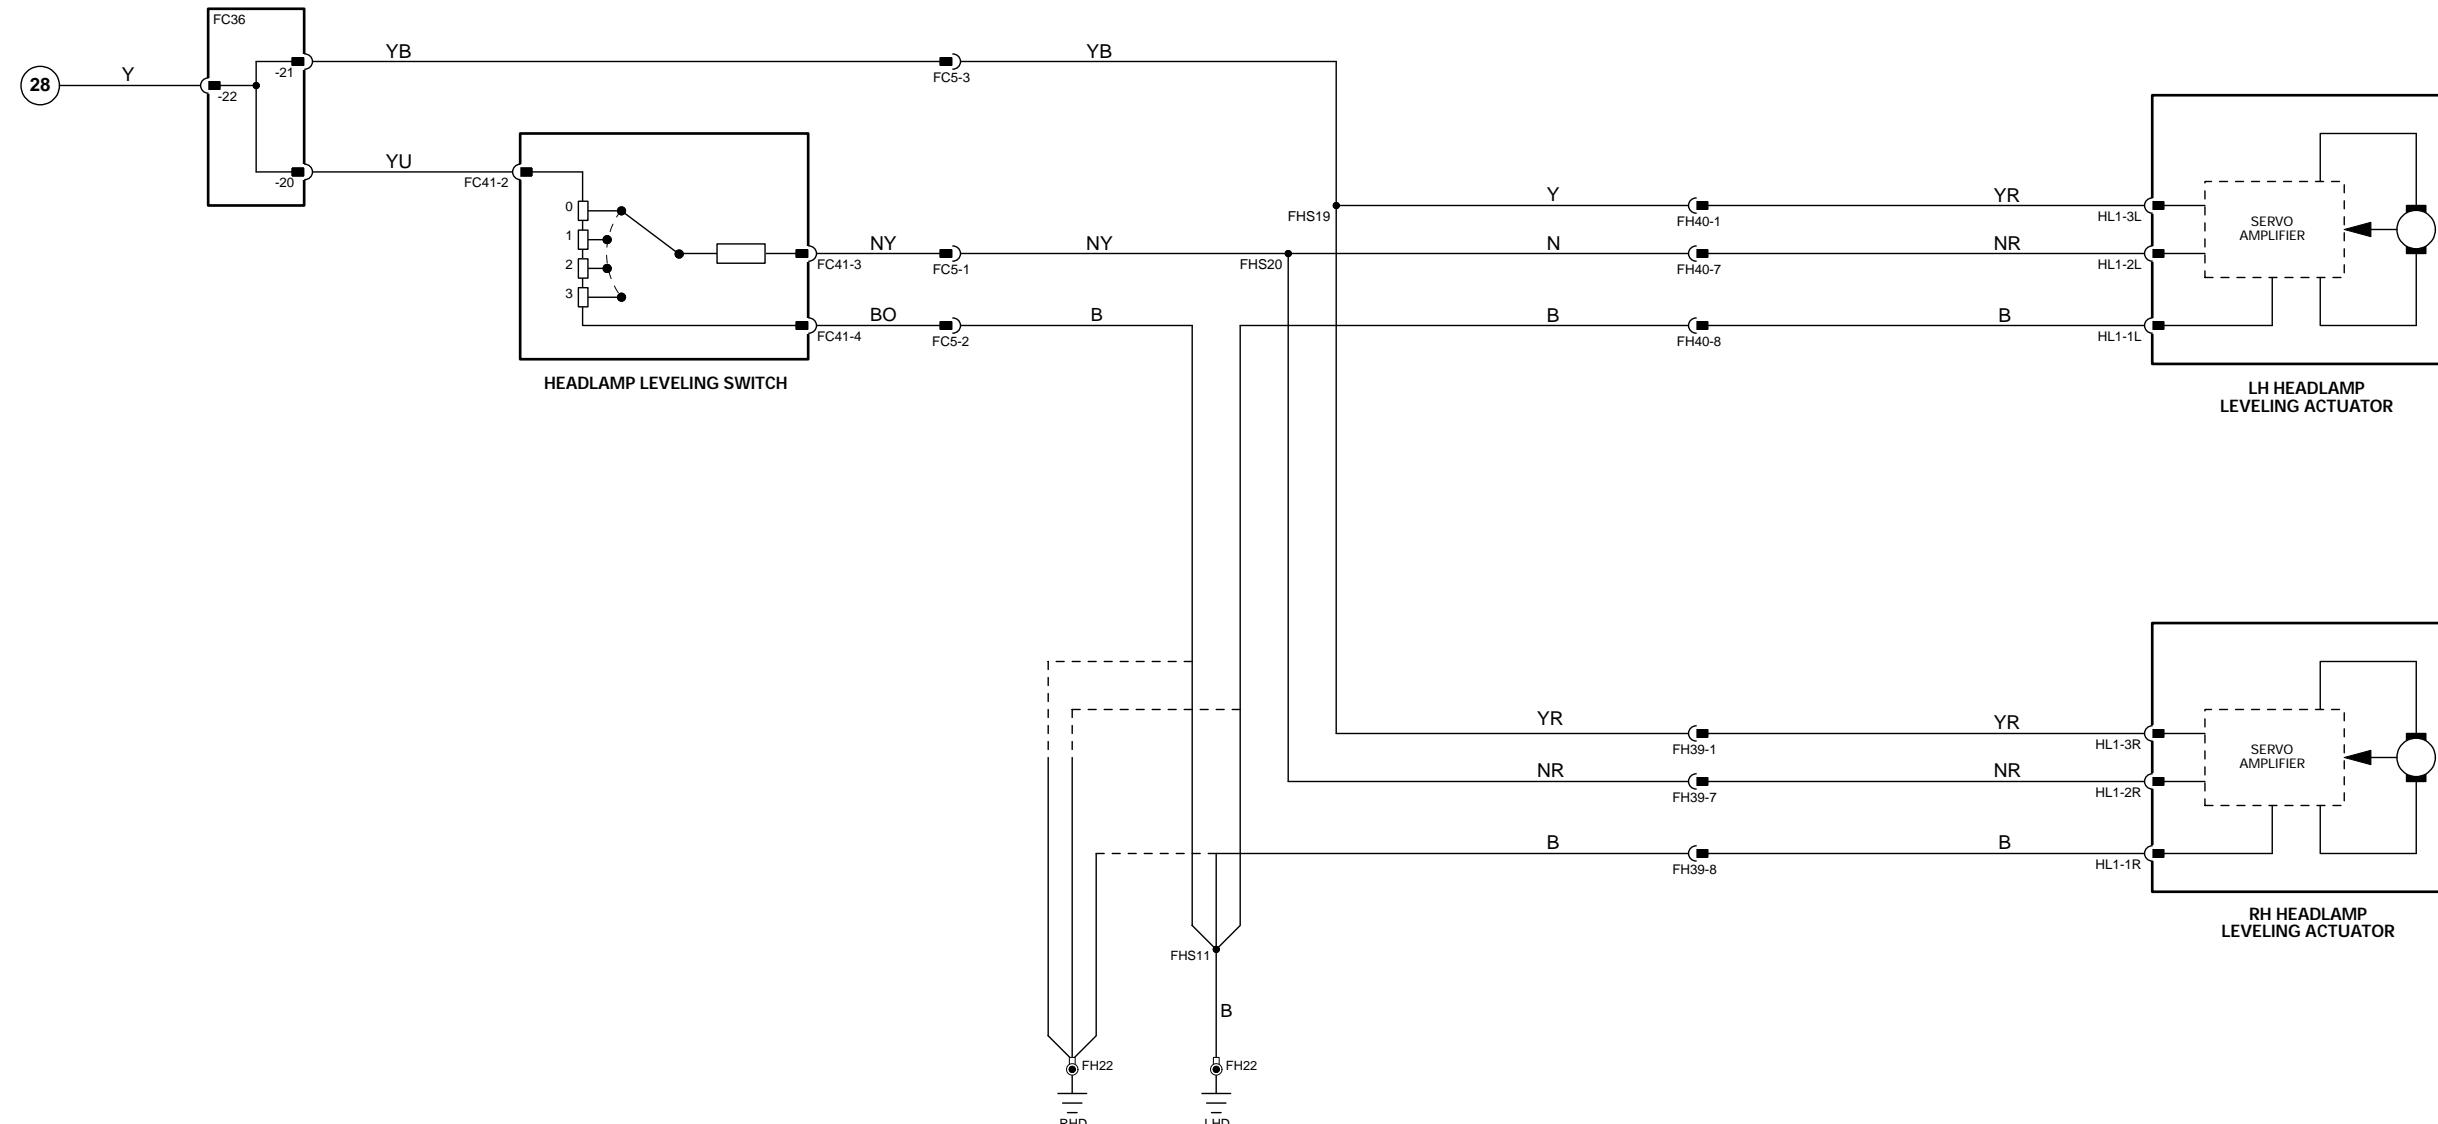

General Electronic Control Module

Pin	Description
I CA24-15	PASSENGER DOOR AJAR SWITCH
I CA31-3	IGNITION SWITCHED POWER SUPPLY - LOGIC
I CA31-8	DRIVER DOOR AJAR SWITCH
O CA31-12	FASCIA, GLOVE BOX, DOOR COURTESY, MAP SUN VISOR LIGHTING ACTIVATE
S FH59-1	SCP -
I FH59-6	BATTERY POWER SUPPLY
S FH59-7	SCP +
I FH59-12	GROUND SUPPLY
I FH60-11	GROUND SUPPLY
I FH60-13	GROUND SUPPLY
I FH60-14	GROUND SUPPLY
I FH60-15	GROUND SUPPLY

Active	Inactive
GROUND = AJAR	B+
B+	GROUND
GROUND = OPEN	B+ = CLOSED
GROUND (PWM)	B+
2 - 1600 Hz	B+
B+	GROUND
2 - 1600 Hz	B+
GROUND	GROUND

Instrument Pack

Pin	Description
I FC15-3	BATTERY POWER SUPPLY
I FC15-6	IGNITION SWITCHED POWER SUPPLY
I FC15-13	GROUND SUPPLY
S FC15-15	SCP +
S FC15-16	SCP -
I FC15-17	IGNITION SWITCHED POWER SUPPLY
SG FC63-4	MASTER INTERIOR LIGHTING SWITCH / DIMMER SWITCH REFERENCE GROUND
I FC63-16	DIMMER SWITCH / MASTER INTERIOR LIGHTS ACTIVATE

1.9V = DIM; 4V = BRIGHT; 0V = MASTER INTERIOR LIGHTS ON

Active	Inactive
B+	B+
B+	GROUND
GROUND	GROUND
2 - 1600 Hz	2 - 1600 Hz
2 - 1600 Hz	B+
GROUND	GROUND
GROUND	GROUND

Rear Electronic Control Module

Pin	Description
I CA100-8	IGNITION SWITCHED POWER SUPPLY - INERTIA SWITCH
O CA100-11	TRUNK LAMP ACTIVATE
I CA101-3	BATTERY POWER SUPPLY - LOGIC
I CA101-17	RH REAR (LHD) OR LH REAR (RHD) DOOR AJAR SWITCH
S CA102-1	SCP +
S CA102-2	SCP -
I CA102-12	GROUND
I CA102-14	TRUNK AJAR SWITCH
I CA103-11	GROUND SUPPLY
I CA103-12	GROUND SUPPLY
I CA103-16	LH REAR (LHD) OR RH REAR (RHD) DOOR AJAR SWITCH
I CA103-26	GROUND SUPPLY

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
DOOR COURTESY LAMP - DRIVER	DD6	2-WAY / BLACK	DRIVER DOOR
DOOR COURTESY LAMP - PASSENGER	PD3	2-WAY / BLACK	PASSENGER DOOR
DOOR LATCH ASSEMBLY - DRIVER	DT5	10-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY - LH REAR	CA81	10-WAY / BLACK	LH REAR DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY - PASSENGER	PT3	10-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY - RH REAR	CA90	10-WAY / BLACK	RH REAR DOOR, TRIM PANEL
FASCIA LAMP - LH	FC44	1-WAY / WHITE	LH FOOTWELL
FASCIA LAMP - RH	FC51	1-WAY / WHITE	RH FOOTWELL
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
GLOVE BOX LAMP	FC31	2-WAY / BLACK	GLOVE BOX
INSTRUMENT PACK	FC14 FC15 FC63	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	FASCIA FASCIA FASCIA
MAP LAMP SWITCH - LH FRONT	RF13	6-WAY / BLACK	ROOF CONSOLE
MAP LAMP SWITCH - RH FRONT	RF15	6-WAY / BLACK	ROOF CONSOLE
MAP LAMP - LH FRONT	RF11	1-WAY / METALLIC	ROOF CONSOLE
MAP LAMP - LH REAR	RF17	1-WAY / METALLIC	ROOF CONSOLE
MAP LAMP - RH FRONT	RF20	4-WAY / BLACK	ABOVE GRAB HANDLE
MAP LAMP - RH REAR	RF16	1-WAY / METALLIC	ROOF CONSOLE
MAP LAMP - RH REAR	RF7	1-WAY / METALLIC	ROOF CONSOLE
MAP LAMP - RH REAR	RF23	4-WAY / BLACK	ABOVE GRAB HANDLE
PRIMARY JUNCTION BOX	CA2 CA56 FC37 FH7 FH53	26-WAY / BLACK 8-WAY / GREY 26-WAY / BLACK 6-WAY / GREY 10-WAY / GREY	'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE
REAR ELECTRONIC CONTROL MODULE	CA63 CA99 CA100 CA101 CA102 CA103 CA104	17-WAY / BLACK 4-WAY / GREY 12-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK 26-WAY / WHITE 4-WAY / BLACK	TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR
ROOF CONSOLE SWITCH PACK	RF26	8-WAY / WHITE	ROOF CONSOLE
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
SUNVISOR LAMP - LH (AND GARAGE DOOR OPENER - NAS)	RF12	2-WAY / BLACK	WINDSHIELD, LH SIDE
SUNVISOR LAMP - RH	RF24	2-WAY / BLACK	WINDSHIELD, RH SIDE
TRUNK LAMP - LH	CA167	1-WAY / BLACK	TRUNK, LH SIDE
TRUNK LAMP - RH	CA96	1-WAY / BLACK	TRUNK, RH SIDE
TRUNK SWITCH	CA117	2-WAY / BLACK	TRUNK LID

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC13	22-WAY / WHITE / JUNCTION CONNECTOR	ADJACENT TO STEERING COLUMN MOTOR
FC36	22-WAY WHITE / JUNCTION CONNECTOR	BEHIND GLOVE BOX
PD4	10-WAY / GREY / PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
PT1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
RF34	14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELOW PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA157	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SS Sensor Supply V	D Serial and Encoded Data
O Output	S SCP Network	B+ Battery Voltage
SG Sensor Ground	A ACP Network	V Voltage (DC)


PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

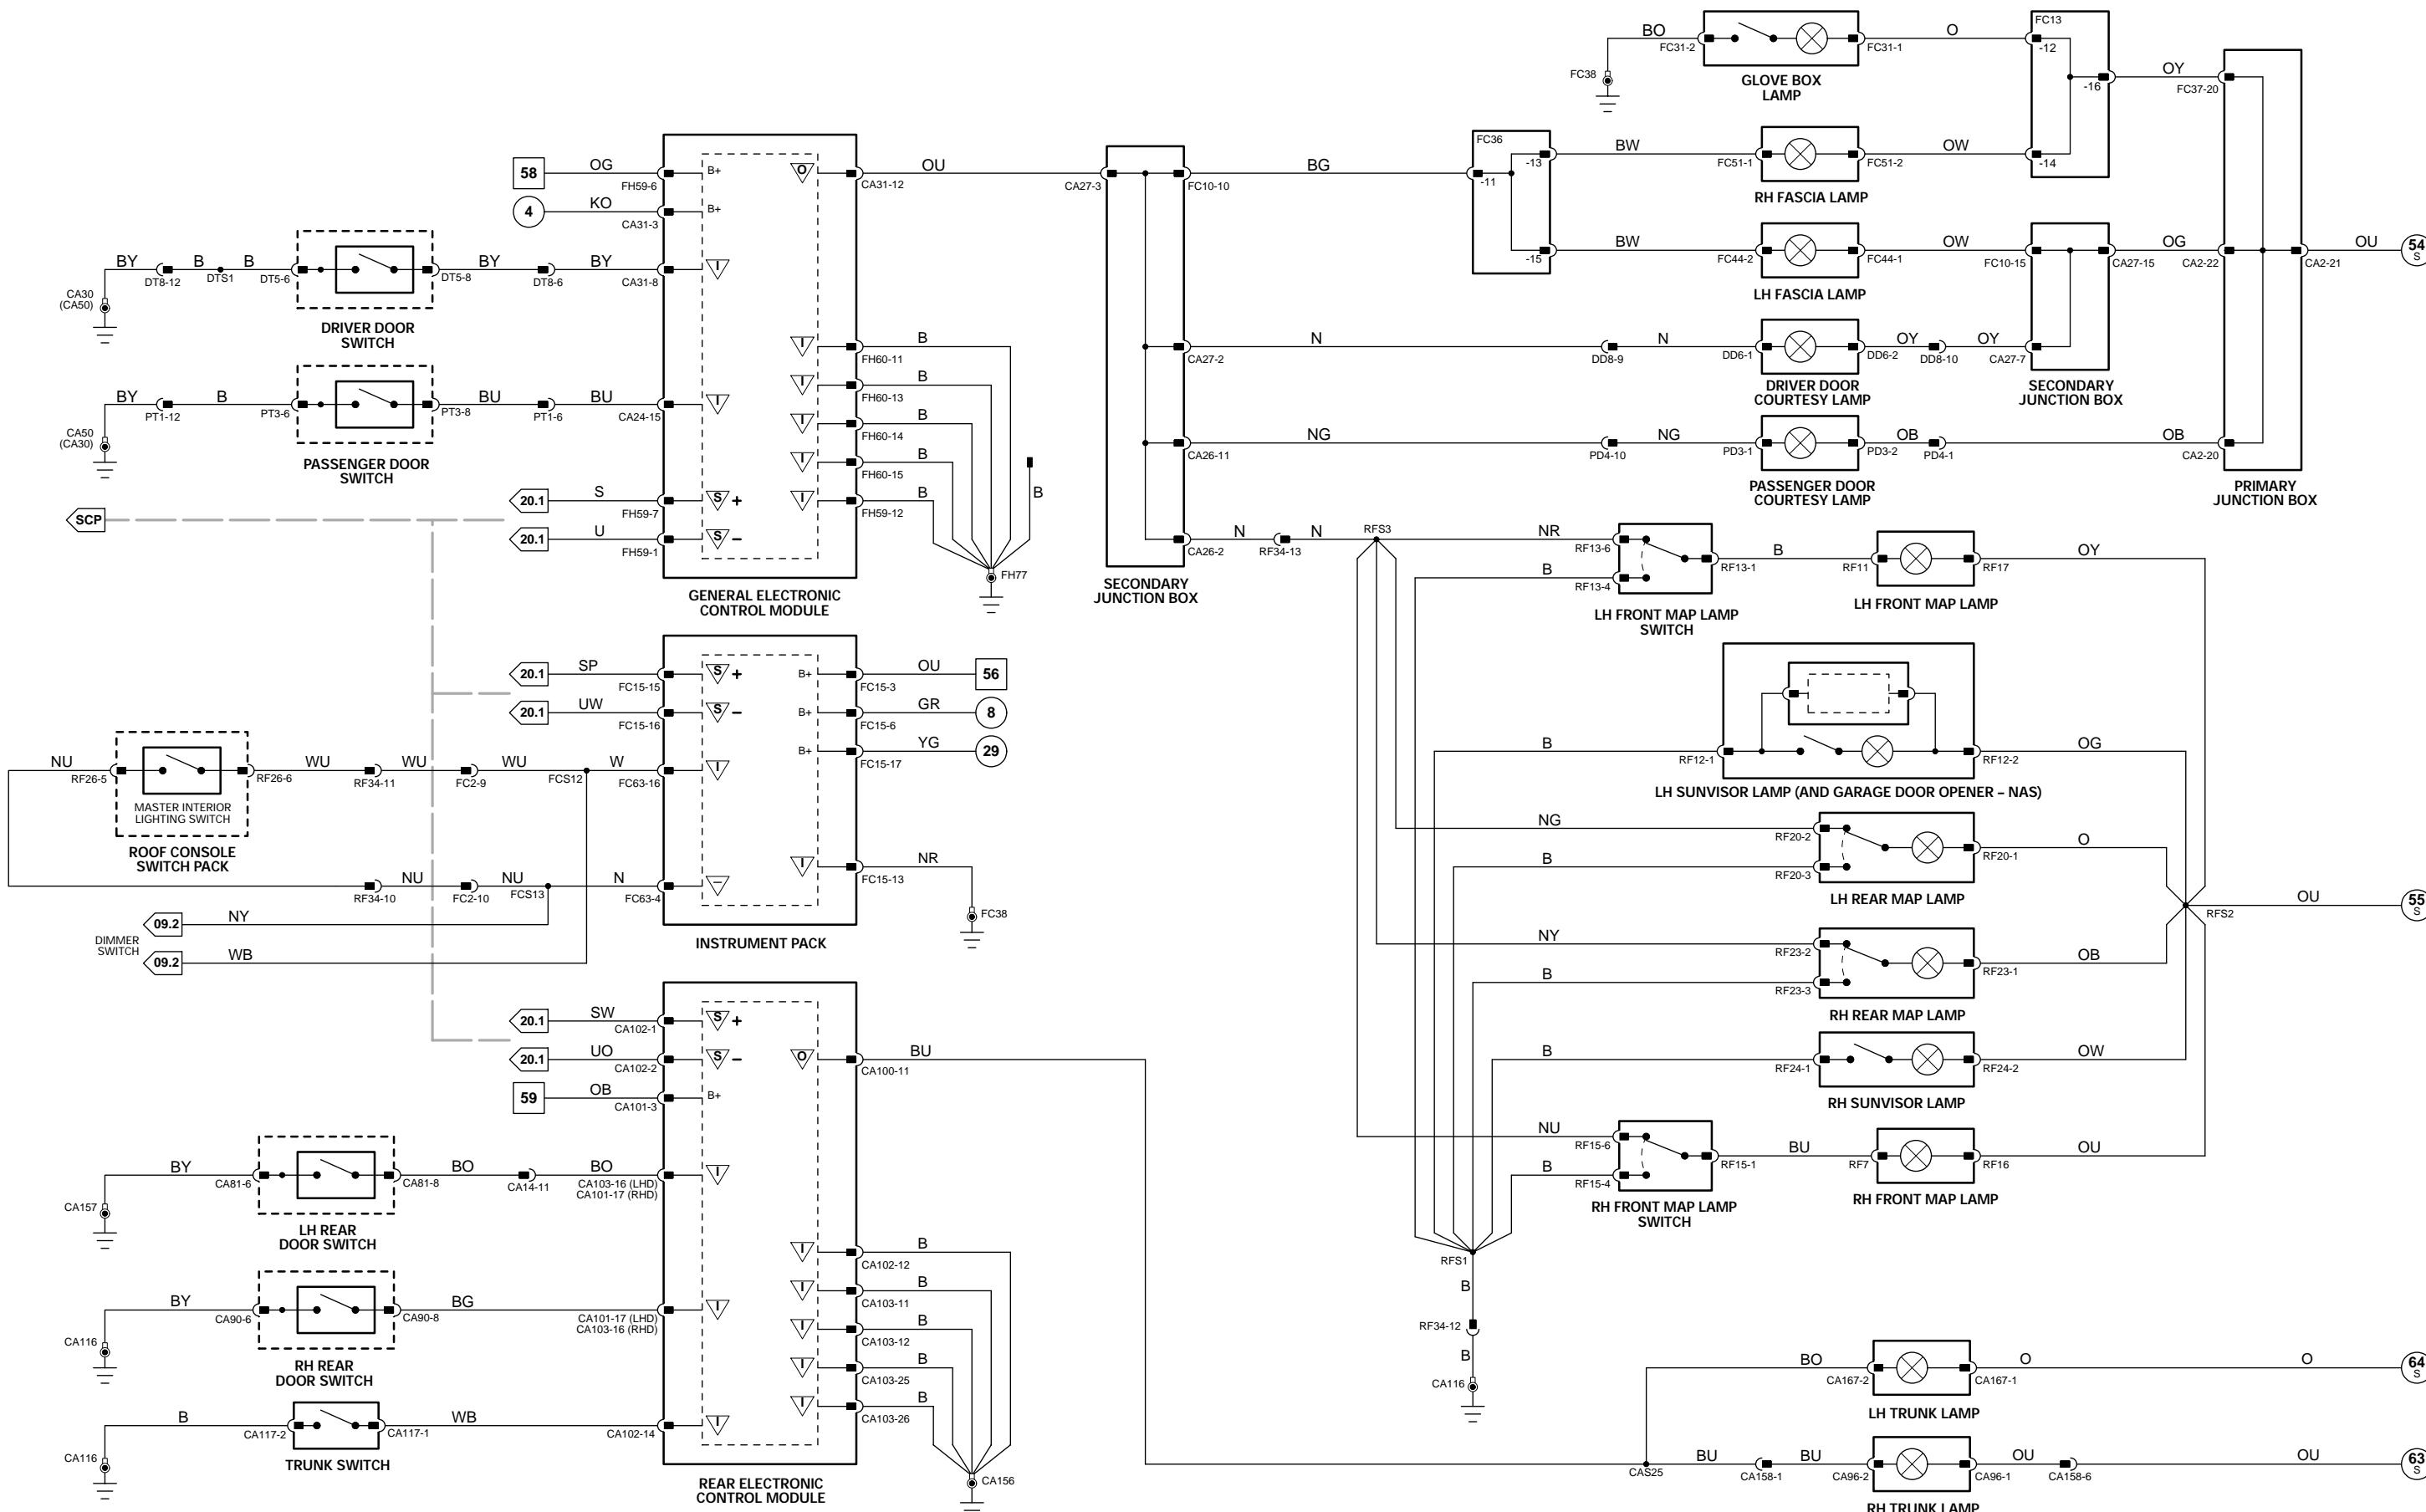

Air Conditioning Control Module

Pin	Description	Active	Inactive
S	FC28-1	SCP -	2 - 1600 Hz
S	FC28-12	SCP +	2 - 1600 Hz

General Electronic Control Module

Pin	Description	Active	Inactive
O	CA24-1	LOCATE ILLUMINATION ACTIVATE	B+ (PWM)
I	CA31-1	LOCATE ILLUMINATION POWER SUPPLY	B+
O	CA31-11	LOCATE ILLUMINATION	B+ (PWM)
S	FH69-1	SCP -	2 - 1600 Hz
I	FH69-6	BATTERY POWER SUPPLY	B+
S	FH69-7	SCP +	2 - 1600 Hz
I	FH69-12	GROUND SUPPLY	GROUND
I	FH60-11	GROUND SUPPLY	GROUND
I	FH60-13	GROUND SUPPLY	GROUND
I	FH60-14	GROUND SUPPLY	GROUND
I	FH60-15	GROUND SUPPLY	GROUND

Instrument Pack

Pin	Description	Active	Inactive
O	FC14-7	SWITCH LOCATE LIGHTING ILLUMINATION	GROUND (PWM)
I	FC15-3	BATTERY POWER SUPPLY	B+
I	FC15-6	IGNITION SWITCHED POWER SUPPLY	B+
I	FC15-13	GROUND SUPPLY	GROUND
S	FC15-15	SCP +	2 - 1600 Hz
S	FC16-16	SCP -	2 - 1600 Hz
I	FC16-17	IGNITION SWITCHED POWER SUPPLY	B+
SG	FC63-1	LIGHTING SWITCH REFERENCE GROUND	GROUND
SG	FC63-4	MASTER INTERIOR LIGHTING SWITCH / DIMMER SWITCH REFERENCE GROUND	GROUND
I	FC63-12	EXTERIOR LIGHTING MODE SELECTION REQUEST	2.9V = SIDE LAMPS; 2.1V = HEADLAMPS; 0.8V = FOGLAMPS 1.9V = DIM; 4V = BRIGHT; 0V = MASTER INTERIOR LIGHTS ON
I	FC63-16	DIMMER SWITCH / MASTER INTERIOR LIGHTS ACTIVATE	

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING CONTROL MODULE	FC27	26-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
	FC28	22-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
CIGAR LIGHTER	CA109	3-WAY / BROWN	CENTER CONSOLE
DIMMER SWITCH	FC60	6-WAY / BLACK	FASCIA, ADJACENT TO STEERING COLUMN
DOOR SWITCH PACK - DRIVER	DD2	26-WAY / YELLOW	DRIVER DOOR ARM REST
GENERAL ELECTRONIC CONTROL MODULE	CA24	26-WAY / WHITE	'A' POST, LH SIDE
	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
HEADLAMP LEVELING SWITCH	FC41	6-WAY / BLACK	FASCIA, ADJACENT TO STEERING COLUMN
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
J-GATE ASSEMBLY	CA41	16-WAY / GREEN	CENTER CONSOLE
LIGHTING SWITCH	FC11	10-WAY / YELLOW	FASCIA, ADJACENT TO STEERING COLUMN
MESSAGE CENTER SWITCH PACK	FC65	8-WAY / BLACK	FASCIA, ADJACENT TO INSTRUMENT PACK
NAVIGATION DISPLAY MODULE	FC67	20-WAY / WHITE	FASCIA, CENTER
PRIMARY JUNCTION BOX	CA2	26-WAY / BLACK	'A' POST, RH SIDE
	CA56	8-WAY / GREY	'A' POST, RH SIDE
	FC37	26-WAY / BLACK	'A' POST, RH SIDE
	FH7	6-WAY / GREY	'A' POST, RH SIDE
	FH53	10-WAY / GREY	'A' POST, RH SIDE
RADIO HEAD UNIT	FC71	7-WAY / GREY	FASCIA, CENTER
	FC72	8-WAY / BLACK	FASCIA, CENTER
	FC73	17-WAY / BLACK	FASCIA, CENTER
	FC74	12-WAY / BLACK	FASCIA, CENTER
	FC75	12-WAY / BLACK	FASCIA, CENTER
	FC85	10-WAY / BLACK	FASCIA, CENTER
SEAT HEATER SWITCH - LH FRONT	FC68	8-WAY / VIOLET	BELOW CLIMATE CONTROL PANEL
SEAT HEATER SWITCH - RH FRONT	FC69	8-WAY / WHITE	BELOW CLIMATE CONTROL PANEL
SECONDARY JUNCTION BOX	CA26	16-WAY / BLUE	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
	CA27	8-WAY / GREY	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
	FC10	16-WAY / GREEN	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
	FH10	10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
STEERING WHEEL AUDIO CONTROL SWITCHES	SQ1	10-WAY / WHITE	STEERING WHEEL
STEERING WHEEL CRUISE CONTROL SWITCHES	SQ2	10-WAY / WHITE	STEERING WHEEL
TRACTION CONTROL SWITCH	CA45	8-WAY / BLUE	CENTER CONSOLE
TRANSMISSION MODE SWITCH	CA38	10-WAY / GREEN	CENTER CONSOLE
WINDOW SWITCH - LH REAR	CA78	5-WAY / GREEN	LH REAR DOOR ARM REST
WINDOW SWITCH - PASSENGER	PD1	5-WAY / GREEN	PASSENGER DOOR ARM REST
WINDOW SWITCH - RH REAR	CA95	5-WAY / GREEN	RH REAR DOOR ARM REST

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC12	22-WAY / WHITE / JUNCTION CONNECTOR	ADJACENT TO STEERING COLUMN MOTOR
FC36	22-WAY WHITE / JUNCTION CONNECTOR	BEHIND GLOVE BOX
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
PD4	10-WAY / GREY / PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA141	GROUND EYELET	BELOW FRONT SEAT; LH SIDE / UNDER SEAT
CA157	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

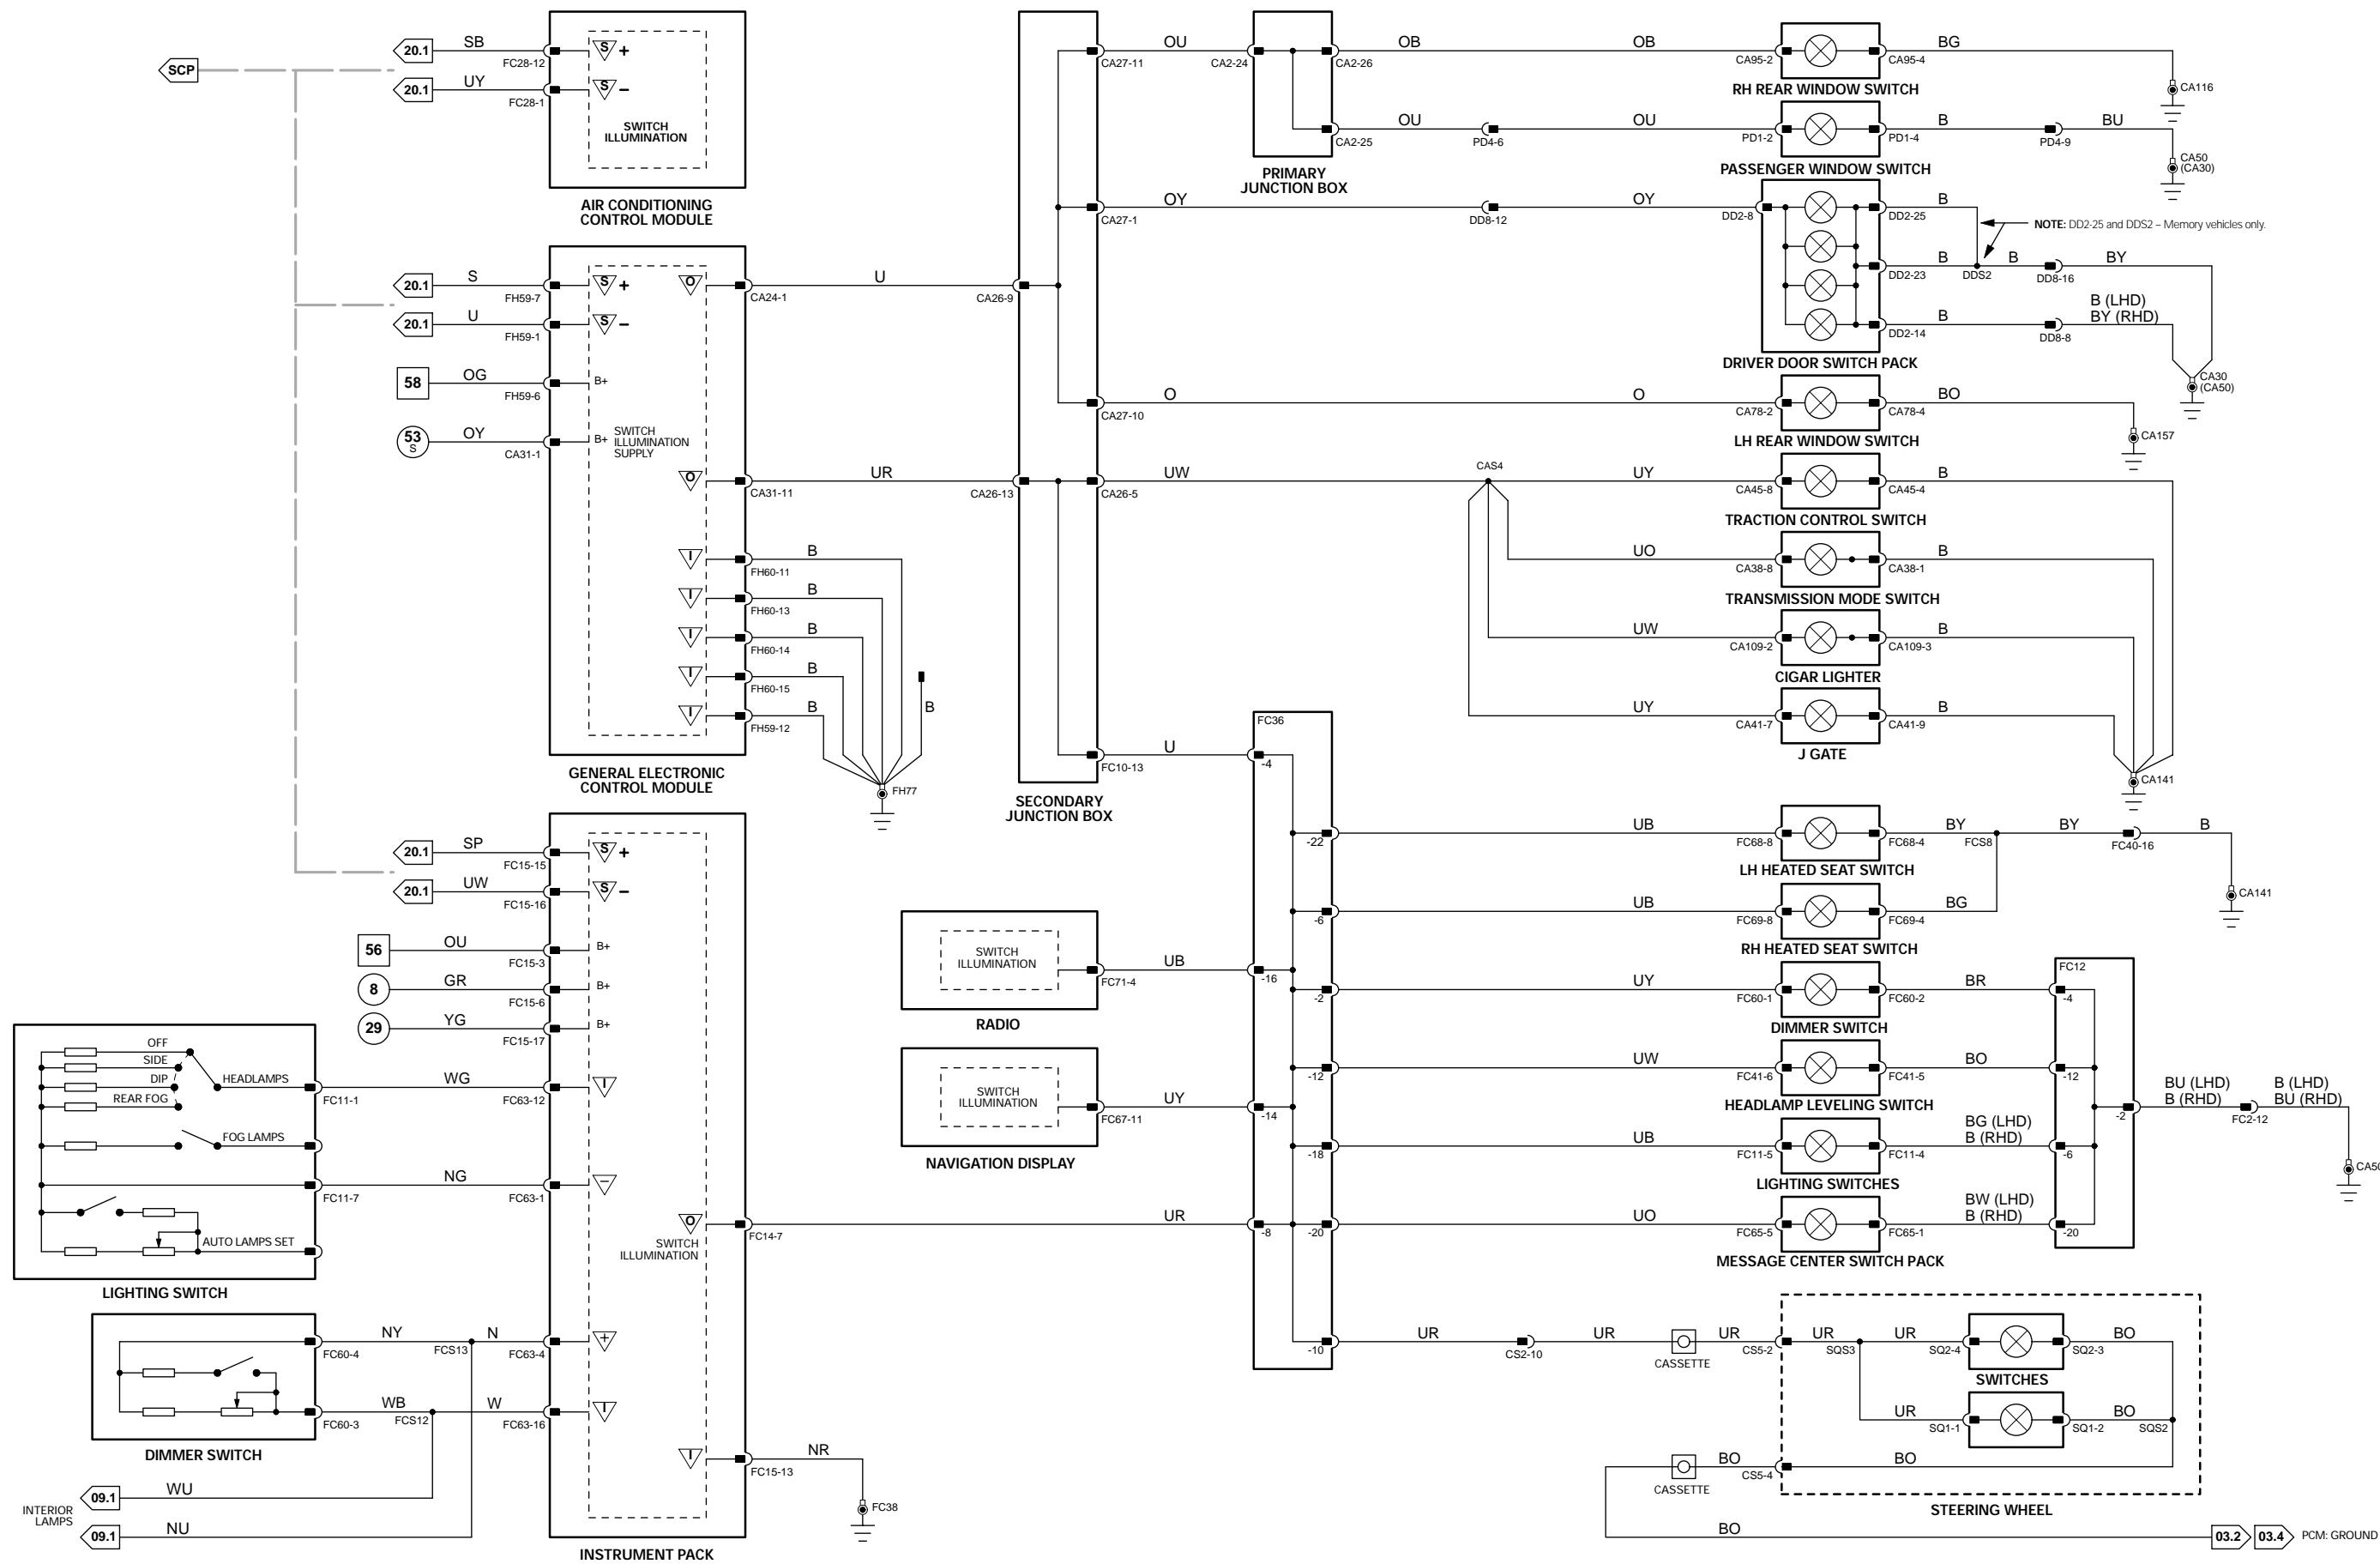


Fig. 10.1

Driver Door Control Module

Pin	Description
S CA85-3	SCP +
S CA85-4	SCP -
I CA85-7	GROUND SUPPLY
O DD4-7	MEMORY SET INDICATOR LED
I DD4-10	MEMORY '1' BUTTON INPUT
I DD4-11	MEMORY '2' BUTTON INPUT
I DD4-25	MEMORY 'SET' BUTTON INPUT

Active	Inactive
2 – 1600 Hz	
2 – 1600 Hz	
GROUND	GROUND
B+	GROUND
GROUND	B+
GROUND	B+
GROUND	B+

General Electronic Control Module

Pin	Description
S FH59-1	SCP -
S FH59-7	SCP +
I FH59-12	GROUND SUPPLY
I FH60-1	SWITCHED SYSTEM POWER SUPPLY
O FH60-2	VARIABLE ASSIST STEERING ACTUATOR NEGATIVE
O FH60-9	VARIABLE ASSIST STEERING ACTUATOR POSITIVE
I FH60-11	GROUND SUPPLY
I FH60-13	GROUND SUPPLY
I FH60-14	GROUND SUPPLY
I FH60-15	GROUND SUPPLY

Active	Inactive
2 – 1600 Hz	
2 – 1600 Hz	
GROUND	GROUND
B+	GROUND
2V @ IDLE; DECREASING WITH VEHICLE SPEED	
9V @ IDLE; INCREASING WITH VEHICLE SPEED	
GROUND	GROUND

Instrument Pack

Pin	Description
I FC14-1	COLUMN MOTORS BATTERY POWER SUPPLY
O FC14-2	STEERING COLUMN MOTOR UP SUPPLY
O FC14-3	STEERING COLUMN MOTOR DOWN SUPPLY
O FC14-4	STEERING COLUMN MOTOR IN SUPPLY
O FC14-5	STEERING COLUMN MOTOR OUT SUPPLY
I FC15-3	BATTERY POWER SUPPLY
I FC15-6	IGNITION SWITCHED POWER SUPPLY
I FC15-13	GROUND SUPPLY
S FC15-15	SCP +
S FC15-16	SCP -
I FC15-17	IGNITION SWITCHED POWER SUPPLY
SG FC63-3	STEERING COLUMN ADJUSTMENT SWITCH REFERENCE GROUND
SG FC63-9	STEERING COLUMN POSITION POTENTIOMETERS COMMON REFERENCE GROUND
I FC63-10	STEERING COLUMN TILT AWAY FEATURE SELECTION
I FC63-15	STEERING COLUMN MOVEMENT REQUEST
SS FC63-19	STEERING COLUMN POSITION POTENTIOMETERS COMMON REFERENCE VOLTAGE
I FC63-20	STEERING COLUMN UP / DOWN POSITION POTENTIOMETER FEEDBACK
I FC63-21	STEERING COLUMN IN / OUT POSITION POTENTIOMETER FEEDBACK

Active	Inactive
B+	B+
B+	GROUND
GROUND	GROUND
GROUND	GROUND
GROUND	GROUND
2 – 1600 Hz	
2 – 1600 Hz	
B+	GROUND
SG FC63-3	GROUND
SG FC63-9	GROUND
I FC63-10	GROUND = ON
I FC63-15	2.1V = UP; 1.1V = DOWN; 2.8V = IN; 3.2V = OUT
SS FC63-19	4.8V = AT REST
I FC63-20	B+ = OFF
I FC63-21	5V
	5V
	1 – 4V
	1 – 4V

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
COLUMN POSITION FEEDBACK POTENTIOMETERS	CS4	10-WAY / WHITE	STEERING COLUMN
DOOR CONTROL MODULE – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR SWITCH PACK – DRIVER	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
GENERAL ELECTRONIC CONTROL MODULE	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
	DD2	26-WAY / YELLOW	DRIVER DOOR ARM REST
	CA24	26-WAY / WHITE	'A' POST, LH SIDE
	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
INSTRUMENT PACK	CS12	10-WAY / BLACK	STEERING COLUMN
STEERING COLUMN ADJUST SWITCH	FC17	4-WAY / WHITE	STEERING COLUMN
STEERING COLUMN MOTORS	FH16	2-WAY / BLACK	ON STEERING RACK ASSEMBLY

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
CS3	10-WAY / GREY / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL

GROUNDS

Ground	Ground Description	Location
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SS Sensor Supply V	D Serial and Encoded Data
O Output	S SCP Network	B+ Battery Voltage
SG Sensor Ground	A ACP Network	V Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

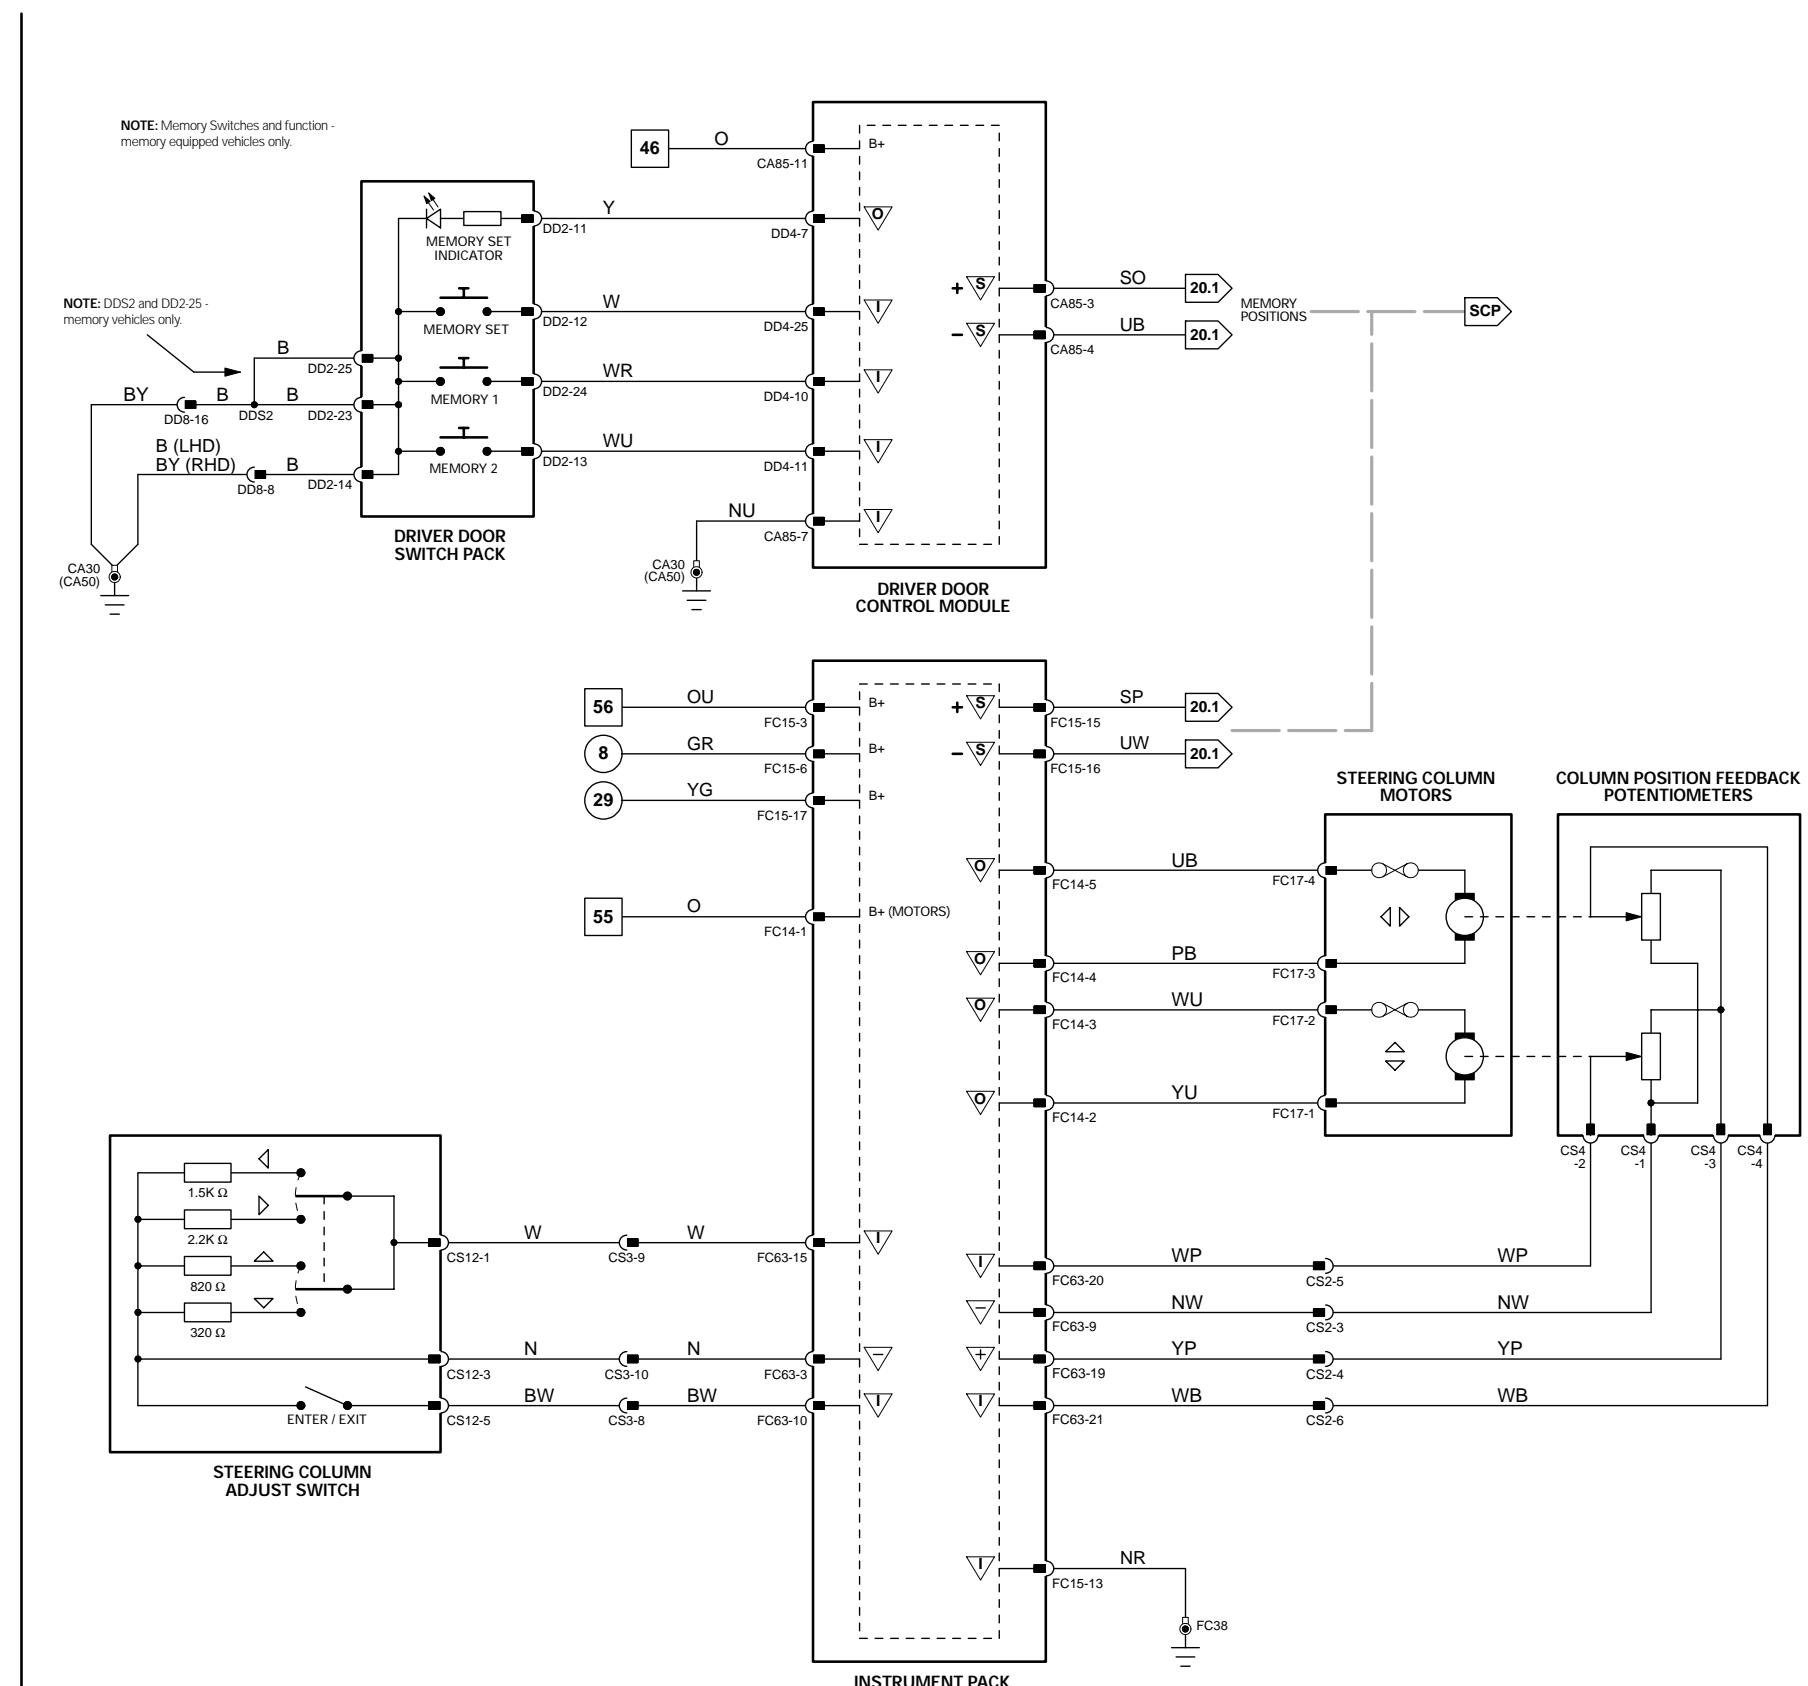
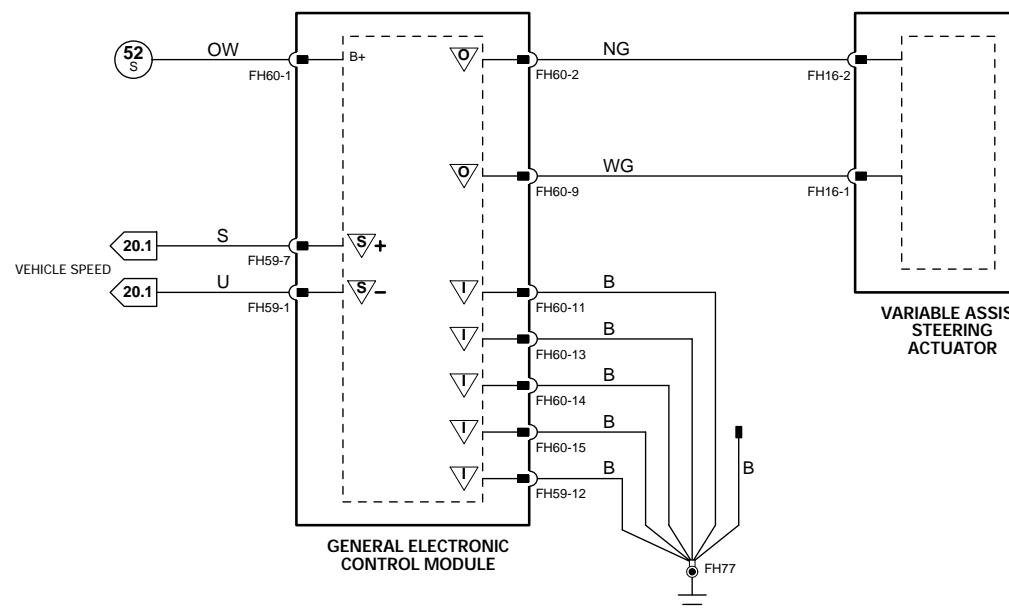


Fig. 10.2

Air Conditioning Control Module

Pin	Description	Active	Inactive
S	FC28-1	SCP -	2 – 1600 Hz
S	FC28-12	SCP +	2 – 1600 Hz

Driver Door Control Module

Pin	Description	Active	Inactive
S	CA85-3	SCP +	2 – 1600 Hz
S	CA85-4	SCP -	2 – 1600 Hz
I	CA85-7	GROUND SUPPLY	GROUND
I	CA85-11	BATTERY POWER SUPPLY	B+
I	CA85-12	SWITCHED SYSTEM POWER SUPPLY	B+
O	DD4-7	MEMORY SET INDICATOR LED	B+
I	DD4-10	MEMORY '1' BUTTON INPUT	GROUND
I	DD4-11	MEMORY '2' BUTTON INPUT	GROUND
I	DD4-14	PASSENGER MIRROR UP / DOWN MOVEMENT REQUEST	B+
I	DD4-15	PASSENGER MIRROR LEFT / RIGHT MOVEMENT REQUEST	B+
I	DD4-16	DRIVER MIRROR UP / DOWN MOVEMENT REQUEST	B+
I	DD4-17	DRIVER MIRROR LEFT / RIGHT MOVEMENT REQUEST	B+
I	DD4-18	MIRROR MOVEMENT COMMON SUPPLY	GROUND
I	DD4-25	MEMORY 'SET' BUTTON INPUT	GROUND
O	DT2-1	DRIVER MIRROR OUT MOVEMENT SUPPLY	B+
O	DT2-2	DRIVER MIRROR IN MOVEMENT SUPPLY	B+
O	DT2-3	DRIVER MIRROR UP MOVEMENT SUPPLY	B+
O	DT2-4	DRIVER MIRROR DOWN MOVEMENT SUPPLY	B+
SS	DT2-5	MIRROR POSITION POTENTIOMETER REFERENCE VOLTAGE	B+
I	DT2-14	MIRROR IN / OUT POSITION FEEDBACK	1 – 8V
I	DT2-15	MIRROR UP / DOWN POSITION FEEDBACK	1 – 8V
SG	DT2-19	MIRROR POSITION POTENTIOMETER REFERENCE GROUND	GROUND

General Electronic Control Module

Pin	Description	Active	Inactive
I	CA24-7	PASSENGER DOOR MIRROR HORIZONTAL POSITION FEEDBACK	1.9V = IN
SS	CA24-8	PASSENGER DOOR MIRROR POTENTIOMETER REFERENCE VOLTAGE	9V
I	CA24-11	PASSENGER DOOR MIRROR VERTICAL POSITION FEEDBACK	7V = UP
O	CA24-20	PASSENGER DOOR MIRROR UP MOVEMENT REQUEST	B+
O	CA24-21	PASSENGER DOOR MIRROR DOWN MOVEMENT REQUEST	B+
SG	CA24-22	PASSENGER DOOR MIRROR POTENTIOMETER REFERENCE GROUND	GROUND
O	CA24-23	PASSENGER DOOR MIRROR IN MOVEMENT REQUEST	B+
O	CA24-24	PASSENGER DOOR MIRROR OUT MOVEMENT REQUEST	B+
I	CA31-3	IGNITION SWITCHED POWER SUPPLY – LOGIC	GROUND
S	FH59-1	SCP -	2 – 1600 Hz
I	FH59-6	BATTERY POWER SUPPLY	B+
S	FH59-7	SCP +	2 – 1600 Hz
I	FH60-1	SWITCHED SYSTEM POWER SUPPLY	GROUND
I	FH60-11	GROUND SUPPLY	GROUND
I	FH60-13	GROUND SUPPLY	GROUND
I	FH60-14	GROUND SUPPLY	GROUND
I	FH60-15	GROUND SUPPLY	GROUND

Rear Electronic Control Module

Pin	Description	Active	Inactive
I	CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH	B+
I	CA101-3	BATTERY POWER SUPPLY – LOGIC	B+
S	CA102-1	SCP +	2 – 1600 Hz
S	CA102-2	SCP -	2 – 1600 Hz
O	CA102-7	HEATED BACKLIGHT RELAY ACTIVATE	GROUND
I	CA102-12	GROUND	GROUND
I	CA103-11	GROUND SUPPLY	GROUND
I	CA103-12	GROUND SUPPLY	GROUND
I	CA103-13	SWITCHED SYSTEM POWER SUPPLY	B+
I	CA103-25	GROUND SUPPLY	GROUND
I	CA103-26	GROUND SUPPLY	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
AIR CONDITIONING CONTROL MODULE	FC27	26-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
	FC28	22-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL
DOOR CONTROL MODULE – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
	DT6	16-WAY / BLACK	DRIVER DOOR
	Q05	10-WAY / BLUE	DRIVER DOOR
DOOR MIRROR ASSEMBLY – DRIVER	CA19	16-WAY / BLACK	PASSENGER DOOR
	Q04	10-WAY / BLUE	PASSENGER DOOR
DOOR SWITCH PACK – DRIVER	DD2	26-WAY / YELLOW	DRIVER DOOR ARM REST
GENERAL ELECTRONIC CONTROL MODULE	CA24	26-WAY / WHITE	'A' POST, LH SIDE
	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
HEATED BACKLIGHT			REAR WINDOW
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL

GROUNDS

Ground	Ground Description	Location
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.



NOTE: The A/CCM incorporates the switches for the Backlight and Mirror Heaters.

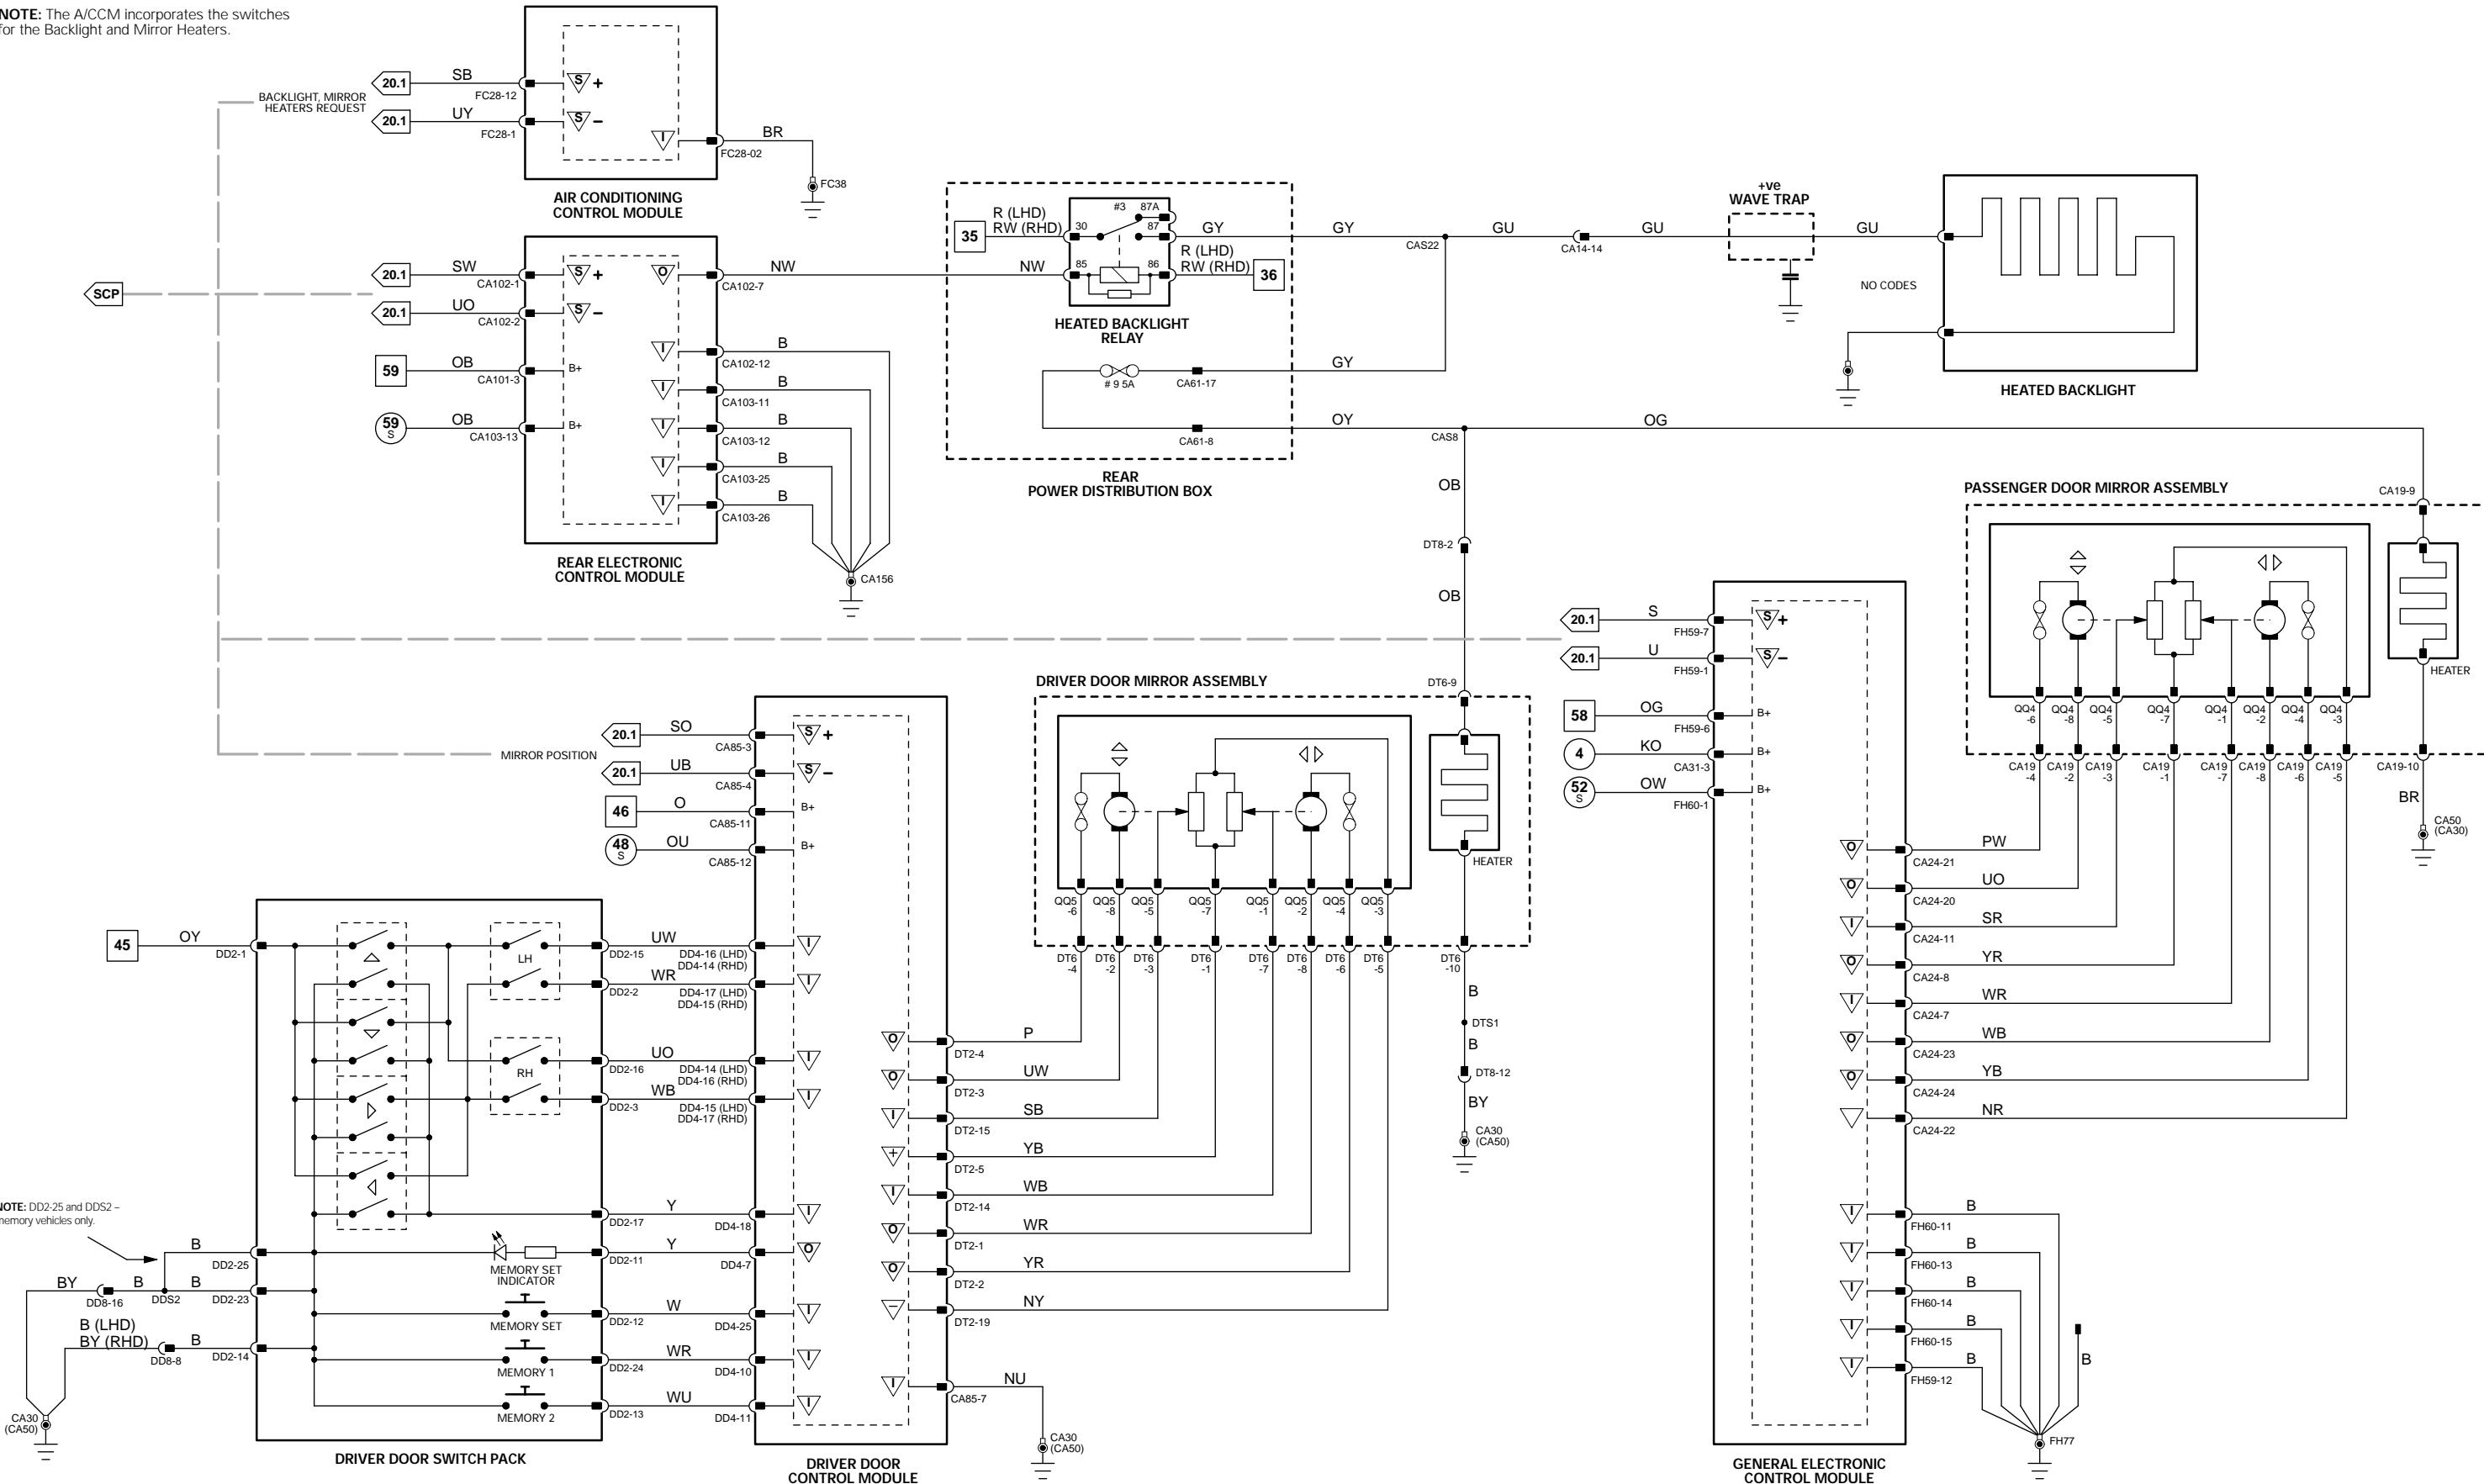


Fig. 10.3

Instrument Pack

Pin	Description	Active	Inactive
I	FC15-3	BATTERY POWER SUPPLY	B+
I	FC15-6	IGNITION SWITCHED POWER SUPPLY	B+
I	FC15-13	GROUND SUPPLY	GROUND
S	FC15-15	SCP +	2 - 1600 Hz
S	FC15-16	SCP -	2 - 1600 Hz
I	FC15-17	IGNITION SWITCHED POWER SUPPLY	B+
SG	FC63-1	LIGHTING SWITCH REFERENCE GROUND	GROUND
I	FC63-12	EXTERIOR LIGHTING MODE SELECTION REQUEST	2.9V = SIDE LAMPS; 2.1V = HEADLAMPS; 0.8V = FOGLAMPS
I	FC63-13	FRONT FOGLAMP ACTIVATION REQUEST	1.5V = ON
I	FC63-14	AUTO HEADLAMP DELAY SETTING FEEDBACK	1.4V = 3 MINUTES

Rear Electronic Control Module

Pin	Description	Active	Inactive
I	CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH	B+
I	CA101-3	BATTERY POWER SUPPLY – LOGIC	B+
S	CA102-1	SCP +	2 - 1600 Hz
S	CA102-2	SCP -	2 - 1600 Hz
O	CA102-4	ELECTROCHROMIC REAR VIEW MIRROR DIM REQUEST	B+
I	CA102-12	GROUND	GROUND
I	CA103-11	GROUND SUPPLY	GROUND
I	CA103-12	GROUND SUPPLY	GROUND
I	CA103-25	GROUND SUPPLY	GROUND
I	CA103-26	GROUND SUPPLY	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
DOOR MIRROR ASSEMBLY – DRIVER	DT6	16-WAY / BLACK	DRIVER DOOR
	QO5	10-WAY / BLUE	DRIVER DOOR
DOOR MIRROR ASSEMBLY – PASSENGER	CA19	16-WAY / BLACK	PASSENGER DOOR
	QO4	10-WAY / BLUE	PASSENGER DOOR
FOLD BACK MIRROR SWITCH	DD1	60-WAY / WHITE	DRIVER DOOR MAP POCKET
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
LIGHTING SWITCH	FC11	10-WAY / YELLOW	FASCIA, ADJACENT TO STEERING COLUMN
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
REAR VIEW MIRROR	RF35	3-WAY / BLACK	WINDSHIELD, CENTER

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
RF34	14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELOW PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data



I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

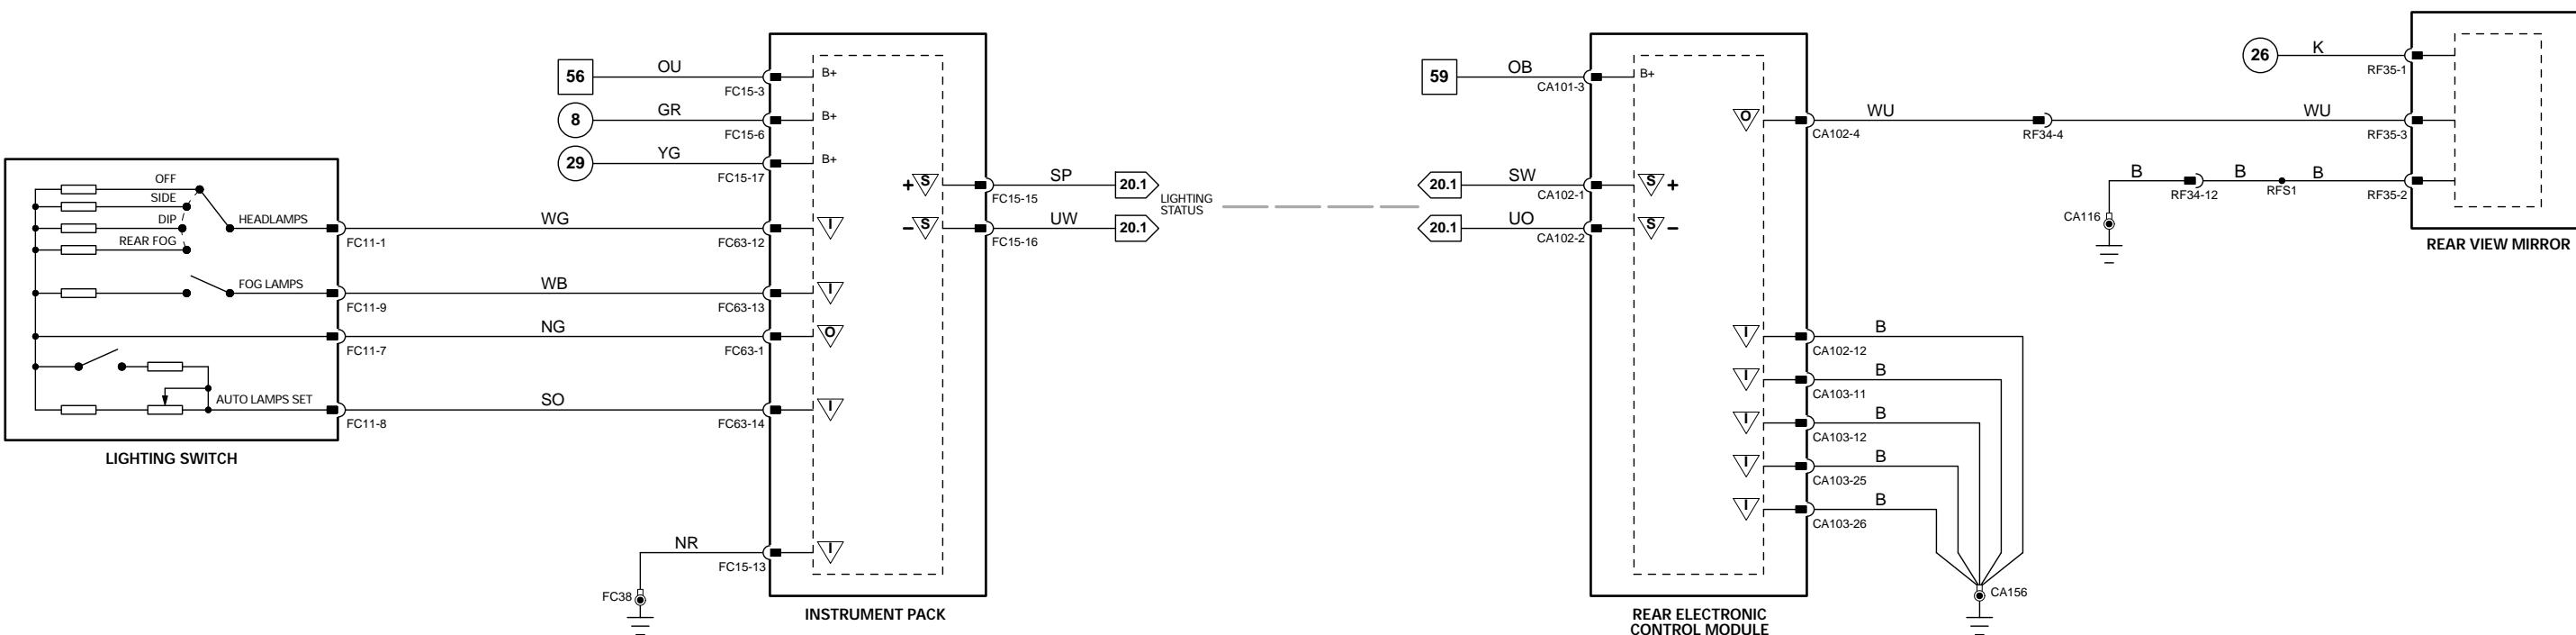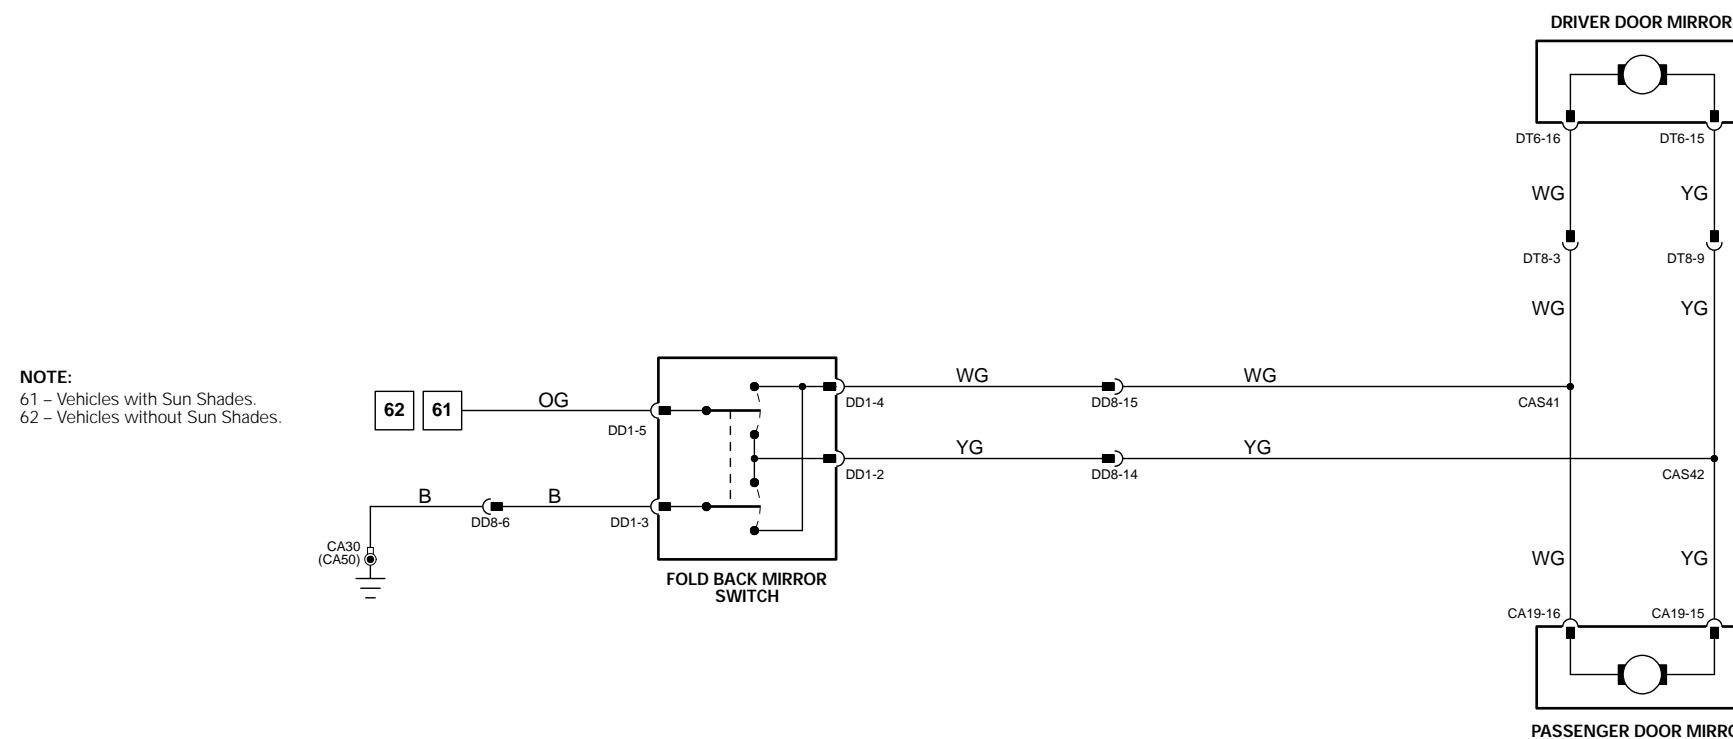

Driver Door Control Module

Pin	Description	Active	Inactive
S	CA85-3	SCP +	2 – 1600 Hz
S	CA85-4	SCP -	2 – 1600 Hz
I	CA85-7	GROUND SUPPLY	GROUND
I	CA85-11	BATTERY POWER SUPPLY	B+
O	DD4-7	MEMORY SET INDICATOR LED	B+
I	DD4-10	MEMORY '1' BUTTON INPUT	GROUND
I	DD4-11	MEMORY '2' BUTTON INPUT	GROUND
I	DD4-25	MEMORY 'SET' BUTTON INPUT	GROUND

Driver Seat Control Module

Pin	Description	Active	Inactive
O	DM6-1	SEAT FORE / AFT MOTOR SUPPLY	B+
O	DM6-2	SEAT BACK RECLINE MOTOR SUPPLY	B+
SG	DM6-3	SEAT RECLINE POSITION POTENTIOMETER REFERENCE GROUND	GROUND
I	DM6-4	SEAT FORE / AFT POSITION POTENTIOMETER FEEDBACK	1 – 8V
I	DM6-5	SEAT CUSHION FRONT POSITION POTENTIOMETER FEEDBACK	1 – 8V
SS	DM6-6	SEAT BACK RECLINE POSITION POTENTIOMETER REFERENCE VOLTAGE	B+
O	DM6-7	SEAT CUSHION FRONT MOTOR SUPPLY	B+
O	DM6-8	SEAT CUSHION REAR MOTOR SUPPLY	B+
O	DM6-9	SEAT BACK RECLINE MOTOR SUPPLY	B+
O	DM6-10	SEAT FORE / AFT MOTOR SUPPLY	B+
SG	DM6-11	SEAT POSITION POTENTIOMETER COMMON REFERENCE GROUND	GROUND
I	DM6-13	SEAT BACK RECLINE POSITION POTENTIOMETER FEEDBACK	1 – 8V
I	DM6-14	SEAT CUSHION REAR POSITION POTENTIOMETER FEEDBACK	1 – 8V
SS	DM6-15	SEAT POSITION POTENTIOMETER COMMON REFERENCE VOLTAGE	B+
O	DM6-16	SEAT CUSHION REAR MOTOR SUPPLY	B+
O	DM6-17	SEAT CUSHION FRONT MOTOR SUPPLY	B+
S	DM9-1	SCP +	2 – 1600 Hz
I	DM9-2	GROUND SUPPLY	GROUND
I	DM9-3	SEAT CUSHION REARWARD MOVEMENT REQUEST	B+
I	DM9-4	SEAT BACK RECLINE REQUEST	B+
I	DM9-5	SEAT CUSHION FRONT LOWER REQUEST	B+
I	DM9-6	SEAT CUSHION REAR LOWER REQUEST	B+
S	DM9-9	SCP -	2 – 1600 Hz
I	DM9-10	BATTERY POWER SUPPLY	B+
I	DM9-11	SEAT MOVEMENT FORWARD MOVEMENT REQUEST	B+
I	DM9-12	SEAT BACK RAISE REQUEST	B+
I	DM9-13	SEAT CUSHION FRONT RAISE REQUEST	B+
I	DM9-14	SEAT CUSHION REAR RAISE REQUEST	B+
I	DM10-3	GROUND SUPPLY	GROUND
I	DM10-4	SEAT MOTORS BATTERY POWER SUPPLY	B+

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
CUSHION FRONT RAISE / LOWER MOTOR – DRIVER	DM4	2-WAY / GREY	BELLOW SEAT CUSHION
CUSHION REAR RAISE / LOWER MOTOR – DRIVER	DM17	3-WAY / WHITE	BELLOW SEAT CUSHION
DOOR CONTROL MODULE – DRIVER	DM3	2-WAY / GREY	BELLOW SEAT CUSHION
DOOR CONTROL MODULE – DRIVER	DM14	3-WAY / WHITE	BELLOW SEAT CUSHION
DOOR SWITCH PACK – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
LUMBAR PUMP – DRIVER	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
LUMBAR SWITCH – DRIVER	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
LUMBAR SWITCH – DRIVER	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
SEAT BACK HEATER – DRIVER	DD2	26-WAY / YELLOW	DRIVER DOOR ARM REST
SEAT CONTROL MODULE – DRIVER	DB5	2-WAY / GREY	BEHIND SEAT BACK FINISHER
SEAT FORE / AFT MOTOR – DRIVER	DM2	6-WAY / GREY	DRIVER SEAT
SEAT FORE / AFT MOTOR – DRIVER	DB7	1-WAY / BLACK	SEAT BACK
SEAT HEATER CONTROL MODULE – DRIVER	DM6	17-WAY / BLACK	BELLOW SEAT CUSHION
SEAT HEATER SWITCH – LH FRONT	DM9	17-WAY / GREY	BELLOW SEAT CUSHION
SEAT HEATER SWITCH – RH FRONT	DM10	4-WAY / BROWN	BELLOW SEAT CUSHION
SEAT HEATER – DRIVER	DM1	2-WAY / GREY	BELLOW SEAT CUSHION
SEAT SWITCH PACK – DRIVER	DM13	3-WAY / WHITE	BELLOW SEAT CUSHION
SQUAB RECLINE MOTOR – DRIVER	DM15	10-WAY / YELLOW	BELLOW SEAT CUSHION
SQUAB RECLINE MOTOR – DRIVER	FC68	8-WAY / VIOLET	BELLOW CLIMATE CONTROL PANEL
SQUAB RECLINE MOTOR – DRIVER	FC69	8-WAY / WHITE	BELLOW CLIMATE CONTROL PANEL
SQUAB RECLINE MOTOR – DRIVER	DM16	4-WAY / BLACK	BELLOW SEAT CUSHION
SQUAB RECLINE MOTOR – DRIVER	DM7	12-WAY / GREY	DRIVER SEAT
SQUAB RECLINE MOTOR – DRIVER	DB3	2-WAY / BLACK	SEAT SQUAB
SQUAB RECLINE MOTOR – DRIVER	DB6	3-WAY / WHITE	SEAT SQUAB

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
DB1	10-WAY / GREY / DRIVER SEAT HARNESS TO SEAT BACK LINK LEAD	BEHIND SEAT BACK FINISHER
DD8	16-WAY / BLUE / DRIVER DOOR HARNESS TO CABIN HARNESS	BEHIND DOOR TRIM PANEL
DM18	14-WAY / GREY / CABIN HARNESS TO DRIVER SEAT HARNESS	BELLOW SEAT CUSHION
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)

GROUNDS

Ground	Ground Description	Location
CA141	GROUND EYELET	BELLOW FRONT SEAT; LH SIDE / UNDER SEAT
CA154	GROUND EYELET	BELLOW FRONT SEAT; RH SIDE / UNDER SEAT
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SS Sensor Supply V	D Serial and Encoded Data
O Output	S SCP Network	B+ Battery Voltage
SG Sensor Ground	A ACP Network	V Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

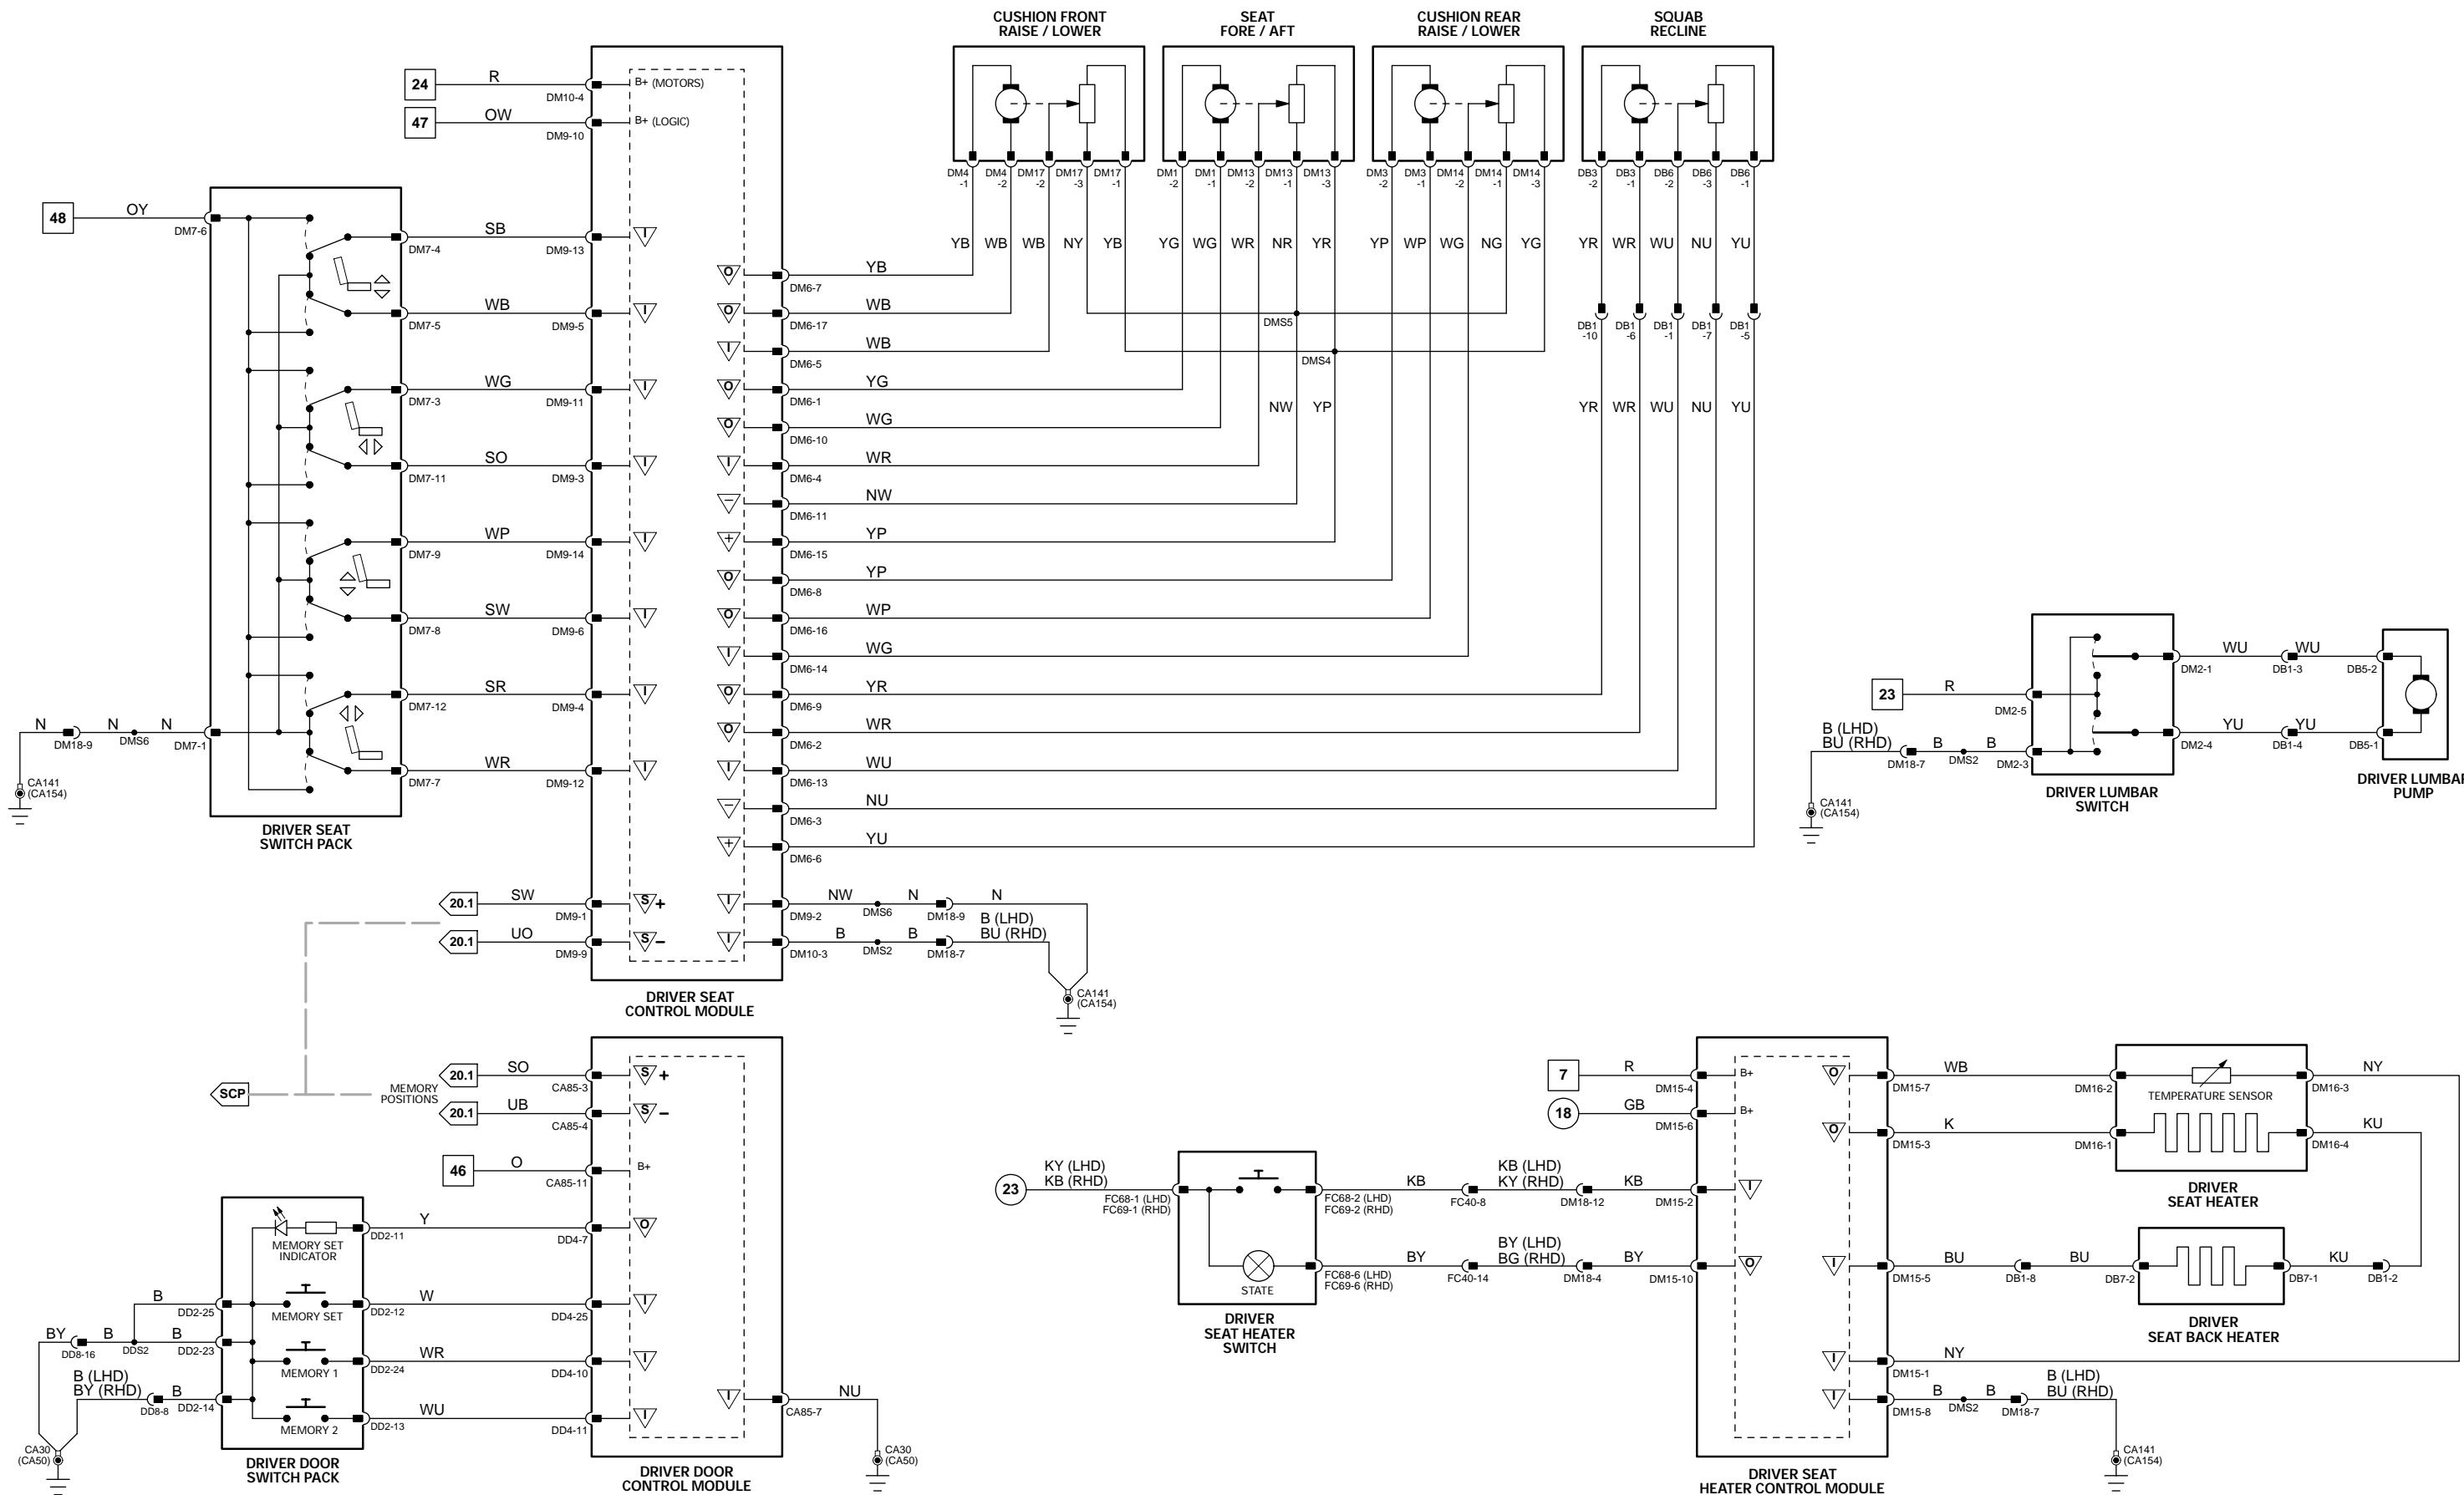


Fig. 11.2

COMPONENTS

Component

CUSHION FRONT RAISE / LOWER MOTOR – DRIVER
CUSHION REAR RAISE / LOWER MOTOR – DRIVER
LUMBAR PUMP – DRIVER
LUMBAR SWITCH – DRIVER
SEAT BACK HEATER – DRIVER
SEAT FORE / AFT MOTOR – DRIVER
SEAT HEATER CONTROL MODULE – DRIVER
SEAT HEATER SWITCH – LH FRONT
SEAT HEATER SWITCH – RH FRONT
SEAT HEATER – DRIVER
SEAT SWITCH PACK – DRIVER
SQUAB RECLINE MOTOR – DRIVER

Connector(s)

DM4
DM3
DB5
DM2
DB7
DM1
DM15
FC68
FC69
DM16
DM7
DB3

Connector Description

2-WAY / GREY
2-WAY / GREY
2-WAY / GREY
6-WAY / GREY
1-WAY / BLACK
2-WAY / GREY
10-WAY / YELLOW
8-WAY / VIOLET
8-WAY / WHITE
4-WAY / BLACK
12-WAY / GREY
2-WAY / BLACK

Location

BELLOW SEAT CUSHION
BELLOW SEAT CUSHION
BEHIND SEAT BACK FINISHER
DRIVER SEAT
SEAT BACK
BELLOW SEAT CUSHION
BELLOW SEAT CUSHION
BELOW CLIMATE CONTROL PANEL
BELOW CLIMATE CONTROL PANEL
BELLOW SEAT CUSHION
DRIVER SEAT
SEAT SQUAB

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector

DB1
DM18
FC40

Connector Description

10-WAY / GREY / DRIVER SEAT HARNESS TO SEAT BACK LINK LEAD
14-WAY / GREY / CABIN HARNESS TO DRIVER SEAT HARNESS
16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS

Location

BEHIND SEAT BACK FINISHER
BELLOW SEAT CUSHION
BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)

GROUNDS

Ground

CA141
CA154

Ground Description

GROUND EYELET
GROUND EYELET

Location

BELLOW FRONT SEAT; LH SIDE / UNDER SEAT
BELLOW FRONT SEAT; RH SIDE / UNDER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

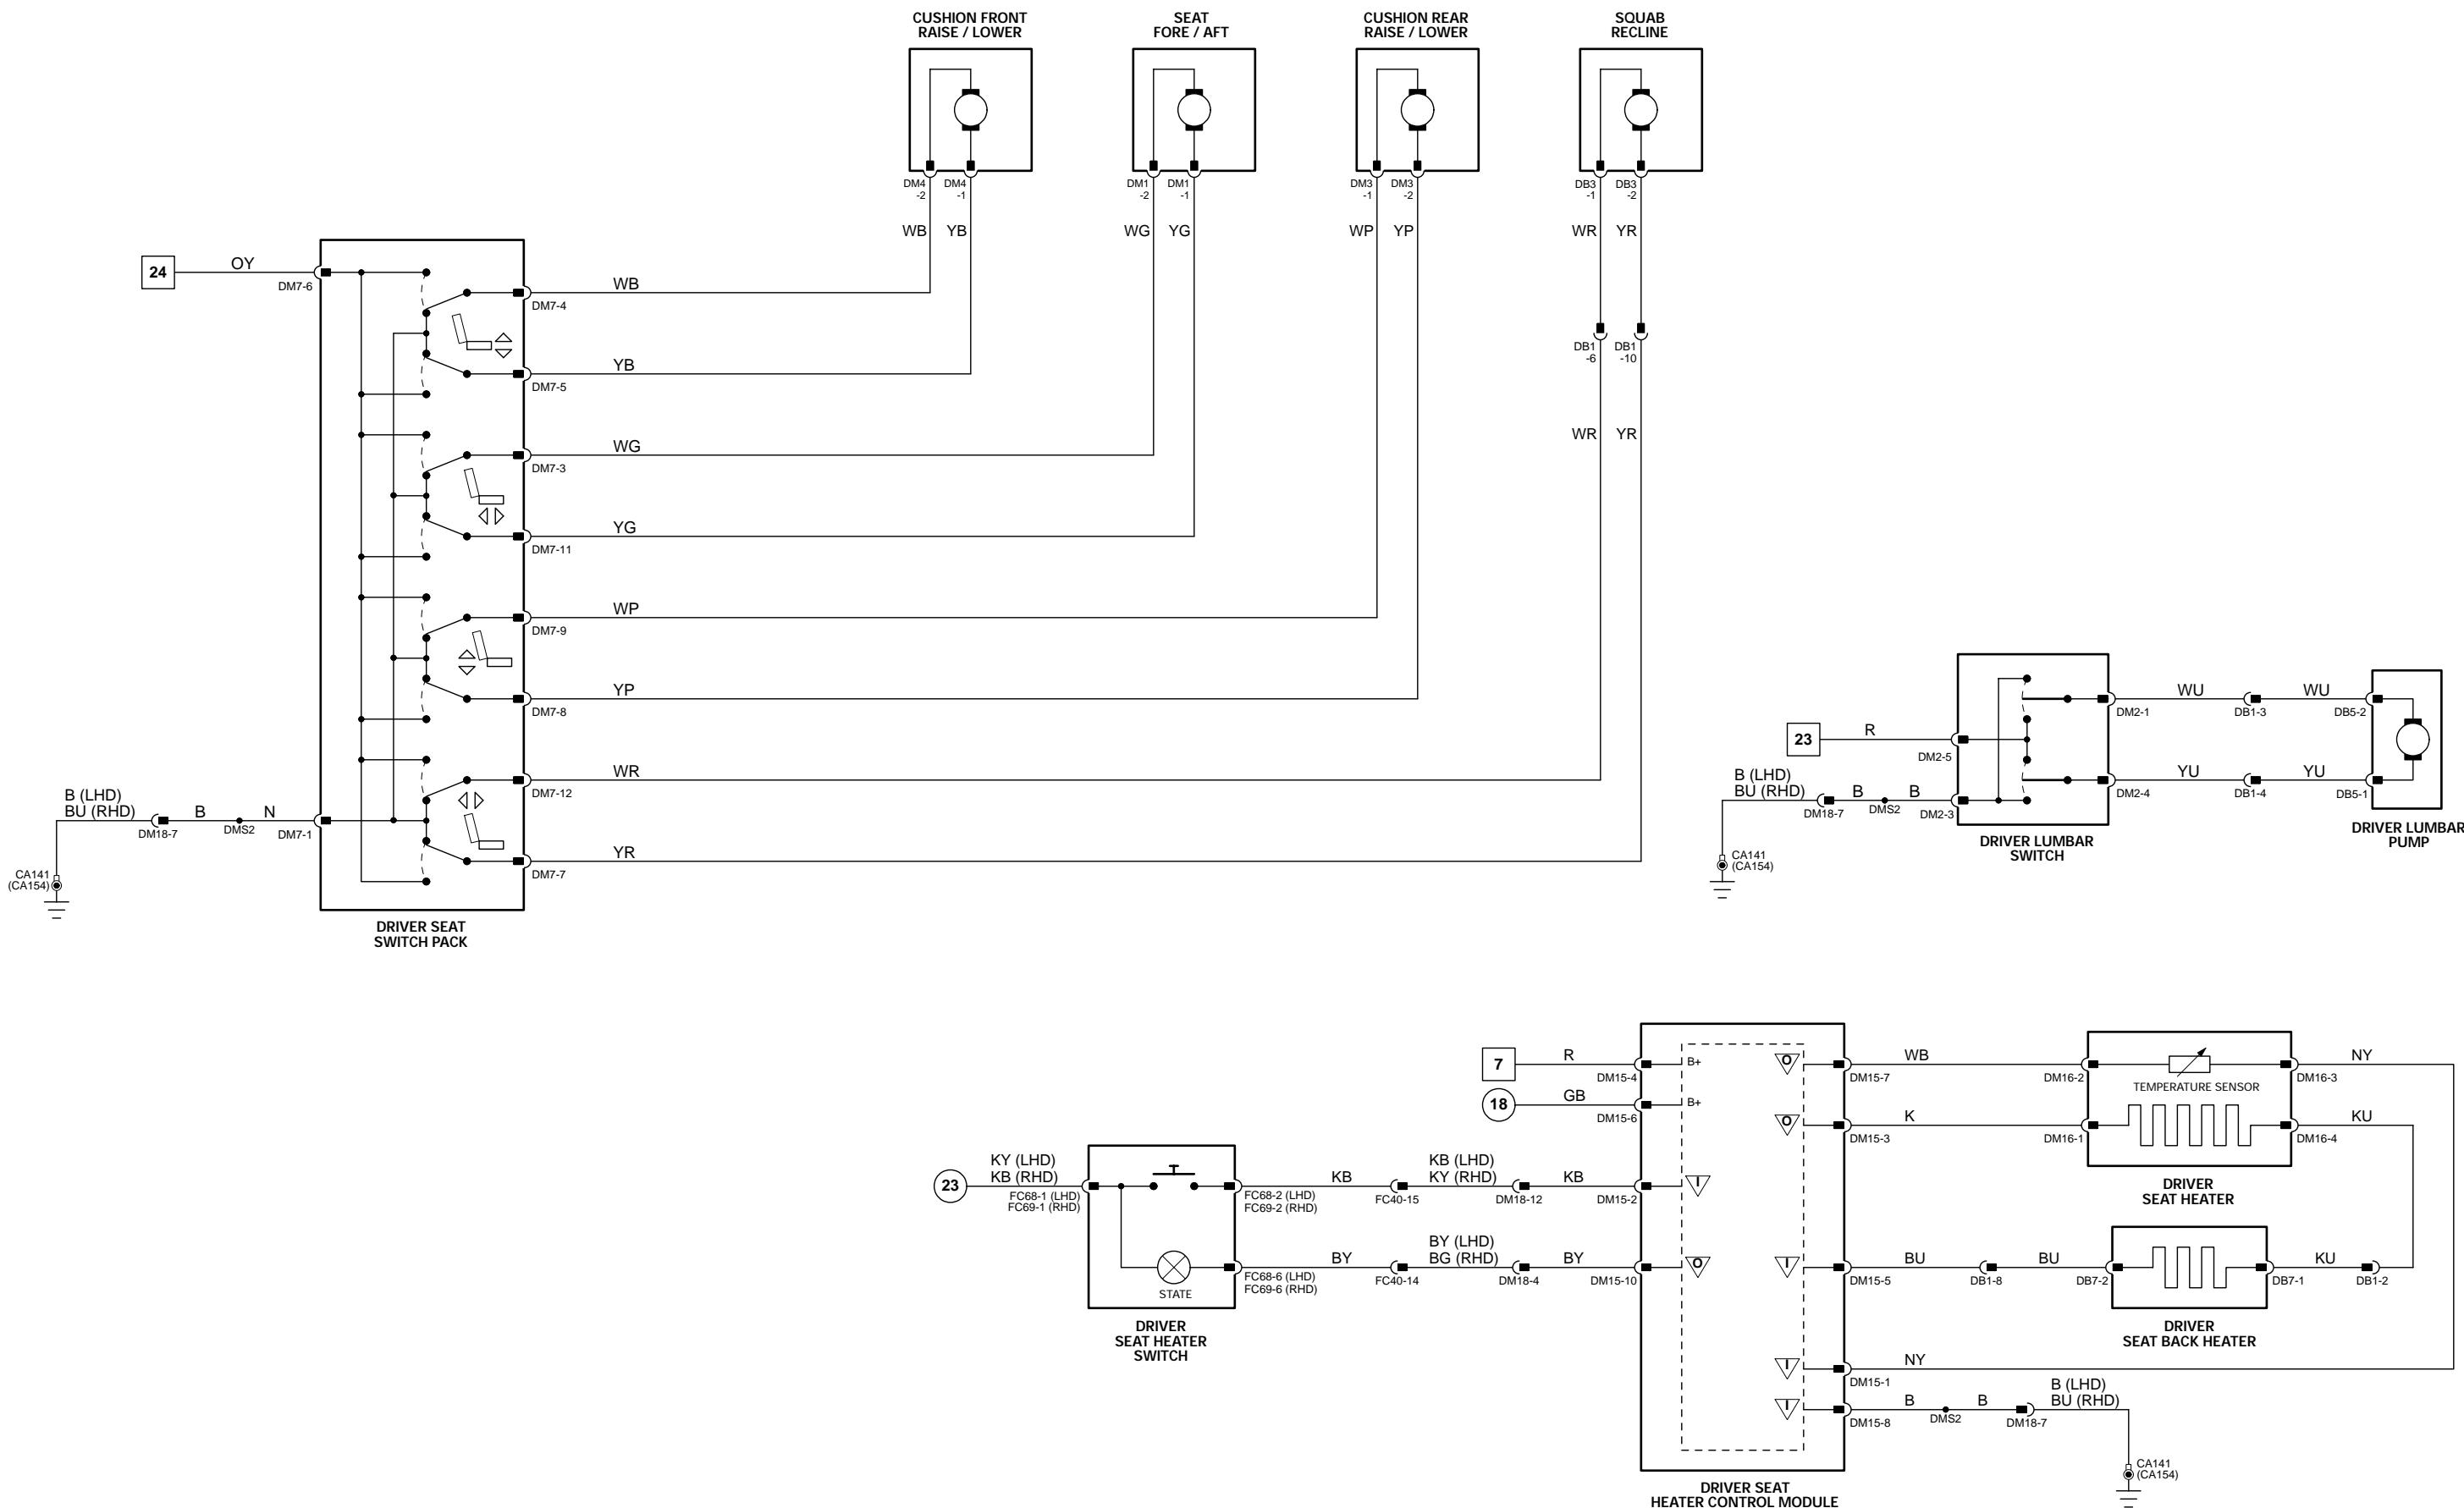


Fig. 11.3

COMPONENTS

Component	Connector(s)	Connector Description	Location
CUSHION FRONT RAISE / LOWER MOTOR – PASSENGER	PN10	2-WAY / GREY	BELLOW SEAT CUSHION
CUSHION REAR RAISE / LOWER MOTOR – PASSENGER	PN3	2-WAY / GREY	BELLOW SEAT CUSHION
LUMBAR PUMP – PASSENGER	PB5	2-WAY / GREY	BEHIND SEAT BACK FINISHER
LUMBAR SWITCH – PASSENGER	PN2	6-WAY / GREY	PASSENGER SEAT
SEAT BACK HEATER – PASSENGER	PB7	1-WAY / BLACK	SEAT BACK
SEAT FORE / AFT MOTOR – PASSENGER	PN1	2-WAY / GREY	BELLOW SEAT CUSHION
SEAT HEATER CONTROL MODULE – PASSENGER	PN7	10-WAY / YELLOW	BELLOW SEAT CUSHION
SEAT HEATER SWITCH – LH FRONT	FC68	8-WAY / VIOLET	BELOW CLIMATE CONTROL PANEL
SEAT HEATER SWITCH – RH FRONT	FC69	8-WAY / WHITE	BELOW CLIMATE CONTROL PANEL
SEAT HEATER – PASSENGER	PN12	4-WAY / BLACK	BELLOW SEAT CUSHION
SEAT SWITCH PACK – PASSENGER	PN4	12-WAY / GREY	PASSENGER SWITCH
SQUAB RECLINE MOTOR – PASSENGER	PB3	2-WAY / BLACK	SEAT SQUAB


HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
PB1	10-WAY / GREY / PASSENGER SEAT HARNESS TO SEAT BACK LINK LEAD	BEHIND SEAT BACK FINISHER
PN8	8-WAY / GREY / CABIN HARNESS TO PASSENGER SEAT HARNESS	BELLOW SEAT CUSHION

GROUNDS

Ground	Ground Description	Location
CA141	GROUND EYELET	BELLOW FRONT SEAT; LH SIDE / UNDER SEAT
CA154	GROUND EYELET	BELLOW FRONT SEAT; RH SIDE / UNDER SEAT

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

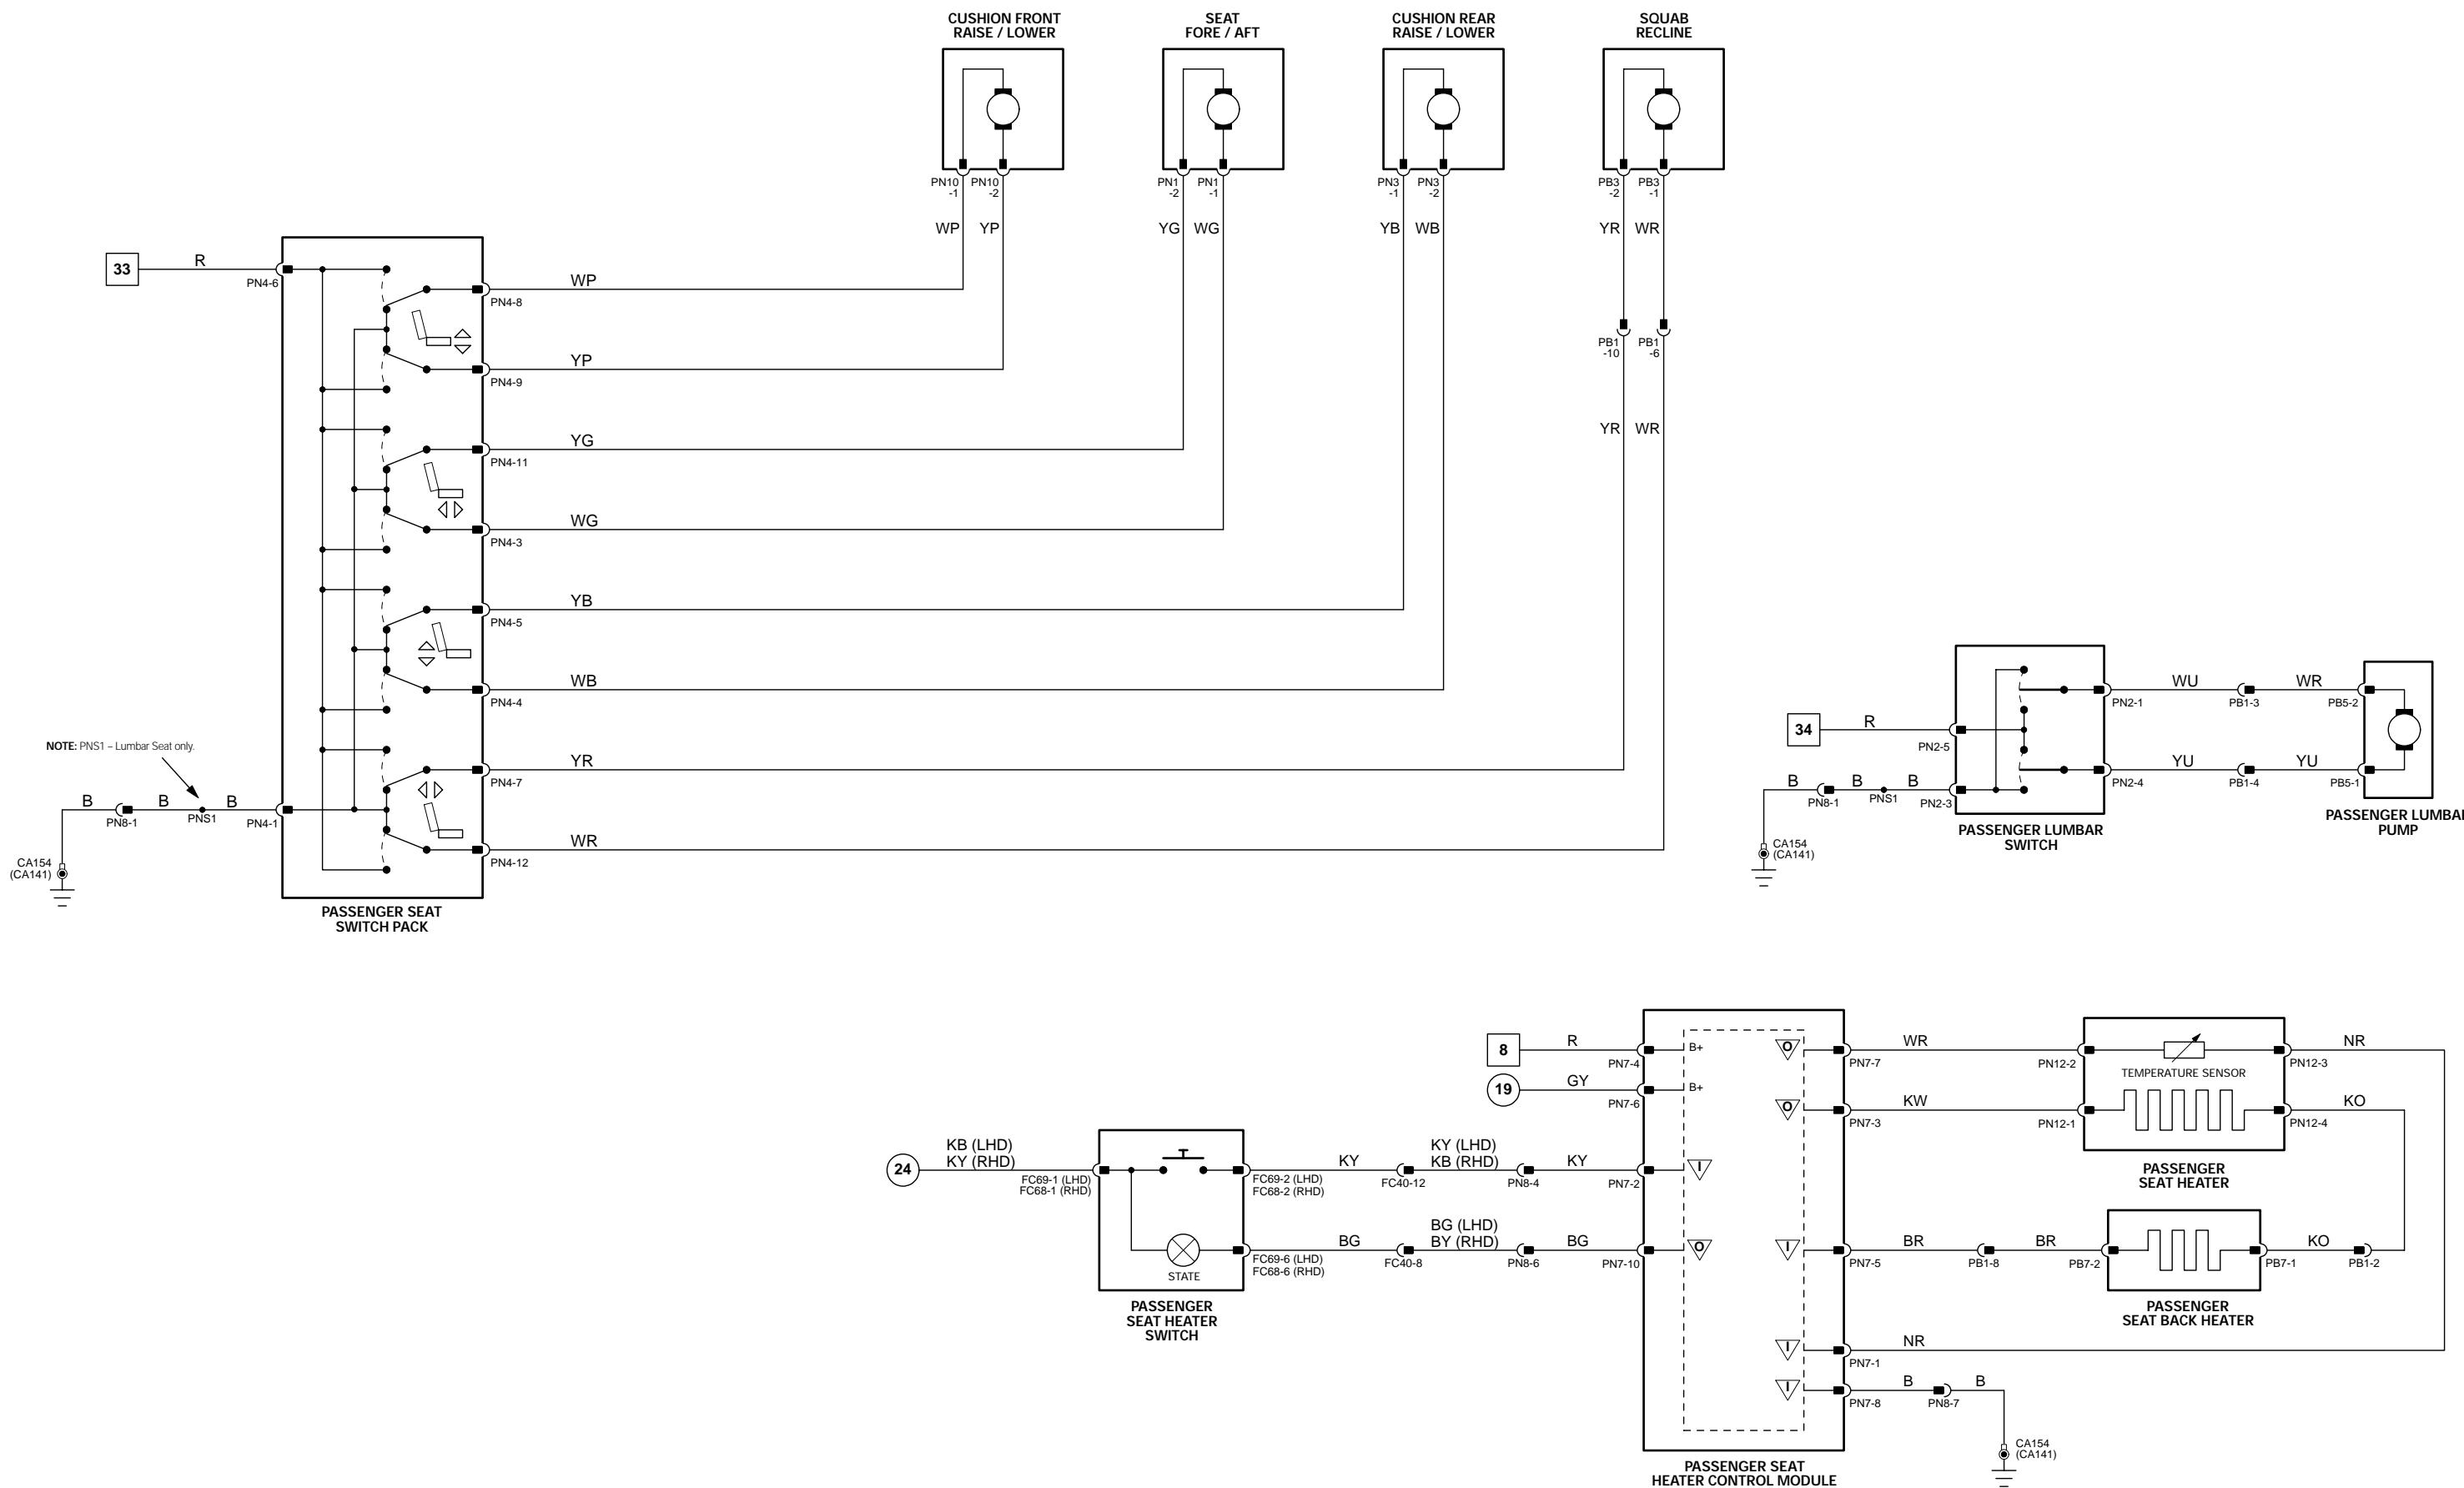

Driver Door Control Module

Pin	Description
S CA85-3	SCP +
S CA85-4	SCP -
I CA85-6	UNLOCK STATUS SWITCH
I CA85-8	GROUND SUPPLY
I CA85-9	REMOTE KEYLESS ENTRY MODULE GROUND SUPPLY
I CA85-10	LOCK STATUS SWITCH
I CA85-11	BATTERY POWER SUPPLY
O DT2-6	REMOTE KEYLESS ENTRY MODULE POWER SUPPLY
O DT2-8	DOOR LOCK MOTOR LOCK SUPPLY
O DT2-9	DOOR LOCK MOTOR UNLOCK SUPPLY
O DT2-10	DOOR LOCK MOTOR DOUBLE LOCK SUPPLY
D DT2-13	REMOTE KEYLESS ENTRY MODULE
I DT2-16	ALARM SET / LOCK SWITCH
I DT2-17	ALARM RESET / UNLOCK SWITCH
D DT2-18	REMOTE KEYLESS ENTRY MODULE

Active	Inactive
2 – 1600 Hz	
2 – 1600 Hz	
GROUND = UNLOCKED	B+
GROUND	GROUND
GROUND	GROUND
GROUND = LOCK	B+
B+	B+
B+	B+
B+	GND
B+	GND
B+	GND
ENCODED COMMUNICATIONS	GND
GROUND	B+
GROUND	B+
ENCODED COMMUNICATIONS	

General Electronic Control Module

Pin	Description
I CA24-15	PASSENGER DOOR AJAR SWITCH
I CA31-3	IGNITION SWITCHED POWER SUPPLY – LOGIC
I CA31-8	DRIVER DOOR AJAR SWITCH
S FH59-1	SCP -
I FH59-6	BATTERY POWER SUPPLY
S FH59-7	SCP +
I FH59-12	GROUND SUPPLY
I FH60-1	SWITCHED SYSTEM POWER SUPPLY
I FH60-11	GROUND SUPPLY
I FH60-13	GROUND SUPPLY
I FH60-14	GROUND SUPPLY
I FH60-15	GROUND SUPPLY

Active	Inactive
GROUND = AJAR	B+
B+	GROUND
GROUND = OPEN	B+ = CLOSED
2 – 1600 Hz	
B+	B+
2 – 1600 Hz	
GROUND	GROUND
B+	GROUND
GROUND	GROUND

Rear Electronic Control Module

Pin	Description
I CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH
I CA100-9	INTERNAL / EXTERNAL TRUNK RELEASE REQUEST
I CA101-3	BATTERY POWER SUPPLY – LOGIC
I CA101-17	RH REAR (LHD) OR LH REAR (RHD) DOOR AJAR SWITCH
I CA101-18	PASSENGER DOOR LOCK STATUS
I CA101-19	PASSENGER DOOR UNLOCK STATUS
S CA102-1	SCP +
S CA102-2	SCP -
I CA102-12	GROUND
O CA103-4	LH REAR DOOR LOCK MOTOR – LOCK SUPPLY
O CA103-5	PASSENGER AND RH REAR DOOR LOCK MOTORS – LOCK SUPPLY
O CA103-6	PASSENGER AND RH REAR DOOR LOCK MOTORS – UNLOCK SUPPLY
O CA103-7	LH REAR DOOR LOCK MOTOR – UNLOCK SUPPLY
O CA103-8	LH REAR DOOR LOCK MOTOR – DOUBLE LOCK SUPPLY
O CA103-9	PASSENGER AND RH REAR DOOR LOCK MOTORS – DOUBLE LOCK SUPPLY
O CA103-10	TRUNK RELEASE MOTOR ACTIVATE
I CA103-11	GROUND SUPPLY
I CA103-12	GROUND SUPPLY
I CA103-13	SWITCHED SYSTEM POWER SUPPLY
I CA103-16	LH REAR (LHD) OR RH REAR (RHD) DOOR AJAR SWITCH
I CA103-25	GROUND SUPPLY
I CA103-26	GROUND SUPPLY

Active	Inactive
B+	GROUND
GROUND	B+
B+	GROUND
GROUND = AJAR	B+ = UNLOCKED
GROUND = UNLOCKED	GROUND = LOCKED
2 – 1600 Hz	
2 – 1600 Hz	
GROUND	GROUND
B+	GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SS Sensor Supply V	D Serial and Encoded Data
O Output	S SCP Network	B+ Battery Voltage
SG Sensor Ground	A ACP Network	V Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
DOOR CONTROL MODULE – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – DRIVER	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – LH REAR	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – RH REAR	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
EXTERNAL TRUNK RELEASE SWITCH	DT5	10-WAY / BLACK	LH REAR DOOR, TRIM PANEL
FUEL FILLER FLAP RELEASE	CA81	10-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
GENERAL ELECTRONIC CONTROL MODULE	PT3	10-WAY / BLACK	RH REAR DOOR, TRIM PANEL
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	BEHIND TRUNK LID LINER
REMOTE KEYLESS ENTRY MODULE	CA99	4-WAY / GREY	TRUNK, RH SIDE
TRUNK / FUEL RELEASE SWITCH PACK	CA100	12-WAY / BLACK	TRUNK, RH SIDE
TRUNK RELEASE	CA101	20-WAY / BLACK	TRUNK, RH SIDE
TRUNK SWITCH	CA102	22-WAY / BLACK	TRUNK, RH SIDE
	CA103	26-WAY / WHITE	TRUNK, RH SIDE
	CA104	4-WAY / BLACK	TRUNK, RH SIDE
	CA184	4-WAY / BLACK	BELOW CENTER CONSOLE ASSEMBLY
	FC43	6-WAY / BLACK	FASCIA, ADJACENT TO STEERING COLUMN
	CA105	3-WAY / GREY	TRUNK LID
	CA117	2-WAY / BLACK	TRUNK LID

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS


Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC12	22-WAY / WHITE / JUNCTION CONNECTOR	ADJACENT TO STEERING COLUMN MOTOR
PT1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA157	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

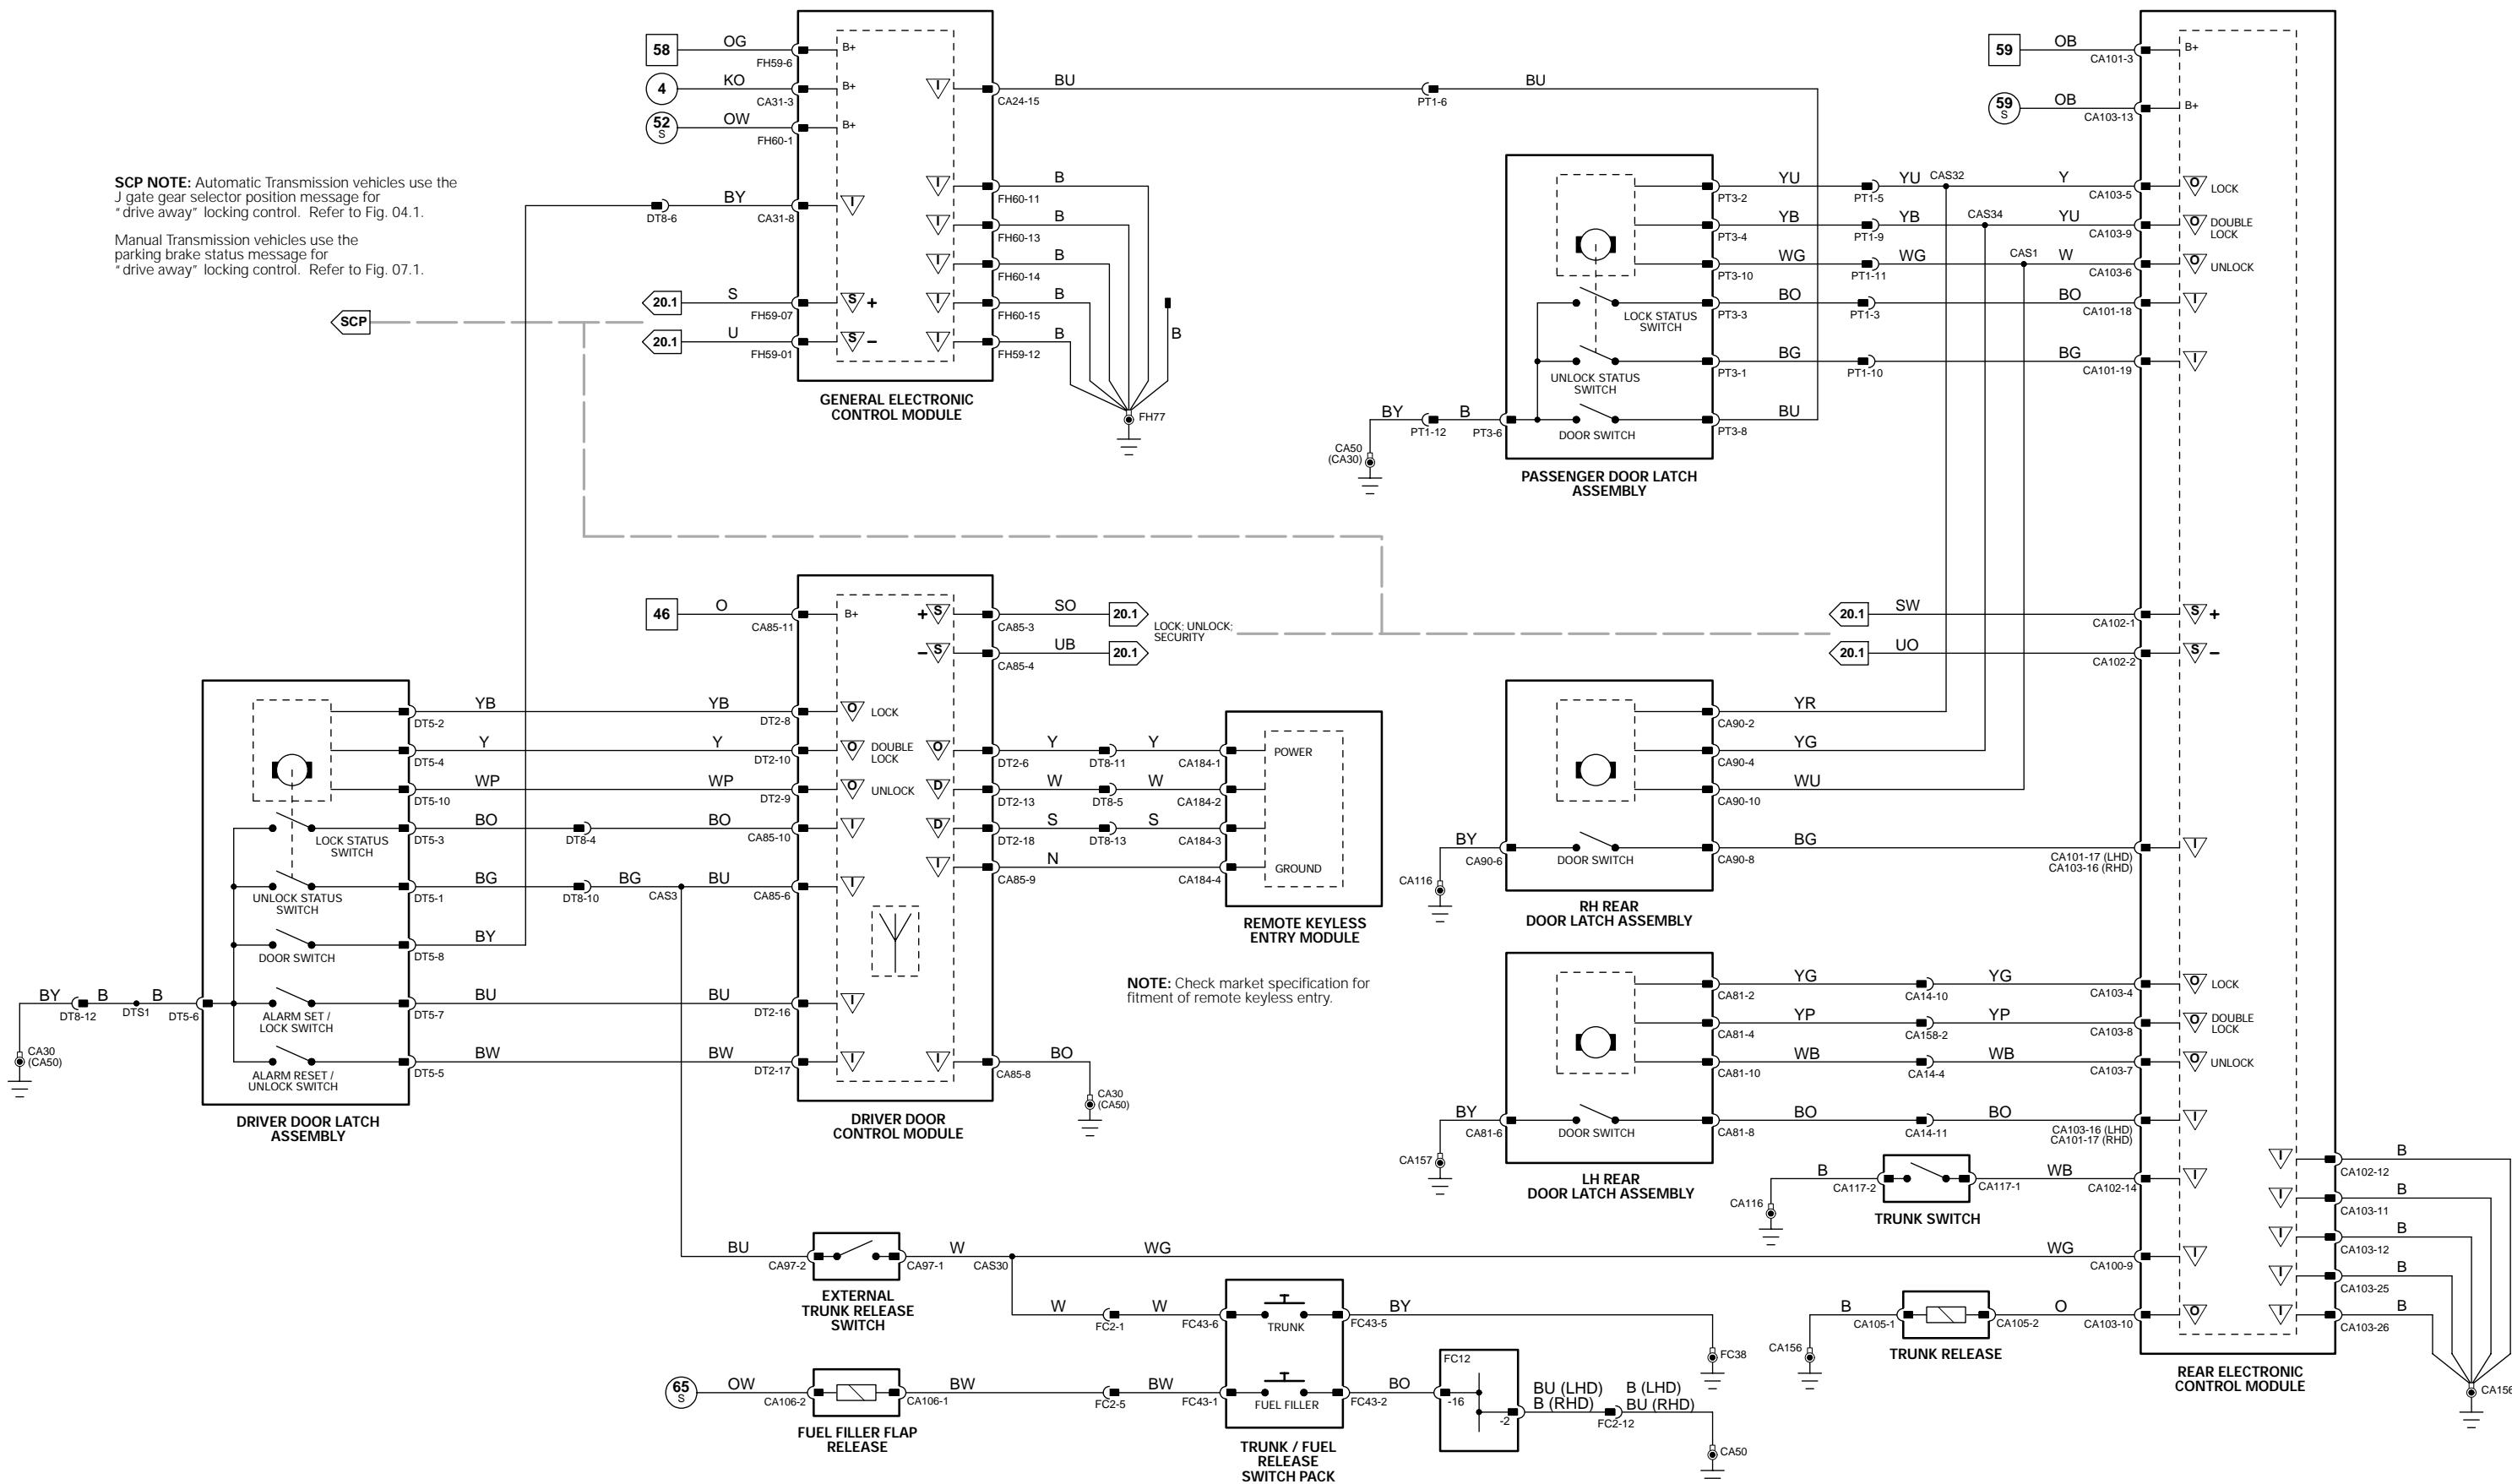

Driver Door Control Module

Pin	Description
S CA85-3	SCP +
S CA85-4	SCP -
I CA85-6	UNLOCK STATUS SWITCH
I CA85-8	GROUND SUPPLY
I CA85-10	LOCK STATUS SWITCH
I CA85-11	BATTERY POWER SUPPLY
O DT2-8	DOOR LOCK MOTOR LOCK SUPPLY
O DT2-9	DOOR LOCK MOTOR UNLOCK SUPPLY
I DT2-16	ALARM SET / LOCK SWITCH
I DT2-17	ALARM RESET / UNLOCK SWITCH

Active	Inactive
2 – 1600 Hz	
2 – 1600 Hz	
GROUND = UNLOCKED	B+
GROUND	GROUND
GROUND = LOCK	B+
B+	B+
B+	GROUND
B+	GROUND
GROUND	B+
GROUND	B+

General Electronic Control Module

Pin	Description
I CA24-15	PASSENGER DOOR AJAR SWITCH
I CA31-3	IGNITION SWITCHED POWER SUPPLY – LOGIC
I CA31-8	DRIVER DOOR AJAR SWITCH
S FH59-1	SCP -
I FH59-6	BATTERY POWER SUPPLY
S FH59-7	SCP +
I FH59-12	GROUND SUPPLY
I FH60-1	SWITCHED SYSTEM POWER SUPPLY
I FH60-11	GROUND SUPPLY
I FH60-13	GROUND SUPPLY
I FH60-14	GROUND SUPPLY
I FH60-15	GROUND SUPPLY

Active	Inactive
GROUND = AJAR	B+
B+	GROUND
GROUND = OPEN	B+ = CLOSED
2 – 1600 Hz	B+
B+	B+
2 – 1600 Hz	GROUND
GROUND	B+
B+	GROUND
GROUND	GROUND

Rear Electronic Control Module

Pin	Description
I CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH
I CA100-9	INTERNAL / EXTERNAL TRUNK RELEASE REQUEST
I CA101-3	BATTERY POWER SUPPLY – LOGIC
I CA101-17	RH REAR (LHD) OR LH REAR (RHD) DOOR AJAR SWITCH
I CA101-18	PASSENGER DOOR LOCK STATUS
I CA101-19	PASSENGER DOOR UNLOCK STATUS
S CA102-1	SCP +
S CA102-2	SCP -
I CA102-12	GROUND
O CA103-4	LH REAR DOOR LOCK MOTOR – LOCK SUPPLY
O CA103-5	PASSENGER AND RH REAR DOOR LOCK MOTORS – LOCK SUPPLY
O CA103-6	PASSENGER AND RH REAR DOOR LOCK MOTORS – UNLOCK SUPPLY
O CA103-7	LH REAR DOOR LOCK MOTOR – UNLOCK SUPPLY
O CA103-10	TRUNK RELEASE MOTOR ACTIVATE
I CA103-11	GROUND SUPPLY
I CA103-12	GROUND SUPPLY
I CA103-13	SWITCHED SYSTEM POWER SUPPLY
I CA103-16	LH REAR (LHD) OR RH REAR (RHD) DOOR AJAR SWITCH
I CA103-25	GROUND SUPPLY
I CA103-26	GROUND SUPPLY

Active	Inactive
B+	GROUND
GROUND	B+
B+	GROUND = AJAR
GROUND = UNLOCKED	B+
2 – 1600 Hz	B+
2 – 1600 Hz	GROUND
GROUND	B+
B+	GROUND
GROUND	B+
GROUND	B+
B+	GROUND = AJAR
GROUND	GROUND
GROUND	GROUND

COMPONENTS

Component	Connector(s)	Connector Description	Location
DOOR CONTROL MODULE – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – DRIVER	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – LH REAR	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – PASSENGER	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – RH REAR	DT5	10-WAY / BLACK	LH REAR DOOR, TRIM PANEL
EXTERNAL TRUNK RELEASE SWITCH	CA81	10-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
FUEL FILLER FLAP RELEASE	PT3	10-WAY / BLACK	RH REAR DOOR, TRIM PANEL
GENERAL ELECTRONIC CONTROL MODULE	CA90	10-WAY / BLACK	BEHIND TRUNK LID LINER
	CA97	1-WAY / BLACK	BEHIND TRUNK LID LINER
	CA106	2-WAY / GREY	TRUNK, RH SIDE
	CA24	26-WAY / WHITE	'A' POST, LH SIDE
	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
TRUNK / FUEL RELEASE SWITCH PACK	FC43	6-WAY / BLACK	FASCIA, ADJACENT TO STEERING COLUMN
TRUNK RELEASE	CA105	3-WAY / GREY	TRUNK LID
TRUNK SWITCH	CA117	2-WAY / BLACK	TRUNK LID

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC12	22-WAY / WHITE / JUNCTION CONNECTOR	ADJACENT TO STEERING COLUMN MOTOR
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
PT1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA157	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.


The following abbreviations are used to represent values for Control Module Pin-Out data

I Input	SS Sensor Supply V	D Serial and Encoded Data	PWM Pulse Width Modulated
O Output	S SCP Network	B+ Battery Voltage	Hz Frequency
SG Sensor Ground	A ACP Network	V Voltage (DC)	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

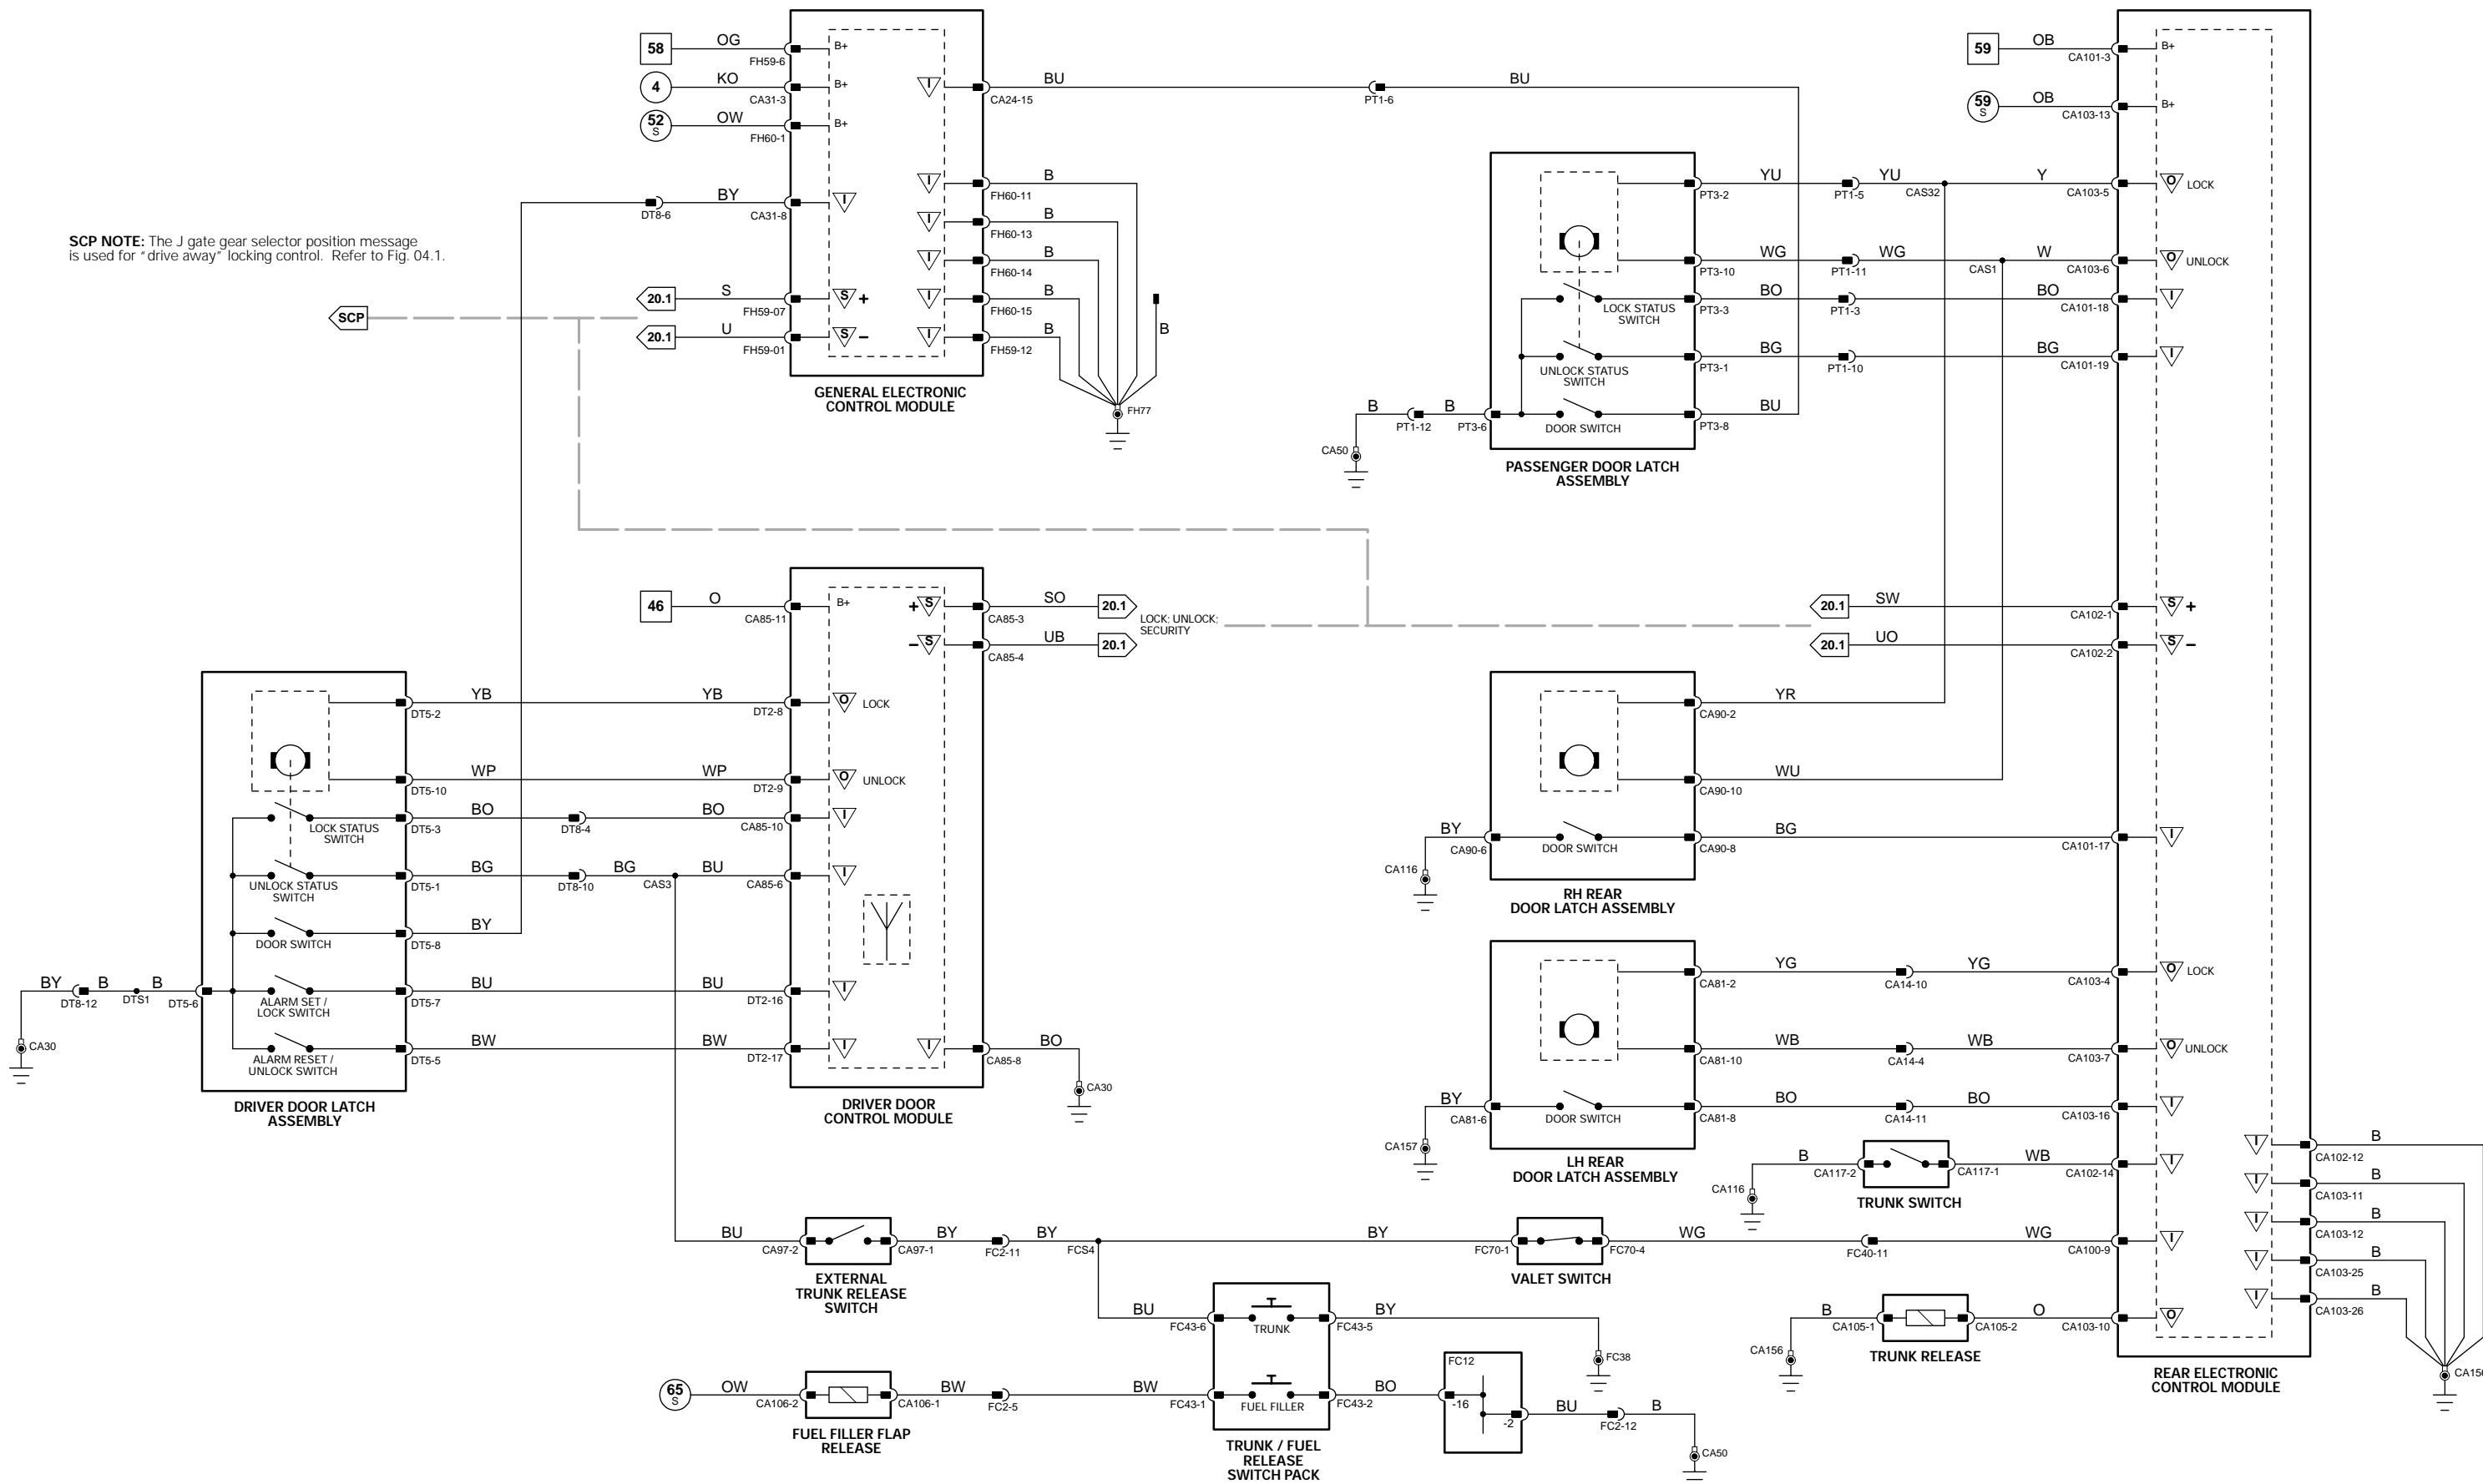

Driver Door Control Module

Pin	Description
S CA85-3	SCP +
S CA85-4	SCP -
I CA85-6	UNLOCK STATUS SWITCH
I CA85-8	GROUND SUPPLY
I CA85-10	LOCK STATUS SWITCH
I CA85-11	BATTERY POWER SUPPLY
O DT2-8	DOOR LOCK MOTOR LOCK SUPPLY
O DT2-9	DOOR LOCK MOTOR UNLOCK SUPPLY
O DT2-10	DOOR LOCK MOTOR DOUBLE LOCK SUPPLY
I DT2-16	ALARM SET / LOCK SWITCH
I DT2-17	ALARM RESET / UNLOCK SWITCH

Active		Inactive	
	2 – 1600 Hz		
	2 – 1600 Hz		
	GROUND = UNLOCKED		B+
	GROUND		GROUND
	GROUND = LOCK		B+
	B+		B+
	B+		GROUND
	B+		GROUND
	B+		GROUND
	B+		B+
	GROUND		B+
	GROUND		B+

General Electronic Control Module

Pin	Description
I CA24-15	PASSENGER DOOR AJAR SWITCH
I CA31-3	IGNITION SWITCHED POWER SUPPLY – LOGIC
I CA31-5	RECM SECURITY SYSTEM GROUND SENSING
I CA31-7	RADIO HEAD UNIT SECURITY SYSTEM GROUND SENSING
I CA31-8	DRIVER DOOR AJAR SWITCH
I CA31-18	INCLINATION / INTRUSION SENSOR VIOLATION
O FH9-16	INCLINATION / INTRUSION SENSOR POWER SUPPLY
S FH59-1	SCP -
I FH59-3	HOOD AJAR SWITCH
I FH59-6	BATTERY POWER SUPPLY
S FH59-7	SCP +
O FH59-8	HORN RELAY ACTIVATE
I FH59-12	GROUND SUPPLY
O FH60-3	ACTIVE SECURITY SOUNDER
O FH60-6	STEERING COLUMN LOCK MODULE GROUND SUPPLY
I FH60-11	GROUND SUPPLY
I FH60-13	GROUND SUPPLY
I FH60-14	GROUND SUPPLY
I FH60-15	GROUND SUPPLY
O FH60-16	PASSIVE SECURITY SOUNDER ACTIVATE

Active		Inactive	
	GROUND = AJAR		B+
	B+		GROUND
	GROUND = RECM CONNECTED		B+ = RECM DISCONNECTED
	GROUND = HEAD UNIT CONNECTED		B+ = HEAD UNIT DISCONNECTED
	GROUND = OPEN		B+ = CLOSED
	GROUND(PULSE)		B+ = OPEN
	B+		B+ = CLOSED
	2 – 1600 Hz		B+ = CLOSED
	GROUND = OPEN		B+
	B+		GROUND
	2 – 1600 Hz		B+
	GROUND		GROUND
	GROUND		GROUND
	ENCODED COMMUNICATIONS		ENCODED COMMUNICATIONS
	GROUND		GROUND
	B+		GROUND

Instrument Pack

Pin	Description
O FC14-10	SECURITY ACTIVE INDICATOR
I FC14-21	IGNITION KEY IN BARREL
I FC15-3	BATTERY POWER SUPPLY
D FC15-4	PASSIVE ANTI THEFT SYSTEM TRANSCEIVER
D FC15-5	PASSIVE ANTI THEFT SYSTEM TRANSCEIVER
I FC15-6	IGNITION SWITCHED POWER SUPPLY
I FC15-13	GROUND SUPPLY
S FC15-15	SCP +
S FC15-16	SCP -
I FC16-17	IGNITION SWITCHED POWER SUPPLY
O FC63-6	PASSIVE ANTI THEFT SYSTEM TRANSCEIVER GROUND SUPPLY

Active		Inactive	
	GROUND (PULSED)		B+
	B+ = IGNITION KEY IN		GROUND = IGNITION KEY OUT
	B+		B+
	ENCODED COMMUNICATIONS		ENCODED COMMUNICATIONS
	GROUND		GROUND
	2 – 1600 Hz		2 – 1600 Hz
	B+		GROUND
	GROUND		GROUND
	2 – 1600 Hz		2 – 1600 Hz
	B+		GROUND
	GROUND		GROUND

Rear Electronic Control Module

Pin	Description
O CA100-1	STEERING COLUMN LOCK MODULE POWER SUPPLY
I CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH
I CA101-3	BATTERY POWER SUPPLY – LOGIC
O CA101-5	RECM SECURITY SYSTEM GROUND SENSING
I CA101-17	RH REAR (LHD) OR LH REAR (RHD) DOOR AJAR SWITCH
S CA102-1	SCP +
S CA102-2	SCP -
I CA102-12	GROUND
I CA102-14	TRUNK AJAR SWITCH
I CA103-11	GROUND SUPPLY
I CA103-12	GROUND SUPPLY
I CA103-16	LH REAR (LHD) OR RH REAR (RHD) DOOR AJAR SWITCH
I CA103-25	GROUND SUPPLY
I CA103-26	GROUND SUPPLY

Active		Inactive	
	B+		GROUND
	B+		GROUND
	B+		B+
	GROUND = RECM CONNECTED		B+ = RECM DISCONNECTED
	GROUND = AJAR		B+
	2 – 1600 Hz		2 – 1600 Hz
	GROUND		GROUND
	2 – 1600 Hz		2 – 1600 Hz
	GROUND		GROUND

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data


I Input	SS Sensor Supply V	D Serial and Encoded Data	PWM Pulse Width Modulated
O Output	S SCP Network	B+ Battery Voltage	Hz Frequency
SG Sensor Ground	A ACP Network	V Voltage (DC)	kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

COMPONENTS

Component	Connector(s)	Connector Description	Location
ACTIVE SECURITY SOUNDER	FH89	10-WAY / BLACK	BEHIND HEADLAMP RH ASSEMBLY
AUTOLAMP SENSOR	SL2	6-WAY / WHITE	TOP OF FASCIA
DOOR CONTROL MODULE – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – DRIVER	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – LH REAR	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – RH REAR	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
FRONT POWER DISTRIBUTION BOX	DT5	10-WAY / BLACK	DRIVER DOOR, TRIM PANEL
GENERAL ELECTRONIC CONTROL MODULE	CA90	10-WAY / BLACK	RH REAR DOOR, TRIM PANEL
HOOD SWITCH	CA24	26-WAY / WHITE	ENGINE COMPARTMENT, RH FRONT
HORNS	CA31	20-WAY / BLACK	'A' POST, LH SIDE
IGNITION SWITCH	CA84	4-WAY / GREY	'A' POST, LH SIDE
INCLINATION SENSOR	FH9	22-WAY / BLACK	'A' POST, LH SIDE
INSTRUMENT PACK	FH59	12-WAY / BLACK	'A' POST, LH SIDE
INTRUSION SENSOR	FH60	17-WAY / BLACK	'A' POST, LH SIDE
INTRUSION SENSOR – LH	FH21	2-WAY / BLACK	ADJACENT TO AIR FILTER
INTRUSION SENSOR – RH	FH29	2-WAY / BLACK	FORWARD OF RADIATOR
PASSIVE ANTI-THEFT SYSTEM TRANSCEIVER	FC18	8-WAY / BLACK	STEERING COLUMN
PASSIVE SECURITY SOUNDER	CA173	10-WAY / BLACK	ADJACENT TO REAR POWER DISTRIBUTION BOX
RADIO HEAD UNIT	FC14	22-WAY / GREY	FASCIA
RADIO HEAD UNIT	FC15	20-WAY / BLACK	FASCIA
INTRUSION SENSOR – LH	CA82	16-WAY / BLACK	FASCIA
INTRUSION SENSOR – RH	CA91	16-WAY / BLACK	FASCIA
PASSIVE ANTI-THEFT SYSTEM TRANSCEIVER	FC52	10-WAY / GREEN	IGNITION SWITCH
PASSIVE SECURITY SOUNDER	AT2	1-WAY / BLACK	BEHIND HEADLAMP RH ASSEMBLY
RADIO HEAD UNIT	FC71	7-WAY / GREY	FASCIA, CENTER
RADIO HEAD UNIT	FC72	8-WAY / BLACK	FASCIA, CENTER
RADIO HEAD UNIT	FC73	17-WAY / BLACK	FASCIA, CENTER
RADIO HEAD UNIT	FC74	12-WAY / BLACK	FASCIA, CENTER
RADIO HEAD UNIT	FC75	12-WAY / BLACK	FASCIA, CENTER
RADIO HEAD UNIT	FC85	10-WAY / BLACK	FASCIA, CENTER
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
REAR ELECTRONIC CONTROL MODULE	CA99	4-WAY / GREY	TRUNK, RH REAR
REAR ELECTRONIC CONTROL MODULE	CA100	12-WAY / BLACK	TRUNK, RH REAR
REAR ELECTRONIC CONTROL MODULE	CA101	20-WAY / BLACK	TRUNK, RH REAR
REAR ELECTRONIC CONTROL MODULE	CA102		

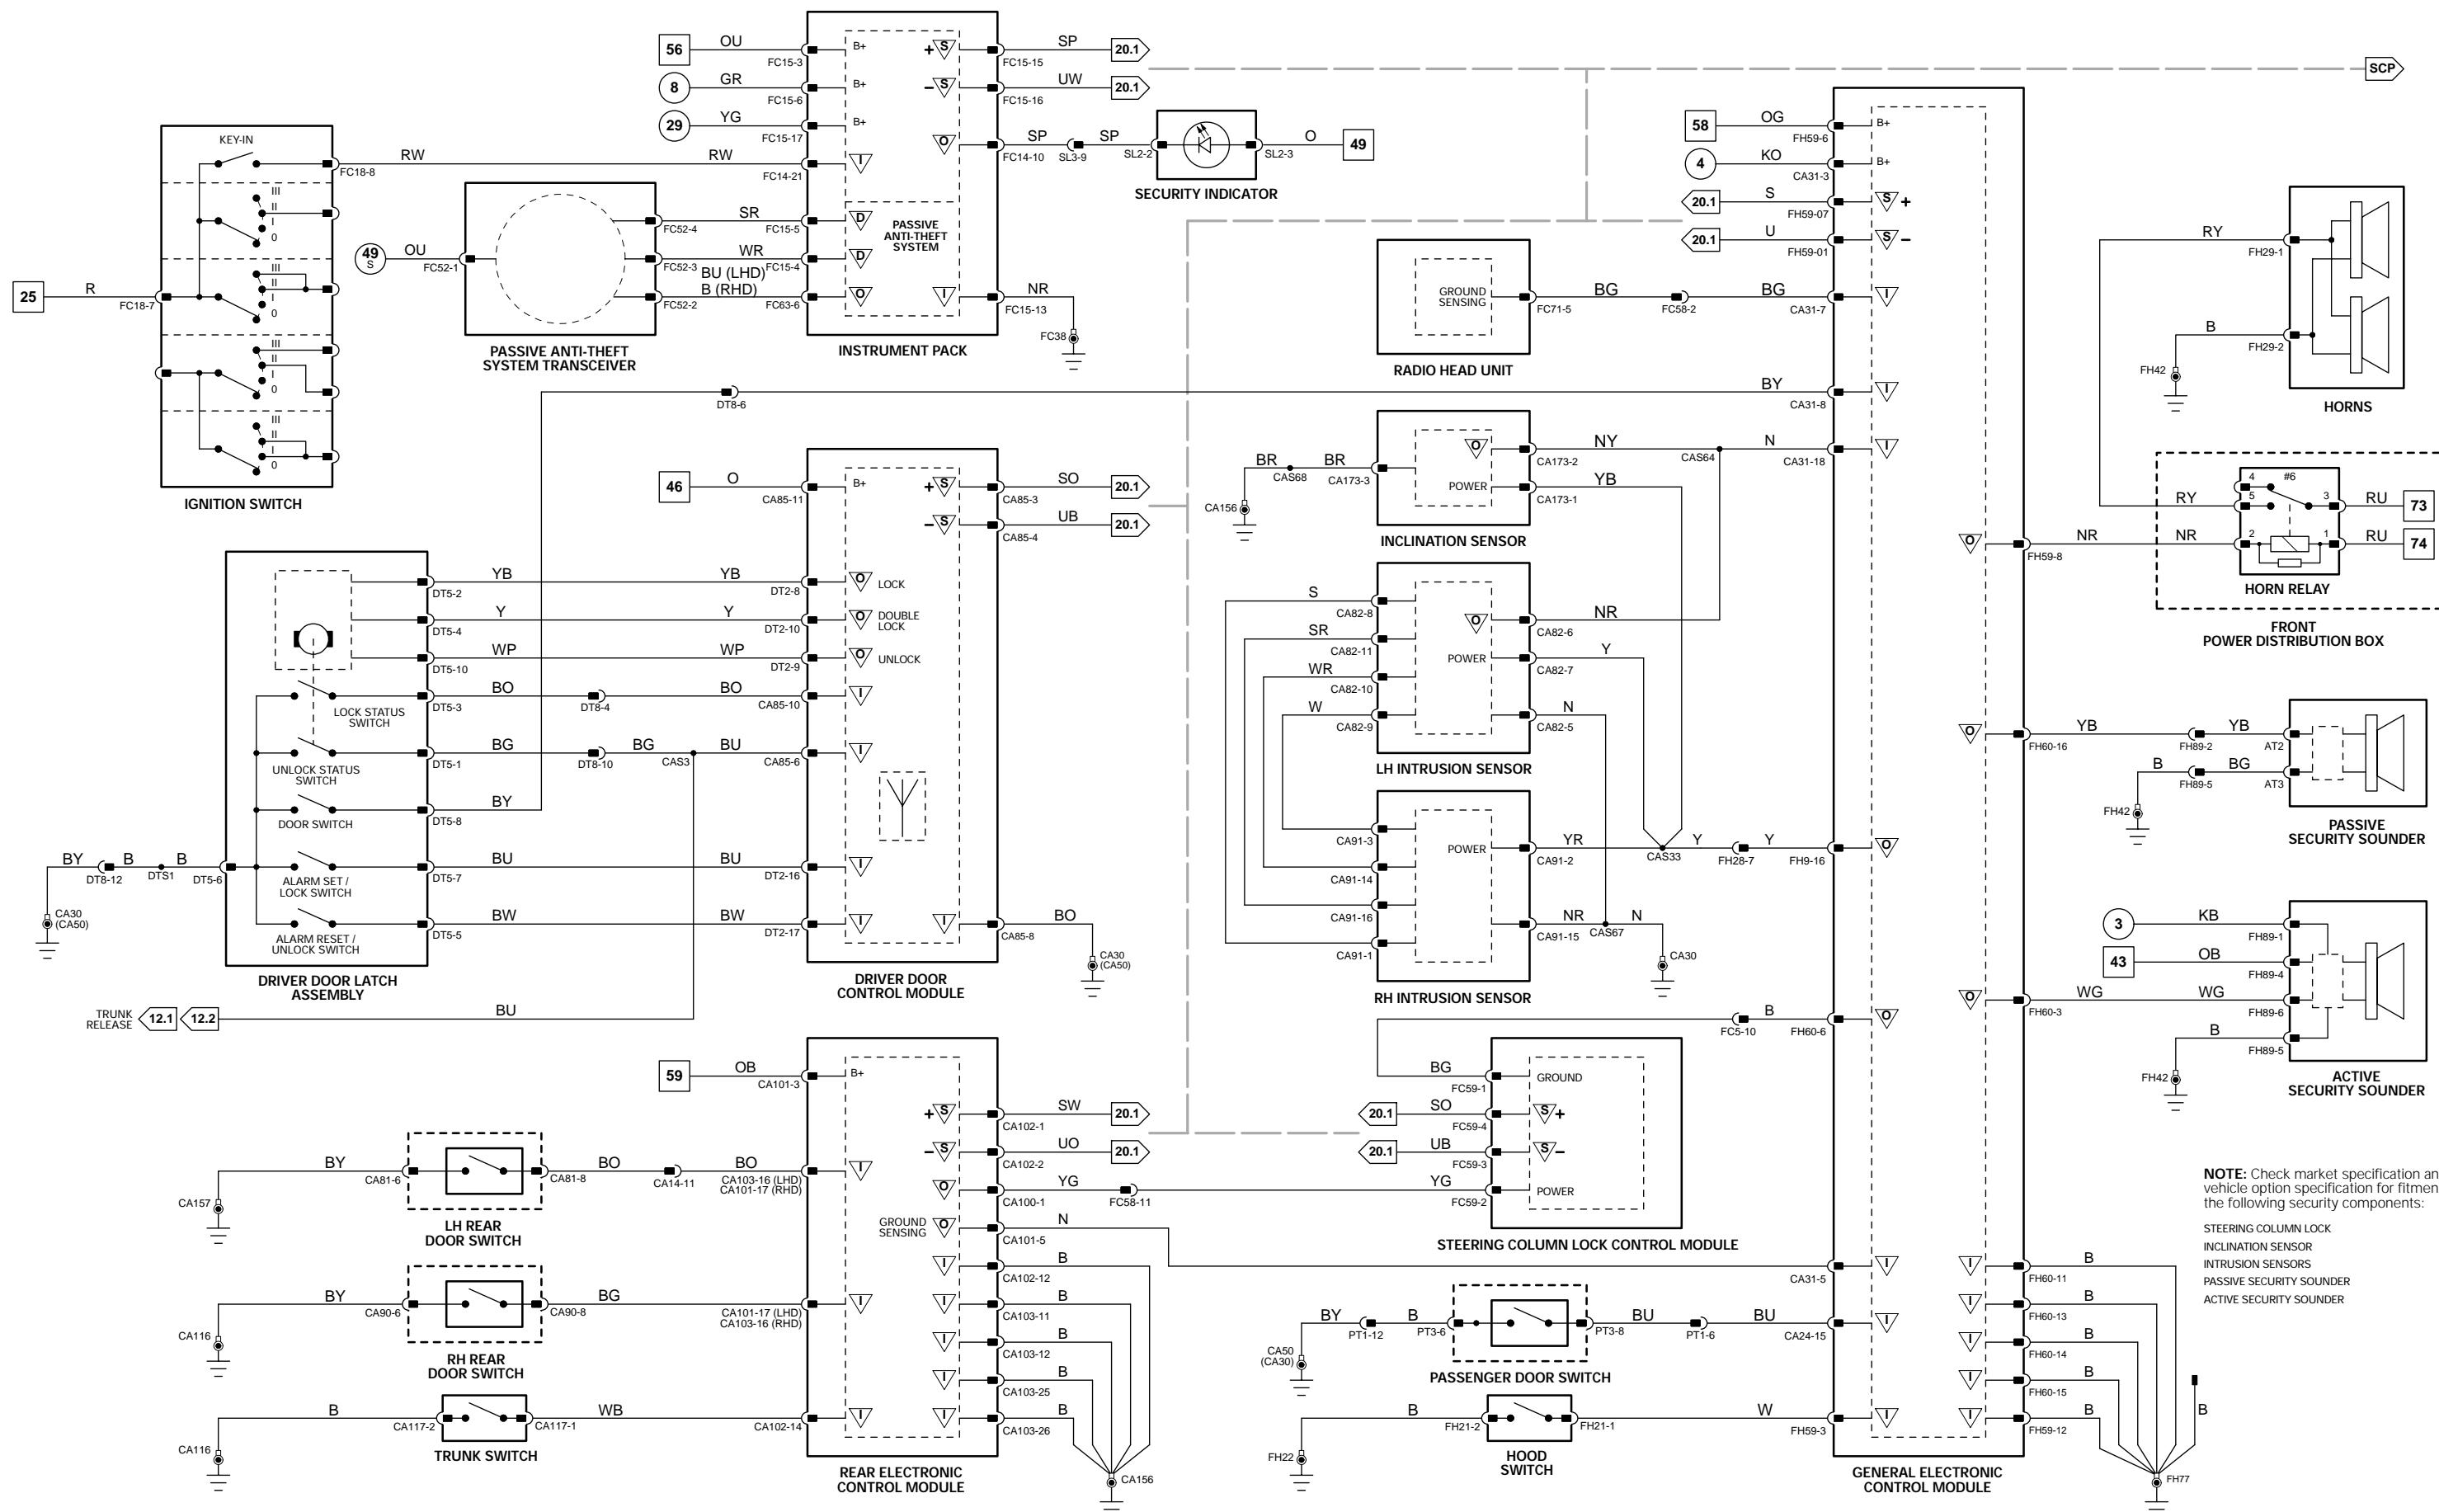

NOTE: Check market specification and / or vehicle option specification for fitment of the following security components:

STEERING COLUMN LOCK
INCLINATION SENSOR
INTRUSION SENSORS
PASSIVE SECURITY SOUNDER
ACTIVE SECURITY SOUNDER

Driver Door Control Module

Pin	Description
S CA85-3	SCP +
S CA85-4	SCP -
I CA85-6	UNLOCK STATUS SWITCH
I CA85-8	GROUND SUPPLY
I CA85-10	LOCK STATUS SWITCH
I CA85-11	BATTERY POWER SUPPLY
O DT2-8	DOOR LOCK MOTOR LOCK SUPPLY
O DT2-9	DOOR LOCK MOTOR UNLOCK SUPPLY
O DT2-10	DOOR LOCK MOTOR DOUBLE LOCK SUPPLY
I DT2-16	ALARM SET / LOCK SWITCH
I DT2-17	ALARM RESET / UNLOCK SWITCH

Active		Inactive	
2 – 1600 Hz		B+	
2 – 1600 Hz		GROUND	
GROUND = UNLOCKED		B+	
GROUND		GROUND	
GROUND = LOCK		B+	
B+		GROUND	
GROUND		B+	
GROUND		B+	

General Electronic Control Module

Pin	Description
I CA24-15	PASSENGER DOOR AJAR SWITCH
I CA31-3	IGNITION SWITCHED POWER SUPPLY – LOGIC
I CA31-5	RECM SECURITY SYSTEM GROUND SENSING
I CA31-7	RADIO HEAD UNIT SECURITY SYSTEM GROUND SENSING
I CA31-8	DRIVER DOOR AJAR SWITCH
S FH69-1	SCP -
I FH69-3	HOOD AJAR SWITCH
I FH69-6	BATTERY POWER SUPPLY
S FH69-7	SCP +
O FH69-8	HORN RELAY ACTIVATE
I FH69-12	GROUND SUPPLY
I FH60-11	GROUND SUPPLY
I FH60-13	GROUND SUPPLY
I FH60-14	GROUND SUPPLY
I FH60-15	GROUND SUPPLY

Active		Inactive	
GROUND = AJAR		B+	
B+		GROUND	
GROUND = RECM CONNECTED		B+ = RECM DISCONNECTED	
GROUND = HEAD UNIT CONNECTED		B+ = HEAD UNIT DISCONNECTED	
GROUND = OPEN		B+ = CLOSED	
B+		GROUND	
2 – 1600 Hz		B+ = CLOSED	
GROUND = OPEN		B+	
B+		GROUND	
2 – 1600 Hz		B+	
GROUND		GROUND	

Instrument Pack

Pin	Description
O FC14-10	SECURITY ACTIVE INDICATOR
I FC14-21	IGNITION KEY IN BARREL
I FC15-3	BATTERY POWER SUPPLY
D FC15-4	PASSIVE ANTI THEFT SYSTEM TRANSCIEVER
D FC15-5	PASSIVE ANTI THEFT SYSTEM TRANSCIEVER
I FC15-6	IGNITION SWITCHED POWER SUPPLY
I FC15-13	GROUND SUPPLY
S FC15-15	SCP +
S FC15-16	SCP -
I FC15-17	IGNITION SWITCHED POWER SUPPLY
O FC63-6	PASSIVE ANTI THEFT SYSTEM TRANSCIEVER GROUND SUPPLY

Active		Inactive	
GROUND (PULSED)		B+	
B+ = IGNITION KEY IN		GROUND = IGNITION KEY OUT	
B+		B+	
ENCODED COMMUNICATIONS		GROUND	
ENCODED COMMUNICATIONS		GROUND	
B+		GROUND	
GROUND		GROUND	
2 – 1600 Hz			
2 – 1600 Hz			
B+		GROUND	
GROUND		GROUND	

Rear Electronic Control Module

Pin	Description
I CA100-8	IGNITION SWITCHED POWER SUPPLY – INERTIA SWITCH
I CA101-3	BATTERY POWER SUPPLY – LOGIC
O CA101-5	RECM SECURITY SYSTEM GROUND SENSING
I CA101-17	RH REAR (LHD) OR LH REAR (RHD) DOOR AJAR SWITCH
S CA102-1	SCP +
S CA102-2	SCP -
I CA102-12	GROUND
I CA102-14	TRUNK AJAR SWITCH
I CA103-11	GROUND SUPPLY
I CA103-12	GROUND SUPPLY
I CA103-16	LH REAR (LHD) OR RH REAR (RHD) DOOR AJAR SWITCH
I CA103-25	GROUND SUPPLY
I CA103-26	GROUND SUPPLY

Active		Inactive	
B+		GROUND	
B+		B+	
GROUND = RECM CONNECTED		B+ = RECM DISCONNECTED	
GROUND = AJAR		B+	
2 – 1600 Hz			
2 – 1600 Hz			
GROUND		GROUND	
GROUND = AJAR		B+	
GROUND		GROUND	
GROUND		GROUND	
GROUND		B+	
GROUND		GROUND	
GROUND		GROUND	

COMPONENTS

Component	Connector(s)	Connector Description	Location
AUTOLAMP SENSOR	SL2	6-WAY / WHITE	TOP OF FASCIA
DOOR CONTROL MODULE – DRIVER	CA85	12-WAY / BLACK	DRIVER DOOR, TRIM PANEL
	DD4	26-WAY / WHITE	DRIVER DOOR, TRIM PANEL
	DT1	4-WAY / GREY	DRIVER DOOR, TRIM PANEL
	DT2	20-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – DRIVER	DT5	10-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – LH REAR	CA81	10-WAY / BLACK	LH REAR DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – PASSENGER	PT3	10-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
DOOR LATCH ASSEMBLY – RH REAR	CA90	10-WAY / BLACK	RH REAR DOOR, TRIM PANEL
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
GENERAL ELECTRONIC CONTROL MODULE	CA24	26-WAY / WHITE	'A' POST, LH SIDE
	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
HOOD SWITCH	FH21	2-WAY / BLACK	ADJACENT TO AIR FILTER
HORNS	FH29	2-WAY / BLACK	FORWARD OF RADIATOR
IGNITION SWITCH	FC18	8-WAY / BLACK	STEERING COLUMN
INSTRUMENT PACK	FC14	22-WAY / GREY	FASCIA
	FC15	20-WAY / BLACK	FASCIA
	FC63	22-WAY / BLACK	FASCIA
PASSIVE ANTI-THEFT SYSTEM TRANSCIEVER	FC52	10-WAY / GREEN	IGNITION SWITCH
RADIO HEAD UNIT	FC71	7-WAY / GREY	FASCIA, CENTER
	FC72	8-WAY / BLACK	FASCIA, CENTER
	FC73	17-WAY / BLACK	FASCIA, CENTER
	FC74	12-WAY / BLACK	FASCIA, CENTER
	FC75	12-WAY / BLACK	FASCIA, CENTER
	FC85	10-WAY / BLACK	FASCIA, CENTER
REAR ELECTRONIC CONTROL MODULE	CA63	17-WAY / BLACK	TRUNK, RH REAR
	CA99	4-WAY / GREY	TRUNK, RH REAR
	CA100	12-WAY / BLACK	TRUNK, RH REAR
	CA101	20-WAY / BLACK	TRUNK, RH REAR
	CA102	22-WAY / BLACK	TRUNK, RH REAR
	CA103	26-WAY / WHITE	TRUNK, RH REAR
	CA104	4-WAY / BLACK	TRUNK, RH REAR
	CA117	2-WAY / BLACK	TRUNK LID

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
PT1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
SL3	10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD	BEHIND FASCIA END PANEL, RH SIDE

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET</	

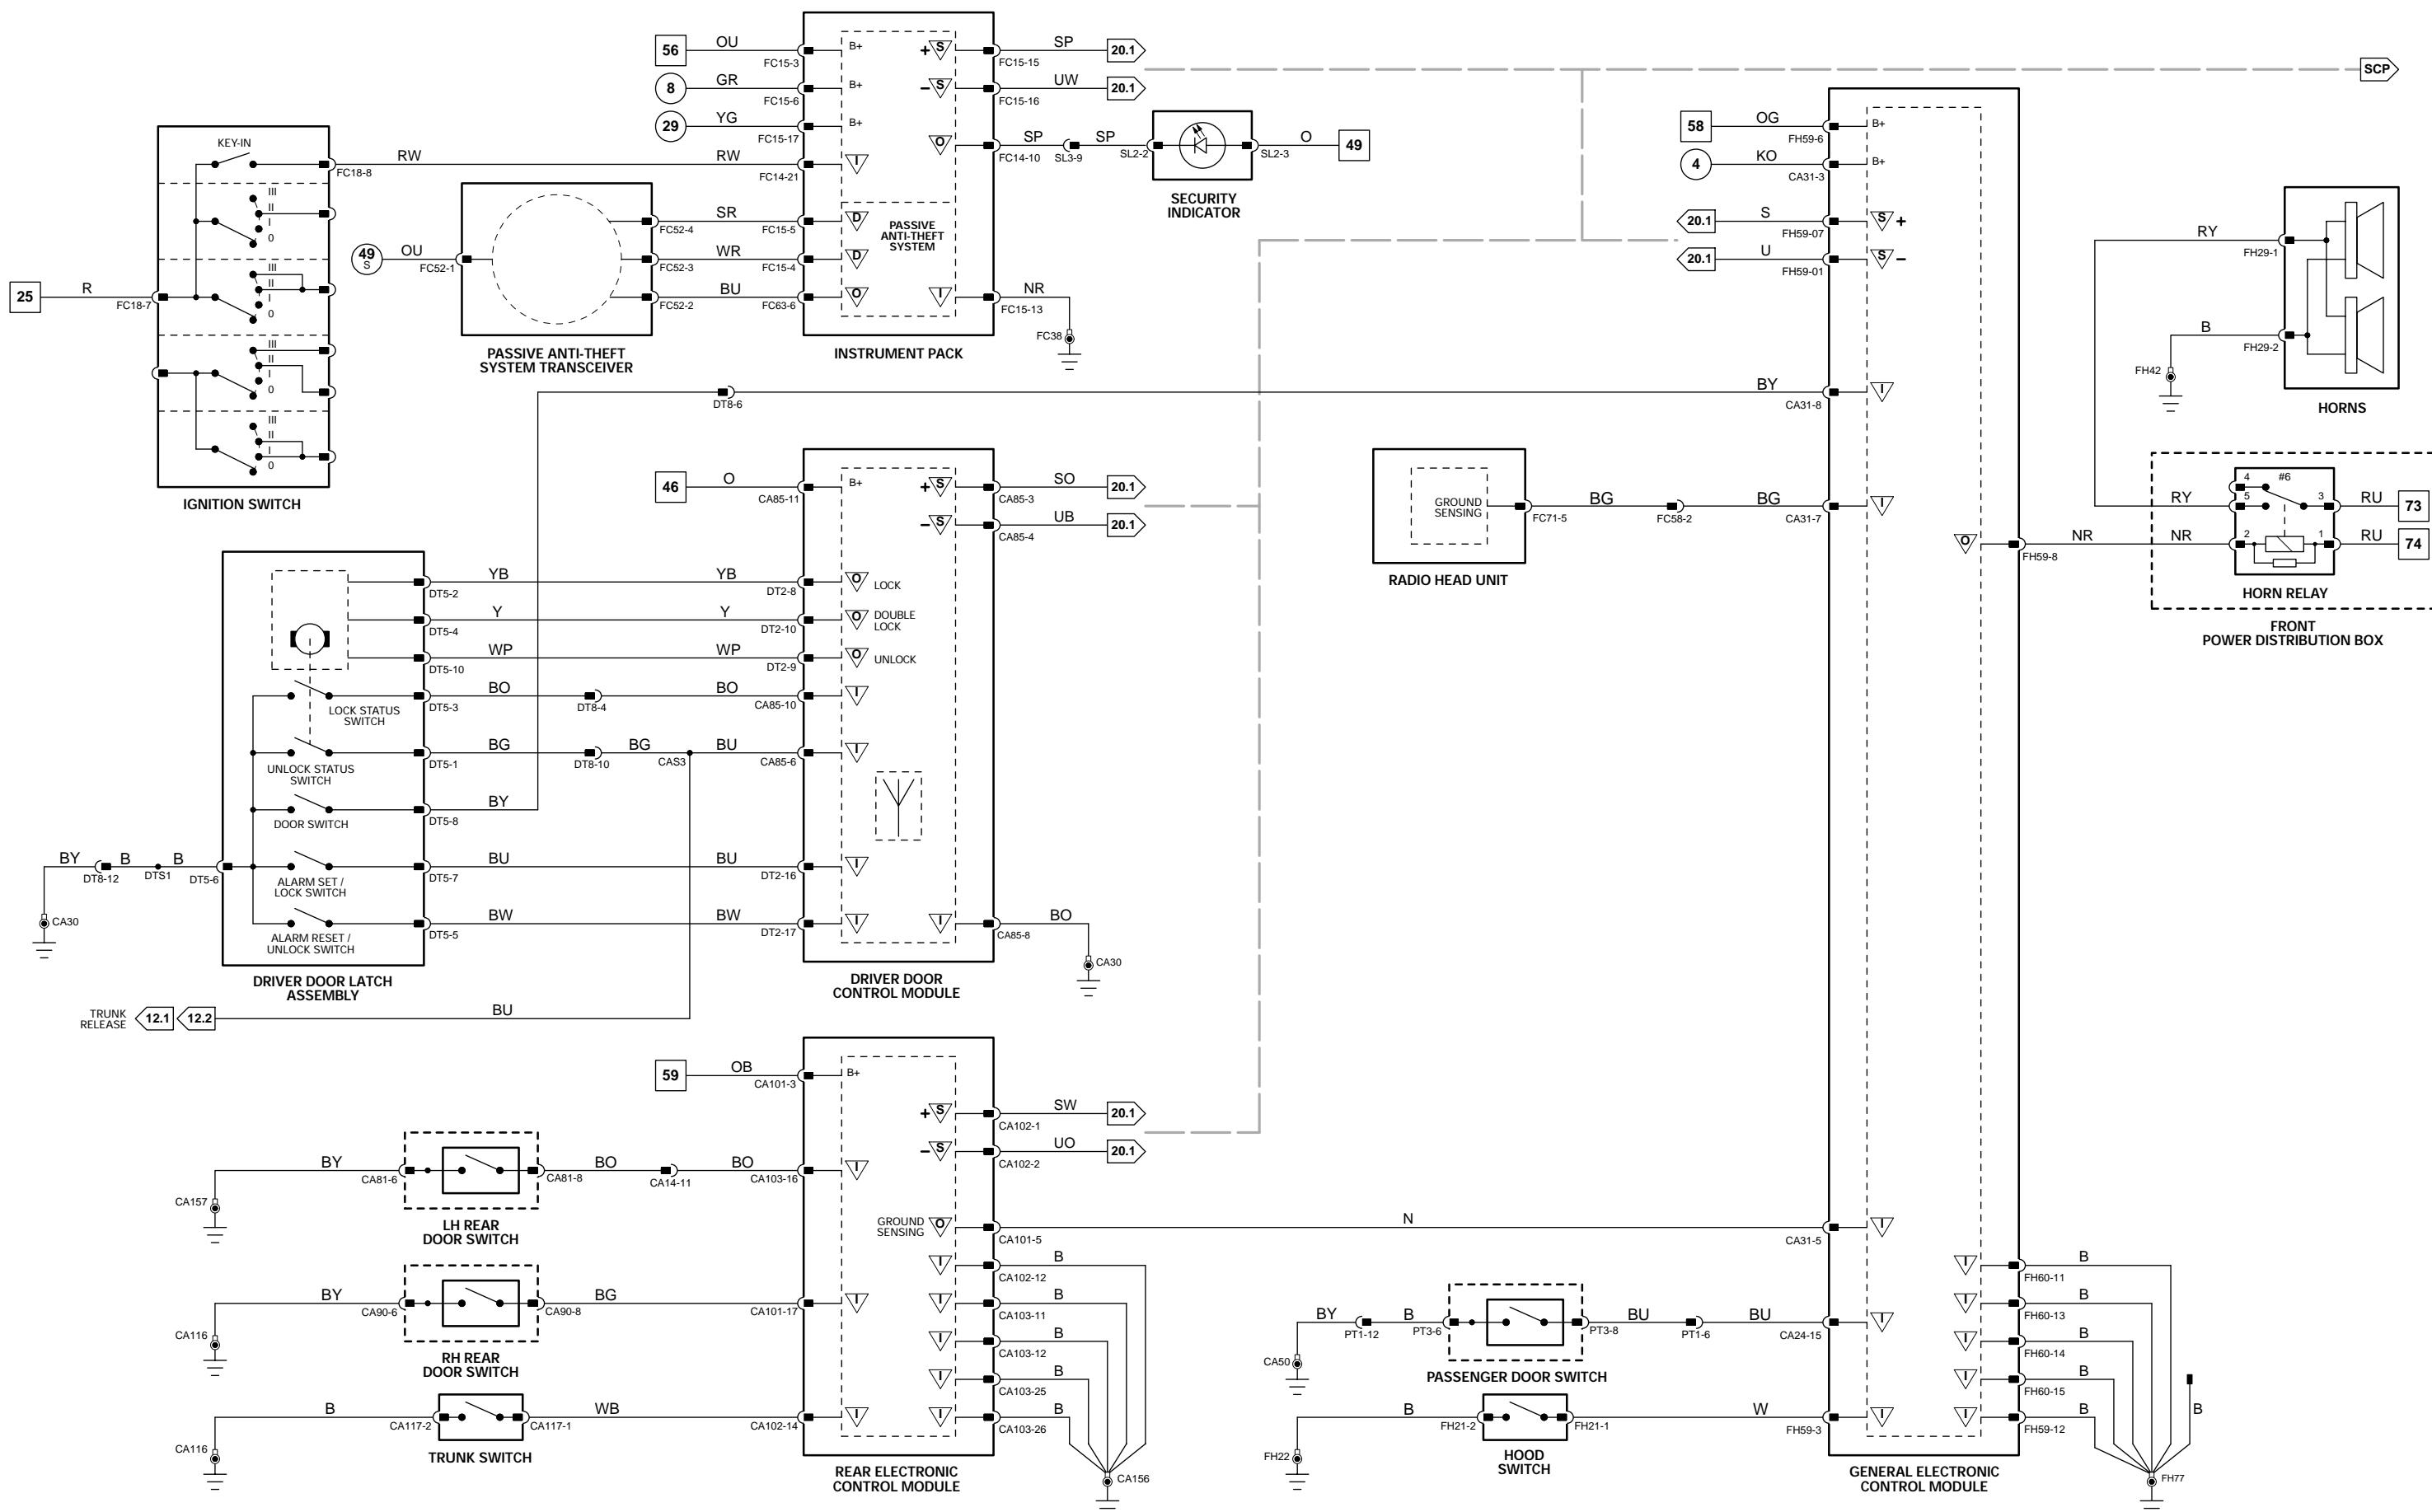


Fig. 13.1

General Electronic Control Module

	Pin	Description
I	CA31-2	WIPE / WASH MODE SELECTION REQUEST
I	CA31-3	IGNITION SWITCHED POWER SUPPLY - LOGIC
I	CA31-13	WIPE VARIABLE SPEED SELECTION REQUEST
SS	CA31-14	WIPE / WASH REFERENCE VOLTAGE
O	FH9-1	WIPER PARK RELAY ACTIVATE
O	FH9-3	WIPER HIGH / LOW RELAY
I	FH9-13	WIPER MOTOR PARK SIGNAL
O	FH9-14	WINDSHIELD WASHER RELAY ACTIVATE
I	FH9-15	WASHER FLUID LEVEL SWITCH
S	FH9-1	SCP -
O	FH9-4	POWER WASH RELAY ACTIVATE
I	FH9-6	BATTERY POWER SUPPLY
S	FH9-7	SCP +
I	FH9-12	GROUND SUPPLY
I	FH60-1	SWITCHED SYSTEM POWER SUPPLY
I	FH60-11	GROUND SUPPLY
I	FH60-13	GROUND SUPPLY
I	FH60-14	GROUND SUPPLY
I	FH60-15	GROUND SUPPLY

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

	Active	Inactive
I	CA31-2	GROUND = HIGH; 2.2V = LOW; 5.8V = DELAY; 2.2V = FLICK; 4V = OFF
I	CA31-3	B+
I	CA31-13	1.4V = MAXIMUM DELAY; 5.8V = MINIMUM DELAY; 6.6V = AUTO
SS	CA31-14	9V
O	FH9-1	GROUND
O	FH9-3	GROUND
I	FH9-13	GROUND = PARKED
O	FH9-14	GROUND
I	FH9-15	GROUND = FULL
S	FH9-1	2 - 1600 Hz
O	FH9-4	GROUND
I	FH9-6	B+
S	FH9-7	B+
I	FH9-12	2 - 1600 Hz
I	FH60-1	GROUND
I	FH60-11	B+
I	FH60-13	GROUND
I	FH60-14	GROUND
I	FH60-15	GROUND

COMPONENTS

Component	Connector(s)	Connector Description	Location
FRONT POWER DISTRIBUTION BOX	CA24	26-WAY / WHITE	ENGINE COMPARTMENT, RH FRONT
GENERAL ELECTRONIC CONTROL MODULE	CA31	20-WAY / BLACK	'A' POST, LH SIDE
	CA84	4-WAY / GREY	'A' POST, LH SIDE
	FH9	22-WAY / BLACK	'A' POST, LH SIDE
	FH59	12-WAY / BLACK	'A' POST, LH SIDE
	FH60	17-WAY / BLACK	'A' POST, LH SIDE
POWERWASH PUMP	FH38	2-WAY / BLACK	ADJACENT TO WASHER FLUID BOTTLE
RAIN SENSING MODULE	RF14	6-WAY / BLACK	REAR VIEW MIRROR
WASHER FLUID LEVEL SWITCH	FH37	2-WAY / BLACK	ADJACENT TO WASHER FLUID BOTTLE
WINDSHIELD WASHER PUMP	FH36	2-WAY / BLACK	ADJACENT TO WASHER FLUID BOTTLE
WINDSHIELD WIPE / WASH SWITCH	CS11	10-WAY / WHITE	STEERING COLUMN
WIPER MOTOR ASSEMBLY	FH17	10-WAY / BLACK	FRONT BULKHEAD

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS3	10-WAY / GREY / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
RF33	6-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELOW PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT
FH77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GECM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

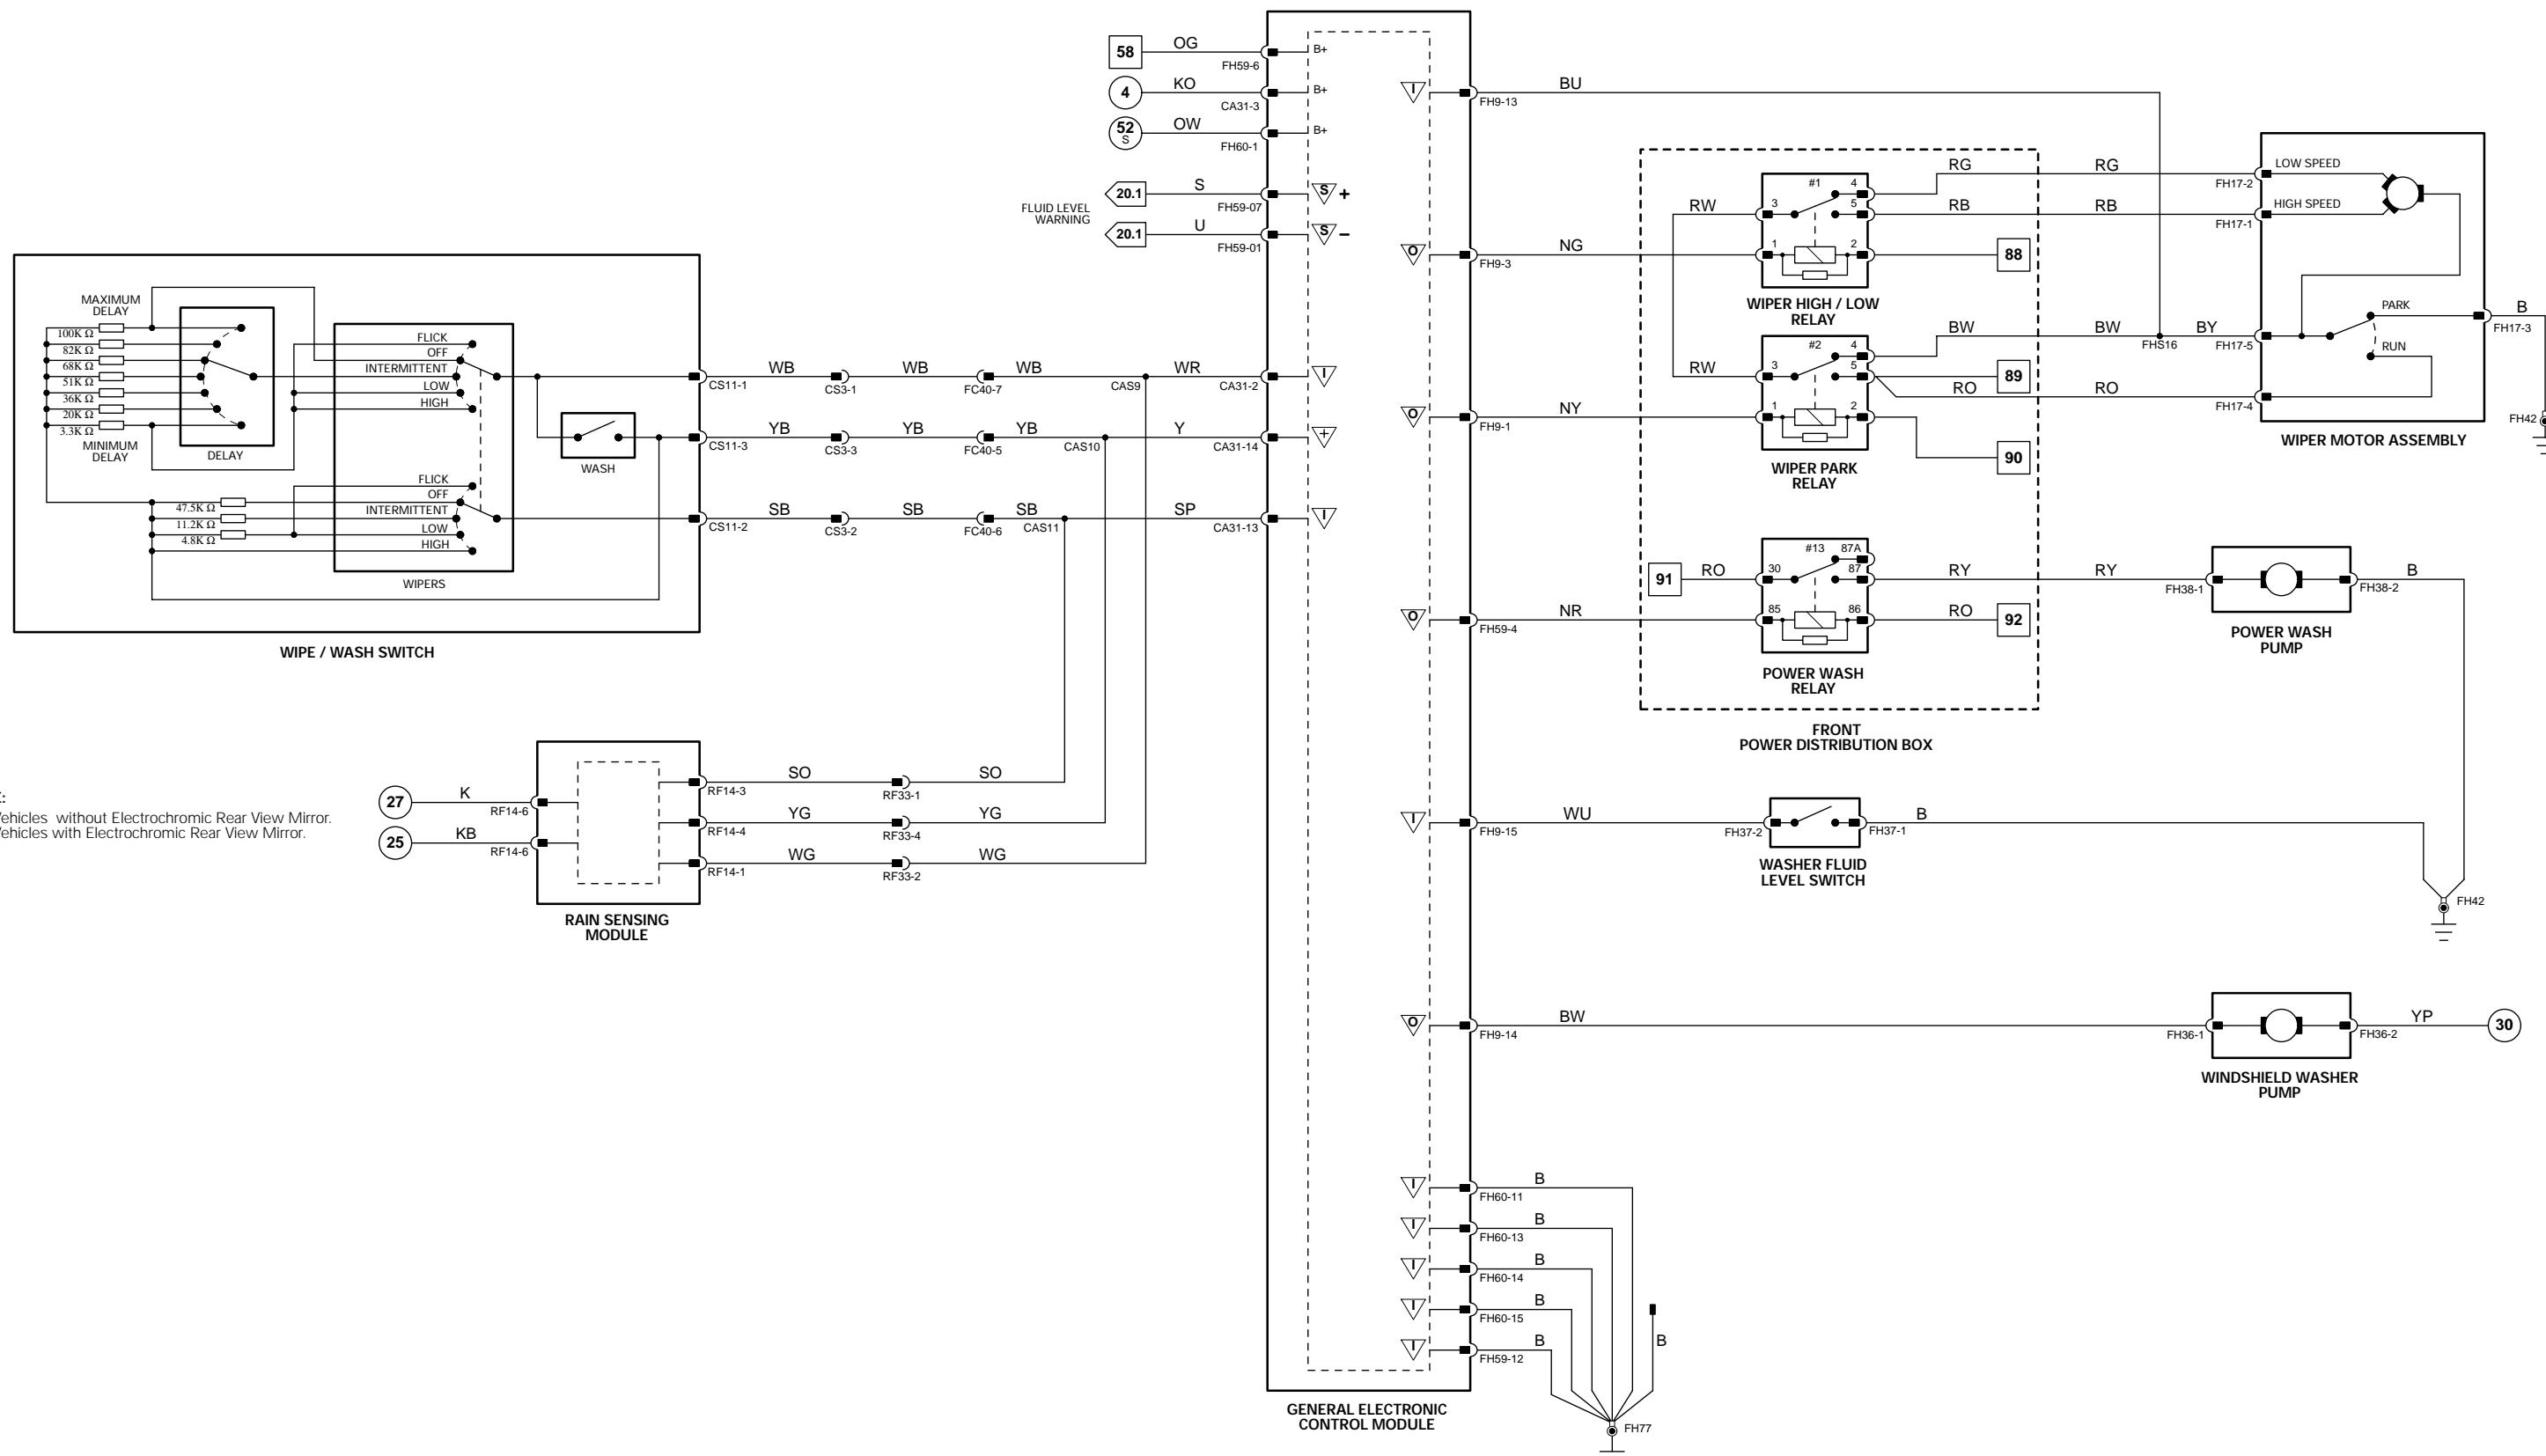


Fig. 14.1

Driver Door Control Module

	Pin	Description	Active
S	CA85-3	SCP +	2 - 1600 Hz
S	CA85-4	SCP -	2 - 1600 Hz
I	CA85-7	GROUND SUPPLY	GROUND
I	CA85-8	GROUND SUPPLY	GROUND
I	CA85-11	BATTERY POWER SUPPLY	B+
I	DD4-2	PASSENGER WINDOW RAISE REQUEST	B+
I	DD4-3	PASSENGER WINDOW LOWER REQUEST	B+
I	DD4-4	RH REAR WINDOW RAISE REQUEST	B+
I	DD4-5	RH REAR WINDOW LOWER REQUEST	B+
I	DD4-8	LH REAR WINDOW RAISE REQUEST	B+
I	DD4-9	LH REAR WINDOW LOWER REQUEST	B+
O	DD4-12	WINDOW SWITCH BIAS OUTPUT	B+
I	DD4-19	DRIVER WINDOW RAISE REQUEST	B+
I	DD4-20	DRIVER WINDOW LOWER REQUEST	B+
I	DD4-21	DRIVER 'ONE TOUCH DOWN' REQUEST	B+
I	DD4-22	WINDOW SWITCH ISOLATION SWITCH	B+
O	DT1-1	DRIVER WINDOW MOTOR LOWER SUPPLY	B+
O	DT1-2	DRIVER WINDOW MOTOR RAISE SUPPLY	B+
I	DT1-3	DRIVER WINDOW GROUND SUPPLY	GROUND
I	DT1-4	DRIVER WINDOW MOTOR BATTERY POWER SUPPLY	B+

General Electronic Control Module

Pin	Description	Active
I CA24-10	PASSENGER WINDOW LOWER REQUEST	B+
I CA24-25	PASSENGER WINDOW RAISE REQUEST	B+
O CA84-1	PASSENGER WINDOW MOTOR RAISE	B+
O CA84-2	PASSENGER WINDOW MOTOR LOWER	B+
I CA84-3	WINDOW LIFT MOTORS BATTERY POWER SUPPLY	B+
I CA84-4	GROUND SUPPLY	GROUND
S FH59-1	SCP -	2 - 1600 Hz
S FH59-7	SCP +	2 - 1600 Hz
I FH59-12	GROUND SUPPLY	GROUND
I FH60-1	SWITCHED SYSTEM POWER SUPPLY	B+
I FH60-11	GROUND SUPPLY	GROUND
I FH60-13	GROUND SUPPLY	GROUND
I FH60-14	GROUND SUPPLY	GROUND
I FH60-15	GROUND SUPPLY	GROUND

Inactive
GROUND
GROUND
GROUND
GROUND
B+
GROUND

GROUND
GROUND
GROUND
GROUND
GROUND
GROUND

Rear Electronic Control Module

Pin	Description	Active
O CA99-1	LH REAR WINDOW MOTOR RAISE SUPPLY	B+
I CA99-2	LH REAR WINDOW MOTOR LOWER SUPPLY	B+
O CA99-3	GROUND SUPPLY	GROUND
I CA99-4	REAR WINDOW MOTORS BATTERY POWER SUPPLY	B+
I CA101-7	RH REAR WINDOW RAISE REQUEST	B+
I CA101-20	RH REAR WINDOW DOWN REQUEST	B+
S CA102-1	SCP +	2 - 1600 Hz
S CA102-2	SCP -	2 - 1600 Hz
O CA102-5	PASSENGER AND REAR DOOR WINDOW SWITCHES BIAS VOLTAGE	B+
I CA102-12	GROUND	GROUND
I CA103-11	GROUND SUPPLY	GROUND
I CA103-12	GROUND SUPPLY	GROUND
I CA103-13	SWITCHED SYSTEM POWER SUPPLY	B+
O CA103-14	SLIDING ROOF PANEL GLOBAL CLOSE COMMAND	GROUND
O CA103-15	SLIDING ROOF PANEL GLOBAL OPEN COMMAND	GROUND
I CA103-22	LH REAR WINDOW LOWER REQUEST	B+
I CA103-24	LH REAR WINDOW RAISE REQUEST	B+
I CA103-25	GROUND SUPPLY	GROUND
I CA103-26	GROUND SUPPLY	GROUND
O CA104-1	RH REAR WINDOW MOTOR RAISE SUPPLY	B+
O CA104-2	GROUND SUPPLY	GROUND
I CA104-3	RH REAR WINDOW MOTOR LOWER SUPPLY	B+
I CA104-4	RH WINDOW MOTOR BATTERY POWER SUPPLY	B+

Inactive
GROUND
GROUND
GROUND
B+
GROUND
GROUND

GROUND
GROUND
GROUND
GROUND
GROUND
B+
B+
GROUND
GROUND
GROUND
GROUND
GROUND
GROUND
GROUND
GROUND
B+

COMPONENTS

Component	Connector(s)	Connector Description	Location
DOOR CONTROL MODULE – DRIVER	CA85 DD4 DT1 DT2	12-WAY / BLACK 26-WAY / WHITE 4-WAY / GREY 20-WAY / BLACK	DRIVER DOOR, TRIM PANEL DRIVER DOOR, TRIM PANEL DRIVER DOOR, TRIM PANEL DRIVER DOOR, TRIM PANEL
DOOR SWITCH PACK – DRIVER	DD2	26-WAY / YELLOW	DRIVER DOOR ARM REST
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
SEAR ELECTRONIC CONTROL MODULE	CA63 CA99 CA100 CA101 CA102 CA103 CA104	17-WAY / BLACK 4-WAY / GREY 12-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK 26-WAY / WHITE 4-WAY / BLACK	TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR
SLIDING ROOF CONTROL MODULE	SR2 SR3	4-WAY / BLACK 8-WAY / WHITE	ABOVE ROOF CONSOLE ABOVE ROOF CONSOLE
SLIDING ROOF MOTOR ASSEMBLY	SR1	2-WAY / WHITE	ABOVE ROOF CONSOLE
SLIDING ROOF SWITCH PACK	RF10	6-WAY / BLACK	ABOVE ROOF CONSOLE
WINDOW MOTOR – DRIVER	DT4	2-WAY / BLACK	DRIVER DOOR, TRIM PANEL
WINDOW MOTOR – LH REAR	CA79	2-WAY / BLACK	LH REAR DOOR, TRIM PANEL
WINDOW MOTOR – PASSENGER	PT4	2-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
WINDOW MOTOR – RH REAR	CA93	2-WAY / BLACK	RH REAR DOOR, TRIM PANEL
WINDOW SWITCH – LH REAR	CA78	5-WAY / GREEN	LH REAR DOOR ARM REST
WINDOW SWITCH – PASSENGER	PD1	5-WAY / GREEN	PASSENGER DOOR ARM REST
WINDOW SWITCH – RH REAR	CA95	5-WAY / GREEN	RH REAR DOOR ARM REST

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
D4	10-WAY / GREY / PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
T1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
F6	8-WAY / BLACK / SLIDING ROOF LINK LEAD	BEHIND LEFT REAR QUARTER PANEL
F34	14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELOW PARCEL SHELF

GOALS AND GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
H77	GROUND EYELET	'A' POST; LH SIDE; ADJACENT TO GFCM / 'A' POST TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM Pulse Width Modulated
Hz Frequency
kHz Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

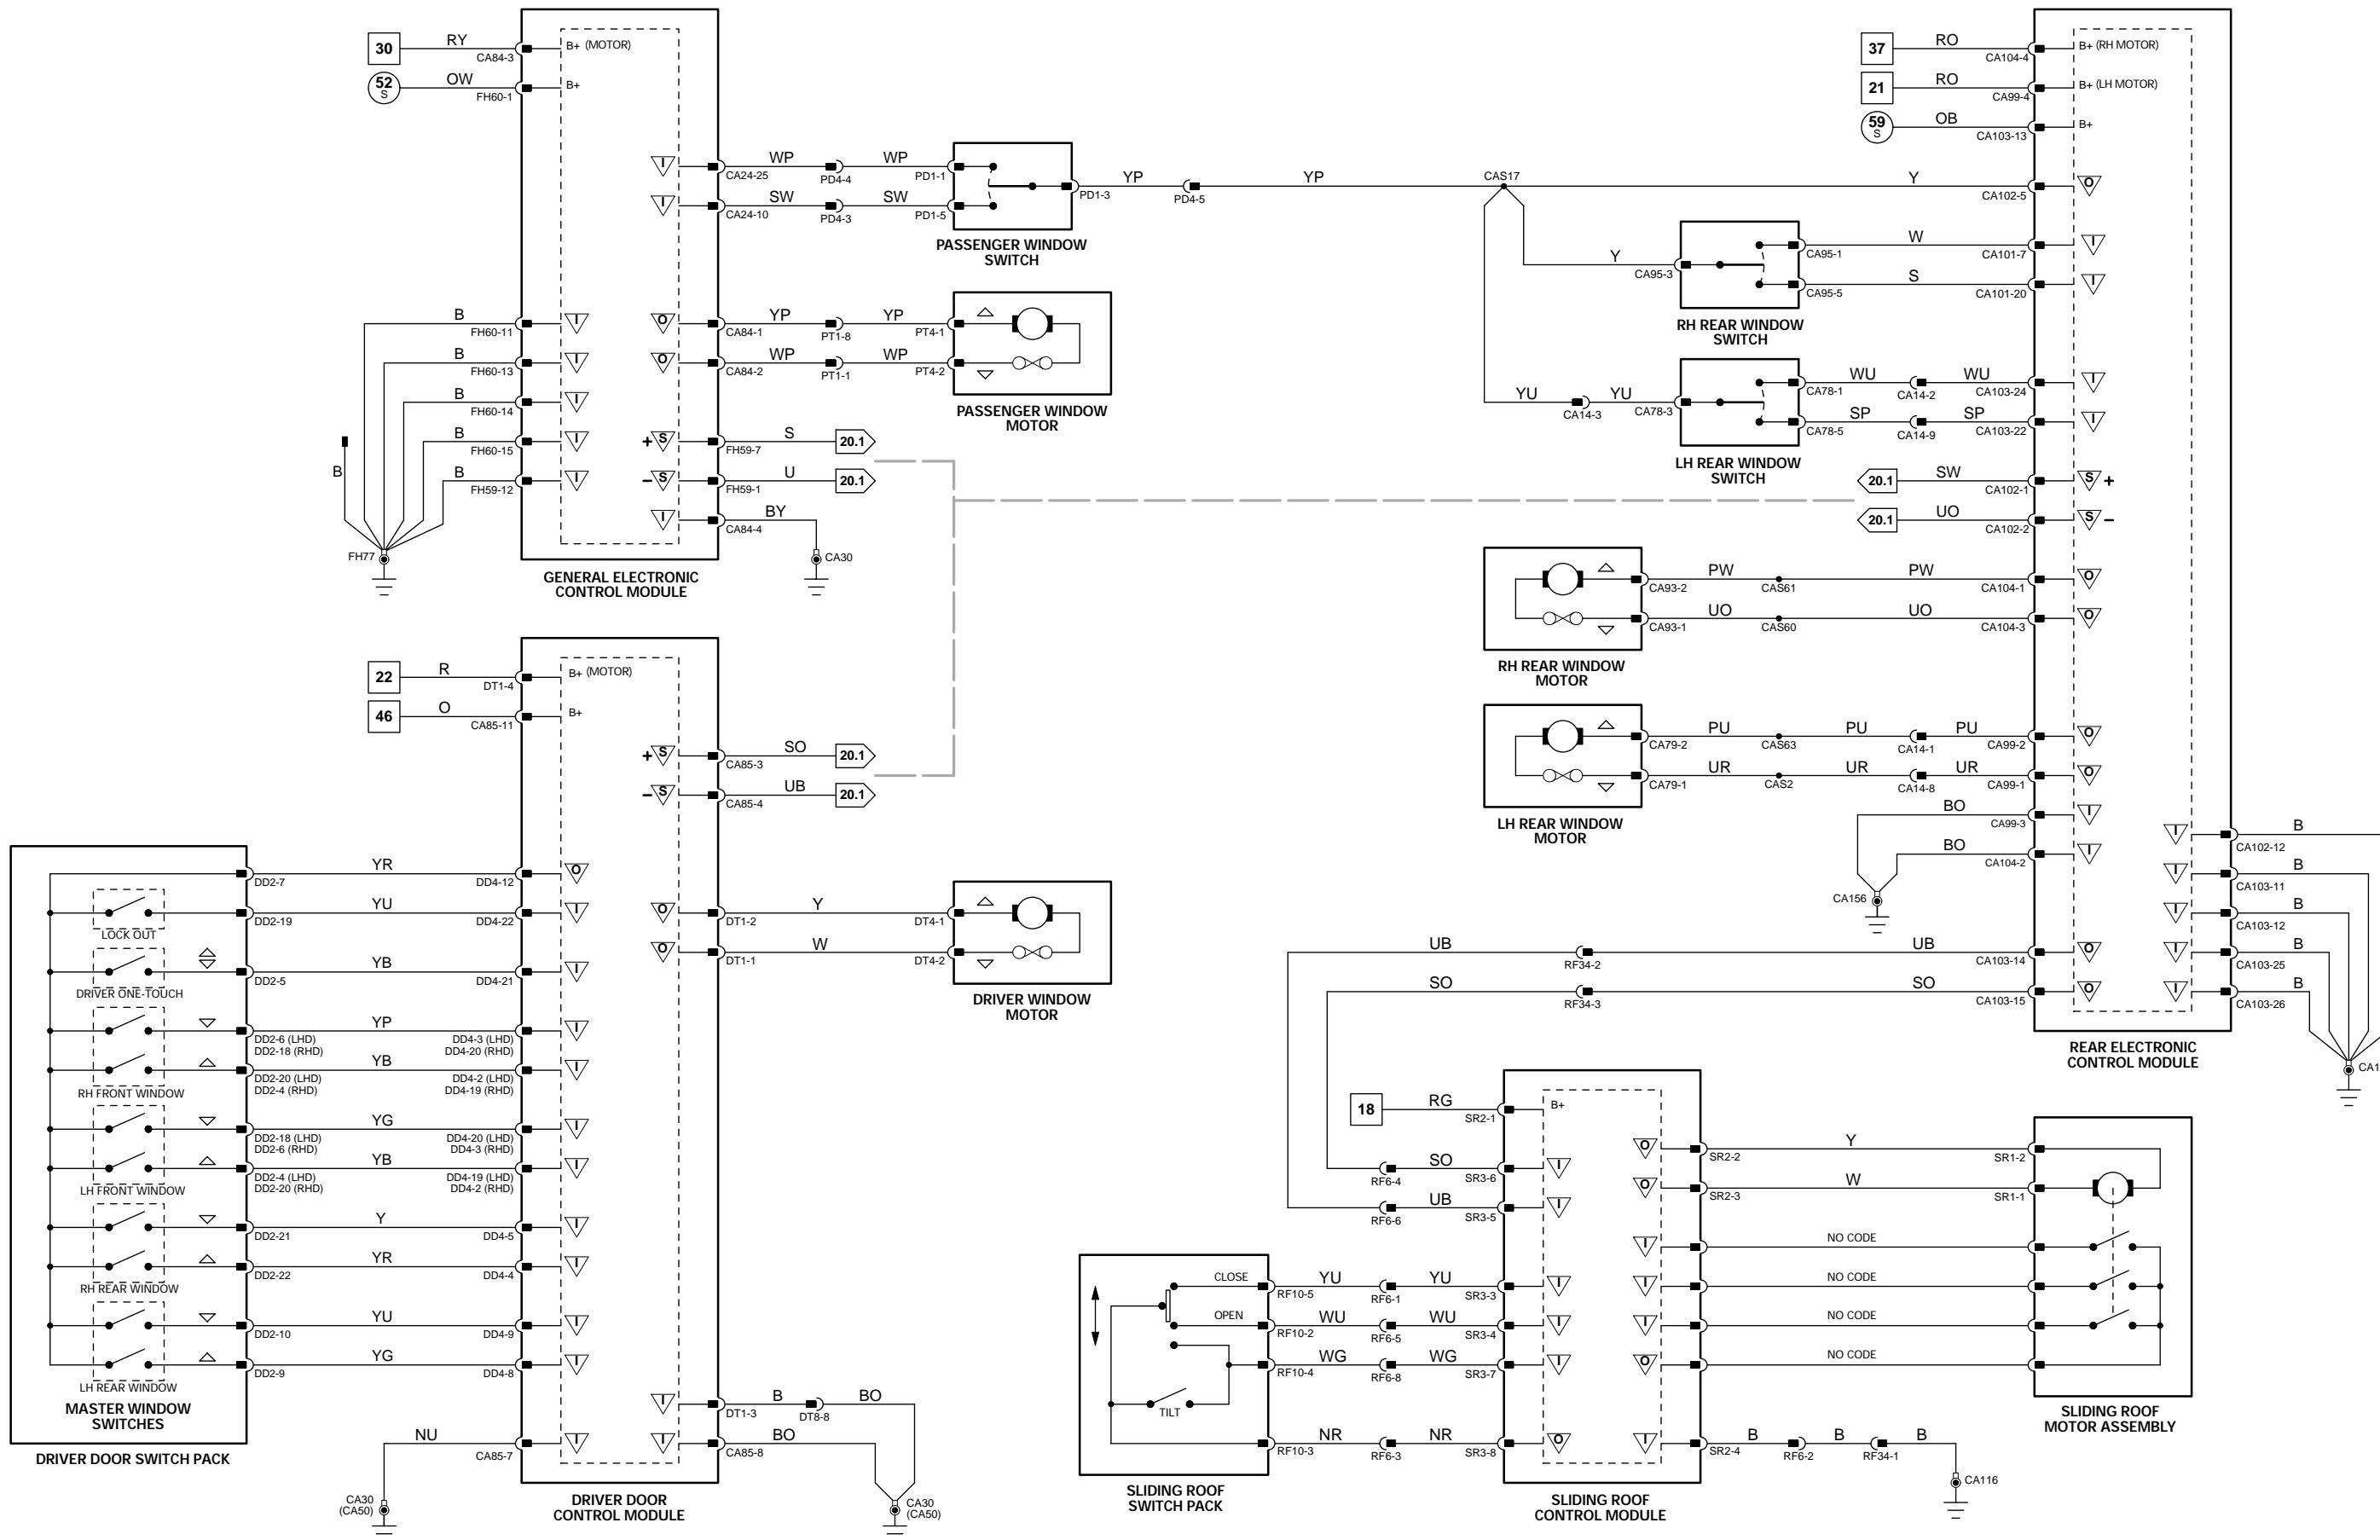


Fig. 15.1

COMPONENTS

Component	Connector(s)	Connector Description	Location
ANTENNA MODULE	HM2 CA20 CA159	COAXIAL CABLE COAXIAL CABLE COAXIAL CABLE	LH 'D/E' POST LH 'D/E' POST LH 'D/E' POST
CD AUTOCHANGER	CA198	12-WAY / BLACK	TRUNK, LH SIDE
DOOR SPEAKER – DRIVER	DT3	2-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR SPEAKER – LH REAR	CA80	2-WAY / BLACK	LH REAR DOOR, TRIM PANEL
DOOR SPEAKER – PASSENGER	PT2	2-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
DOOR SPEAKER – RH REAR	CA92	2-WAY / BLACK	RH REAR DOOR, TRIM PANEL
HEATED BACKLIGHT			REAR WINDOW
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
STEERING WHEEL AUDIO CONTROL SWITCHES	SQ1	10-WAY / WHITE	STEERING WHEEL

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC50	12-WAY / RADIO LINE HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FC54	1-WAY / BLACK / RADIO ANTENNA COAXIAL CABLE	BEHIND FASCIA END PANEL, LH SIDE
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FC103	12-WAY / FASCIA HARNESS TO CABIN HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
PT1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL

GROUNDS

Ground	Ground Description	Location
CA155	GROUND EYELET	TRUNK; LH REAR / TRUNK LH TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

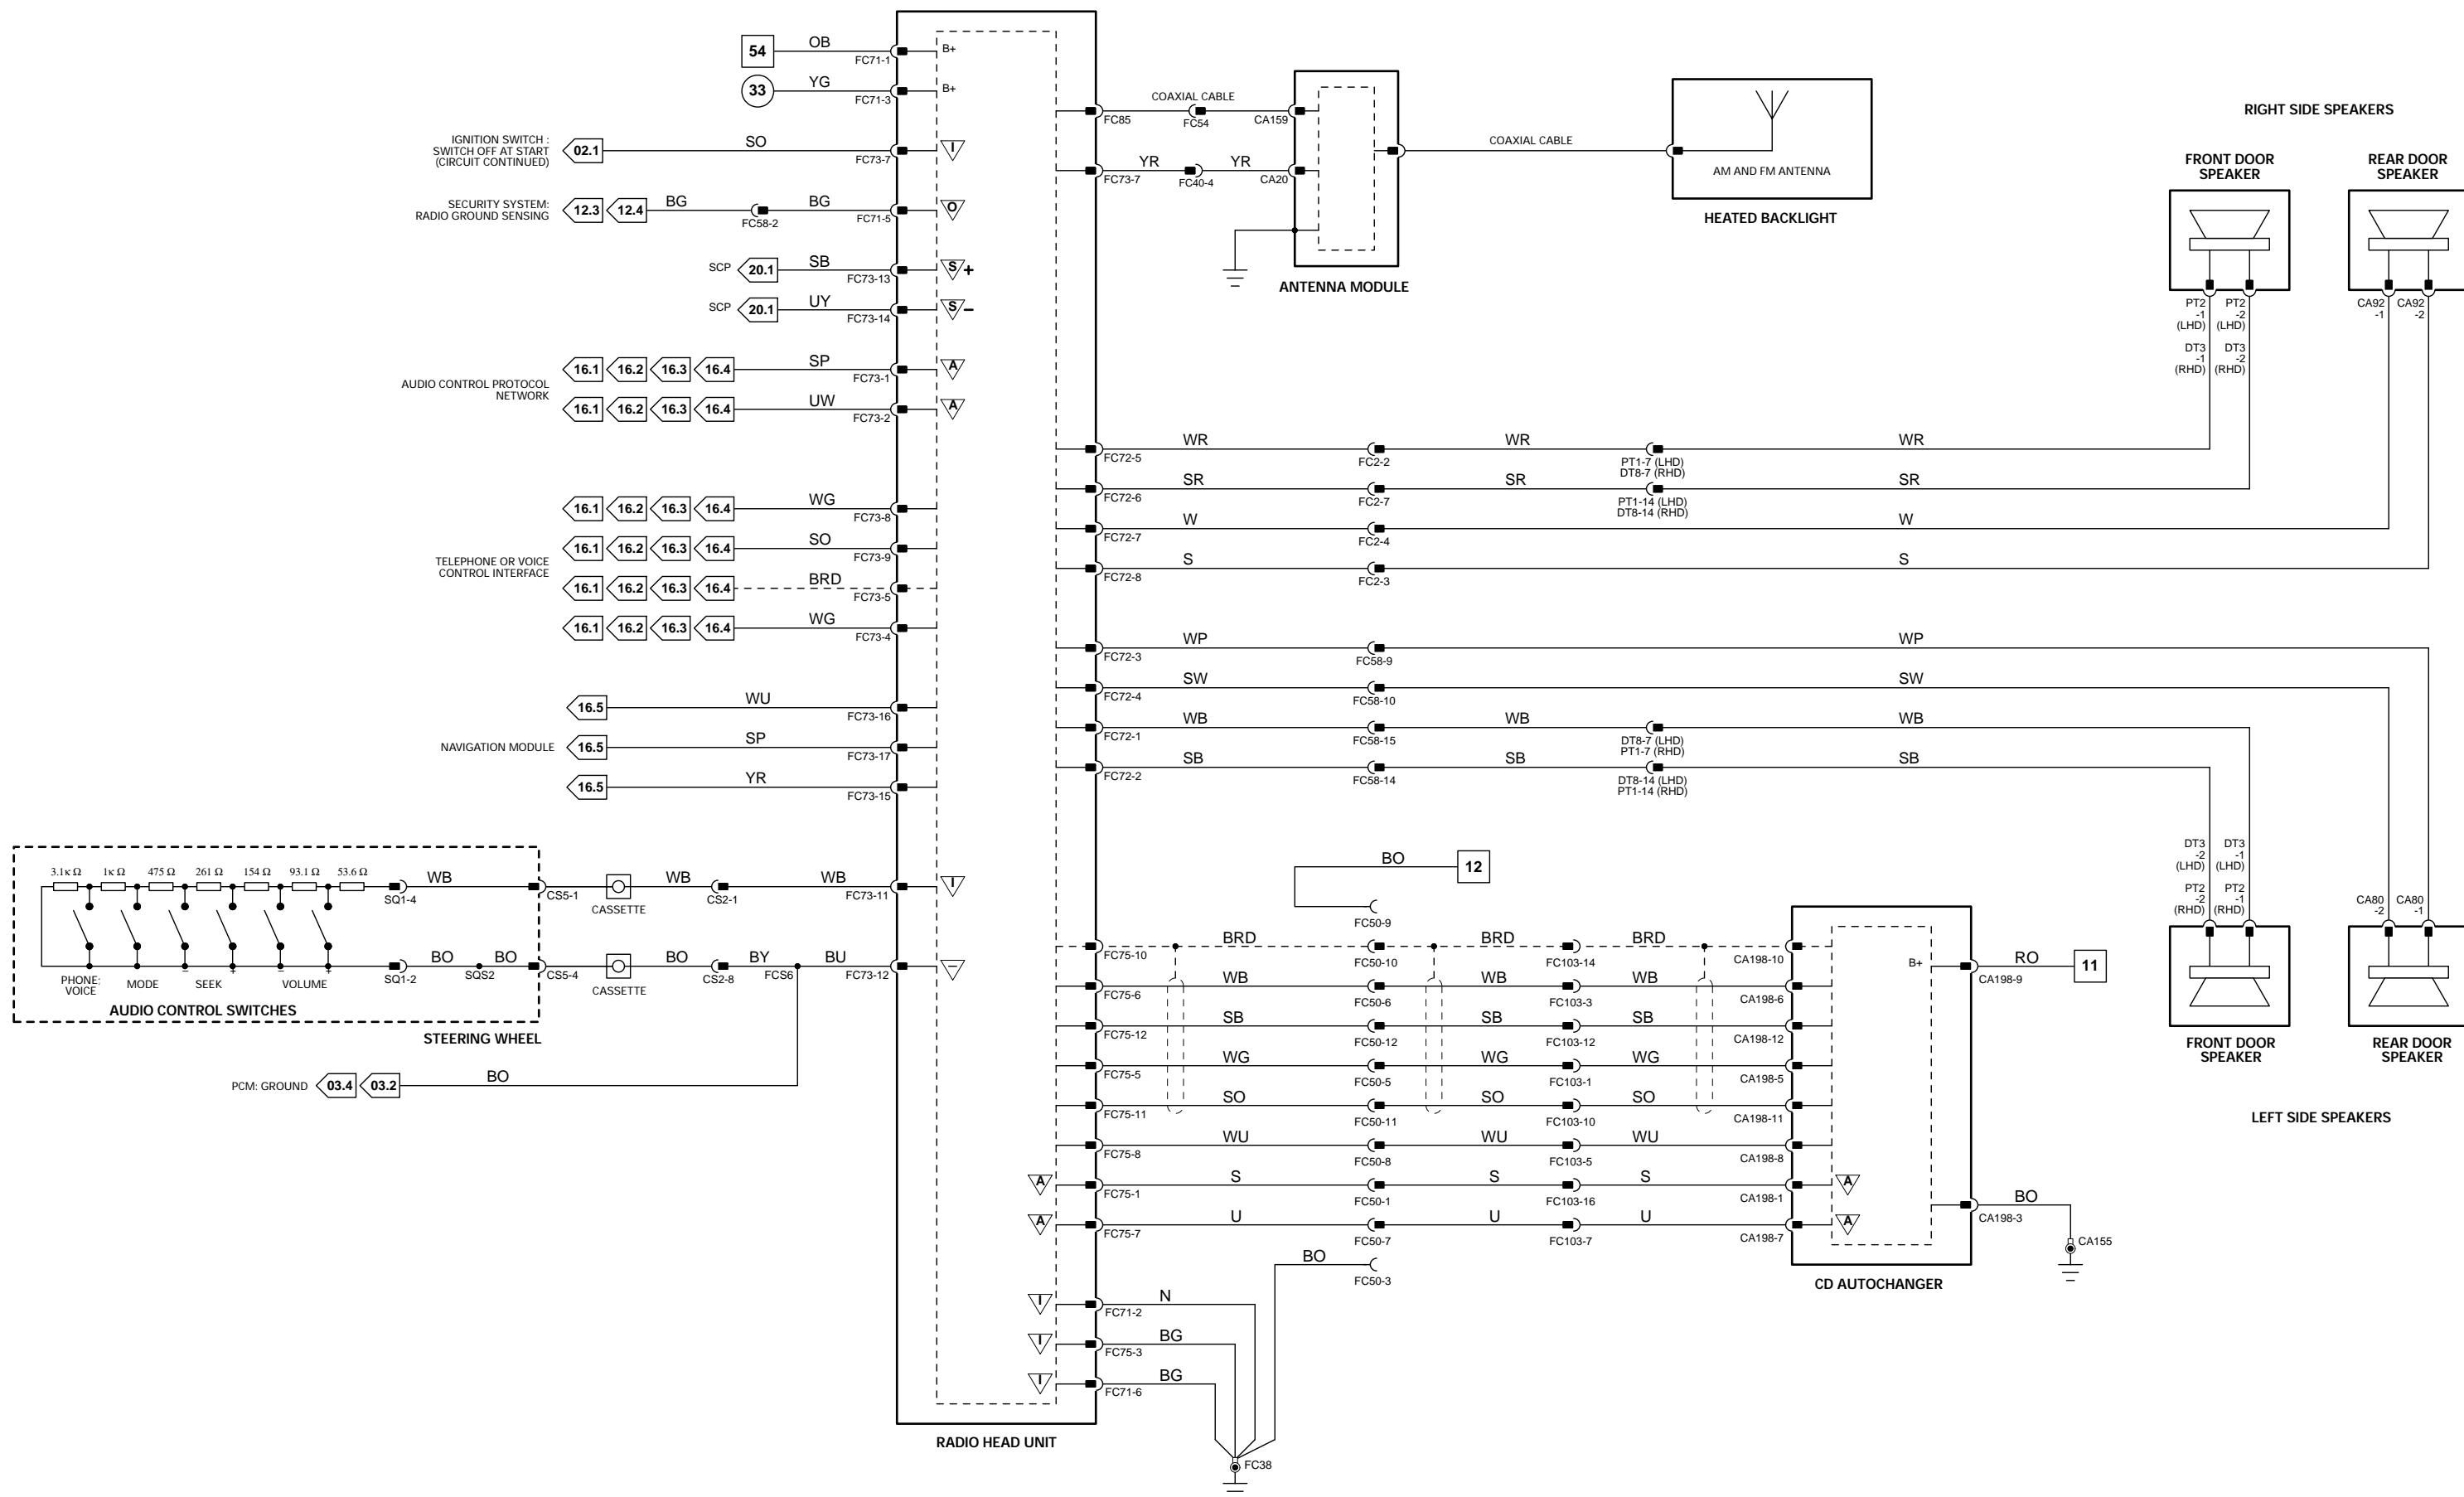


Fig. 15.2

COMPONENTS			
Component	Connector(s)	Connector Description	Location
ANTENNA MODULE	HM2 CA20 CA159	COAXIAL CABLE COAXIAL CABLE COAXIAL CABLE	LH 'D/E' POST LH 'D/E' POST LH 'D/E' POST
CD AUTOCHANGER	CA198	12-WAY / BLACK	TRUNK, LH SIDE
CENTER FILL AMPLIFIER	FC42	16-WAY / GREEN	ADJACENT TO STEERING COLUMN
CENTER SPEAKER – LH	FC49 FC87	1-WAY / BLACK 1-WAY / BLACK	CENTER CONSOLE, LH FRONT CENTER CONSOLE, LH FRONT
CENTER SPEAKER – RH	FC47 FC86	1-WAY / BLACK 1-WAY / BLACK	CENTER CONSOLE, RH FRONT CENTER CONSOLE, RH FRONT
DOOR SPEAKER – DRIVER	DT3	2-WAY / BLACK	DRIVER DOOR, TRIM PANEL
DOOR SPEAKER – LH REAR	CA80	2-WAY / BLACK	LH REAR DOOR, TRIM PANEL
DOOR SPEAKER – PASSENGER	PT2	2-WAY / BLACK	PASSENGER DOOR, TRIM PANEL
DOOR SPEAKER – RH REAR	CA92	2-WAY / BLACK	RH REAR DOOR, TRIM PANEL
HEATED BACKLIGHT			REAR WINDOW
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
STEERING WHEEL AUDIO CONTROL SWITCHES	SQ1	10-WAY / WHITE	STEERING WHEEL
SUBWOOFER AMPLIFIER	QO2 SW2	10-WAY / GREY 10-WAY / GREY	BELOW PARCEL SHELF BETWEEN PARCEL SHELF

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
DT8	14-WAY / GREY / DRIVER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
FC2	12-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC40	16-WAY / GREEN / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC50	12-WAY / RADIO LINK HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FC54	1-WAY / BLACK / RADIO ANTENNA COAXIAL CABLE	BEHIND FASCIA END PANEL, LH SIDE
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FC103	12-WAY / FASCIA HARNESS TO CABIN HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
PT1	14-WAY / GREY / CABIN HARNESS TO PASSENGER DOOR LOCK LINK LEAD	BEHIND DOOR TRIM PANEL
SW1	6-WAY / GREY / SUBWOOFER LINK LEAD	BETWEEN PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
CA155	GROUND EYELET	TRUNK; LH REAR / TRUNK LH TRIM
CA157	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

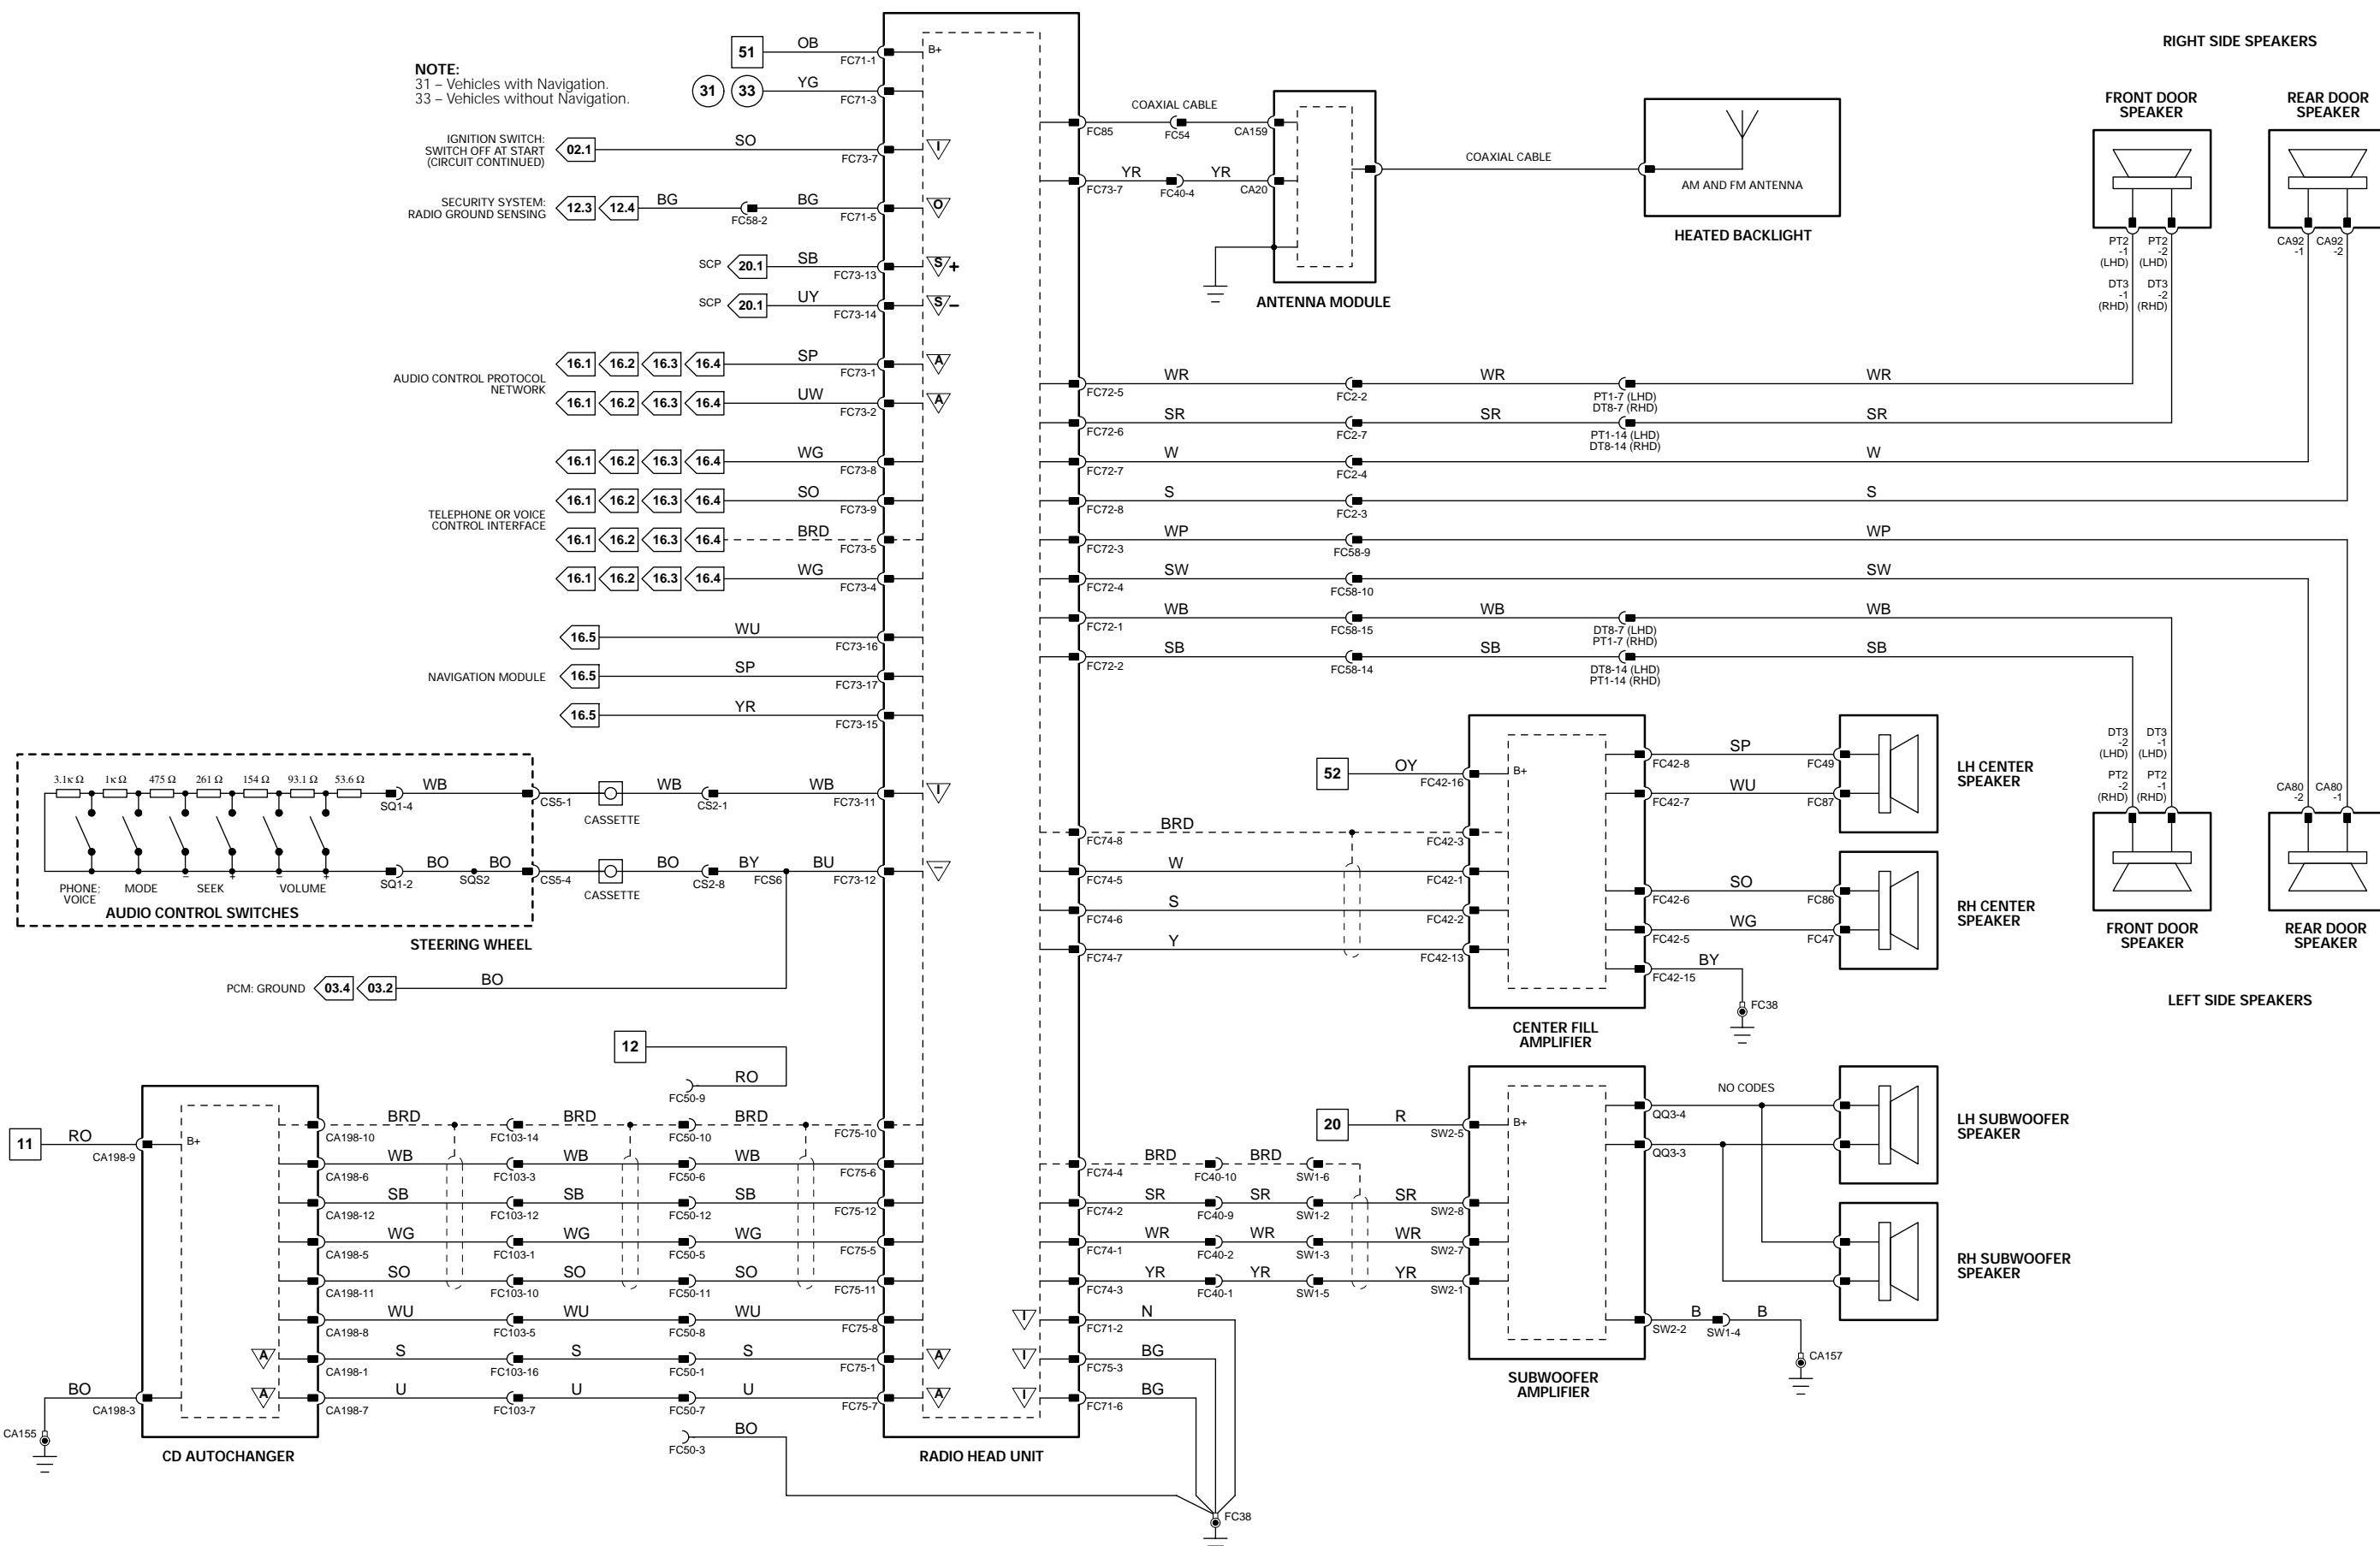


Fig. 16.1**COMPONENTS****Component**

CELLULAR TELEPHONE CONTROL MODULE

RADIO HEAD UNIT

RADIO TELEPHONE ANTENNA

SECONDARY JUNCTION BOX

TELEPHONE HANDSET - NAV

TELEPHONE MICROPHONE

Connector(s)

RA4 12-WAY / BLACK

RA5 16-WAY / BLACK

FC71 7-WAY / GREY

FC72 8-WAY / BLACK

FC73 17-WAY / BLACK

FC74 12-WAY / BLACK

FC75 12-WAY / BLACK

FC85 10-WAY / BLACK

CA138 1-WAY / BLACK

CA26 16-WAY / BLUE

CA27 8-WAY / GREY

FC10 16-WAY / GREEN

FH10 10-WAY / YELLOW

CA136 10-WAY / BLACK

RF37 2-WAY / BLACK

Connector Description

INSIDE THE LH REAR QUARTER PANEL

INSIDE THE LH REAR QUARTER PANEL

FASCIA, CENTER

FASCIA, CENTER

FASCIA, CENTER

FASCIA, CENTER

FASCIA, CENTER

FASCIA, CENTER

BELOW PARCEL SHELF

FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE

CENTER CONSOLE

ADJACENT TO ROOF CONSOLE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS**Connector****Connector Description****Location**

CA158 10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS

FC58 20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS

RA1 22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD

RF33 6-WAY / GREY / CABIN HARNESS TO ROOF HARNESS

TRUNK LATCH COVER; LH SIDE CARPET

BEHIND LOWER 'A' POST TRIM, LH SIDE

TRUNK; ABOVE WHEEL ARCH, LH SIDE

BELOW PARCEL SHELF

GROUNDS**Ground****Ground Description****Location**

RA8 GROUND EYELET

TRUNK; LH SIDE / TRUNK LH TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

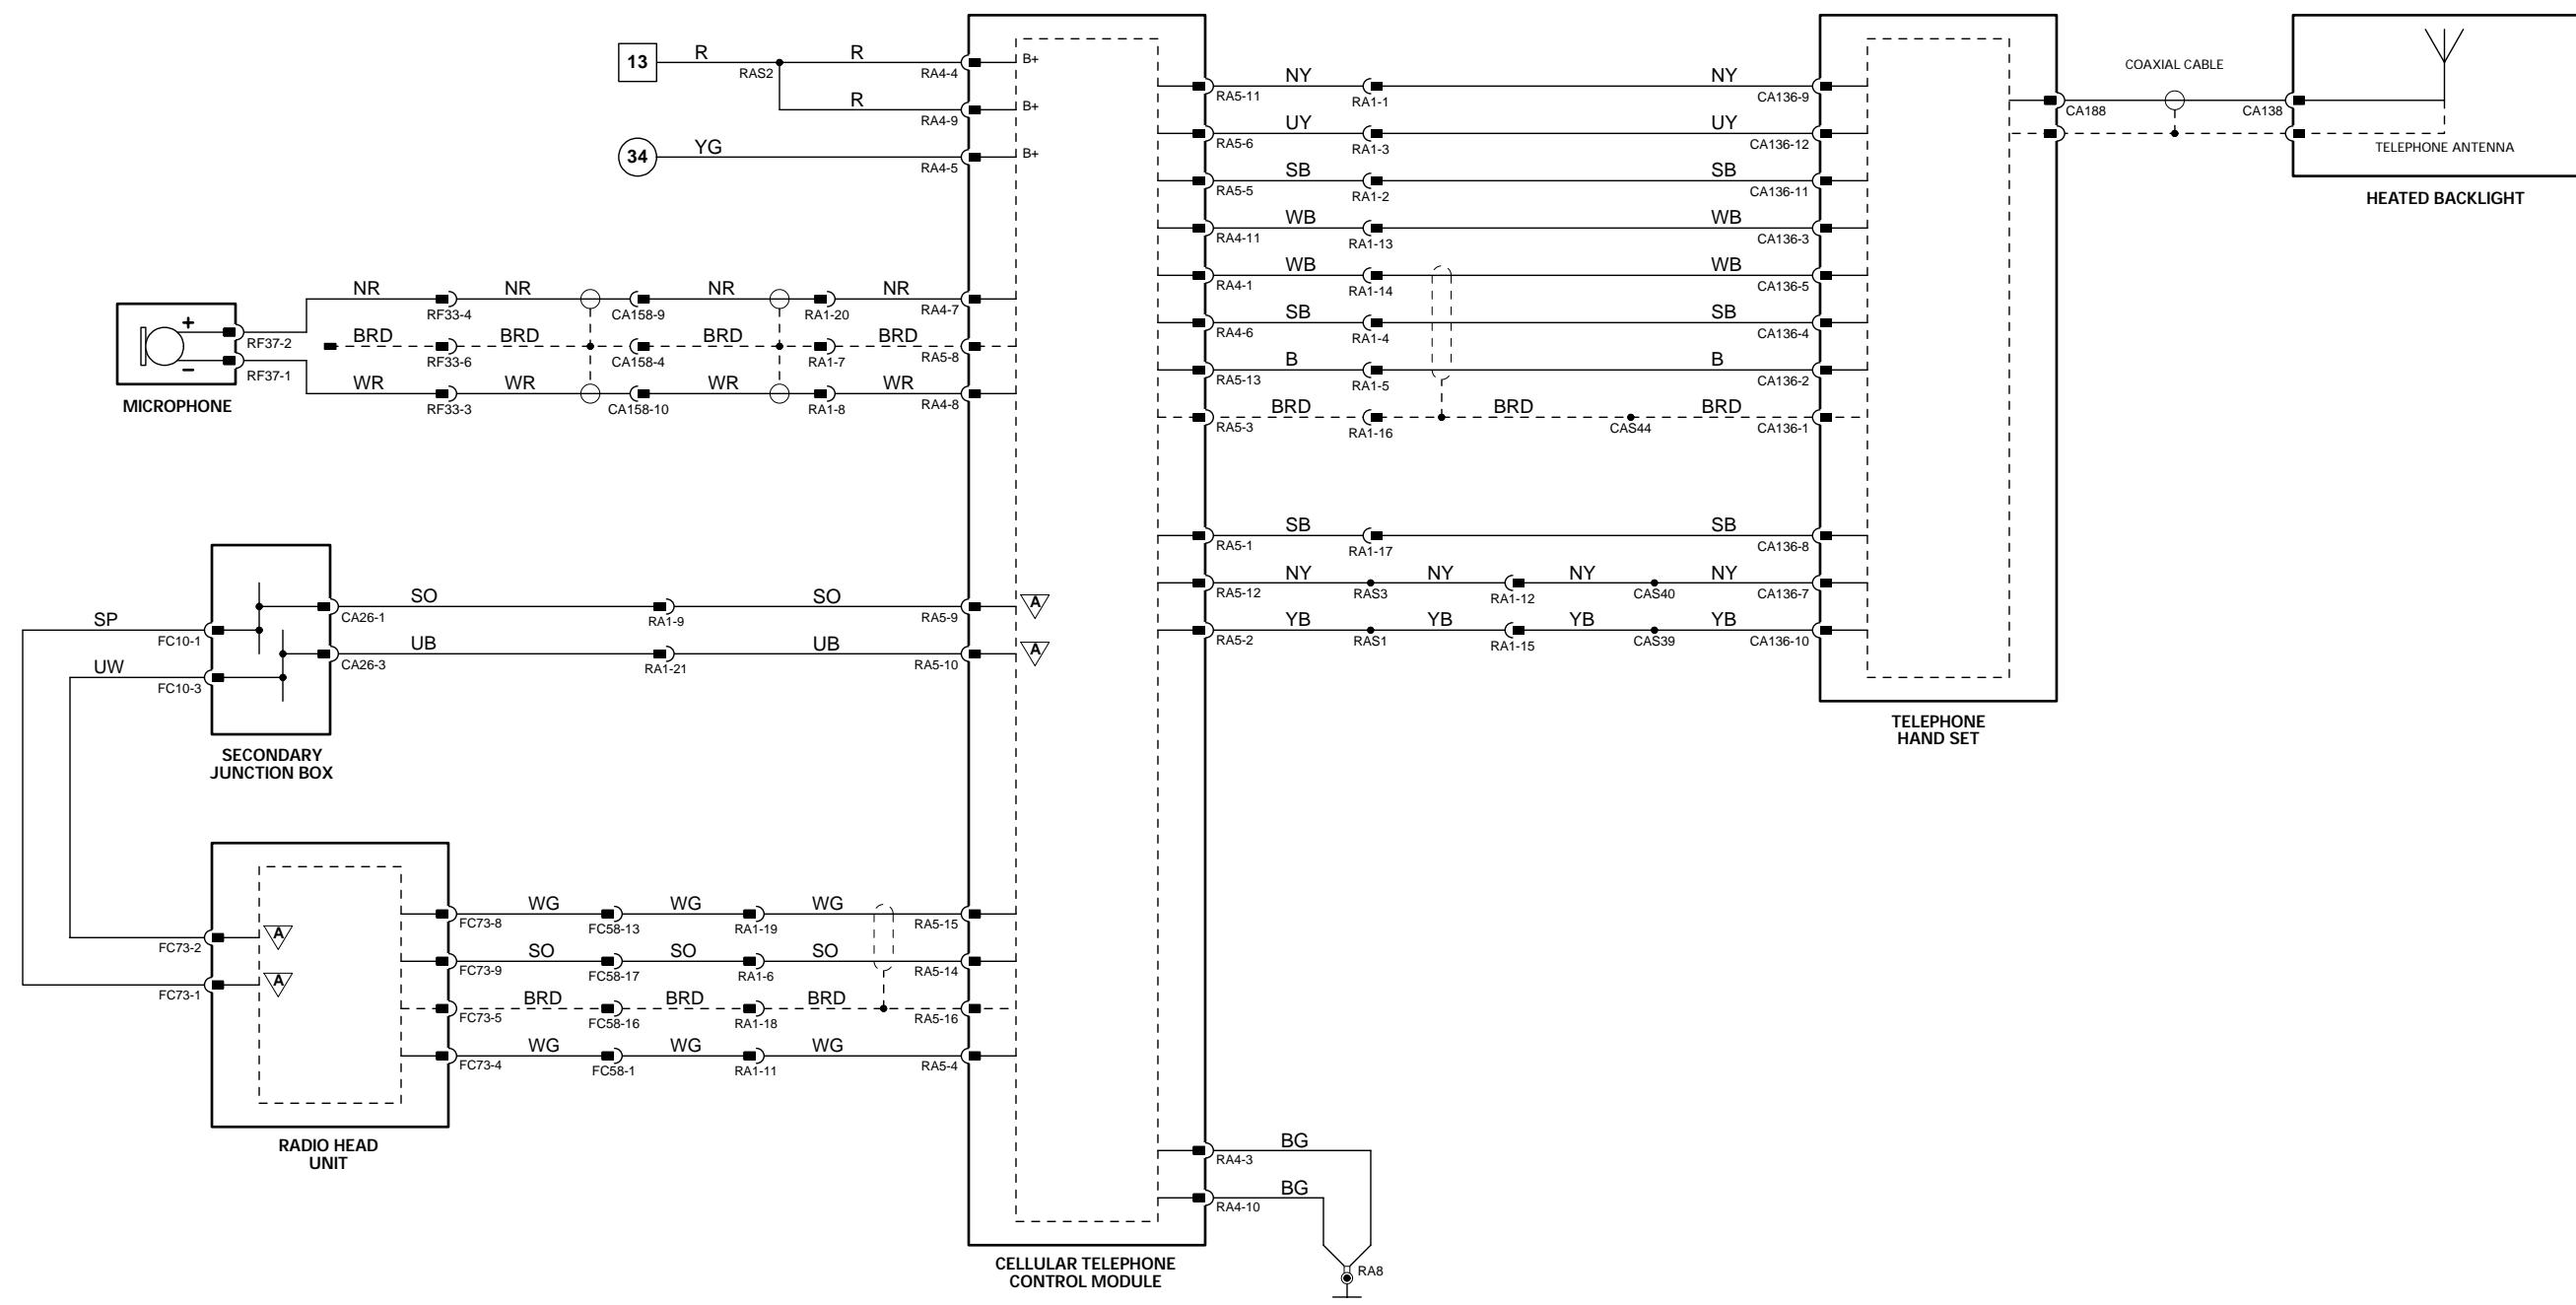


Fig. 16.2

COMPONENTS			
Component	Connector(s)	Connector Description	Location
CELLULAR TELEPHONE CONTROL MODULE	RA4 RA5	12-WAY / BLACK 16-WAY / BLACK	INSIDE THE LH REAR QUARTER PANEL INSIDE THE LH REAR QUARTER PANEL
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
RADIO TELEPHONE ANTENNA	CA138	1-WAY / BLACK	BELLOW PARCEL SHELF
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
TELEPHONE HANDSET - NAV	CA136	10-WAY / BLACK	CENTER CONSOLE
TELEPHONE MICROPHONE	RF37	2-WAY / BLACK	ADJACENT TO ROOF CONSOLE
VOICE ACTIVATION CONTROL MODULE	RA2	22-WAY / GREY	TRUNK, LH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA15	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ABOVE WHEEL ARCH, LH SIDE
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELLOW STEERING COLUMN
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
RA1	22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RA3	10-WAY / GREY / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RF33	6-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELLOW PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
RA8	GROUND EYELET	TRUNK; LH SIDE / TRUNK LH TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

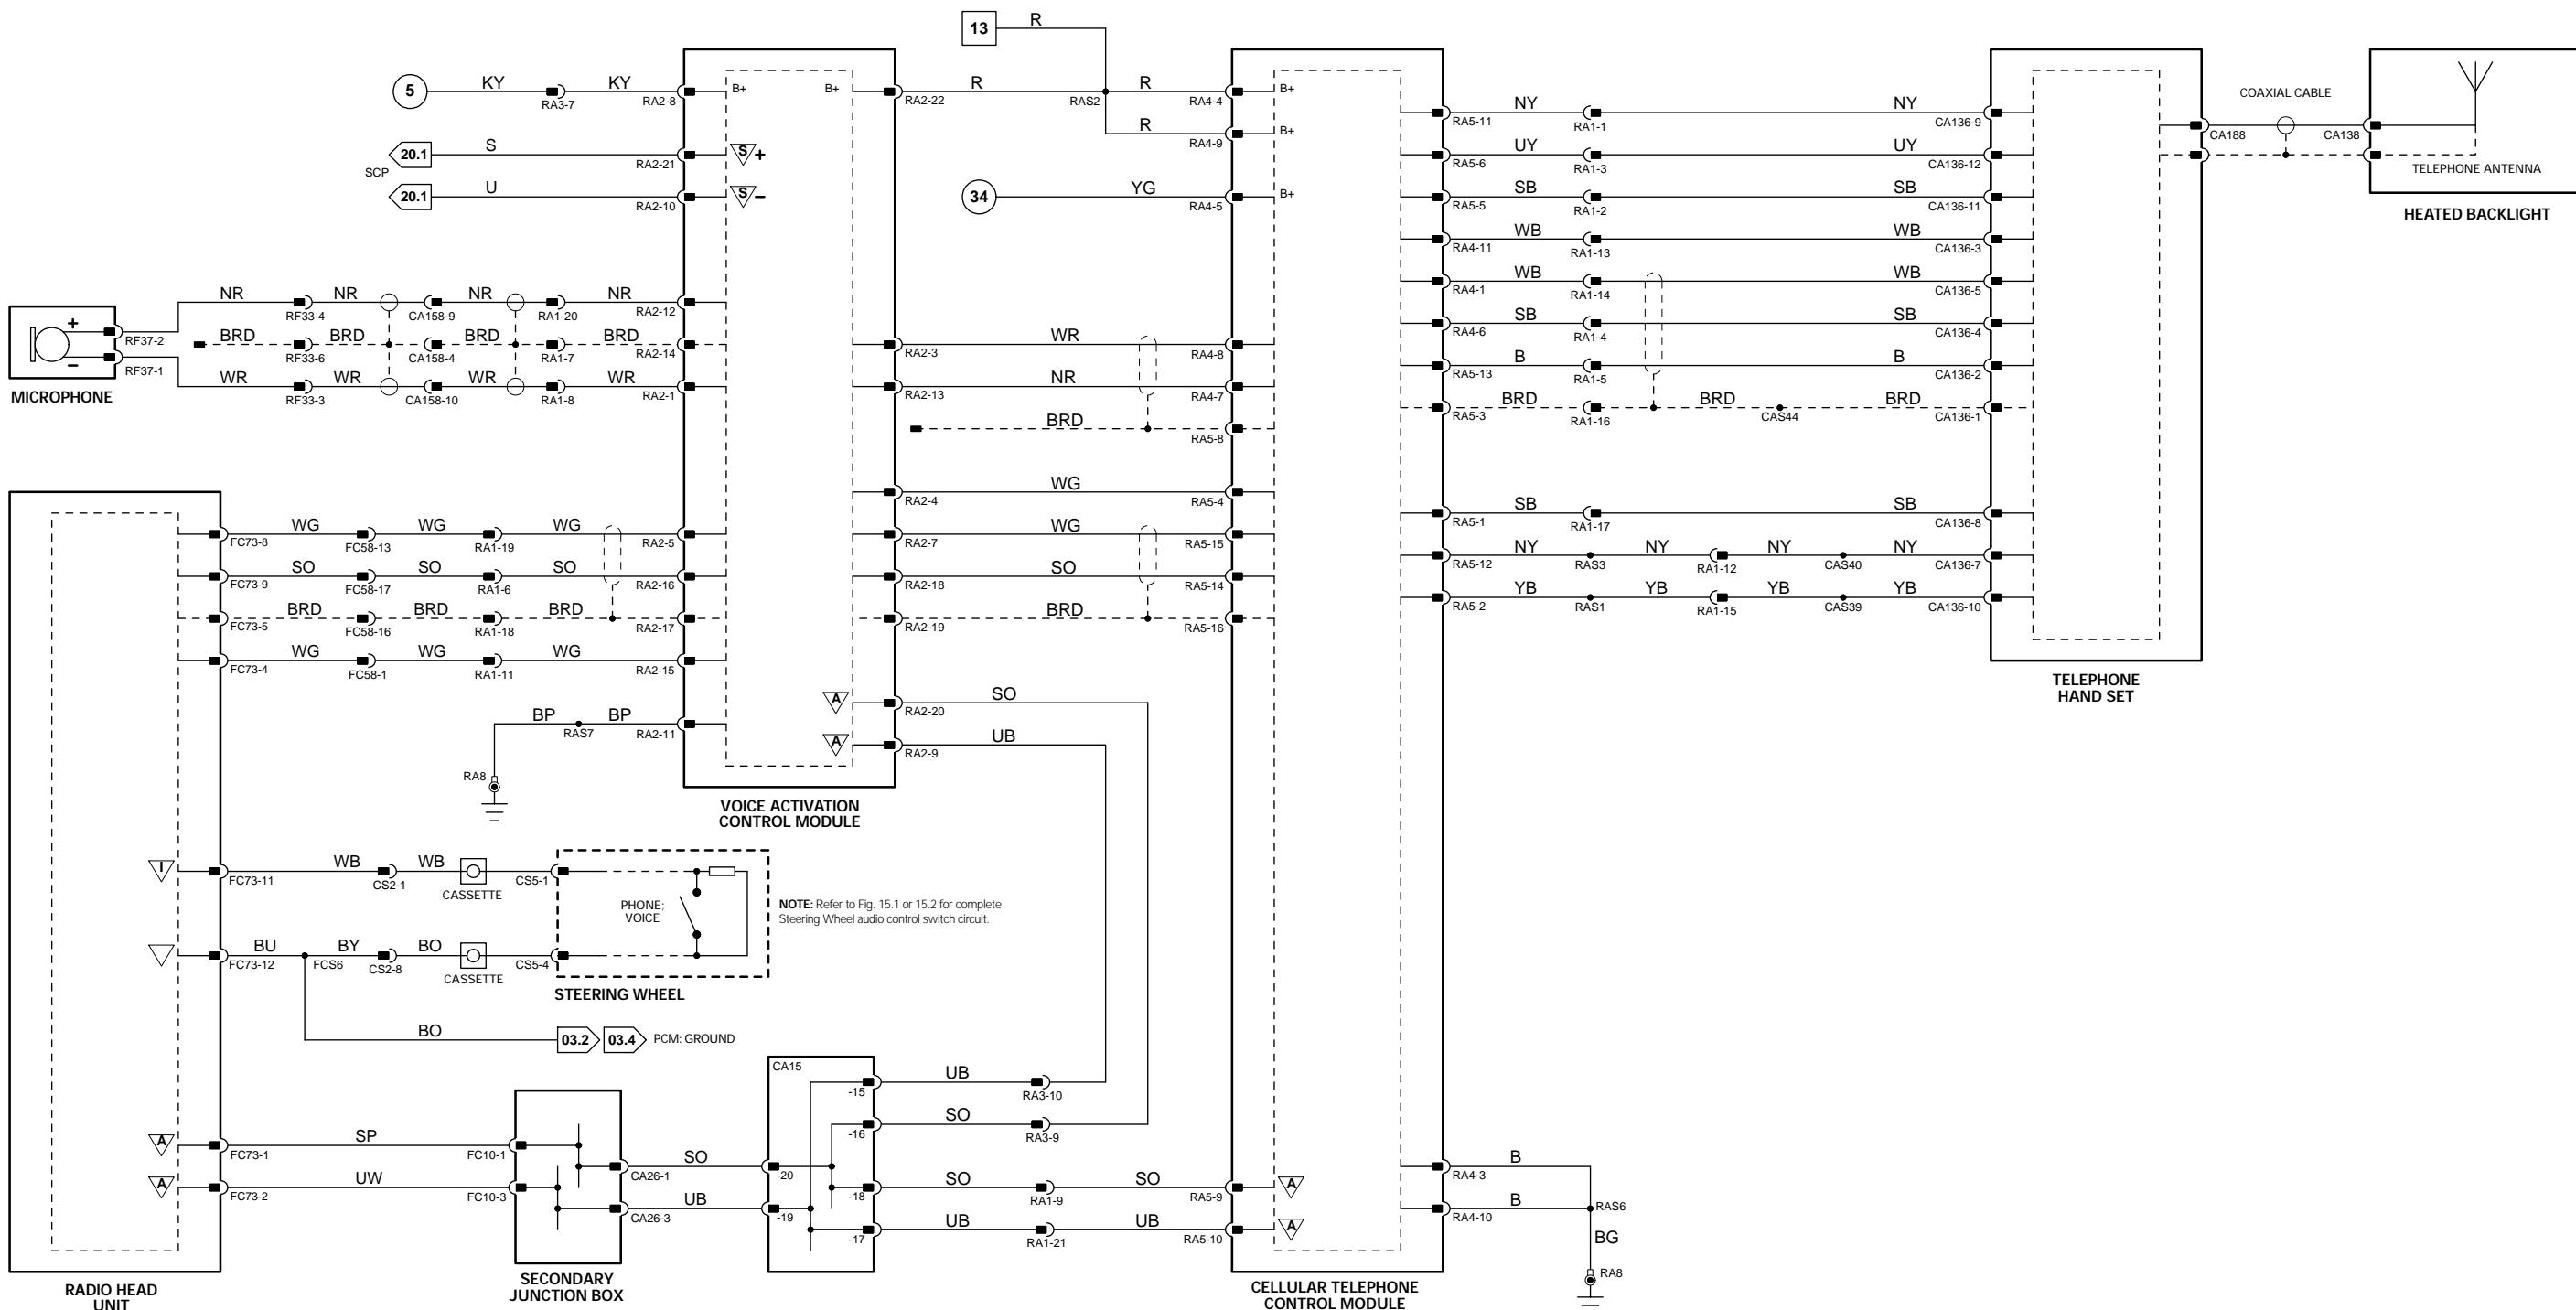


Fig. 16.3

COMPONENTS			
Component	Connector(s)	Connector Description	Location
CELLULAR TELEPHONE CONTROL MODULE	RA4 RA5	12-WAY / BLACK 16-WAY / BLACK	INSIDE THE LH REAR QUARTER PANEL INSIDE THE LH REAR QUARTER PANEL
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
RADIO TELEPHONE ANTENNA	CA138	1-WAY / BLACK	BELLOW PARCEL SHELF
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
TELEPHONE HANDSET	CA136	10-WAY / BLACK	CENTER CONSOLE
TELEPHONE MICROPHONE	RF37	2-WAY / BLACK	ADJACENT TO ROOF CONSOLE
VEHICLE EMERGENCY CONTROL MODULE	RA6 RA7	12-WAY / BLACK 16-WAY / BLACK	TRUNK, LH SIDE TRUNK, LH SIDE
VEMS GPS ANTENNA	CA134	10-WAY / GREY	PARCEL SHELF
VOICE ACTIVATION CONTROL MODULE	RA2	22-WAY / GREY	TRUNK, LH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA15	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ABOVE WHEEL ARCH, LH SIDE
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
RA1	22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RA3	10-WAY / GREY / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RF33	6-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELLOW PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
RA8	GROUND EYELET	TRUNK; LH SIDE / TRUNK LH TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

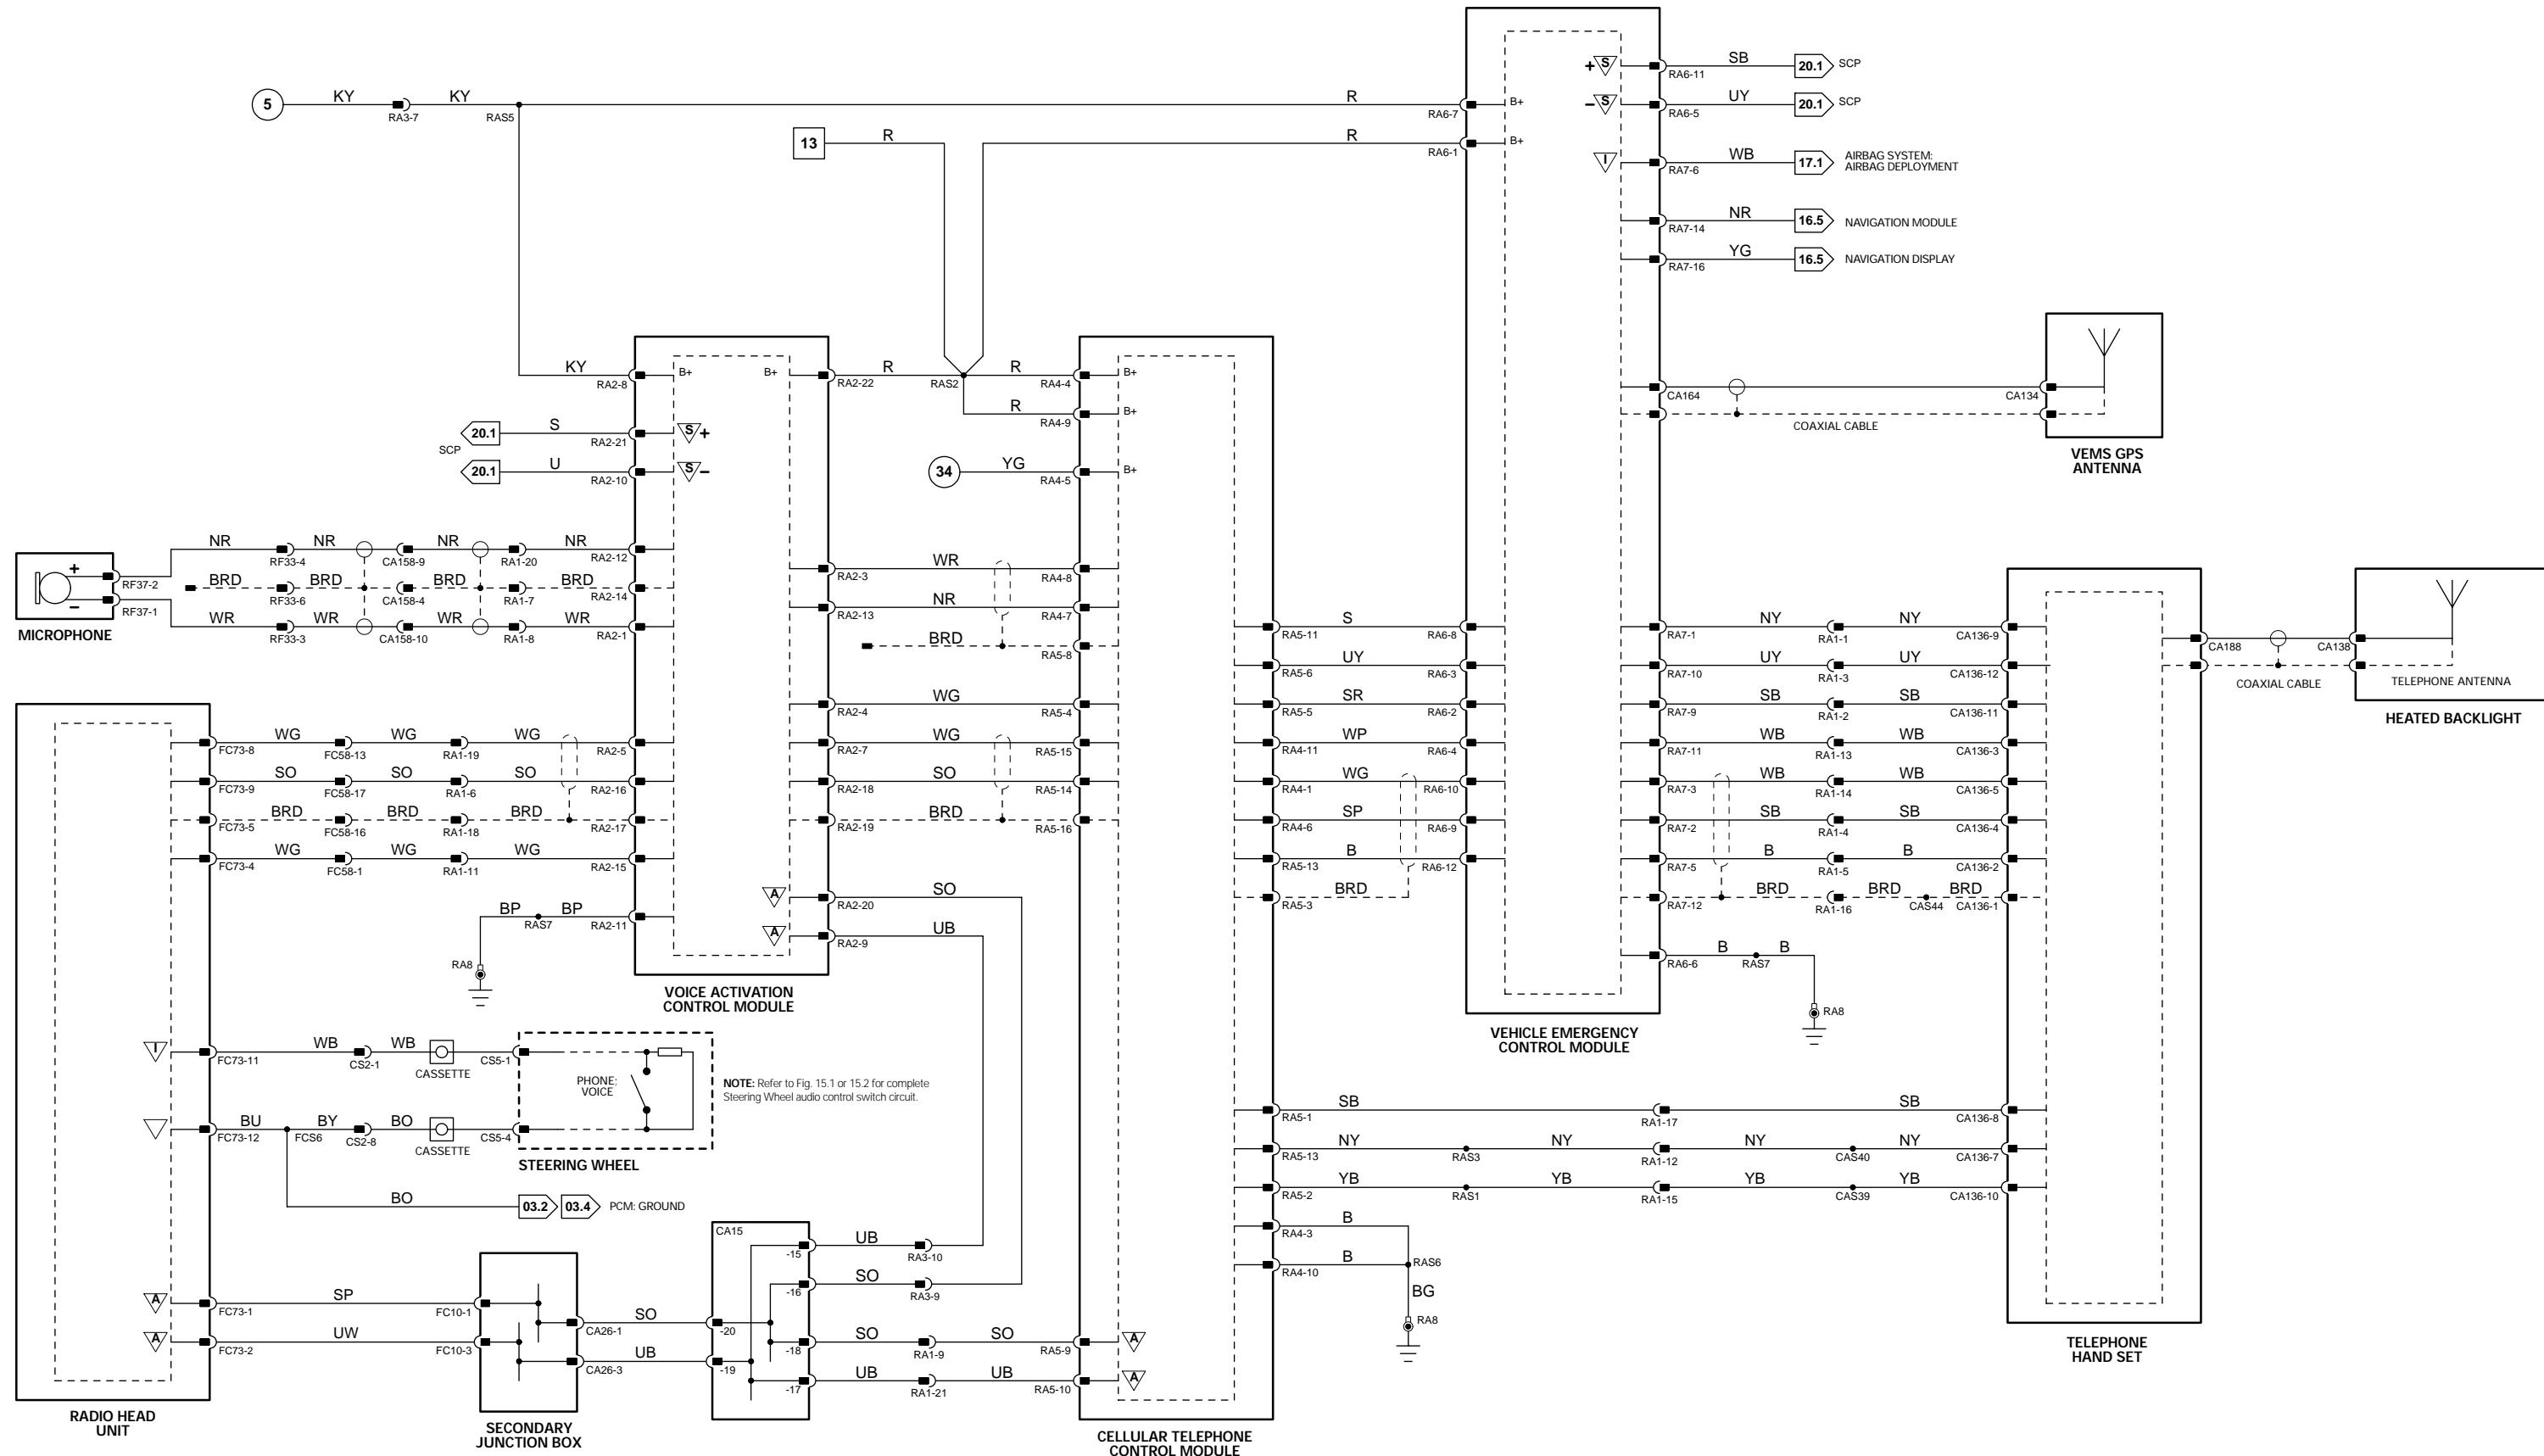


Fig. 16.4

COMPONENTS

Component	Connector(s)	Connector Description	Location
CELLULAR TELEPHONE CONTROL MODULE	RA4 RA5	12-WAY / BLACK 16-WAY / BLACK	INSIDE THE LH REAR QUARTER PANEL INSIDE THE LH REAR QUARTER PANEL
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
RADIO TELEPHONE ANTENNA	CA138	1-WAY / BLACK	BELLOW PARCEL SHELF
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
TELEPHONE HANDSET - NAV	CA136	10-WAY / BLACK	CENTER CONSOLE
TELEPHONE HANDSET - NON-NAV	FC84	10-WAY / CLEAR	TELEPHONE PRESENTER
TELEPHONE MICROPHONE	RF37	2-WAY / BLACK	ADJACENT TO ROOF CONSOLE
VOICE ACTIVATION CONTROL MODULE	RA2	22-WAY / GREY	TRUNK, LH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA15	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ABOVE WHEEL ARCH, LH SIDE
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FC81	1-WAY / BLACK / TELEPHONE ANTENNA COAXIAL CABLE	BEHIND FASCIA END PANEL, LH SIDE
FC83	12-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE
RA1	22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RA3	10-WAY / GREY / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RF33	6-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELLOW PARCEL SHELF

GROUNDS

Ground	Ground Description	Location
RA8	GROUND EYELET	TRUNK; LH SIDE / TRUNK LH TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

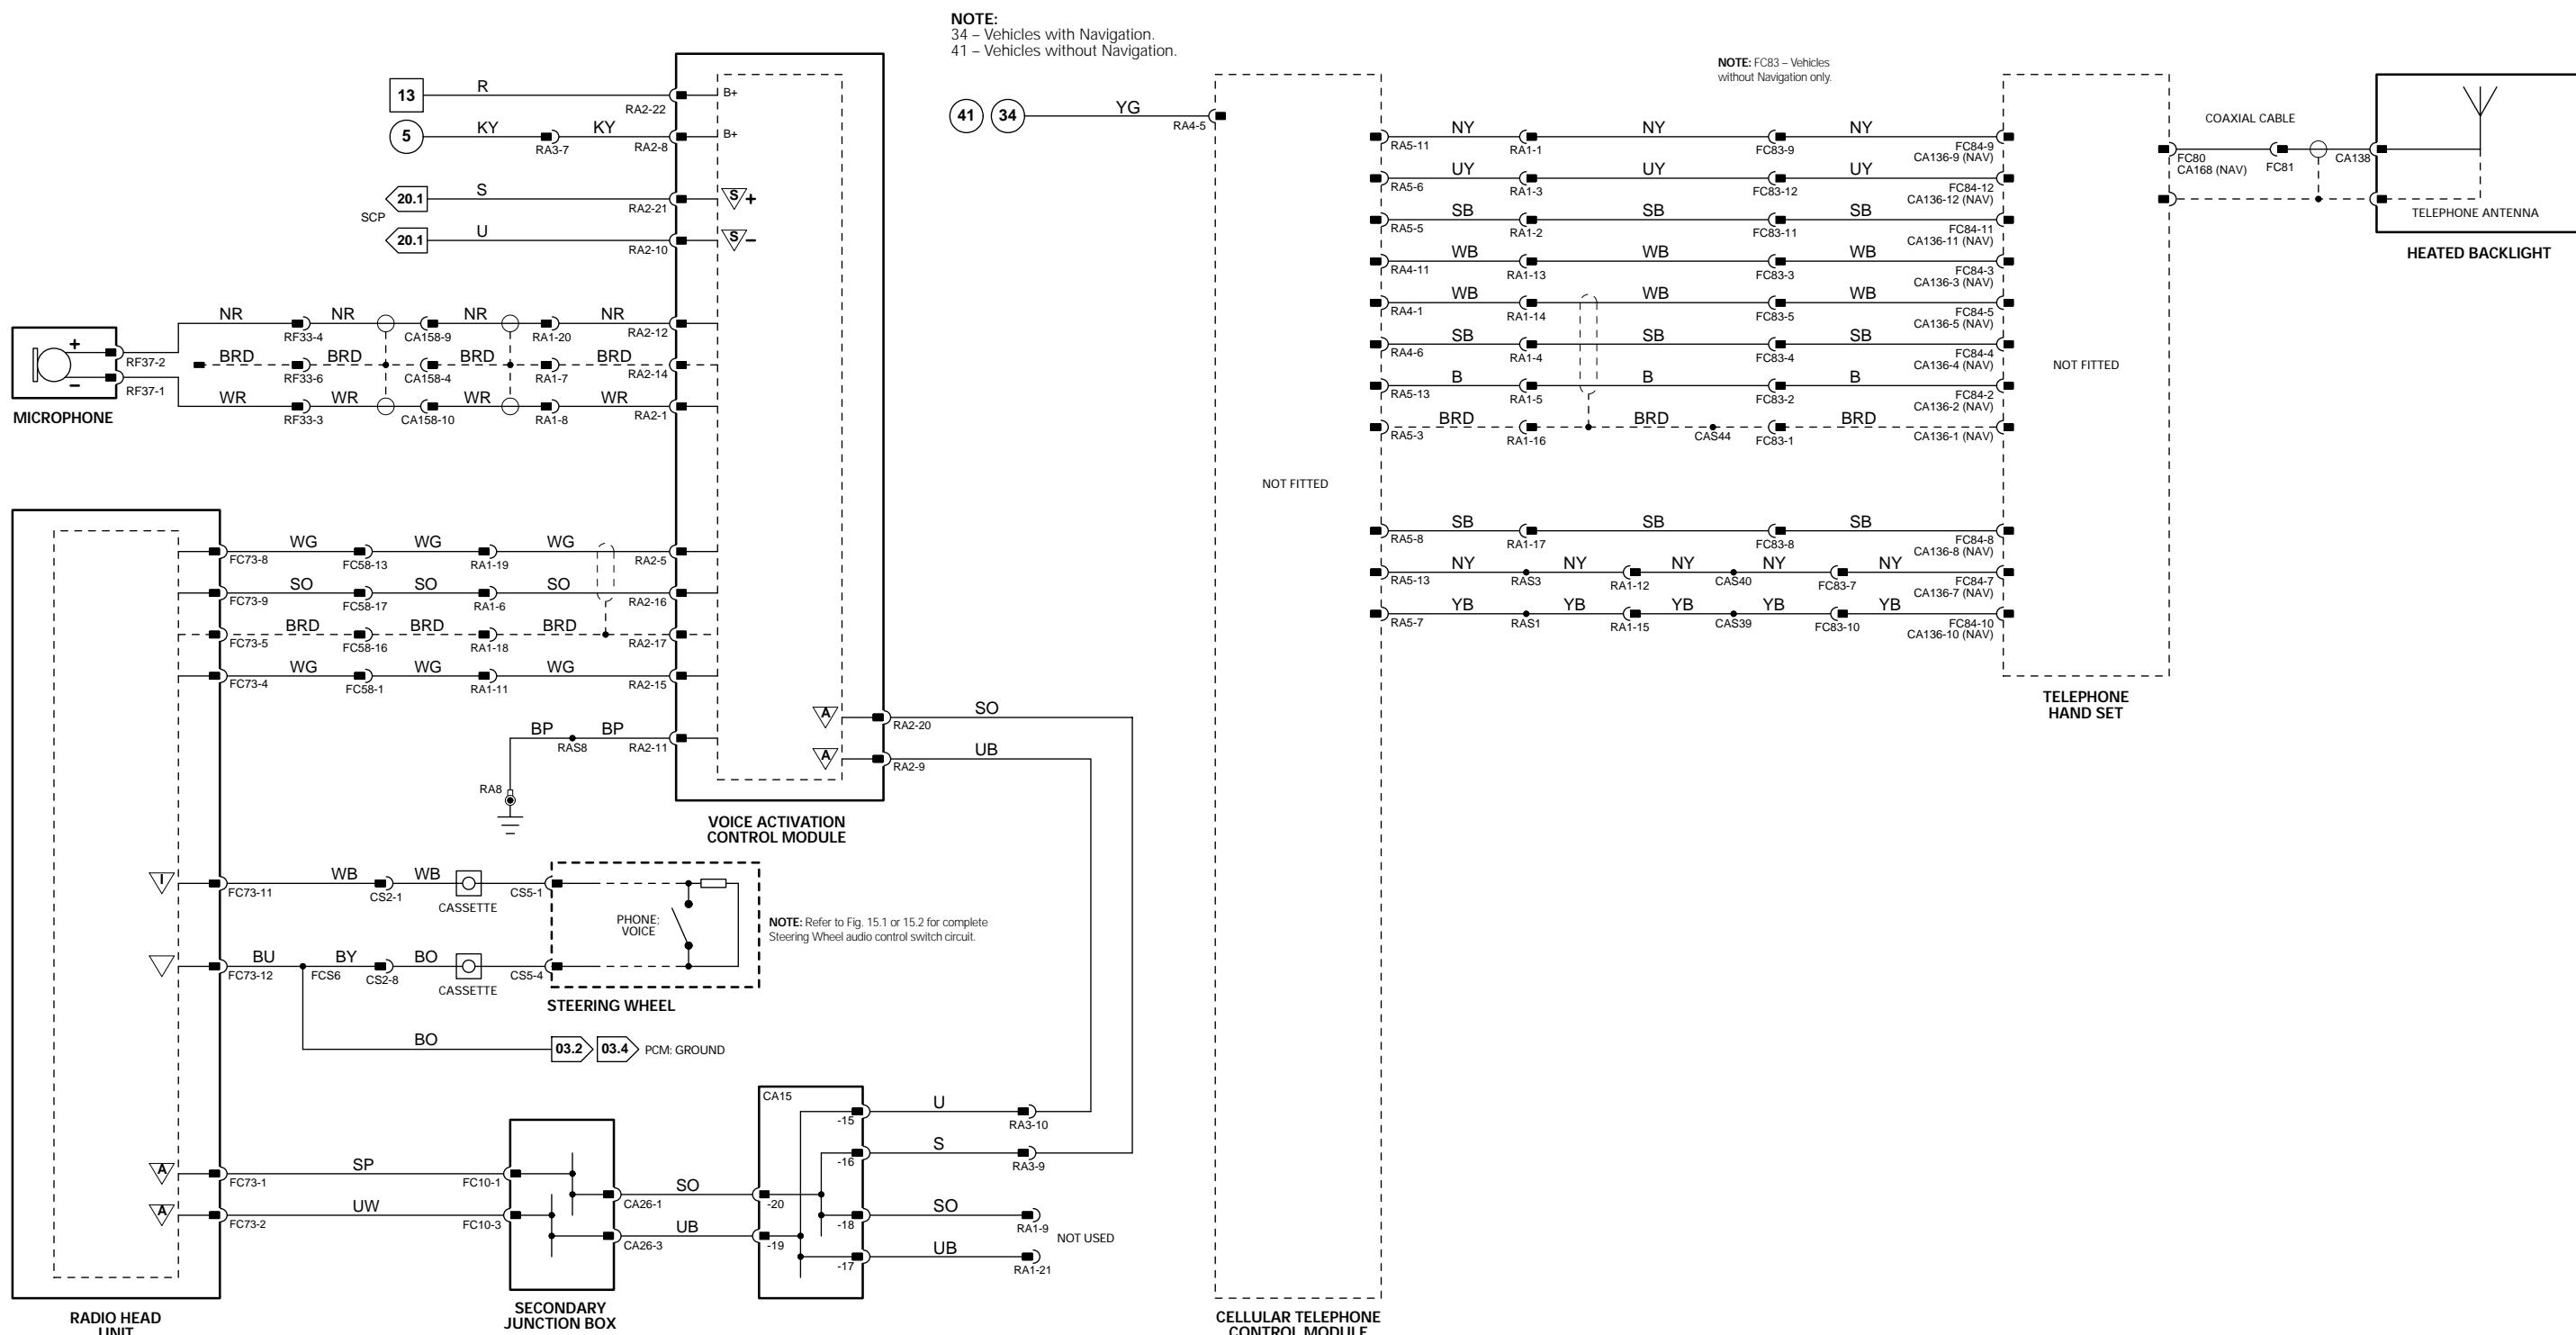


Fig. 16.5

COMPONENTS

Component

NAVIGATION CONTROL MODULE
NAVIGATION DISPLAY MODULE
TELEVISION AMPLIFIER – FRONT

TELEVISION AMPLIFIER – REAR
TELEVISION MODULE
TELEVISION MONITOR
VEHICLE EMERGENCY CONTROL MODULE
VEHICLE INFORMATION CONTROL MODULE
VEMS GPS ANTENNA

Connector(s)

CA107
CA108
FC67
BF7
BF8
BF9
FH100
FH101
BR8
CA163
FC90
RA6
RA7
CA162
CA134

Connector Description

10-WAY / WHITE
18-WAY / WHITE
20-WAY / WHITE
1-WAY / BLACK
1-WAY / GREY
20-WAY / WHITE
18-WAY / WHITE
12-WAY / BLACK
16-WAY / BLACK
10-WAY / BLACK
10-WAY / GREY

Location

TRUNK, LH SIDE
TRUNK, LH SIDE
FASCIA, CENTER
FRONT BUMPER
FRONT BUMPER
FRONT BUMPER
FRONT BUMPER
FRONT BUMPER
REAR BUMPER
BELOW PARCEL SHELF
NAVIGATION DISPLAY
TRUNK, LH SIDE
TRUNK, LH SIDE
TRUNK, RH SIDE
PARCEL SHELF

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector **Connector Description**

FC57 16-WAY / BLUE / CABIN HARNESS TO FASCIA HARNESS
FC82 12-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS
FH98 10-WAY / BLACK / CABIN HARNESS TO FRONT HARNESS
RA3 10-WAY / GREY / CABIN HARNESS TO VOICE LINK LEAD

Location

BEHIND DRIVER SIDE DASH LINER
BEHIND LOWER 'A' POST TRIM, LH SIDE
ENGINE COMPARTMENT
TRUNK; ABOVE WHEEL ARCH, LH SIDE

GROUNDS

Ground

CA157
FC38

Ground Description

GROUND EYELET
GROUND EYELET

Location

BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

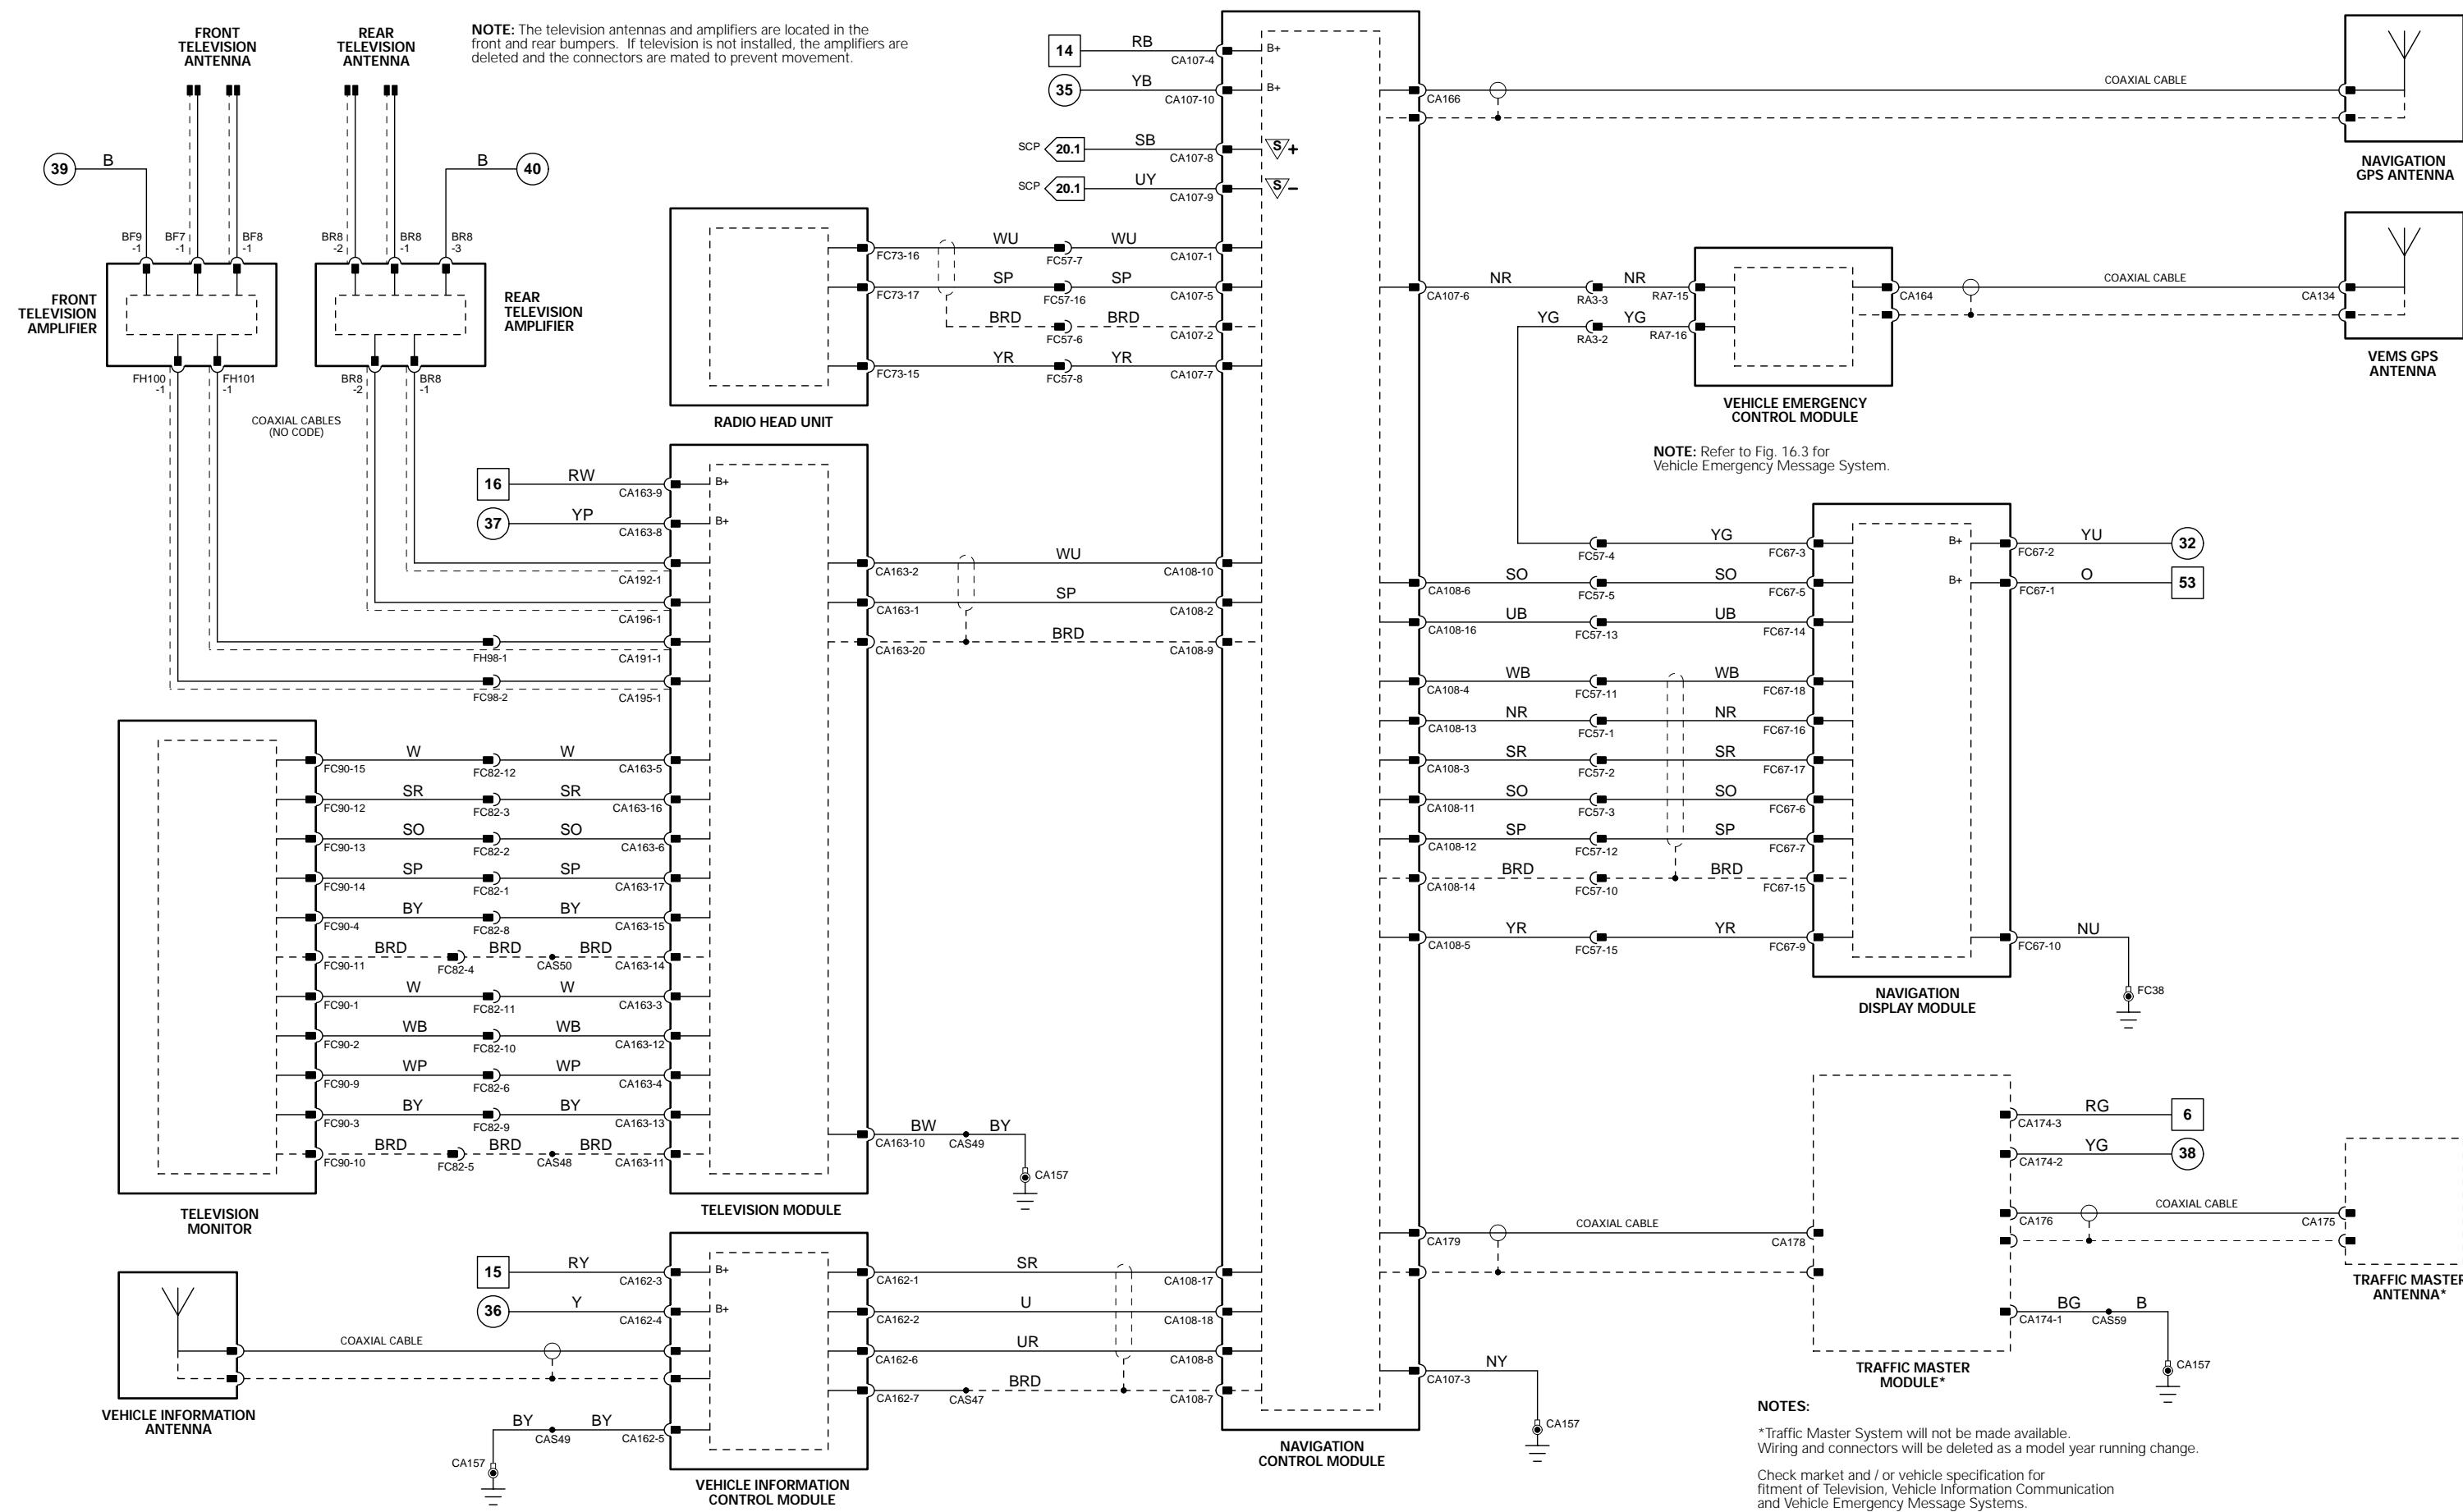


Fig. 17.1

COMPONENTS

Component	Connector(s)	Connector Description	Location
AIRBAG – DRIVER	DB4 CS6	2-WAY / YELLOW 10-WAY / BLACK	BEHIND SEAT BACK FINISHER ON THE REAR OF THE DRIVER AIRBAG ASSEMBLY
AIRBAG – PASSENGER	FC32 PB4	2-WAY / BLACK 2-WAY / YELLOW	LH SIDE OF AIRBAG ASSEMBLY LH SIDE OF SEAT SQUAB
RESTRAINTS CONTROL MODULE	CA1 CA114	8-WAY / BLACK 26-WAY / BLACK	TRANSMISSION TUNNEL TRANSMISSION TUNNEL
SEAT BELT PRETENSIONER – DRIVER	CA23	3-WAY / BLACK	LOWER 'B/C' POST
SEAT BELT PRETENSIONER – PASSENGER	CA59	3-WAY / BLACK	LOWER 'B/C' POST
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
SIDE IMPACT SENSOR – DRIVER	CA22	2-WAY / BLACK	BELOW SEAT
SIDE IMPACT SENSOR – PASSENGER	CA58	2-WAY / BLACK	BELOW SEAT

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS1	3-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
DB2	3-WAY / BLACK / DRIVER SEAT HARNESS TO SEAT BACK LINK LEAD	BEHIND SEAT BACK FINISHER
DM19	2-WAY / YELLOW / CABIN HARNESS TO DRIVER SEAT HARNESS	BELOW SEAT CUSHION
FC6	3-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE (LHD) OR RH SIDE (RHD)
FC7	3-WAY / GREY / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FC9	3-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND FASCIA END PANEL, RH SIDE (LHD) OR LH SIDE (RHD)
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH5	16-WAY / GREY / CABIN HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
PB2	3-WAY / BLACK / PASSENGER SEAT HARNESS TO SEAT BACK LINK LEAD	BEHIND SEAT BACK FINISHER
PN5	2-WAY / YELLOW / CABIN HARNESS TO PASSENGER SEAT HARNESS	BELOW SEAT CUSHION

GROUNDS

Ground	Ground Description	Location
CA30	GROUND EYELET	LOWER 'A' POST; LH SIDE / 'A' POST TRIM

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

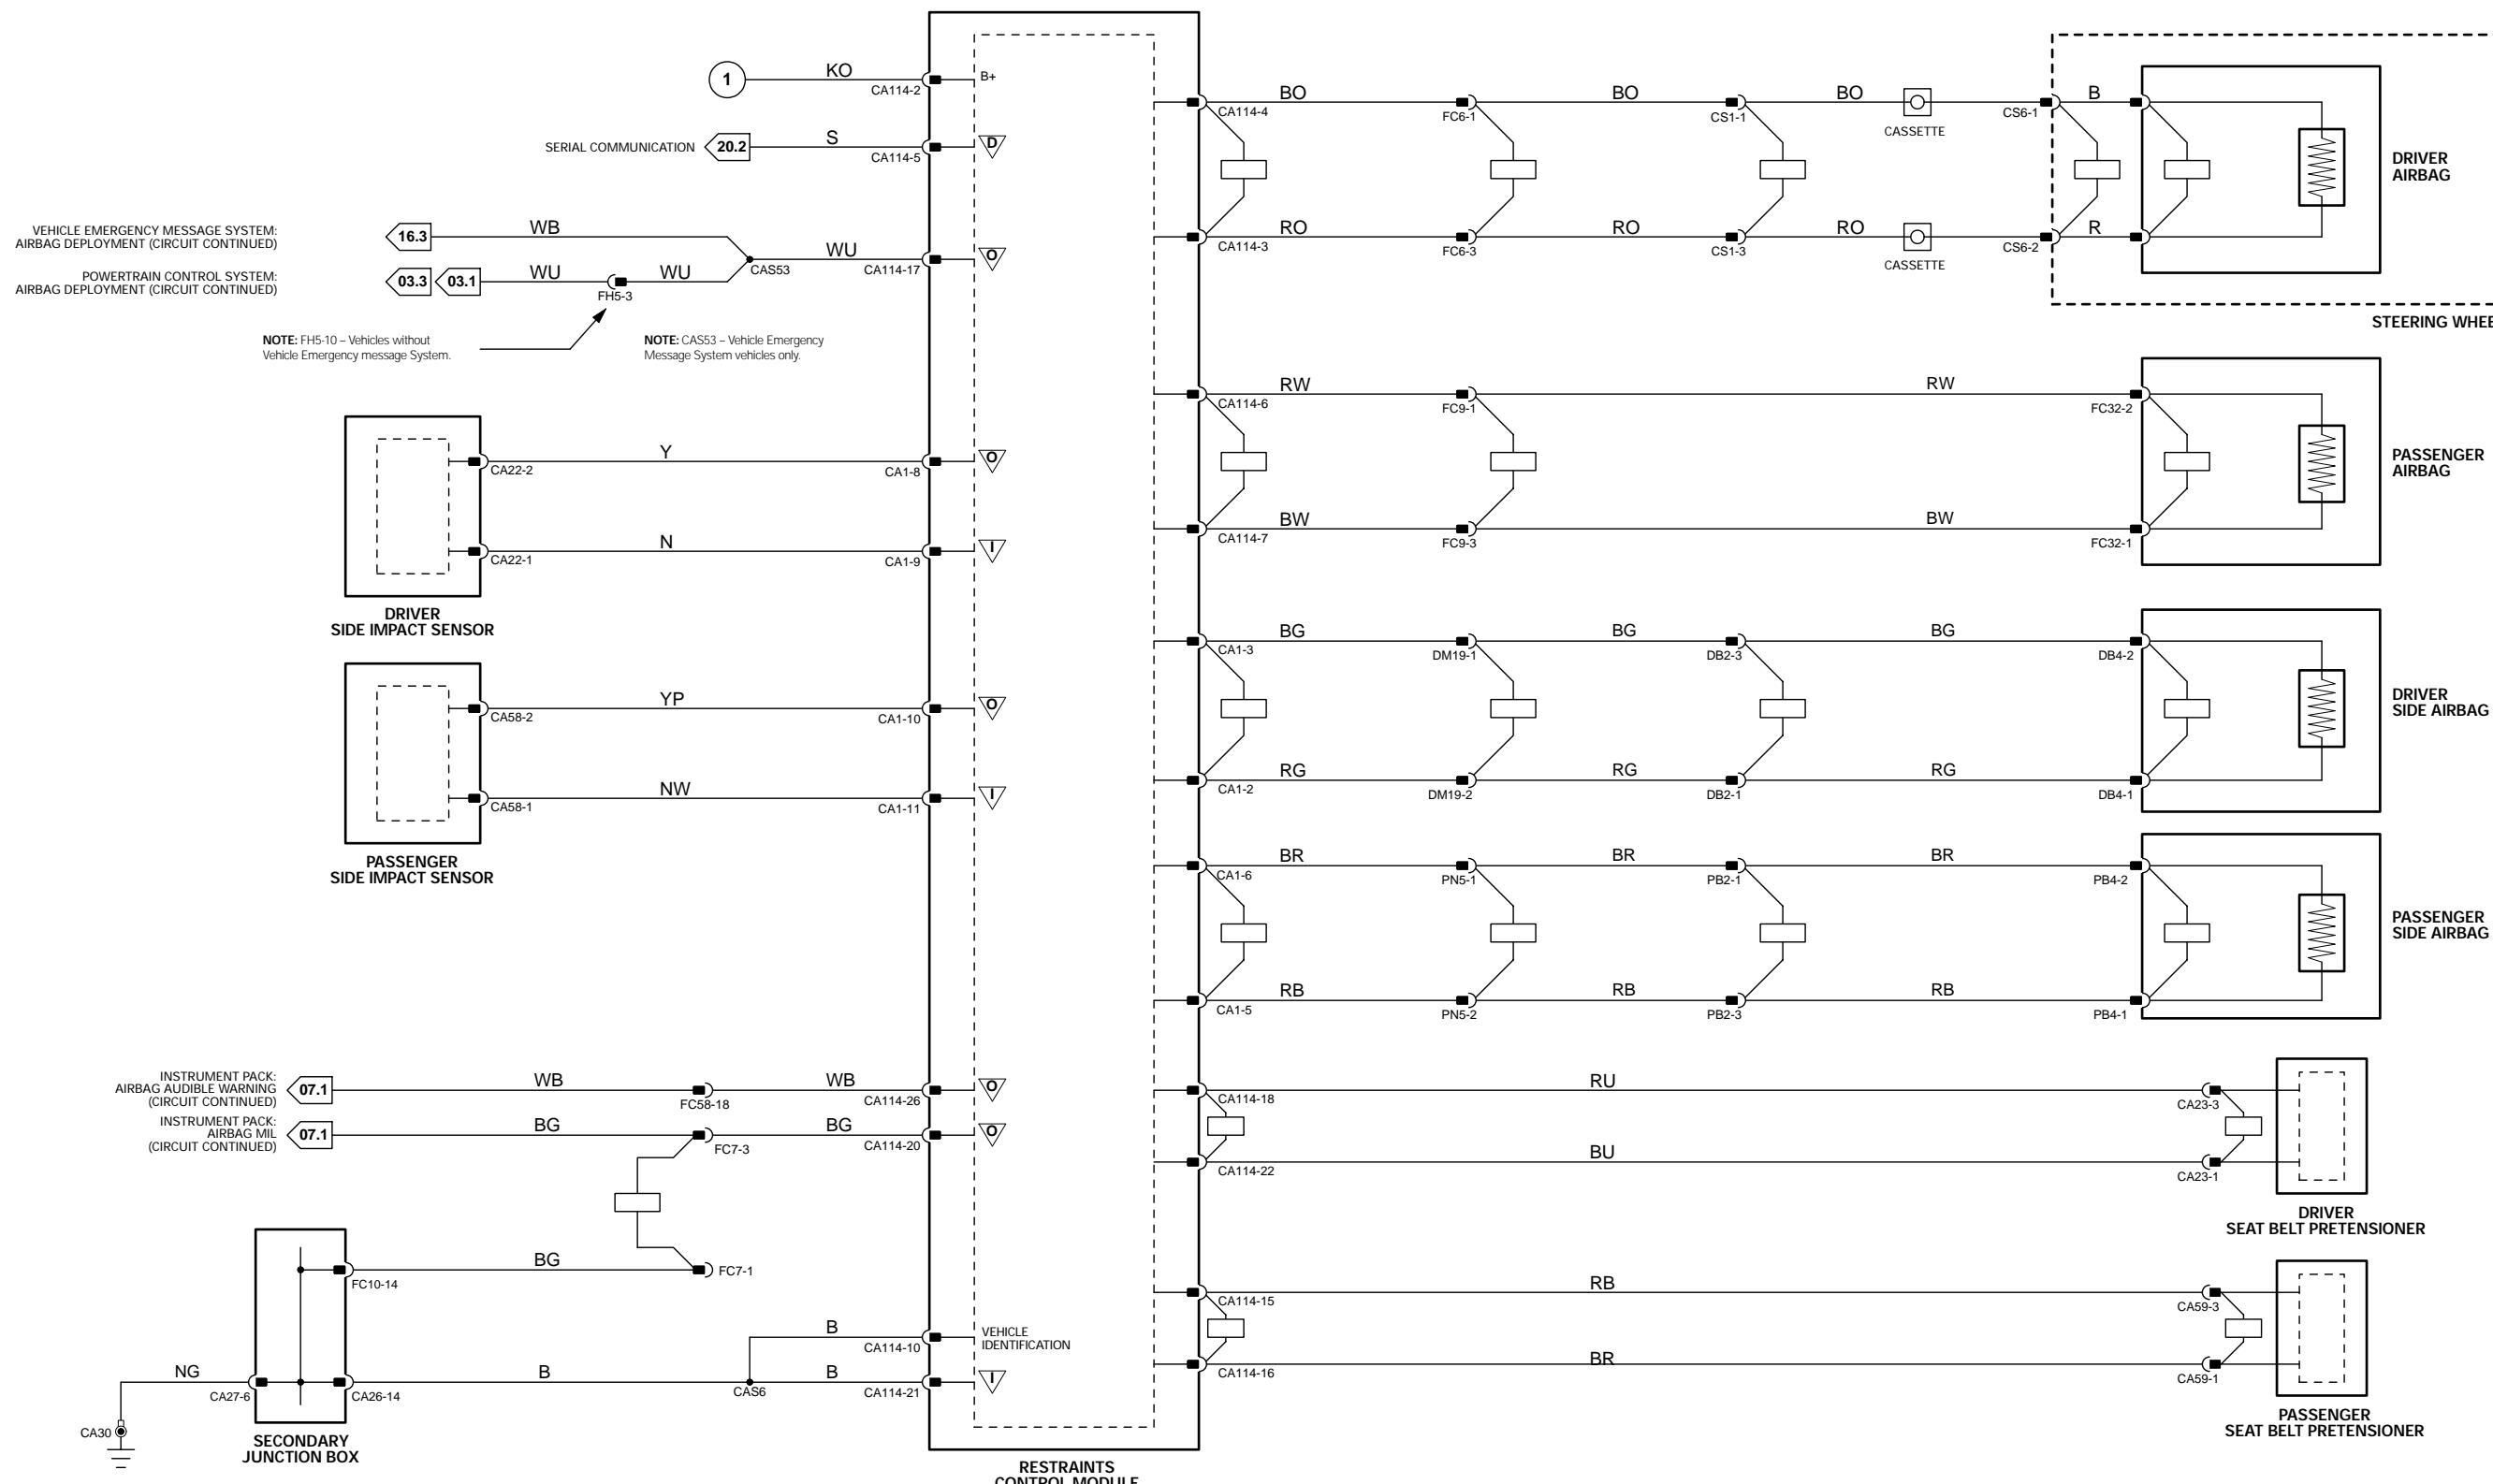


Fig. 18.1

COMPONENTS

Component

PARKING AID CONTROL MODULE
PARKING AID SENSOR – CENTER LH
PARKING AID SENSOR – CENTER RH
PARKING AID SENSOR – LH
PARKING AID SENSOR – RH
PARKING AID SOUNDER
ROOF CONSOLE SWITCH PACK

Connector(s)

CA112
BR3
BR4
BR2
BR5
CA32
RF26

Connector Description

26-WAY / BLACK
3-WAY / BLACK
3-WAY / BLACK
3-WAY / BLACK
3-WAY / BLACK
1-WAY / GREY
8-WAY / WHITE

Location

IN THE SPARE WHEEL WELL
REAR BUMPER
REAR BUMPER
REAR BUMPER
REAR BUMPER
PARCEL SHELF
ROOF CONSOLE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector

BR1
RF34

Connector Description

10-WAY / GREY / CABIN HARNESS TO BUMPER HARNESS
14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS

Location

BEHIND RH REAR QUARTER TRIM
BELOW PARCEL SHELF

GROUNDS

Ground

CA116

Ground Description

GROUND EYELET

Location

BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

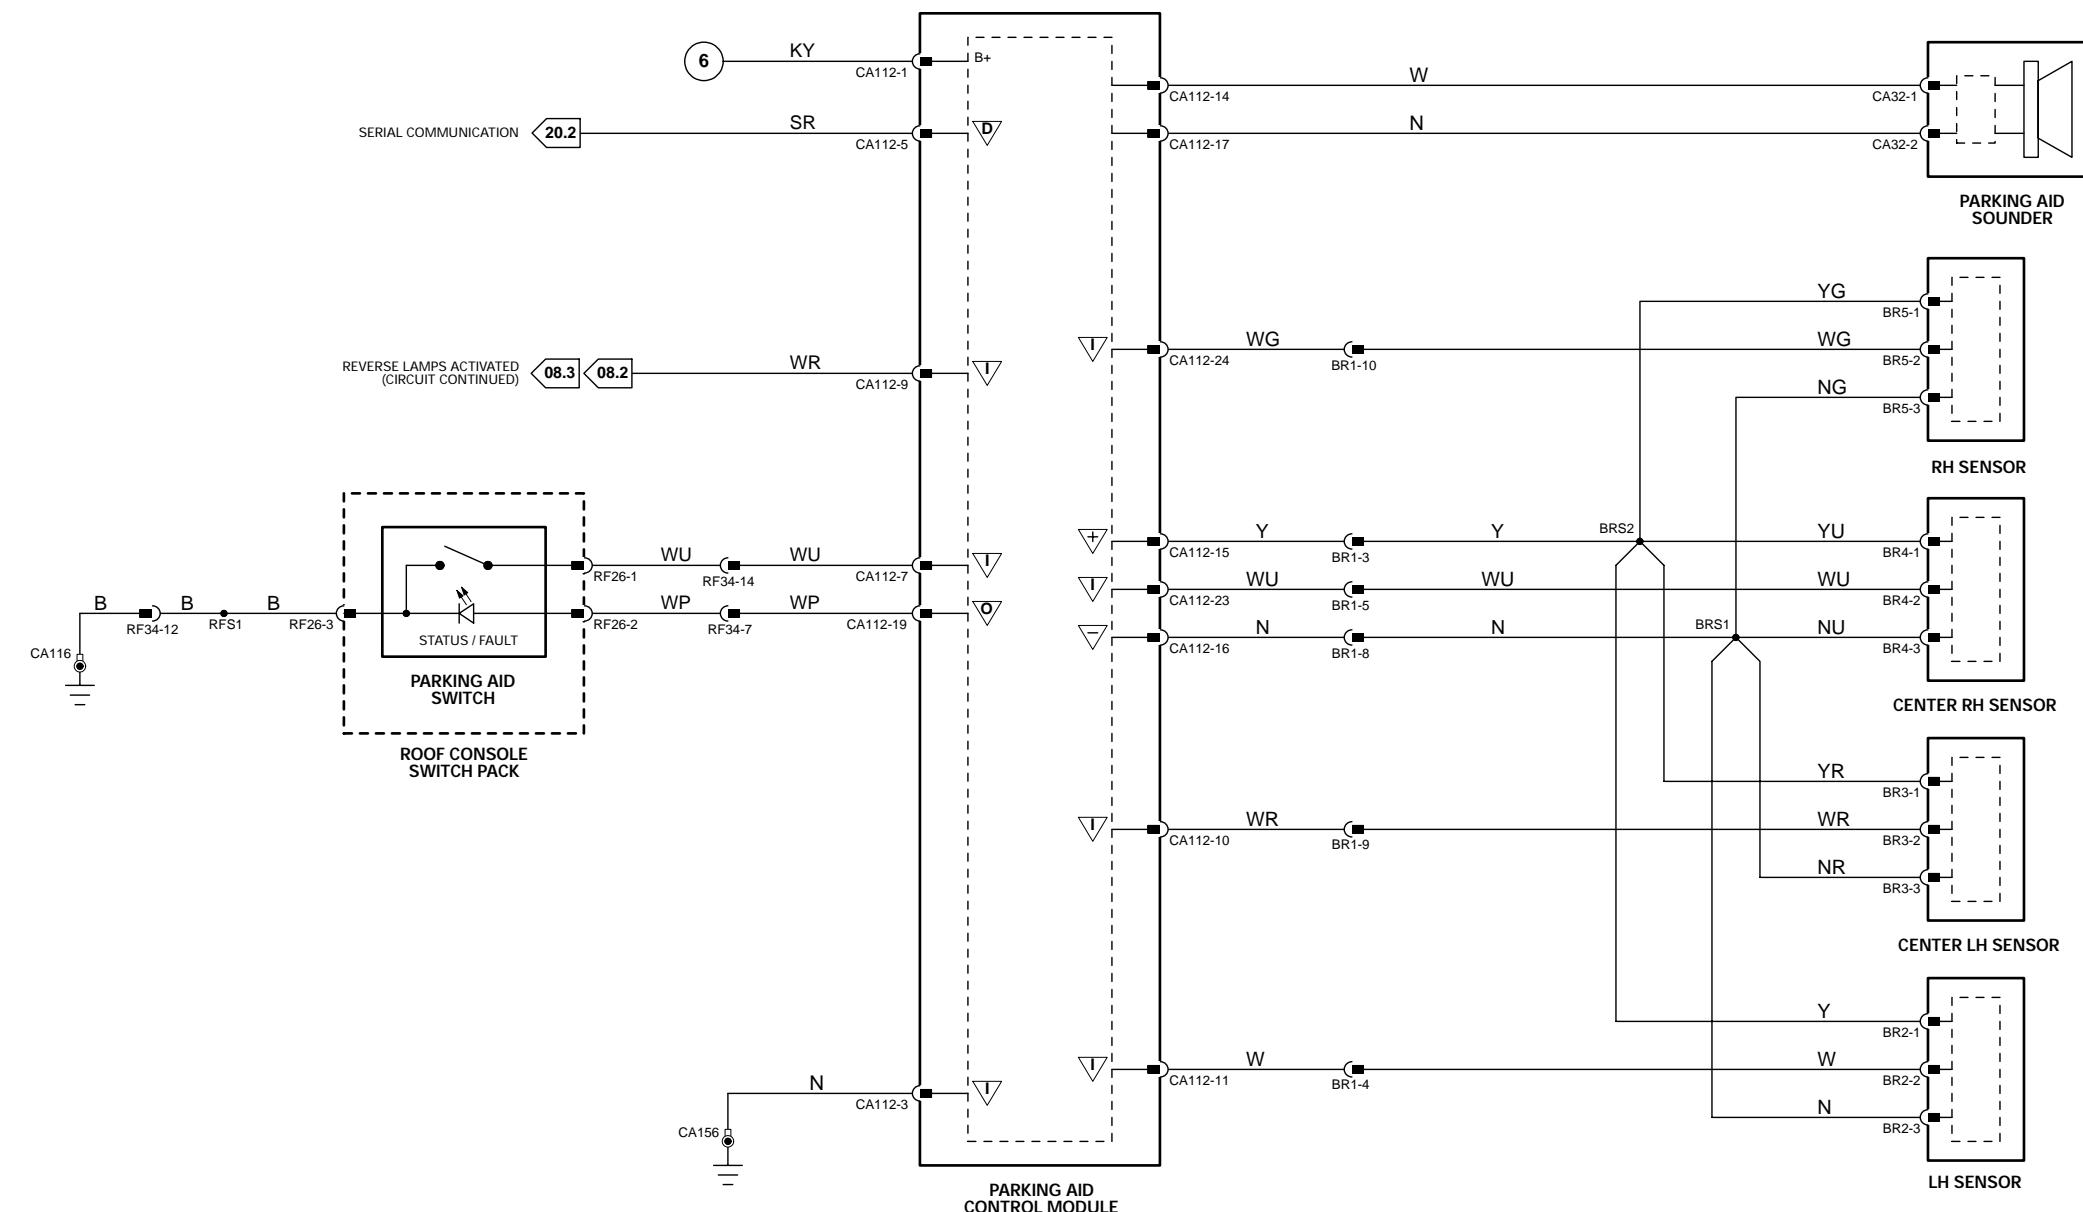


Fig. 19.1

General Electronic Control Module

Pin	Description	Active	Inactive
S	FH59-1	SCP -	
S	FH59-7	SCP +	
O	FH59-8	HORN RELAY ACTIVATE	GROUND

Instrument Pack

Pin	Description	Active	Inactive
I	FC15-10	HORN SWITCH	GROUND (MOMENTARY)
S	FC15-15	SCP +	2 - 1600 Hz
S	FC15-16	SCP -	2 - 1600 Hz

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

COMPONENTS

Component	Connector(s)	Connector Description	Location
ACCESSORY CONNECTOR	CA13	10-WAY / BLACK	ADJACENT TO FUEL FLAP SOLENOID
CIGAR LIGHTER	CA109	3-WAY / BROWN	CENTER CONSOLE
FRONT POWER DISTRIBUTION BOX			ENGINE COMPARTMENT, RH FRONT
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
HORNS	FH29	2-WAY / BLACK	FORWARD OF RADIATOR
INSTRUMENT PACK	FC14 FC15 FC63	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	FASCIA FASCIA FASCIA
PRIMARY JUNCTION BOX	CA2 CA56 FC37 FH7 FH53	26-WAY / BLACK 8-WAY / GREY 26-WAY / BLACK 6-WAY / GREY 10-WAY / GREY	'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE 'A' POST, RH SIDE
ROOF CONSOLE SWITCH PACK	RF26	8-WAY / WHITE	ROOF CONSOLE
STEERING WHEEL	CS5	10-WAY / BLACK	STEERING WHEEL
SUNSHADE MOTOR ASSEMBLY	RF25	10-WAY / GREY	BELLOW PARCEL SHELF

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CS2	10-WAY / BLACK / FASCIA HARNESS TO COLUMN SWITCHGEAR HARNESS	BELOW STEERING COLUMN
RF34	14-WAY / GREY / CABIN HARNESS TO ROOF HARNESS	BELLOW PARCEL SHELF
SL3	10-WAY / GREY / FASCIA HARNESS TO ROAD PRICING MODULE LINK LEAD	BEHIND FASCIA END PANEL, RH SIDE

GROUNDS

Ground	Ground Description	Location
CA116	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
CA141	GROUND EYELET	BELOW FRONT SEAT; LH SIDE / UNDER SEAT
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA50	GROUND EYELET	LOWER 'A' POST; RH SIDE / 'A' POST TRIM
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
FH42	GROUND EYELET	ADJACENT TO ABS/TC OR DSC CONTROL MODULE / ENGINE COMPARTMENT

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data

I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

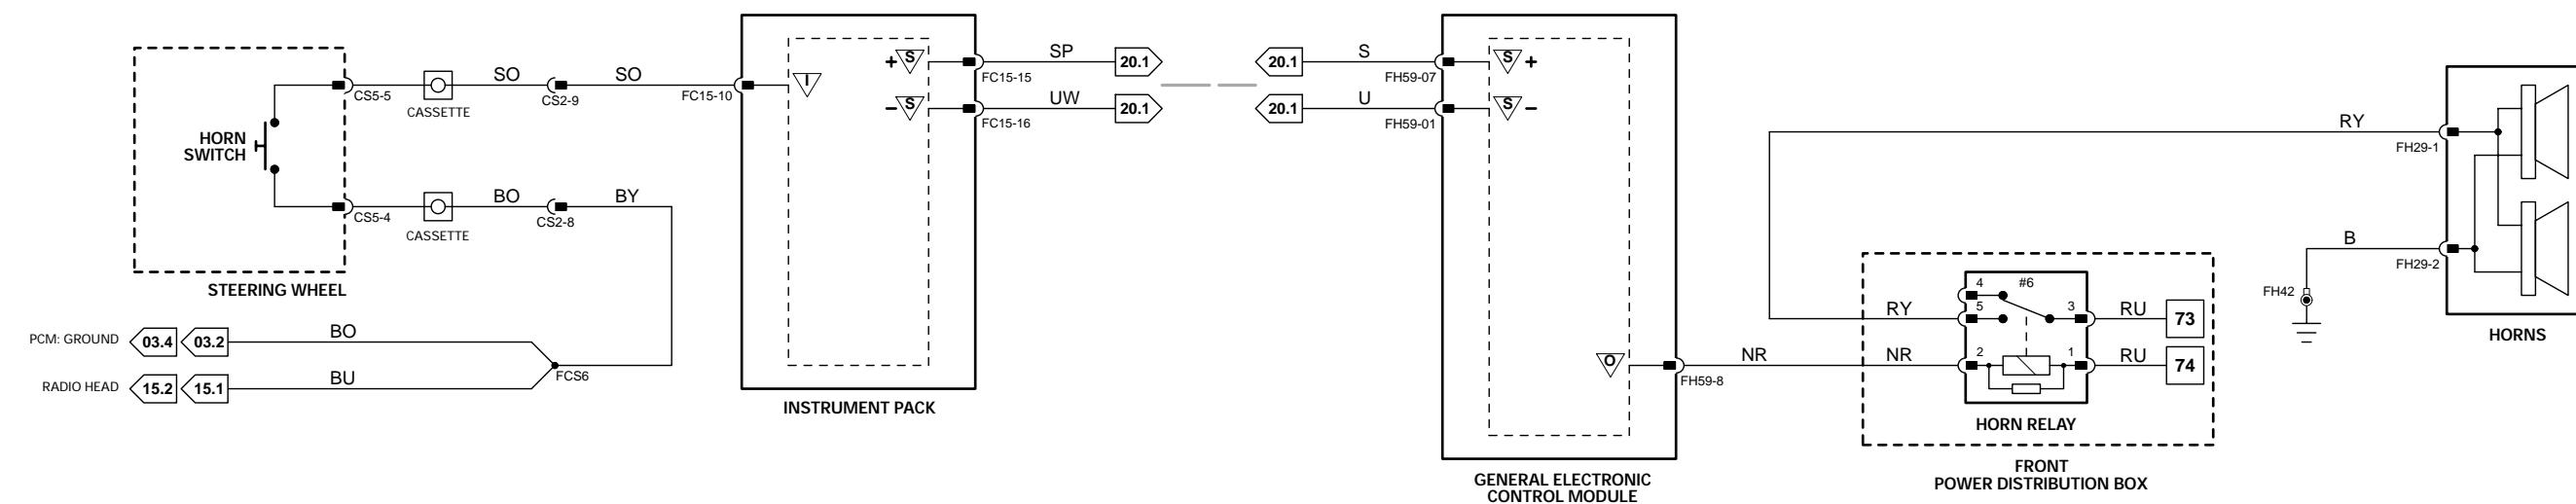
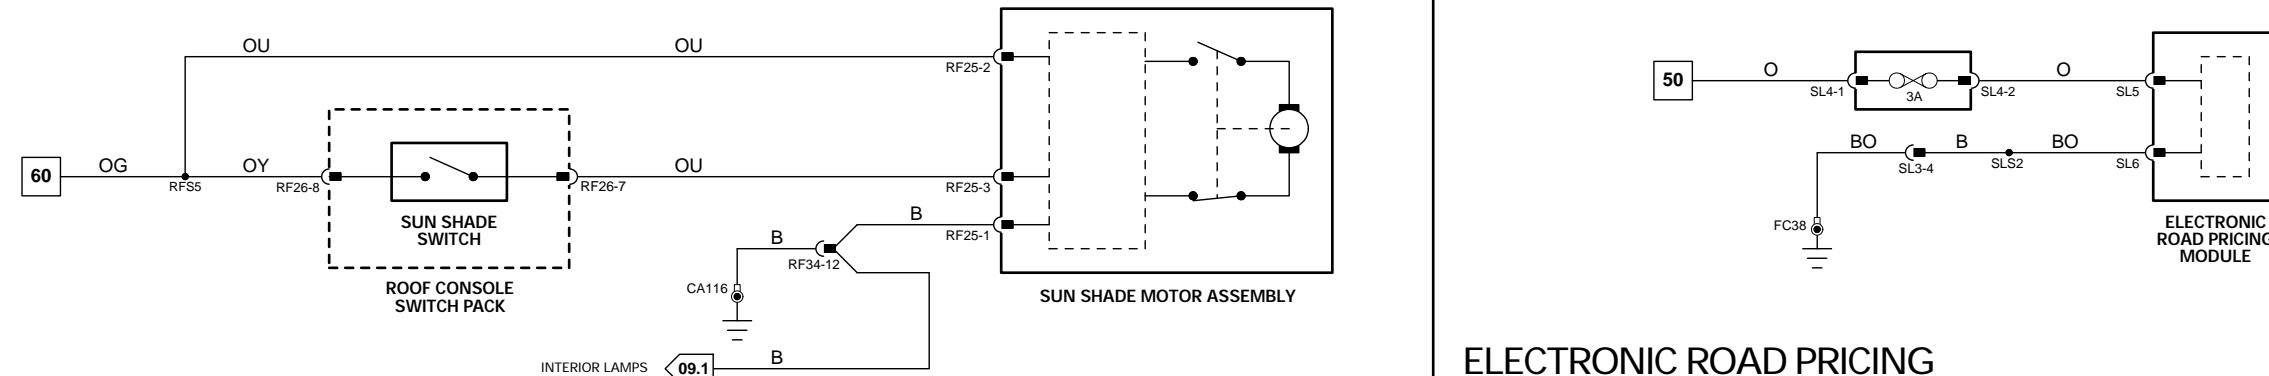
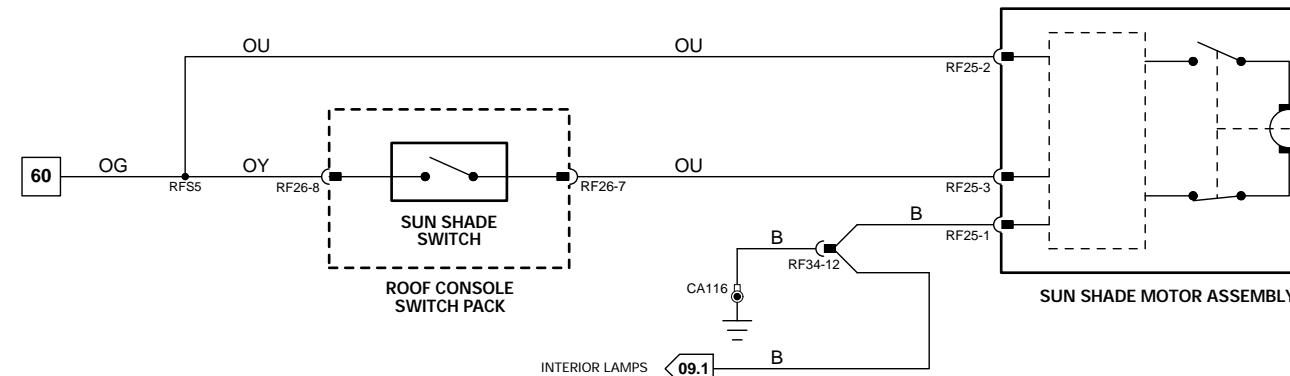
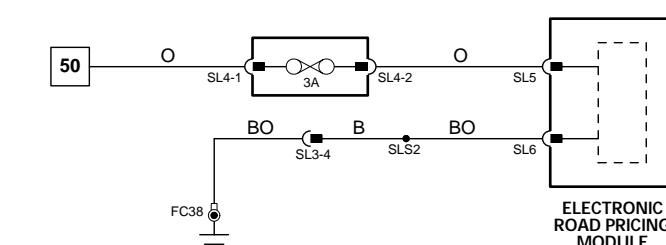
**CIGAR LIGHTER; ACCESSORY AND TRAILER CONNECTORS****SUN SHADE****ELECTRONIC ROAD PRICING**

Fig. 20.1

COMPONENTS

Component	Connector(s)	Connector Description	Location
ABS/TC CONTROL MODULE	FH33	25-WAY / BLACK	ADJACENT TO ABS PUMP
ADAPTIVE DAMPING CONTROL MODULE	CA11 CA12	16-WAY / BLUE 16-WAY / GREY	IN THE SPARE WHEEL WELL IN THE SPARE WHEEL WELL
AIR CONDITIONING CONTROL MODULE	FC27 FC28	26-WAY / GREY 22-WAY / GREY	BEHIND AIR CONDITIONING CONTROL PANEL BEHIND AIR CONDITIONING CONTROL PANEL
DOOR CONTROL MODULE – DRIVER	CA85 DD4 DT1 DT2	12-WAY / BLACK 26-WAY / WHITE 4-WAY / GREY 20-WAY / BLACK	DRIVER DOOR, TRIM PANEL DRIVER DOOR, TRIM PANEL DRIVER DOOR, TRIM PANEL DRIVER DOOR, TRIM PANEL
DYNAMIC STABILITY CONTROL CONTROL MODULE	FH51	47-WAY / GREY	ADJACENT TO ABS PUMP
GENERAL ELECTRONIC CONTROL MODULE	CA24 CA31 CA84 FH9 FH59 FH60	26-WAY / WHITE 20-WAY / BLACK 4-WAY / GREY 22-WAY / BLACK 12-WAY / BLACK 17-WAY / BLACK	'A' POST, LH SIDE 'A' POST, LH SIDE
INSTRUMENT PACK	FC14 FC15 FC63	22-WAY / GREY 20-WAY / BLACK 22-WAY / BLACK	FASCIA FASCIA FASCIA
NAVIGATION CONTROL MODULE	CA107 CA108	10-WAY / WHITE 18-WAY / WHITE	TRUNK, LH SIDE TRUNK, LH SIDE
POWERTRAIN CONTROL MODULE	FH1 GB1 PI1	58-WAY / GREY 32-WAY / GREY 60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
REAR ELECTRONIC CONTROL MODULE	CA63 CA99 CA100 CA101 CA102 CA103 CA104	17-WAY / BLACK 4-WAY / GREY 12-WAY / BLACK 20-WAY / BLACK 22-WAY / BLACK 26-WAY / WHITE 4-WAY / BLACK	TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR TRUNK, RH REAR
SEAT CONTROL MODULE – DRIVER	DM6 DM9 DM10	17-WAY / BLACK 17-WAY / GREY 4-WAY / BROWN	BELOW SEAT CUSHION BELOW SEAT CUSHION BELOW SEAT CUSHION
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
STEERING COLUMN LOCK CONTROL MODULE	FC59	4-WAY / BLACK	STEERING COLUMN
THROTTLE ACTUATOR CONTROL MODULE	PI44	10-WAY / BLACK	ON THROTTLE BODY
VEHICLE EMERGENCY CONTROL MODULE	RA6 RA7	12-WAY / BLACK 16-WAY / BLACK	TRUNK, LH SIDE TRUNK, LH SIDE
VOICE ACTIVATION CONTROL MODULE	RA2	22-WAY / GREY	TRUNK, LH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS


Connector	Connector Description	Location
CA14	14-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
CA15	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ABOVE WHEEL ARCH, LH SIDE
CA158	10-WAY / GREY / CABIN HARNESS TO CABIN HARNESS	TRUNK LATCH COVER; LH SIDE CARPET
DM18	14-WAY / GREY / CABIN HARNESS TO DRIVER SEAT HARNESS	BELOW SEAT CUSHION
FC1	16-WAY / BLACK / DATA LINK CONNECTOR	DRIVER SIDE OF TRANSMISSION TUNNEL
FC35	22-WAY / WHITE / JUNCTION CONNECTOR	BEHIND GLOVE BOX
PI2	10-WAY / BLACK / ENGINE HARNESS TO FRONT HARNESS	ADJACENT TO SUSPENSION TURRET, RH SIDE (LHD) OR LH SIDE (RHD)
RA3	10-WAY / GREY / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE

GROUNDS

Ground	Ground Description	Location
CA156	GROUND EYELET	TRUNK; RH REAR SIDE; ADJACENT TO RECM / TRUNK RH TRIM
CA157	GROUND EYELET	BEHIND REAR SEAT BACK; RH SIDE / SEAT BACK
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM
RA8	GROUND EYELET	TRUNK; LH SIDE / TRUNK LH TRIM

NOTE: Refer to the Appendix at the rear of this book for SCP Network Messages.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

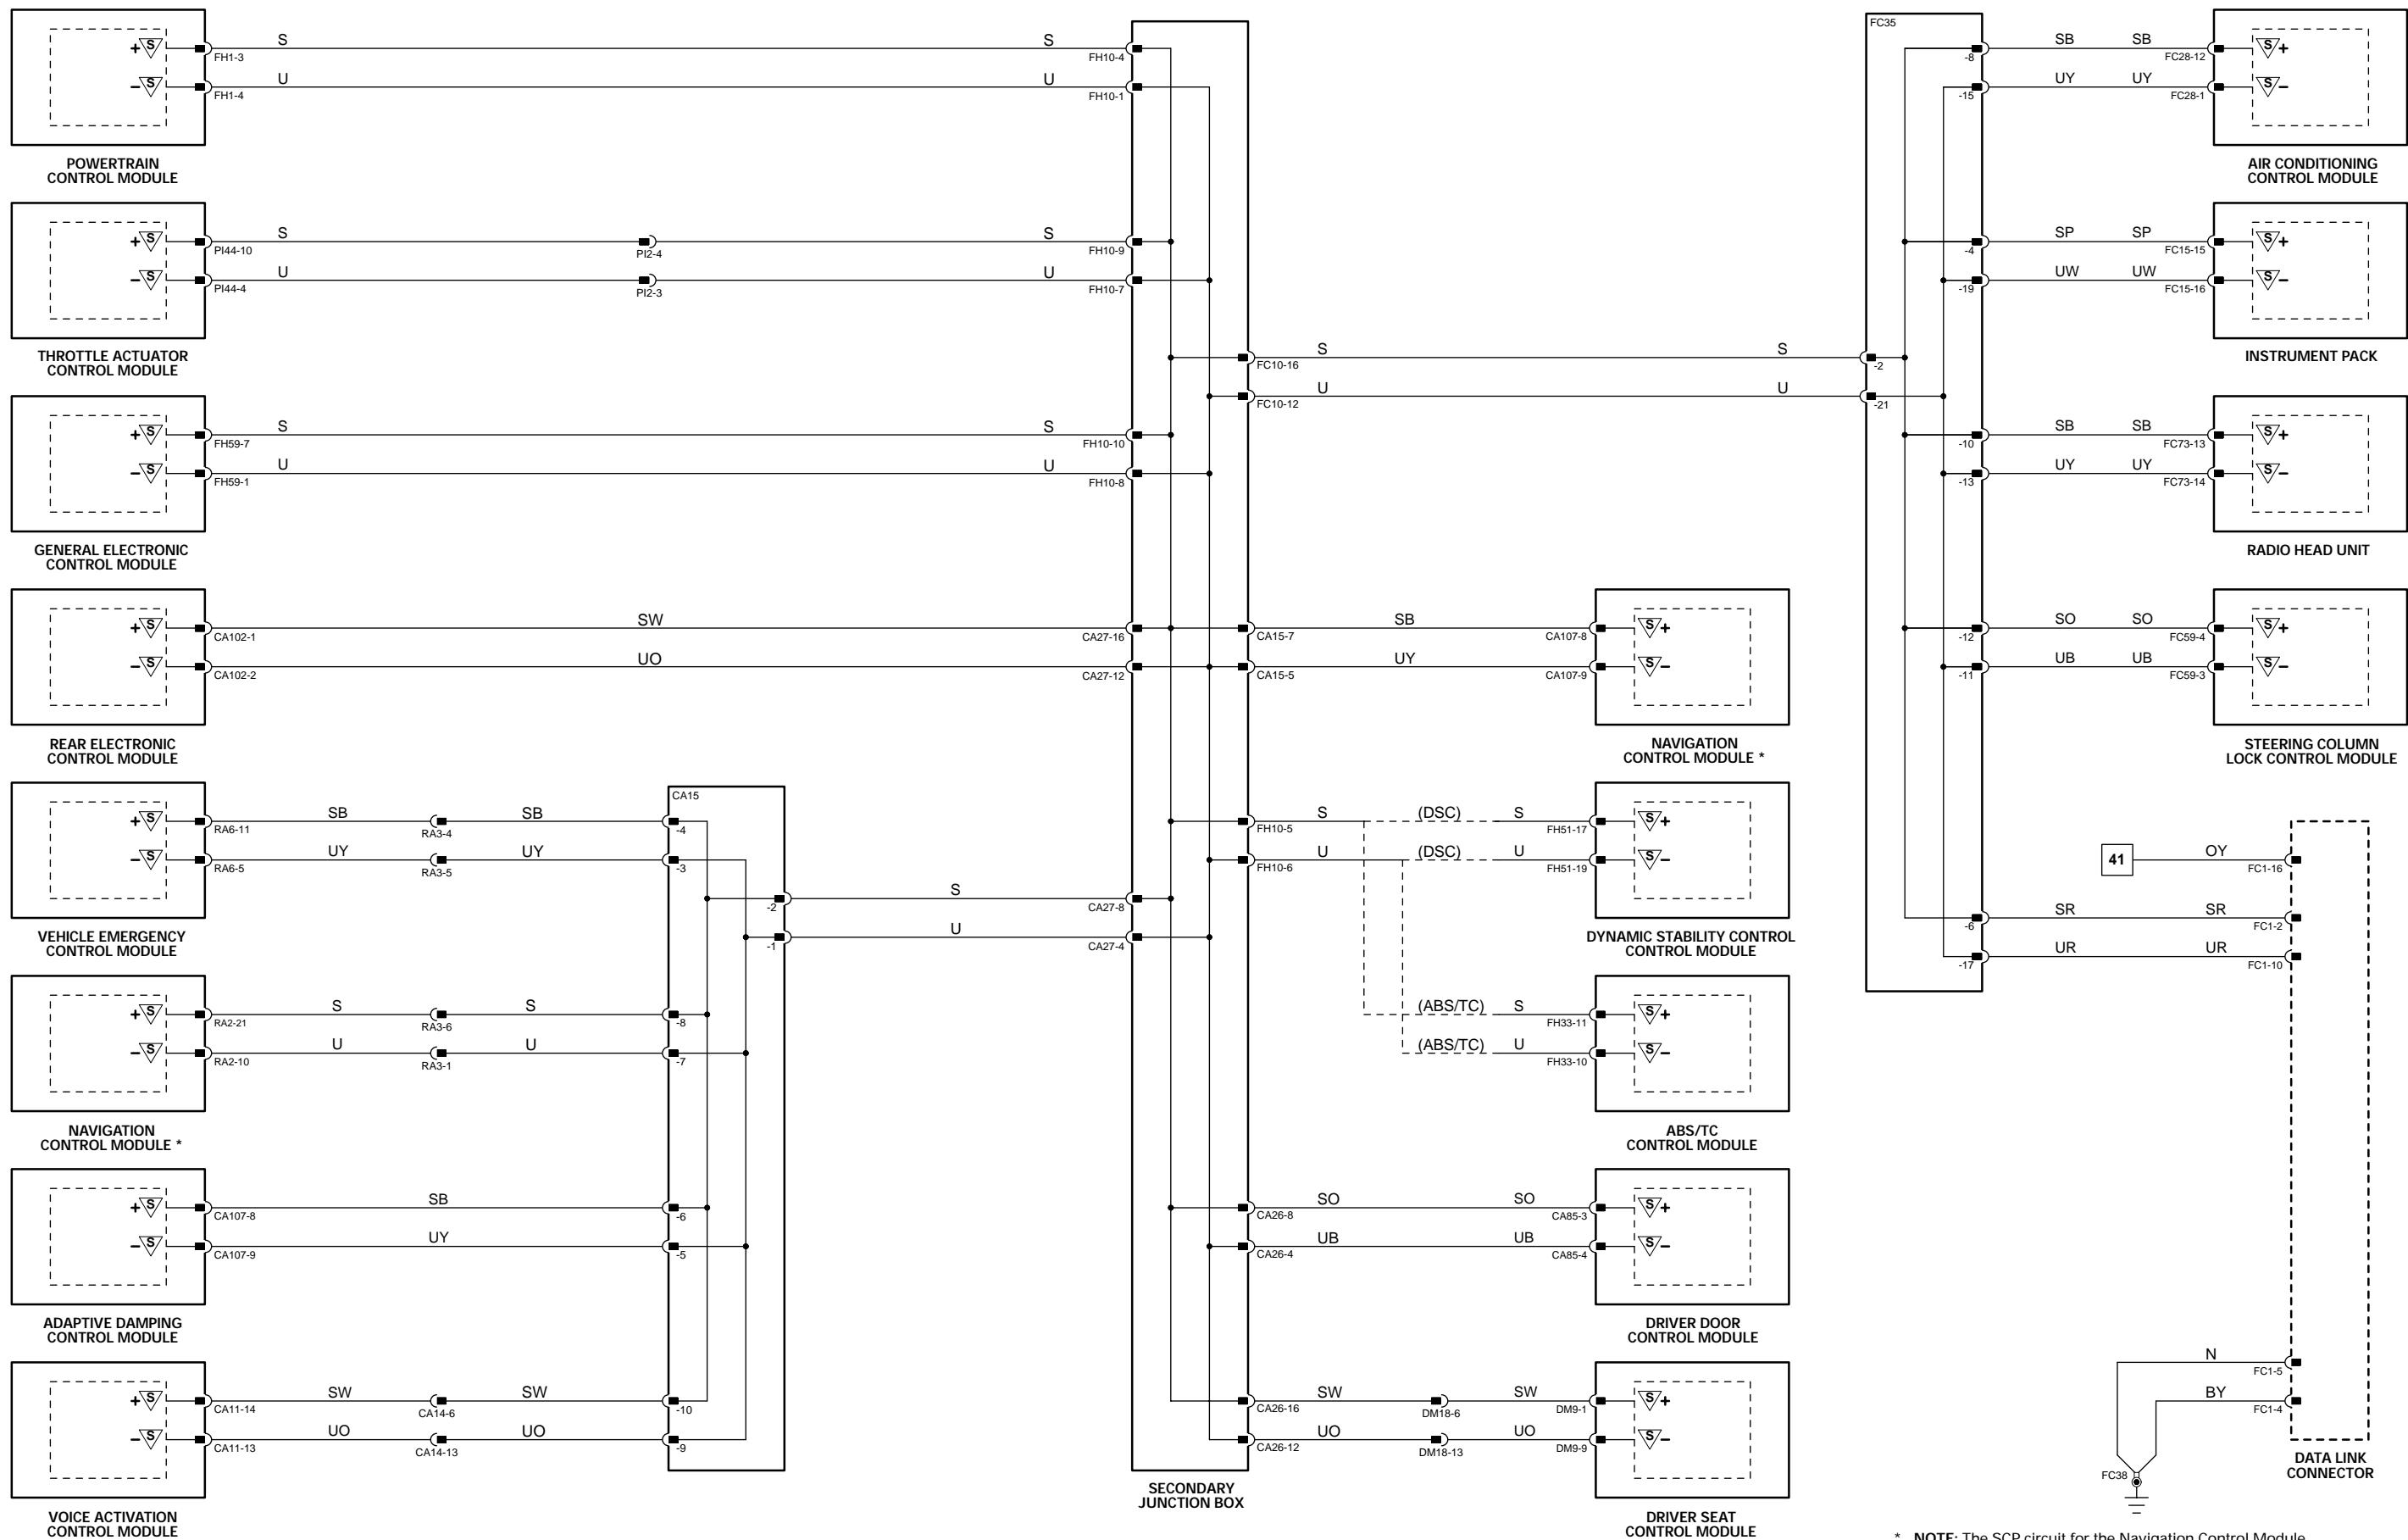

* NOTE: The SCP circuit for the Navigation Control Module varies with the vehicle option set.

Fig. 20.2

ABS / Traction Control Control Module

Pin	Description
D FH33-23	SERIAL COMMUNICATIONS

Active	Inactive
ENCODED COMMUNICATIONS	

Adaptive Damping Control Module

Pin	Description
D CA12-4	SERIAL COMMUNICATIONS

Active	Inactive
ENCODED COMMUNICATIONS	

Dynamic Stability Control Control Module

Pin	Description
D FH51-18	SERIAL COMMUNICATIONS

Active	Inactive
ENCODED COMMUNICATIONS	

Powertrain Control Module

Pin	Description
D FH1-13	PCM FLASH PROGRAMMING
D FH1-49	SERIAL COMMUNICATIONS

Active	Inactive
ENCODED COMMUNICATIONS	
ENCODED COMMUNICATIONS	

COMPONENTS

Component	Connector(s)	Connector Description	Location
ABS/TC CONTROL MODULE	FH33	25-WAY / BLACK	ADJACENT TO ABS PUMP
ADAPTIVE DAMPING CONTROL MODULE	CA11 CA12	16-WAY / BLUE 16-WAY / GREY	IN THE SPARE WHEEL WELL IN THE SPARE WHEEL WELL
CD AUTOCHANGER	FC50	12-WAY / BLACK	ABOVE GLOVE BOX
CELLULAR TELEPHONE CONTROL MODULE	RA4 RA5	12-WAY / BLACK 16-WAY / BLACK	INSIDE THE LH REAR QUARTER PANEL INSIDE THE LH REAR QUARTER PANEL
DYNAMIC STABILITY CONTROL CONTROL MODULE	FH51	47-WAY / GREY	ADJACENT TO ABS PUMP
PARKING AID CONTROL MODULE	CA112	26-WAY / BLACK	IN THE SPARE WHEEL WELL
POWERTRAIN CONTROL MODULE	FH1 GB1 PI1	58-WAY / GREY 32-WAY / GREY 60-WAY / GREY	FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE FRONT BULKHEAD, PASSENGER SIDE
RADIO HEAD UNIT	FC71 FC72 FC73 FC74 FC75 FC85	7-WAY / GREY 8-WAY / BLACK 17-WAY / BLACK 12-WAY / BLACK 12-WAY / BLACK 10-WAY / BLACK	FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER FASCIA, CENTER
RESTRAINTS CONTROL MODULE	CA114	26-WAY / BLACK	TRANSMISSION TUNNEL
SECONDARY JUNCTION BOX	CA26 CA27 FC10 FH10	16-WAY / BLUE 8-WAY / GREY 16-WAY / GREEN 10-WAY / YELLOW	FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE FRONT BULKHEAD, FORWARD OF 'A' POST, LH SIDE
VOICE ACTIVATION CONTROL MODULE	RA2	22-WAY / GREY	TRUNK, LH SIDE

HARNESS IN-LINE CONNECTORS AND JUNCTION CONNECTORS

Connector	Connector Description	Location
CA15	22-WAY / WHITE / JUNCTION CONNECTOR	TRUNK; ABOVE WHEEL ARCH, LH SIDE
FC1	16-WAY / BLACK / DATA LINK CONNECTOR	DRIVER SIDE OF TRANSMISSION TUNNEL
FC3	16-WAY / GREEN / FASCIA HARNESS TO FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE (LHD) OR RH SIDE (RHD)
FC5	12-WAY / GREY / FASCIA HARNESS TO FRONT HARNESS	BEHIND FASCIA END PANEL, LH SIDE
FC58	20-WAY / BLACK / CABIN HARNESS TO FASCIA HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
FH28	20-WAY / BLACK / FRONT HARNESS	BEHIND LOWER 'A' POST TRIM, LH SIDE
RA1	22-WAY / NATURAL / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE
RA3	10-WAY / GREY / CABIN HARNESS TO VOICE LINK LEAD	TRUNK; ABOVE WHEEL ARCH, LH SIDE

GROUNDS

Ground	Ground Description	Location
FC38	GROUND EYELET	BEHIND CENTER CONTROL CONSOLE / CENTER CONSOLE TRIM

FOR CONTROL MODULE PIN OUT INFORMATION, UNFOLD PAGE TO LEFT.

The following abbreviations are used to represent values for Control Module Pin-Out data



I	Input	SS	Sensor Supply V	D	Serial and Encoded Data
O	Output	S	SCP Network	B+	Battery Voltage
SG	Sensor Ground	A	ACP Network	V	Voltage (DC)

PWM	Pulse Width Modulated
Hz	Frequency
kHz	Frequency x 1000

CAUTION: The information on this data page is furnished to aid the user in understanding circuit operation. THIS INFORMATION SHOULD BE USED FOR REFERENCE ONLY.

NOTE: The values listed are approximately those that can be expected at the control module connector pins with all circuit connections made and all components connected and fitted. "Active" means a load is applied or a switch is ON; "Inactive" means a load is not applied or a switch is OFF.

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

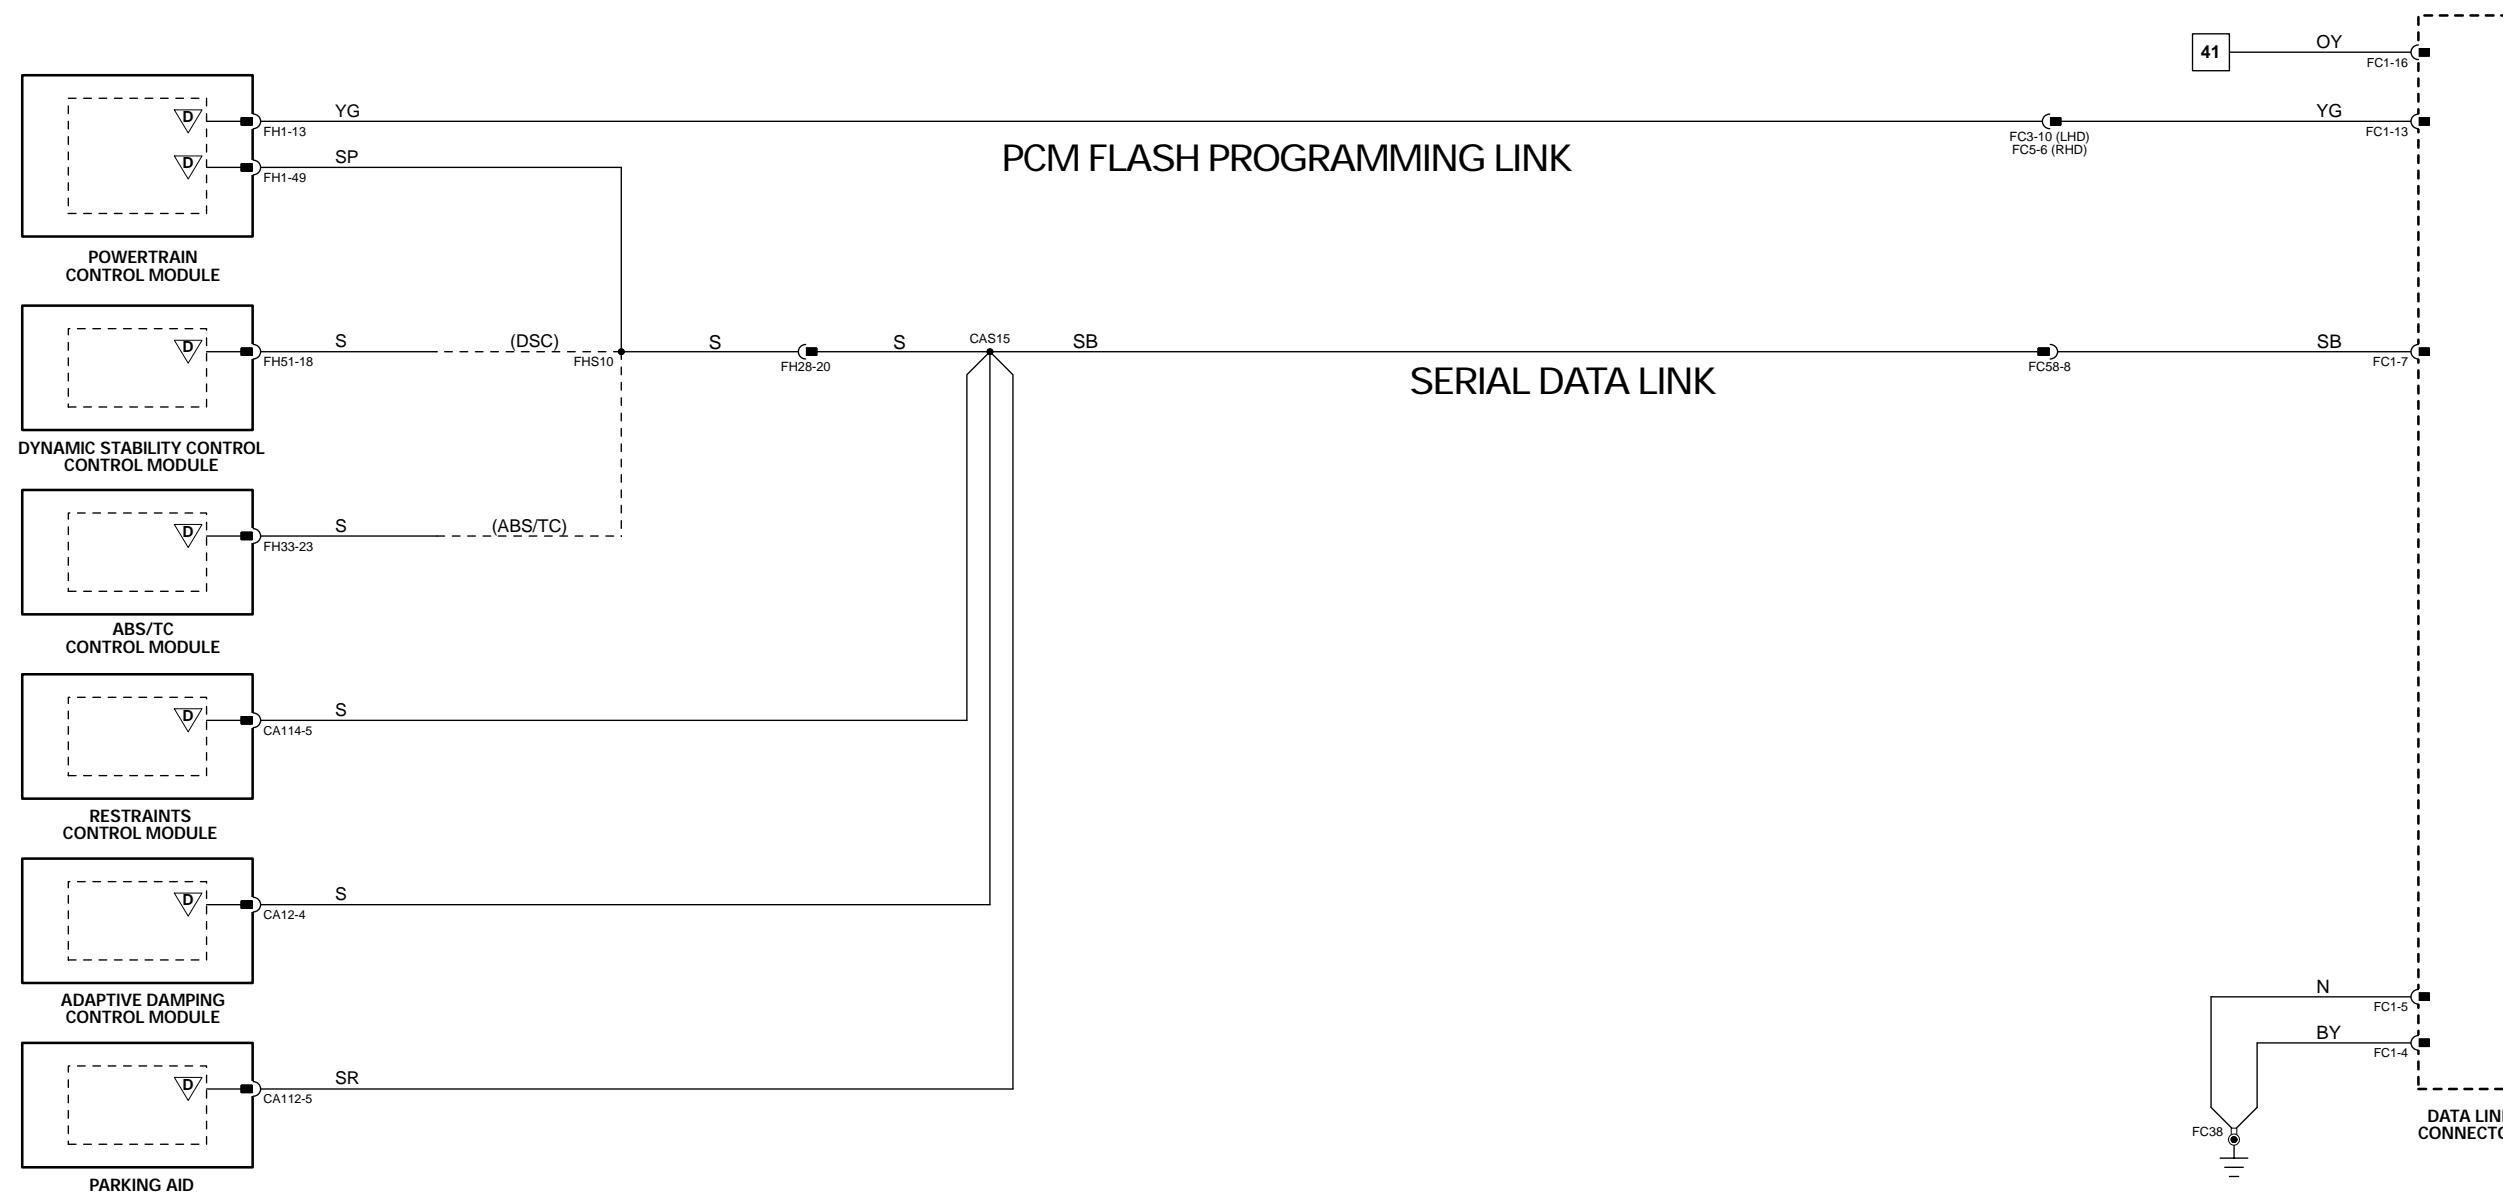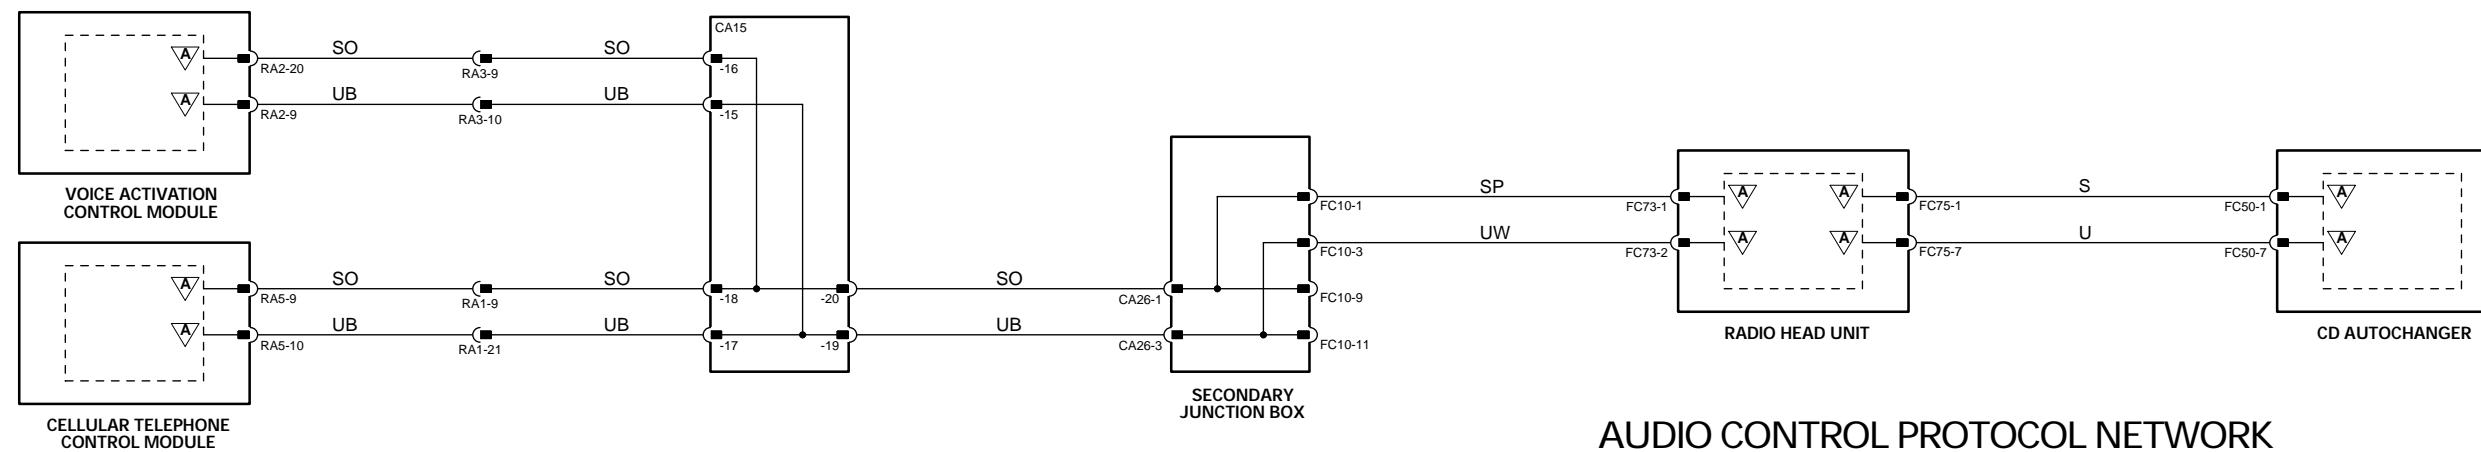



This Appendix contains a listing of SCP Network messages.

The following acronyms and abbreviations are used throughout this section:

A/C	Air conditioning
A/CCM	Air conditioning control module
ABS/TCCM	Anti-lock braking / traction control control module
ADCM	Adaptive damping control module
AUDIO	Radio head unit
DDCM	Driver door control module
DSC	Dynamic stability control
DSCCM	Dynamic stability control control module
DSCM	Driver seat control module
GECM	General electronic control module
INST	Instrument pack
MC	Message center (part of instrument pack)
NCM	Navigation control module
PCM	Powertrain control module
RECM	Rear electronic control module
SCLM	Steering column locking module
TACM	Throttle actuator control module
VACM	Voice activation control module
VECM	Vehicle emergency control module





Receivers	No.	Message Name	Source
	27	All rear fog lamp command: off	INST
	28	All rear fog lamp command: on	INST
	29	All rear fog lamp status: off	RECM
	30	All rear fog lamp status: on	RECM
	31	All rear park lamp command: off	GECM
	32	All rear park lamp command: on	GECM
	33	All rear window lockout switch status: active	DDCM
	34	All rear window lockout switch status: inactive	DDCM
	35	All remote door lock command: unlock	DDCM
	36	All remote door lock command: lock	DDCM
	37	All super / double door lock command: lock/locked	DDCM
	38	All turn lamp command: off	GECM
	39	All turn lamp command: on	GECM
	40	All turn lamp command: off	INST
	41	All turn lamp command: on	INST
	42	Anti-lock brake system failed telltale command: off	DSCCM
	43	Anti-lock brake system failed telltale command: off	ABS/TCCM
	45	Anti-lock brake system failed telltale command: on	DSCCM
	46	Anti-lock brake system failed telltale command: on	ABS/TCCM
	48	Autolamp delay command: disable/disabled	INST
	49	Autolamp delay command: enable/enabled	INST
	50	Backlighting intensity and dimming curve with headamps command: off	INST
	51	Backlighting intensity and dimming curve with headamps command: on	INST
	52	Battery saver command: off	GECM
	53	Battery saver command: on	GECM
	55	Brake system failed telltale command: off	DSCCM



Receivers	No.	Message Name	Source	Receivers												
	56	Brake system failed telltale command: off	ABS/TCCM													
	58	Brake system failed telltale command: on	DSCCM													
	59	Brake system failed telltale command: on	ABS/TCCM													
	60	Brake lamp pedal switch status: active	RECM	X	X	X	X	X	X	X	X	X	X	X	X	X
	61	Brake lamp pedal switch status: inactive	RECM	X	X	X	X	X	X	X	X	X	X	X	X	X
	62	Brake system configuration status	DSCCM	X												
	63	Brake system configuration status	ABS/TCCM	X												
	65	Charging system state status	PCM													
	66	CHECK ENGINE (MIL) telltale indicator mode command	PCM													
	67	Chime configuration 1 command: enable/enabled	GECM													
	68	Chime configuration 1 command: enable/enabled	VACM													
	69	Chime configuration 1 command: enable/enabled	MC													
	70	Chime configuration 2 command: enable/enabled	MC													
	71	Chime configuration 2 command: enable/enabled	VACM													
	72	Clutch pedal position status	PCM	X												
	73	Trunk lid door ajar switch status: active	RECM													
	74	Trunk lid door ajar switch status: inactive	RECM													
	75	Trunk lid door open command: yes (true)	DDCM													
	76	Delayed accessory command: off	DDCM													
	77	Delayed accessory command: on	DDCM													
	78	Desired axle torque command	DSCCM	X												
	79	Desired axle torque command	ABS/TCCM	X												
	80	Display access confirmation status: accept	MC													
	81	Display access confirmation status: reject	MC													
	82	Display access confirmation status: accept	NCM													
	83	Display access confirmation status: reject	NCM													





Receivers	Source	SCP																
		SCLM	DSCM	DDCM	VACM	VECM	A/CCM	AUDIO	NCM	MC	INST	GECM	RECM	ABS/TCCM	DSCCM	ADCM	TACM	PCM
		110	Emergency messaging status: active			VECM												
		111	Emergency messaging status: inactive			VECM												
		112	Engine configuration status			PCM												
		113	Engine coolant temperature high status: no (false)			INST												
		114	Engine coolant temperature high status: yes (true)			PCM												
		115	Engine coolant temperature status			PCM												
		116	Engine coolant low level status: no (false)			PCM												
		117	Engine coolant low level status: yes (true)			PCM												
		118	Engine off elapsed time status			PCM												
		119	Engine oil pressure low status: no (false)			GECM												
		120	Engine oil pressure low status: yes (true)			GECM												
		122	Engine RPM with throttle position status			PCM												
		123	Engine vacuum status			PCM												
		126	Fail safe cooling mode status			PCM												
		127	Front sliding roof master controller window close command: disable/disabled			DDCM												
		128	Front sliding roof master controller window close command: enable/enabled			DDCM												
		129	Front sliding roof master controller window open command: disable/disabled			DDCM												
		130	Front sliding roof master controller window open command: enable/enabled			DDCM												
		131	Front windshield electric defrost status: off			A/CCM												
		132	Front windshield electric defrost status: on			A/CCM												
		133	Fuel flow			MC												
		134	Fuel input/output status			RECM												
		135	Fuel level: percent status			INST												
		136	Fuel level: sensor analog/digital output status			RECM												
		137	Hood ajar switch status: active			GECM												
		138	Hood ajar switch status: inactive			GECM												



Receivers	Source																	
		SCLM	DSCM	DDCM	VACM	VECM	A/CCM	AUDIO	NCM	MC	INST	GECM	RECM	ABS/TCCM	DSCCM	ADCM	TACM	PCM
		139 Horn configuration 1 command: disable/disabled							INST		X							
		140 Horn configuration 1 command: enable/enabled							INST		X							
		141 Horn configuration 3 command: enable/enabled							DDCM		X							
		142 Ignition switch position with initialize status: no (false)							INST	X	X	X	X					
		143 Ignition switch position with initialize status: yes (true)							INST	X	X	X	X					
		144 DSC active telltale command: off							DSCCM		X							
		145 DSC active telltale command: on							DSCCM		X							
		146 Key-in-ignition status: no (false)							INST		X	X						
		147 Key-in-ignition status: yes (true)							INST		X	X						
		149 Language code status							NCM									
		150 Left front turn lamp OK status: no (false)							GECM			X	X					
		151 Left front turn lamp OK status: yes (true)							GECM			X	X					
		152 Left rear brake lamp OK status: no (false)							RECM			X						
		153 Left rear brake lamp OK status: yes (true)							RECM			X						
		154 Left rear tail lamp OK status: no (false)							RECM				X					
		155 Left rear tail lamp OK status: yes (true)							RECM				X					
		156 Left rear turn lamp OK status: no (false)							RECM				X					
		157 Left rear turn lamp OK status: yes (true)							RECM				X					
		158 Left side mid vehicle turn lamp OK status: no (false)							GECM				X					
		159 Left side mid vehicle turn lamp OK status: yes (true)							GECM				X					
		160 Left side turn signal turn lamp command: off							INST			X	X					
		161 Left side turn signal turn lamp command: on							INST			X	X					
		162 Low brake fluid telltale command: off							GECM				X					
		163 Low brake fluid telltale command: on							GECM				X					
		164 Low washer fluid telltale command: off							GECM				X					
		165 Low washer fluid telltale command: on							GECM				X					



Receivers	Source	No.	Message Name														
		166	Memory feature menu status	DDCM													
		167	Memory feature menu status		INST												
		169	Memory features 1 command: recall	DDCM													
		170	Memory features 1 command: set / save	DDCM													
		171	Memory features 2 command: recall	DDCM													
		172	Memory features 2 command: set / save	DDCM													
		173	Memory features recall cancel command: yes (true)	DDCM													
		174	Memory features recall cancel command: yes (true)	DDCM													
		175	Memory features recall cancel command: yes (true)	INST													
		176	Network bus wake-up command: yes (true)	DDCM													
		177	Network bus wake-up command: yes (true)	DDCM													
		178	Network bus wake-up command: yes (true)	GECM													
		179	Network bus wake-up command: yes (true)	RECM													
		180	Network bus wake-up command: yes (true)	INST													
		181	Odometer rolling count status	DSCCM													
		182	Odometer rolling count status	ABS/TCCM													
		184	Outside air temperature status	A/CCM	X												
		185	Parking brake switch status: active	GECM	X												
		186	Parking brake switch status: inactive	GECM	X												
		187	Passenger front door ajar switch status: active	GECM													
		188	Passenger front door ajar switch status: inactive	GECM													
		189	Passenger front door lock switch status: active	RECM													
		190	Passenger front door unlock switch status: active	RECM													
		191	Passenger front master controller window close command: disable/disabled	DDCM													
		192	Passenger front master controller window close command: enable/enabled	DDCM													
		193	Passenger front master controller window open command: disable/disabled	DDCM													





Receivers	Source	SCP Messages																
		SCLM	DSCM	DDCM	VACM	VECM	A/CCM	AUDIO	NCM	MC	INST	GECM	RECM	ABS/TCCM	DSCCM	ADCM	TACM	PCM
		220	Remote control #1 button status					AUDIO										
		221	Remote panic command: disable/disabled					DDCM										
		222	Remote panic command: enable/enabled					DDCM										
		223	Request all courtesy lamp switch status					GECM										
		224	Request all front fog lamp command					GECM										
		225	Request all front fog lamp status					INST										
		226	Request all front high beam lamp command					GECM										
		227	Request all front high beam lamp status					INST										
		228	Request all headlamp command					GECM										
		229	Request all park lamp command					GECM										
		230	Request all park lamp command					RECM										
		231	Request all park lamp command					NCM										
		232	Request all rear brake lamp command					RECM										
		233	Request all rear fog lamp command					RECM										
		234	Request all rear fog lamp status					INST										
		235	Request all rear park lamp command					RECM										
		236	Request all window lockout switch status					RECM										
		237	Request anti-lock brake system failed telltale command					INST										
		238	Request backlighting intensity and dimming curve with headlamps command					A/CCM										
		239	Request backlighting intensity and dimming curve with headlamps command					GECM										
		240	Request backlighting intensity and dimming curve with headlamps command					MC										
		241	Request backlighting intensity and dimming curve with headlamps command					AUDIO										
		242	Request battery saver command					INST										
		243	Request battery saver command					RECM										
		244	Request brake lamp pedal switch status					GECM										
		245	Request brake lamp pedal switch status					DSCCM										





Receivers	Source	SCP Messages																
		SCLM	DSCM	DDCM	VACM	VECM	A/CCM	AUDIO	NCM	MC	INST	GECM	RECM	ABS/TCCM	DSCCM	ADCM	TACM	PCM
		275 Request engine off elapsed time status							A/CCM	X	INST							
		276 Request engine oil pressure low status										X						
		278 Request fail safe cooling mode status							MC	X								
		279 Request fail safe cooling mode status							INST	X								
		280 Request fuel input/output status							PCM			X						
		281 Request hood ajar switch status							DDCM			X						
		282 Request ignition switch position with initialize status							DDCM				X					
		283 Request ignition switch position with initialize status							DDCM				X					
		284 Request ignition switch position with initialize status							GECM				X					
		285 Request ignition switch position with initialize status							MC				X					
		286 Request ignition switch position with initialize status							NCM				X					
		287 Request ignition switch position with initialize status							PCM				X					
		288 Request ignition switch position with initialize status							RECM				X					
		289 Request ignition switch position with initialize status							AUDIO				X					
		290 Request ignition switch position with initialize status							VECM				X					
		291 Request DSC active telltale command							INST				X					
		292 Request key-in-ignition status							DDCM				X					
		293 Request key-in-ignition status							DSGM				X					
		294 Request key-in-ignition status							GECM				X					
		295 Request key-in-ignition status							RECM				X					
		296 Request left front turn lamp OK status							MC				X					
		297 Request left front turn lamp OK status							INST				X					
		298 Request left rear brake lamp OK status							MC				X					
		300 Request left tail lamp OK status							MC				X					
		302 Request left rear turn lamp OK status							MC				X					
		303 Request left rear turn lamp OK status							INST				X					





Receivers	Source	SCP Messages												
		SCLM												
		DSCM												X
		DDCM												
		VACM												
		VECM												
		A/CCM												
		AUDIO												
		NCM												
		MC												
		INST												
		GECM												
		RECM												
337	Request right side mid vehicle turn lamp OK status	INST												
338	Request steering column lock system status	INST												
339	Request steering column lock warning command	MC												
340	Request throttle control unit fault status	PCM	X											
341	Request traction control active telltale command	INST												
342	Request traction control system state status	INST	X	X										
343	Request traction control system state status	MC		X	X									
345	Request transmission actual gear position with shift in progress status	DSCCM	X											
346	Request transmission actual gear position with shift in progress status	ABS/TCCM	X											
349	Request transmission configuration status	DSCCM	X											
350	Request transmission configuration status	ABS/TCCM	X											
352	Request transmission performance mode command	PCM												
353	Request transmission performance mode status	GECM	X											
355	Request transmission system state status	MC	X											
356	Request vehicle antitheft system status	DDCM												
357	Request vehicle antitheft system status	RECM												
359	Request vehicle security key status	GECM												
360	Request vehicle security key status	PCM												
361	Request vehicle security PCM identification status	INST	X											
362	Request vehicle security SCLM identification status	SCLM												
363	Request vehicle security system status	INST	X											
364	Request vehicle security visual indicator mode command	INST												
365	Request vehicle speed control set speed status	INST	X											
366	Right front turn lamp OK status: no (false)	GECM												
367	Right front turn lamp OK status: yes (true)	GECM												
368	Right rear brake lamp OK status: no (false)	RECM												X



Receivers	No.	Message Name	Source	SCLM	DSCM	DDCM	VACM	VECM	A/CCM	AUDIO	NCM	MC	INST	GECM	RECM	ABS/TCCM	DSCCM	ADCM	TACM	PCM
	369	Right rear brake lamp OK status: yes (true)	RECM																	
	370	Right rear tail lamp OK status: no (false)	RECM																	
	371	Right rear tail lamp OK status: yes (true)	RECM																	
	372	Right rear turn lamp OK status: no (false)	RECM																	
	373	Right rear turn lamp OK status: yes (true)	RECM																	
	374	Right side mid vehicle turn lamp OK status: no (false)	GECM																	
	375	Right side mid vehicle turn lamp OK status: yes (true)	GECM																	
	376	Right side turn signal turn lamp command: off	INST																	
	377	Right side turn signal turn lamp command: on	INST																	
	378	Steering column lock command: lock	INST																	
	379	Steering column lock command: unlock	INST																	
	380	Steering column lock enable command: off	INST																	
	381	Steering column lock enable command: on	INST																	
	382	Steering column lock enable status: off	GECM																	
	383	Steering column lock enable status: on	GECM																	
	384	Steering column lock enable status: off	RECM																	
	385	Steering column lock enable status: on	RECM																	
	386	Steering column lock system status	SCLM																	
	387	Steering column lock warning command: no (false)	INST																	
	388	Steering column lock warning command: yes (true)	INST																	
	389	Suspension system state status	ADCM																	
	390	Terminate display confirmation status: accept	MC																	
	391	Terminate display confirmation status: reject	MC																	
	392	Terminate display confirmation status: accept	NCM																	
	393	Terminate display confirmation status: reject	NCM																	
	394	Terminate display definition command	AUDIO																	



Receivers	Source	SCP																
		SCLM	DSCM	DDCM	VACM	VECM	A/CCM	AUDIO	NCM	MC	INST	GECM	RECM	ABS/TCCM	DSCCM	ADCM	TACM	PCM
		395	Terminate display definition command											VACM				
		396	Terminate display definition command											VECM				
		397	Throttle actuator control module fault status											TACM	X			
		398	Traction control active telltale command: off											ABS/TCCM	X			
		399	Traction control active telltale command: on											ABS/TCCM	X			
		400	Traction control system state status											DSCCM		X	X	
		401	Traction control system state status											ABS/TCCM		X	X	
		402	Transmission actual gear position with shift: in progress status: no (false)											PCM		X	X	
		403	Transmission actual gear position with shift: in progress status: yes (true)											PCM		X	X	
		404	Transmission configuration status											PCM		X	X	
		406	Transmission performance mode command											GECM	X			
		407	Transmission performance mode status											PCM		X		
		408	Transmission PRNDL range selected status											PCM		X	X	
		409	Transmission system state status											PCM			X	
		411	Vehicle anti-theft system status											GECM		X		
		413	Vehicle security challenge query status											PCM			X	
		414	Vehicle security challenge query status											SCLM			X	
		415	Vehicle security challenge response status											PCM			X	
		416	Vehicle security challenge response status											INST	X			X
		417	Vehicle security challenge response status											SCLM	X		X	
		418	Vehicle security key status											INST	X		X	
		419	Vehicle security PCM identification status											PCM			X	
		420	Vehicle security SCLM identification status											INST			X	
		421	Vehicle security system status: disable/disabled											PCM			X	
		422	Vehicle security system status: enable/enabled											PCM			X	
		423	Vehicle security visual indicator mode command											GECM			X	



Receivers	Source	No.	Message Name
		424	Vehicle speed – driven and undriven wheels: high resolution
		425	Vehicle speed – driven and undriven wheels: high resolution
		427	Vehicle speed control set speed status: disable/disabled
		428	Vehicle speed control set speed status: enable/enabled
		429	Vehicle speed control system status: off
		430	Vehicle speed control system status: on
		433	Voice control mode status: off
		434	Voice control mode status: on