

[Go to Foreword >>](#)

[Go to Contents >>](#)

[Go to Index >>](#)

---

# **XJ SERIES 2001 MY AUDIO SYSTEMS HANDBOOK**

---



BY APPOINTMENT TO  
HER MAJESTY QUEEN ELIZABETH II  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO  
HER MAJESTY QUEEN ELIZABETH  
THE QUEEN MOTHER  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO  
HIS ROYAL HIGHNESS THE PRINCE OF WALES  
MANUFACTURERS OF DAIMLER AND JAGUAR CARS  
JAGUAR CARS LIMITED COVENTRY

## Audio System Handbook

**JAGUAR CARS LIMITED**, as manufacturers, are dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

To complement the features, systems and technology of your new vehicle we have produced this Audio Systems Handbook. In it we have undertaken to make the control of complex systems easy to understand and operate.

The information contained herein applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Dealer.

The Manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.

# Contents

---

## 1. Introduction and controls

General information . . . . .	1-1
Sound system controls . . . . .	1-2
Steering wheel audio system controls (where fitted) . . .	1-3
FM and AM reception . . . . .	1-4
Mode button . . . . .	1-5
Optimising sound (premium systems) . . . . .	1-5
Audio controls under navigation guidance . . . . .	1-7

## 2. Sound system operation

Radio operation . . . . .	2-1
Radio broadcast data system (RBDS) . . . . .	2-2
RBDS operation . . . . .	2-3
RBDS trouble-shooting guide . . . . .	2-4
Radio set up modes . . . . .	2-5
Cassette tape player operation . . . . .	2-6
Compact disc (CD) player (where fitted) . . . . .	2-8
CD Operation . . . . .	2-9
CD player fault diagnosis . . . . .	2-11

## 3. System care

Care of the audio system . . . . .	3-1
Cassettes . . . . .	3-1
Compact Discs (CDs) . . . . .	3-1
Aerial . . . . .	3-1

A comprehensive index is located at the back of this handbook.

## General information

The sound system is available in two versions: the Base System, and the Premium System.

The Base System comprises a radio, cassette tape player, optional compact disc (CD) player, and four door-mounted speakers.

The premium system has the CD player fitted as standard, extra speakers mounted in the door posts and sub-woofers mounted in the parcel shelf. Both systems have an FM aerial and an AM telescopic rod aerial. An additional feature of the Premium System is digital signal processing (DSP), which enhances sound quality in two ways, sub-woofer control and optimising sound to occupant positions.

The system is operated by controls on the fascia panel, and where fitted, multi-function controls on the left-hand side of the steering wheel.

The control panel has an alpha-numeric display which provides detailed information, including text messages, relating to the operation of the unit.


The display is also used by the navigation system (where fitted) to display navigation information. For details refer to the Navigation Handbook.

## 1-2 Introduction and controls

### Sound system controls

#### Key

1. ON/OFF and volume control.
2. MODE scroll through modes to select sound quality settings.
3. CLEAR last digit (phone) last entry (navigation).
4. Sound system display and navigation screen (where fitted).
5. Seek stored phone number in the phone memory.
6. MIX CD, preset 7 and phone key pad 7.
7. Programme change button (cassette), preset 4 and phone key pad 4.
8. Dolby B noise reduction (cassette mode) preset 1 and phone key pad 1.
9. Preset buttons phone key pad.
10. PT Programme type (all markets). Traffic Information (USA and Canada only).
11. Seek stored phone number in the phone memory.
12. MR Memory recall – Phone memory access.
13. Radio Broadcast Data System (RBDS).

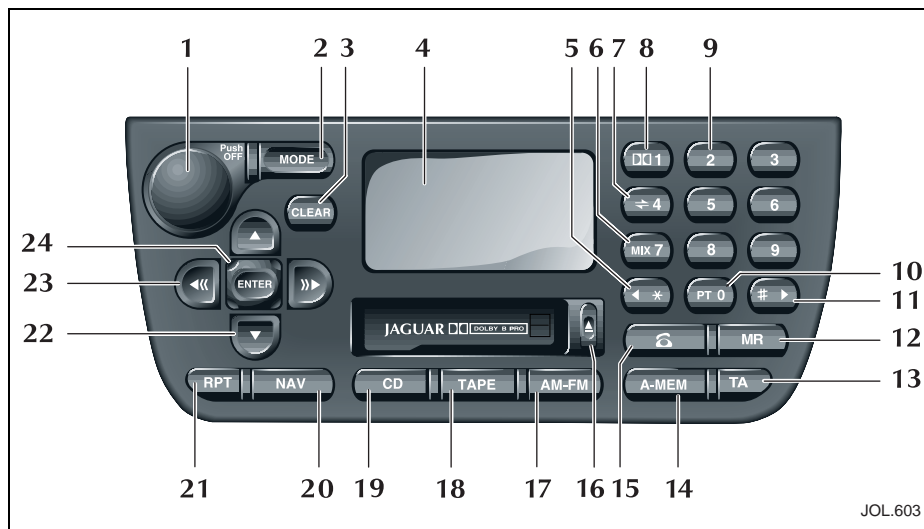

14. A-MEM – Automatically set station presets.
15. Phone – Enter phone mode, send and end a call.
16. Cassette tape eject button.
17. AM-FM band select.
18. TAPE Cassette tape select.
19. CD select.
20. NAV Navigation select.
21. RPT – Repeat last track, repeat CD, Repeat last navigation message.
22. Manual tune to AM/FM stations. CD select in CD mode.
23. Seek AM/FM station, fast forward and rewind in TAPE mode.
24. ENTER command in Navigation mode.

## Aerial operation

The aerial automatically rises when the radio is switched on and the ignition switch is in position **I** or **II**. The aerial will lower when the radio is switched off.

**Note:** The aerial will always be raised regardless of being in tape or CD modes, to enable RBDS information to be received on the FM waveband.


**Caution: Do not attempt to raise the aerial manually.**

It is important to clean the radio aerial periodically to maintain smooth operation and good reception.

If your vehicle is fitted with a cellular telephone, you are advised to take the following precautions in areas where there is restricted overhead clearance such as an automatic car wash.

1. Switch the radio cassette and ignition OFF.
- or
2. Switch the radio cassette and cellular telephone OFF.

## Steering wheel audio system controls (where fitted)

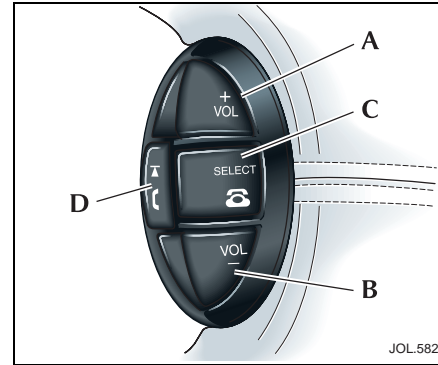


Four audio system control buttons are situated on the left-hand side of the steering wheel. These buttons override the functions of the similar buttons on the radio control panel.

- A. Press to increase volume.
- B. Press to decrease volume.
- C. Press and release to cycle through Radio FM, AM, Cassette or CDs. Press and hold to enter phone mode.
- D. Press and release to seek to next pre-set radio station, or to next track on tape and CD. Press and hold to cycle to the next radio station, or to the next CD, or to change side of tape.

## Radio operation

Example of Radio Display

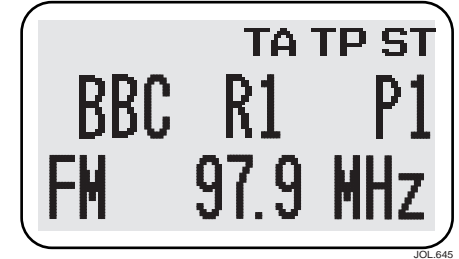

- TP** Traffic Programme.
- TA** Traffic announcement selected.
- ST** Stereo.
- P1** Preset button allocated to the displayed station.

# 1-4 Introduction and controls


---

## FM and AM reception

FM reception has the advantages of low noise, minimal distortion, wide dynamic range, extended frequency response, and is usually broadcast in stereo. However, as FM frequency waves are relatively short and travel in a straight line, they can sometimes be impeded by obstructions, adversely affecting reception in some parts of the country.

Whilst FM reception will generally provide better quality sound, AM reception or Medium Waveband (MW) may be better in remote areas not covered by the shorter range FM transmitters.

When experiencing poor FM reception, background noise can be reduced by adjusting the Mode button into Treble adjustment position and reducing the treble setting.

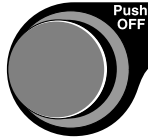

### ON/OFF and volume control

Push the control to switch the radio on. Push again to switch off. Turn the control clockwise to increase volume.

### Automatic volume control (AVC)

This is a feature which raises the volume of the radio to overcome road noise as the vehicle speed increases. To switch AVC on or off, press the volume knob for more than two seconds. The current state will be displayed i.e. **AVC ON/AVC OFF**. To toggle ON/OFF momentarily, press the volume control knob again to change the state. The **AVC** level can be adjusted from 1 to 5 by turning the volume knob while in **AVC ON** mode. When **AVC** is **ON**, it is possible to override the automatic mode by adjusting the volume manually.



## Mode button

Press **MODE** repeatedly to cycle through the various modes. Once a function has been selected, turn the volume control to adjust sound quality. After about five seconds the radio will return to normal volume control mode.

The modes are:

**BASS** Increase/decrease.

**TREBLE** Increase/decrease.

**Note:** A source tone memory automatically memorises bass and treble positions for radio, cassette tape and CD, allowing individual settings for each mode.

**BALANCE** Left to right.

**FADE** Front to rear.


**NAV** Set the relative levels of voice guidance volume to audio volume (voice guidance emphasis) – Only vehicles with Navigation Systems.

**SUB-WOOFER** Set sub-woofer level from -7 to +7 (premium systems only).

**POSITION** Using volume control, set speaker delays to optimise stereo sound for a selected seating position (premium systems only).

For example (see above right) sound can be optimised for the driver on the left by introducing a delay in speaker (A), effectively moving speaker (B) to the position shown, balancing the stereo effect.

## Optimising sound (premium systems)

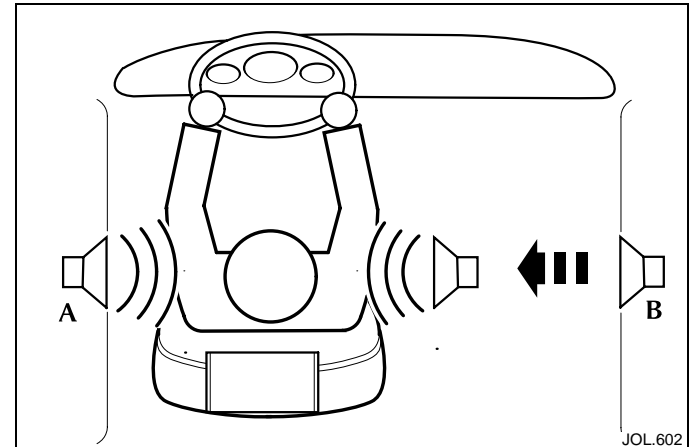

Sound can be optimised for the following seating positions:

- Front Left
- Front Right
- Centre (All)
- Rear


### To change the position setting:

Press the mode switch until **POSITION** is displayed then turn the volume control to cycle through the available positions.



## 1-6 Introduction and controls

---

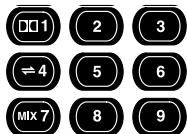


### Preset buttons



#### WARNING:

**Do not attempt to set the station preset while driving. Do this before starting a journey.**

In each waveband, nine stations can be memorised in the bank of preset buttons, marked **1** to **9**. After tuning to a station, hold the chosen preset button for at least two seconds. The unit will 'beep' to indicate that the station has been stored. This station can be recalled from this preset memory by pressing the button momentarily, for less than two seconds. The steering wheel preset selection button when pressed will cycle through the nine preset stations (see page 1-3).

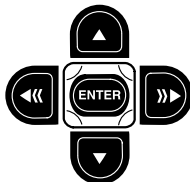

### Seek and manual tuning

Momentarily pressing the left or right buttons will activate the radio in the seek mode, making the tuner search up or down the frequency range for the next available station.


Push and hold the up and down buttons to tune the radio manually, the display counts up or down to the frequency required. Incremental adjustment can be made by momentarily pressing the buttons until the required frequency is reached.

The **ENTER** button is used to enter commands in Navigation mode.


## Audio controls under navigation guidance

When under navigation guidance, the audio system display is used by the navigation system to display navigation information. Under navigation guidance the screen can be in one of two modes:

Full screen – navigation information only,

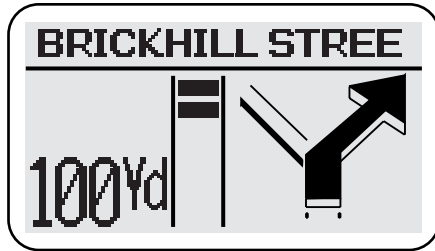

or split screen – lower screen (navigation)  
upper screen (audio system).

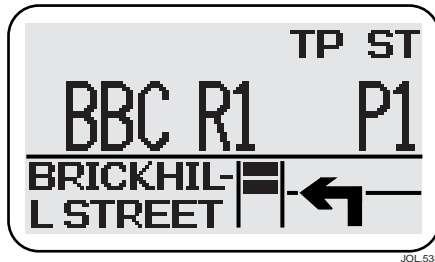

**Note:** Under navigation guidance, means that a destination has been set and guidance is activated.

When in full (navigation) screen mode you can adjust the volume of the audio source currently selected.

To gain full audio system control, press the required audio source button i.e. **AM-FM**, **CD**, **TAPE** or **PHONE**. This will force the display into split screen mode (if previously in full) and allow audio system adjustments to be made.

### Approaching a manoeuvre point

When under navigation guidance, the display will change to full screen (if previously in split) when the vehicle is within 0.3 miles (1.5 miles on motorways) of a manoeuvre point, i.e. the point where a navigation instruction is necessary.

### Guide method

Full and split screen behaviour can be set-up in the Guide Method menu as follows:

**Hybrid ON** – The display is normally in split screen mode. At 0.3 miles (1.5 miles on motorways) distance from a manoeuvre point, the display changes to full screen to alert the driver to an approaching manoeuvre. In this zone, full navigation screen is maintained until the manoeuvre point has been passed, whereupon it will revert to split.

Pressing an audio source button in this zone will change the display briefly to split screen, allowing audio system adjustments to be made.

In split screen, pressing **NAV** will force a full screen which will be maintained until the next manoeuvre point is approached.

**Hybrid OFF** – The display is normally in full screen.

Pressing a source button will change the display briefly to split, while audio adjustments are made, and then revert to full.

See the Navigation Handbook for setting the guide method.

# 1-8 Introduction and controls

---

## **Audio controls under navigation guidance**

(continued)

### **Steering wheel buttons** (where fitted)

The steering wheel buttons retain full functionality (see page 1-3) regardless of the navigation mode and the distance from a manoeuvre point.

### **In-car telephone**

Use of the in-car telephone is not restricted in any way by the navigation system and retains full functionality. If an incoming call is received while under navigation guidance, the display will switch to split screen, if previously in full screen mode. For full details refer to the In-car telephone Handbook.

### **Navigation voice guidance**

The emphasis of voice instruction over the audio volume is set using the Mode button (see page 1-5). Voice guidance emphasis also applies to any traffic announcements that may be broadcast (see page 1-3).

## Radio operation

**AM-FM**

### Band Switch AM-FM

Band selection will be shown in the display panel. Pressing **AM-FM** repeatedly will cycle the radio through FM and Medium. When a cassette tape or CD is being played, pressing the Band Switch selects radio operation.

**A-MEM**

### Auto memory (A-MEM)

The automatic memory function programmes the nine strongest stations on the selected waveband into Presets **1** to **9**.

To activate this function, hold the **A-MEM** button for at least two seconds.

The radio is muted briefly while it searches the waveband for the nine strongest stations. A beep indicates that programming is complete and Preset number **1** is selected.

If stations cannot be found for all preset buttons, those which are found will be allocated to preset buttons, starting with number **1**, leaving the remainder not programmed. The display will show **NO FM** or **NO AM** if unprogrammed buttons are selected.

To switch between the **A-MEM** preset stations and your own presets, press the button for less than two seconds.

### A-MEM with radio broadcast data system (RBDS) selected

If the **A-MEM** function is operated while in RBDS mode, the radio will be muted briefly, while a search is made for the nine strongest RBDS stations.

If stations cannot be found for all preset buttons, those which are found will be allocated to preset buttons, starting with number **1**, leaving the remainder not programmed. The display will show **NO FM** or **NO AM** if unprogrammed buttons are selected.

**Note:** When used correctly, RBDS and TP are very effective additional radio capabilities. However, if these facilities are used without full understanding, they may cause confusion to the operator. This is less likely to occur as more RBDS stations become available. See page 2-2 for operating the radio RBDS functions.

## 2-2 Sound system operation

---

### Radio broadcast data system (RBDS)

The Jaguar sound system is equipped with Radio Broadcast Data Systems which assists in finding and staying tuned to a chosen radio station. The radio decodes signals transmitted with certain stations on the FM waveband, which provide the following functions (dependent upon the service provided).

- **RBDS station name display**

When RBDS is selected the station name is displayed in eight characters as well as the frequency. The display also identifies network 'splits', where different programmes are being broadcast on FM or Medium Wave.

- **Automatic re-tuning to follow network stations**

**Note:** Due to the transmittal of spurious RBDS Alternative Frequency signals by some radio stations, this function is switched off on North American specification vehicles. If required, automatic re-tuning can be switched on again (refer to page 2-5 ).

RBDS provides fully automatic radio tuning for network stations. It tunes to a signal not a frequency. The RBDS will search out the strongest signal available for a given station and automatically switches frequency as necessary.

- **RBDS Station/Programme type display and search**

RBDS provides information as to the type of material broadcast by the station or programme that is on, i.e. **NEWS**, **CLASSICAL**, **ROCK**, etc. Apart from being able to display this, the radio can search for one specific programme type that is selected.

## RBDS operation



**To activate RBDS:** press the **TA** button and hold for at least two seconds.

(Display: **RBDS ON**)

**To de-activate RBDS:** press the **TA** button again and hold.  
(Display: **RBDS OFF**)

When RBDS is activated, the radio gathers RBDS information and displays the Service name and frequency, provided the programme chosen is an RBDS station.

If not, the radio will stay on station, the display will show the frequency and **RBDS** will stay on in readiness for a signal.

When listening to a National Network Station, or a station that broadcasts on more than one frequency, the radio will re-tune to the strongest available signal. This 'network following' will continue throughout the journey. (The unselected presets will also receive new frequency information, if appropriate.)

**Note:** On North American specification vehicles, the above function is switched off at the factory. If desired, automatic re-tuning can be switched back on following the procedure under **Radio set up modes** on page 2-5 and using **Preset 8**.

When RBDS data is lost and no alternative frequency signal is available, the radio will stay on station, the display shows the frequency only and RBDS remains on in readiness for the signal to recover.

If the RBDS function does not respond correctly, refer to the RBDS Trouble-Shooting Guide on page 2-4.



## PTY – Programme type

This has two functions:

To display current station programme type and to select a programme type and re-tune to it.

Momentarily press the **PT** button to display the current station programme type. Use the tuning buttons to cycle through the available programme types, press the **PT** button again to activate a search for the selected programme type. If there is a station with the correct PTY then the radio will re-tune to it. If not, the radio will indicate **NO PTY** and return to the current station.



## Change audio system source

Press any of the audio system source buttons or phone mode button (where fitted) to change the source selected.

## 2-4 Sound system operation

---

### RBDS trouble-shooting guide

Incorrect response from RBDS	Reason and rectification
Radio does not display programme name.	Check that RBDS is turned on by pressing the <b>TA</b> button and holding for more than two seconds. The display will confirm <b>RBDS ON</b> or <b>RBDS OFF</b> . If radio does not display programme service name, it is not broadcasting RBDS data, or you are in a poor reception area. Try re-tuning to another station with RBDS.
Station name is lost and displays frequency only.	Radio has lost reception of the RBDS data due to vehicle moving out of transmitter range, or loss of signal in a tunnel, under a garage forecourt canopy or some similar shielding. If the latter is the case, wait until the vehicle is clear of the shielding. There is a short delay before the station name returns.
Upon operating the <b>A-MEM</b> , most or all of the presets display <b>NO FM</b> when pressed.	The radio cannot find nine FM, RBDS FM or TP stations dependent upon the mode selected. If this occurs, switch off <b>RBDS</b> or <b>TA</b> and reselect <b>A-MEM</b> .
Radio sound goes off and the display shows <b>PI SEEK</b> .	The RBDS radio station selected is unable to confirm that the frequency tuned to has the correct RBDS data – programme identification (PI). It will then seek a frequency that has the <b>correct</b> data.

### Radio set up modes

This function allows the radio to be set up to suit the user's operating preferences. By moving into **SET UP** mode and using the preset buttons, the owner or Jaguar Dealer can choose whether certain radio facilities are active or switched off.

When in **SET UP**, pressing the relevant preset button, as detailed below, will show on the display the facility that has been selected and its state. The selected facility can be changed to the user's preference by pressing the preset button again.

**To enter the set up mode:** Press **Tape Eject** and **AM/FM** buttons simultaneously.

The display will show **SET UP**. The following preferences can then be selected and changed, in any order, as long as no more than 15 seconds elapse between Presets. After 15 seconds the display will clear.

- Preset 1** Press **Preset 1** to select the market mode, thereby enabling or disabling RBDS, depending upon RBDS availability in the user's country.
- Preset 2** This Preset controls the **Tape Clean** reminder facility. To switch off this reminder, press the **Preset 2** button until **TAPE CLN OFF** shows on the display.
- Preset 3** This Preset controls the **Aerial Clean** reminder facility. To switch off this reminder, press the **Preset 3** button until **AER CLN OFF** shows on the display.
- Preset 4** This Preset controls the telephone **Mute** facility. If a Jaguar telephone is installed, turn the telephone **Mute** on by pressing the **Preset 4** button until **TEL ON** shows on the display.


- Preset 5** **KEY OFF EJECT** – Sets the cassette tape to automatically eject when the ignition key is turned OFF.
- Preset 6** Blank.
- Preset 7** **DIVERSITY OFF** – Used when Diversity Aerial System is connected to the radio.
- Preset 8** **AF ON/OFF** – Used when specific RBDS problems occur, that may be helped.
- Preset 9** Blank.
- Preset 0** This Preset is used to select one of the following regions: Europe, USA, Australia or Japan. Regional settings determine the correct frequency increments required for seeking stations, automatic tuning etc.  
**Note:** Regions are preset at the factory.



## 2-6 Sound system operation

---

### Cassette tape player operation

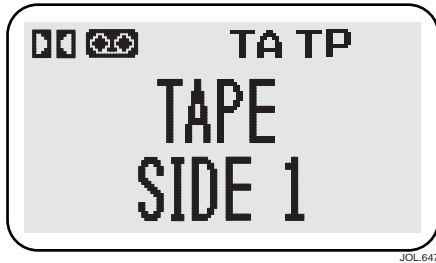

The display will indicate which function has been selected. Messages include:

- SEEK UP** Search to beginning of next track.
- SEEK DOWN** Search to beginning of track being played.
- REWIND** Rewind.
- FAST FORWARD** Fast forward.
- TAPE LOADING** Loading a tape into the mechanism.
- TAPE EJECT** Ejecting a tape.
- TAPE CLEAN** Tape mechanism requires cleaning.

Tapes will play immediately upon loading. After playing one side, it will auto-reverse and play the other. If a Metal or Chrome, (non ferric) tape is used, the equalisation will be automatically adjusted.

#### Eject and tape-in indicator

When a cassette is inserted into the player, the aperture door closes and an indicator is shown on the display. Press to eject the cassette.

#### TAPE

#### Tape button

If you are playing radio or CD (where fitted), pressing **TAPE** will play any cassette that is in the player. This function is also controlled by a button on the steering wheel (see page 1-3).



#### Dolby B

If you are using a cassette with a 'Dolby' recording, to select the noise reduction system, press the Dolby on/off button. An indicator is shown on the display.

Dolby noise reduction system is manufactured under licence from Dolby Laboratories Licensing Corporation. 'Dolby' and the double-D symbol are trade-marks of Dolby Licensing Corporation.



#### Programme change button

While playing a cassette, press this button to change to the other side of the tape. This function is also controlled by a button on the steering wheel – press and hold (see item C on page 1-3).



### Forward, rewind control

This control has two functions, seek to track and fast wind in each direction. Momentarily pressing the right hand button will activate tape search to the beginning of the next track. Similarly pressing the left hand button will activate tape search to the beginning of the current track being played.

Pushing and holding either button for two seconds will activate continuous fast forward or rewind of the cassette. This can be cancelled by pressing the control in either direction.



### Repeat

Press **RPT** to seek to the beginning of the last track played.



### Change audio system source

Press any of the audio system source buttons or phone mode button (where fitted) to change the source selected.

## 2-8 Sound system operation

### Compact disc (CD) player (where fitted)

The radio cassette is used to control the CD autochanger. The CD unit comprises an autochanger which contains a magazine to take six discs, each mounted in a tray. This equipment is installed in the luggage compartment. The CD autochanger is available as an accessory from your Jaguar Dealer.

### CD check sequence

When the CD Player is switched on it performs a check sequence. Each disc tray in the magazine is checked in turn and the display will show **CHECK** and the tray number. When the six trays have been checked the player will return to disc one.

### CD changer – loading and unloading discs and magazine

#### Ejecting the magazine

Slide the magazine door to the right (A). Press the eject button (B), the magazine will then partly eject from the changer.


Pull out the disc tray from the magazine (C) and load your six selected discs into each tray with the labels facing upwards (D), taking care not to touch the playing surface. Push the tray back into the magazine until it clicks.

Disc tray slots are numbered 1 (bottom slot) to 6 (top slot).

#### Inserting the magazine


Insert the loaded magazine into the changer (E) with the arrow mark facing upwards and pointing towards the CD changer. Ensure that it clicks into position. Close the sliding door.

Keep the sliding door closed to prevent dust entering the playing mechanism.

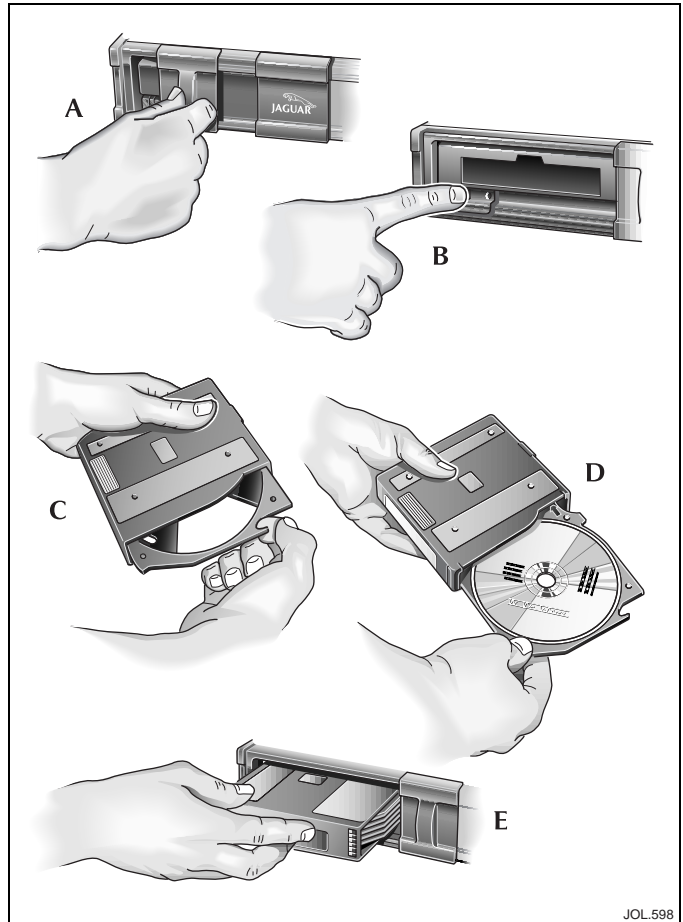

## CD Operation

The radio display shows which CD function has been selected.  
Example of CD Display, playing track 16 of CD3.

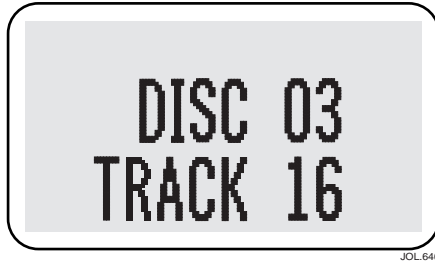

Other messages:

**NO DISC** – in the selected position.

**NO MAGAZINE** – in the CD Changer.

**CD1 MIX 10** – the player is playing CD1 in MIX mode (track 10).

**CD DMIX** – all CDs are in MIX mode.

**MAG EJECT** – the magazine is being ejected.

**DISC CHECK** – the Autochanger is checking there is a disc.

**PAUSE** – the Autochanger is paused and ready to play.



### CD button

Press **CD** in either tape or radio mode to select CD mode. This function is also controlled by the appropriate button on the steering wheel (see page 1-3).



### CD selection

Buttons **1** to **6** directly select the CD in those positions in the autochanger magazine. If there is no disc in the selected position, **NO DISC** will be displayed. If there is no magazine in the changer, **NO MAGAZINE** will be displayed.



In CD mode you can also press the up and down buttons to scroll through the CDs.



### MIX and disc MIX

Momentarily press **MIX** to play the tracks of the selected disc in random order. To cancel, press **MIX** again or any other button.

Press and hold to select **CD MIX**. The player plays tracks from any disc in random order. To cancel press **MIX** again or any other button.

## 2-10 Sound system operation

---



### Forward, Reverse Control

This control has two functions: seek to track and fast play in each direction. Momentarily press the right-hand button to skip to the next track. Repeated pressing will select further tracks.

The left-hand button returns to the beginning of the current track. Repeated pressing selects previous tracks.

Pushing and holding either button selects continuous fast forward or fast reverse playing of the CD.

The sound level reduces during cueing and reviewing modes.



### Repeat

Press **RPT** to seek to the beginning of the last track played.



### Change audio system source

Press any of the audio system source buttons or phone mode button (where fitted) to change the source selected.

## CD player fault diagnosis

If the CD Player does not operate properly, an error message will be displayed. The following table gives fault diagnosis for each error message displayed.

MESSAGE	CAUSE	SOLUTION
<b>E - 01</b>	Disc-change malfunction.	See your Jaguar Dealer.
<b>E - 02</b>	Disc is in player mechanism.	Press the magazine eject button, insert an empty magazine into the player. Eject the magazine from the player by pressing the eject button. If the magazine fails to eject from the player, see your Jaguar Dealer.
<b>E - 03</b> <b>E - 04</b> <b>E - 05</b>	Disc-change malfunction.	If the error message goes out within a few seconds, the unit is working correctly. If the error message stays on, see your Jaguar Dealer.
<b>E - 06</b>	Disc-change malfunction.	Press the magazine eject button and pull out the magazine. Check that the error message goes out, then operate the function again. If the magazine cannot be pulled out, see your Jaguar Dealer.

## 2-12 Sound system operation

---

### CD player fault diagnosis (continued)

MESSAGE	CAUSE	SOLUTION
<b>E - 0 7</b>	Magazine ejection impossible.	Press the magazine eject button. If the magazine does not eject, see your Jaguar Dealer.
<b>E - 3 0</b>	High temperature.	The error message will go out when the temperature returns to within the operating range.
<b>NOT CONNECT</b>	Bad connection or disconnected CD changer.	Check connection between CD changer and control unit. See your Jaguar Dealer.
<b>NO MAGAZINE</b>	No CD magazine in the changer.	Insert the CD magazine.
<b>NO DISC</b>	No CD in tray of magazine.	Insert a CD into the tray of the magazine.

## Care of the audio system

Do not use petrol, solvents or abrasive cleaners on the radio. Wipe the surface of the radio with a lint-free cloth to remove dust. Slightly moisten the cloth with clean water to remove any finger marks from the outside surface of the radio.

### Cassettes

Always use good quality cassettes. Low cost tapes can cause jamming, the sound quality will be inferior, and they can create a fast build-up of deposits on the play-back head.

Before playing, check the cassettes to ensure that the tape is not loose on the spools. If necessary, take up the slack by gently turning the spools with the end of a pencil. A jammed or sticking tape will cause the auto-reverse mechanism to operate continuously.

It is advisable not to use a tape longer than 45 minutes playing time each side (C90). Cassettes should be stored in their library cases away from direct sunlight. Do not store cassettes in door pockets where they could be affected by the magnets in loud-speakers which might impair the sound quality.

Never insert a cassette that has a torn or loose label, it may cause the mechanism to jam.

After approximately 15 hours playing time, the display on the radio will show **CLEAN TAPE**. Clean the tape mechanism itself using a mechanical type cleaner with a wetting agent in an approved kit available from your Jaguar Dealer. Do not use abrasive type cleaners as they can cause excessive wear on the play-back head.

### Compact Discs (CDs)

When handling CDs, do not touch the playing surface. When they are not being used they should always be stored in their cases away from direct sunlight, heat and dust. Scratches, finger-marks or dust on the surface of a disc can cause the optical pick-up to skip tracks. If the surface is dirty, use an appropriate CD cleaner.

Do not attempt to play damaged, warped, cracked or oversized discs. They could seriously damage the play-back mechanism.

### Aerial

The aerial care procedure should be carried out when cleaning the exterior of the vehicle, to ensure smooth and reliable operation of the aerial.

When cleaning the aerial, always wipe it in an upwards direction. Occasionally use an aerial maintenance wipe cloth to lubricate the aerial.

In freezing conditions check that no ice has formed over the top of the aerial, this could prevent it from being raised, causing damage to the lift motor.

A special aerial cleaner is available from your Jaguar Dealer.



Audio controls under navigation guidance . . . . .	1-7
– Approaching a manoeuvre point . . . . .	1-7
– Guide method . . . . .	1-7
– In-car telephone . . . . .	1-8
– Navigation voice guidance . . . . .	1-8
– Steering wheel buttons . . . . .	1-8
Care of the audio system . . . . .	3-1
– Aerial . . . . .	3-1
– Cassettes . . . . .	3-1
– Compact Discs (CDs) . . . . .	3-1
Cassette tape player operation . . . . .	2-6
– Change audio system source . . . . .	2-7
– Dolby B . . . . .	2-6
– Eject and tape-in indicator . . . . .	2-6
– Forward, rewind control . . . . .	2-7
– Programme change button . . . . .	2-6
– Repeat . . . . .	2-7
– Tape button . . . . .	2-6
CD changer . . . . .	2-8
– Ejecting the magazine . . . . .	2-8
– Inserting the magazine . . . . .	2-8
CD operation . . . . .	2-9
– CD button . . . . .	2-9
– CD selection . . . . .	2-9
– Change audio system source . . . . .	2-10
– Forward, Reverse Control . . . . .	2-10
– MIX and disc MIX . . . . .	2-9
– Repeat . . . . .	2-10
CD player fault diagnosis . . . . .	2-11
Compact disc (CD) player . . . . .	2-8
– CD check sequence . . . . .	2-8
General information . . . . .	1-1
– Aerial operation . . . . .	1-3
– Automatic volume control (AVC) . . . . .	1-4
– FM and AM reception . . . . .	1-4
– ON/OFF and volume control . . . . .	1-4
– Radio operation . . . . .	1-3
Mode button . . . . .	1-5
Optimising sound (premium systems) . . . . .	1-5
Preset buttons . . . . .	1-6

# Index

---

Radio broadcast data system . . . . .	2-2
– PTY – Programme type . . . . .	2-3
Radio broadcast data system operation . . . . .	2-3
– Change audio system source . . . . .	2-3
– PTY – Programme type . . . . .	2-3
– RBDS trouble-shooting guide . . . . .	2-4
Radio operation . . . . .	2-1
– A–MEM with RBDS selected . . . . .	2-1
– Auto memory (A–MEM) . . . . .	2-1
– Band Switch AM–FM . . . . .	2-1
Radio set up modes . . . . .	2-5
Seek and manual tuning . . . . .	1-6
Sound system . . . . .	1-2
Steering wheel audio system controls (where fitted) . . . . .	1-3

**JJM 18 03 12/10**